



FRAME WALL – ADD MAIN FRAME

Modified on: Mon, 26 Oct, 2020 at 8:33 PM


Frame Wall

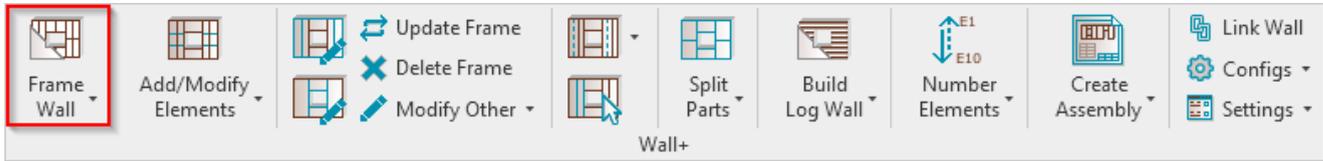

Or:

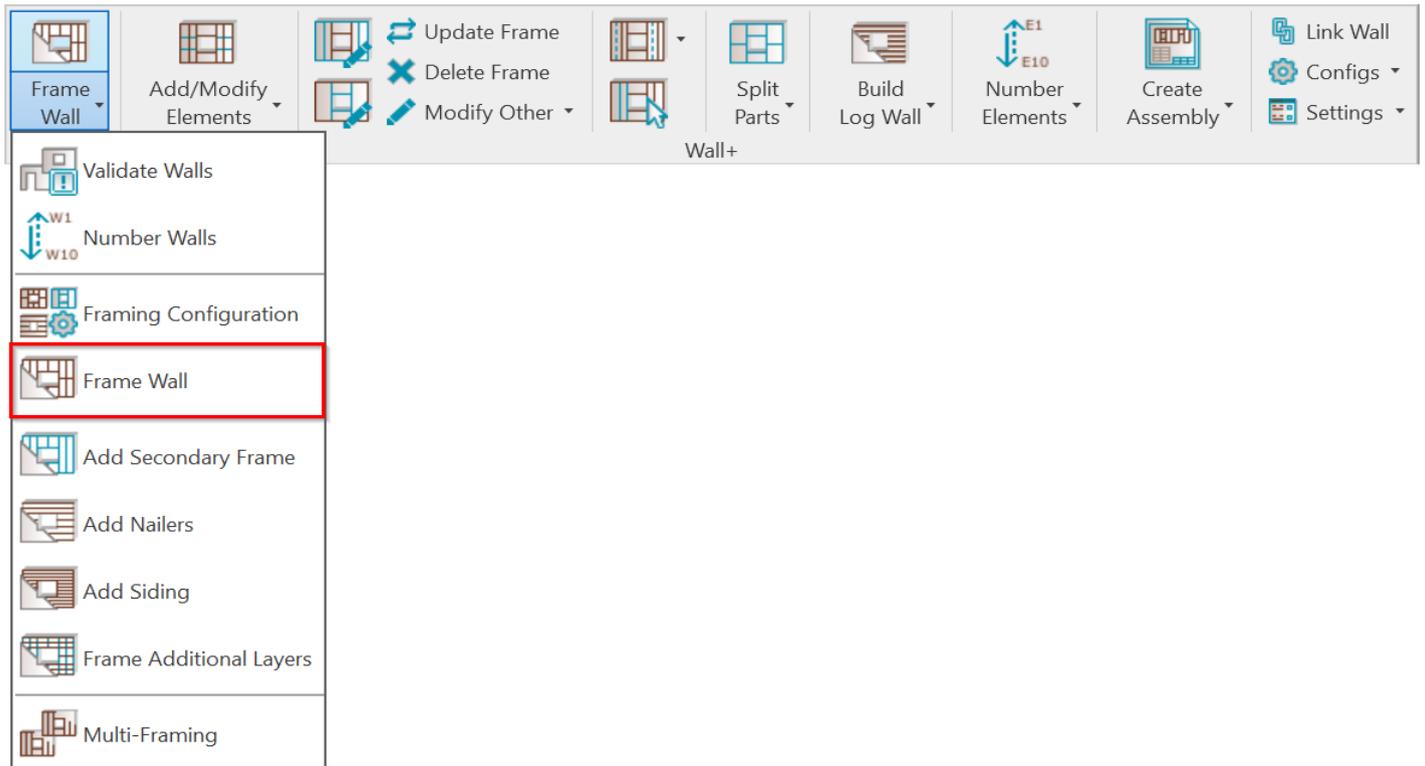


Frame Wall – frames selected walls or parts from the model according to predefined configuration.

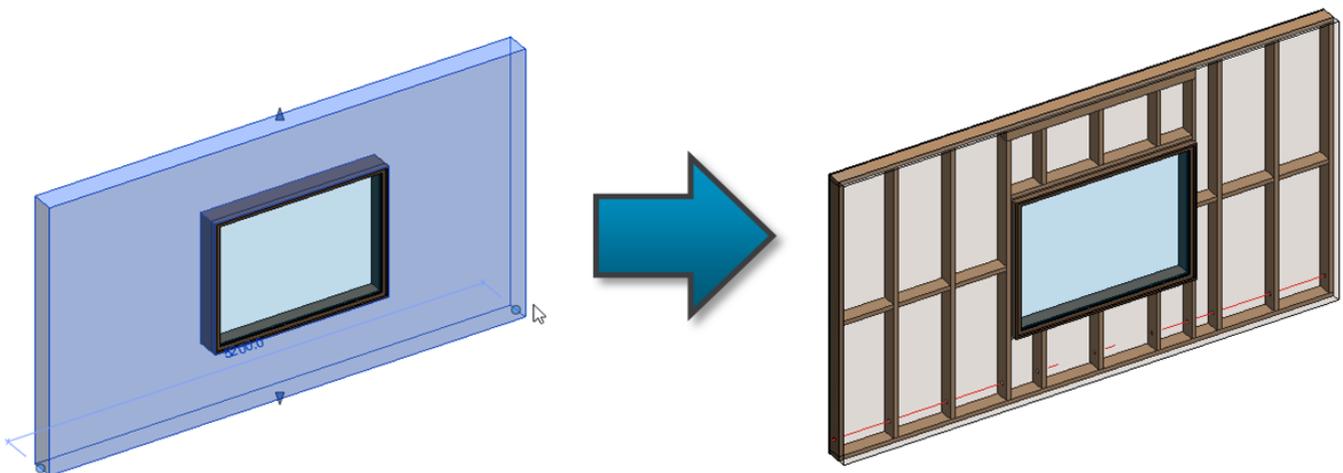


First time in the project


The first time you click **Frame Wall** in a new project, you will get a message that the framing families are not loaded. You can load them directly from here:

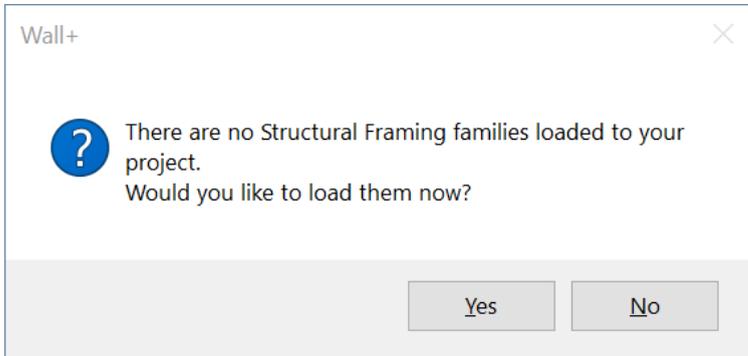

Just click OK:

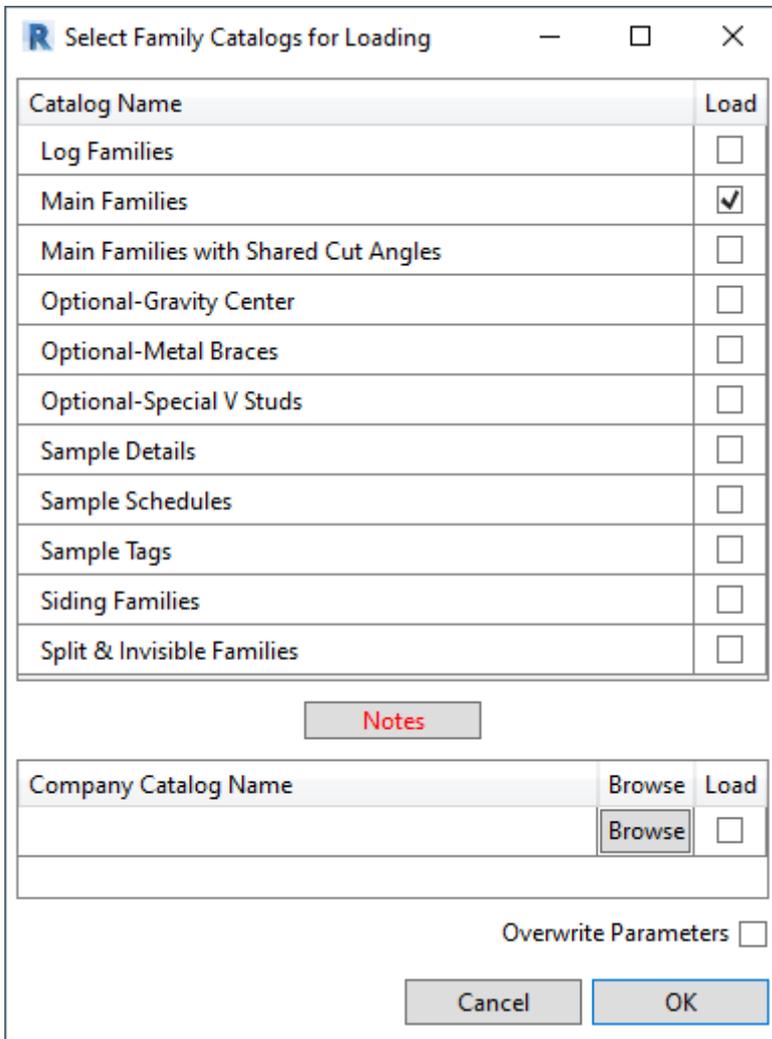


Framing families can be also loaded using **Wall+ → Settings → Load Families:**

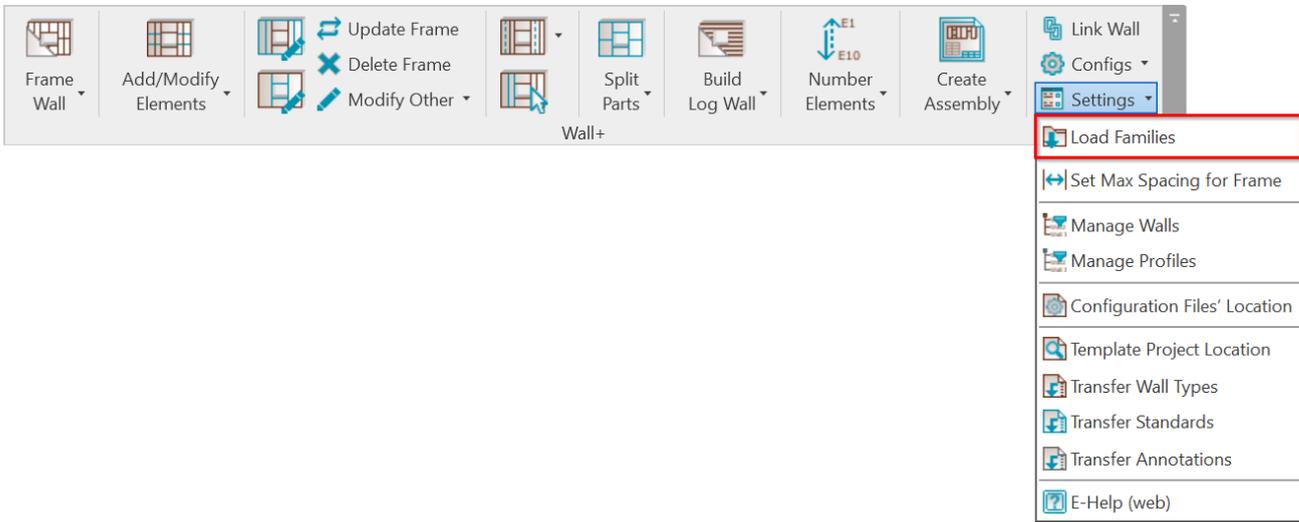


[Read more Load Families>>](https://agacad.freshdesk.com/a/solutions/articles/44001549317-load-families) (<https://agacad.freshdesk.com/a/solutions/articles/44001549317-load-families>).

Wall+ checks the status of selected walls. If there is something wrong with the walls, you will get a detailed report. In the image below, you can see possible report messages.


*Let's solve the problem of wall type **Int - 16+198+13**:*

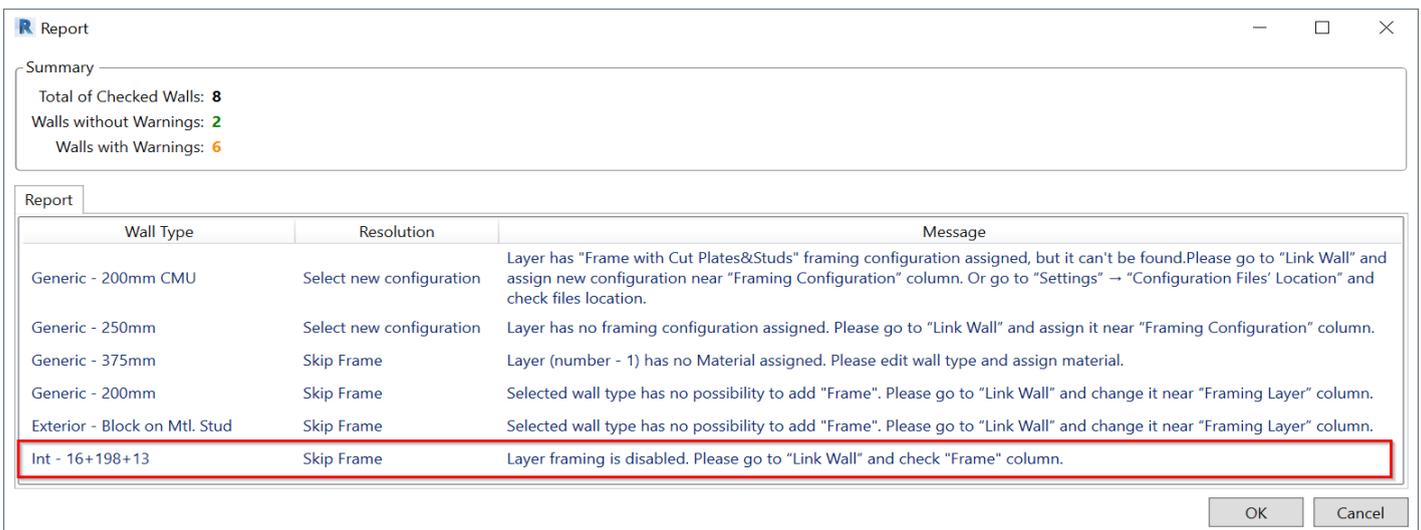


*To fix these kinds of problems, you usually need to go to **Link Wall** and check the situation:*

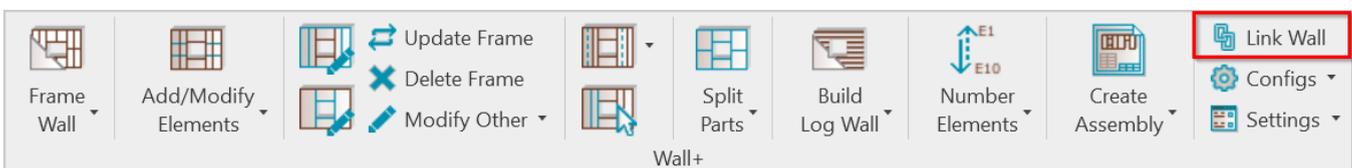


***Int - 16+198+13** has framing possibility disabled, so you just need to select the checkbox near the **Frame** column:*

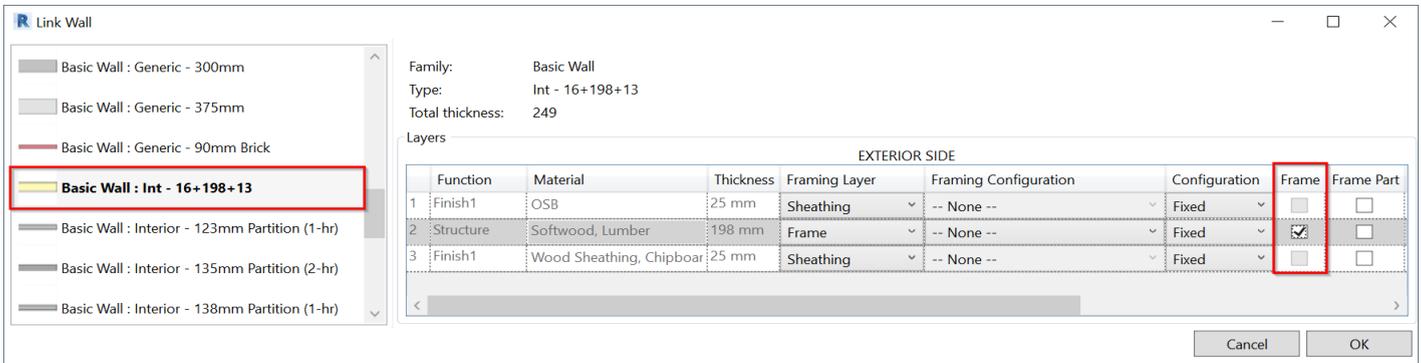


There is no problem if framing configuration is not assigned to the layer. You can assign it in the **Link Wall** dialog, or **Wall+** will give you this option during the **Frame Wall** process:

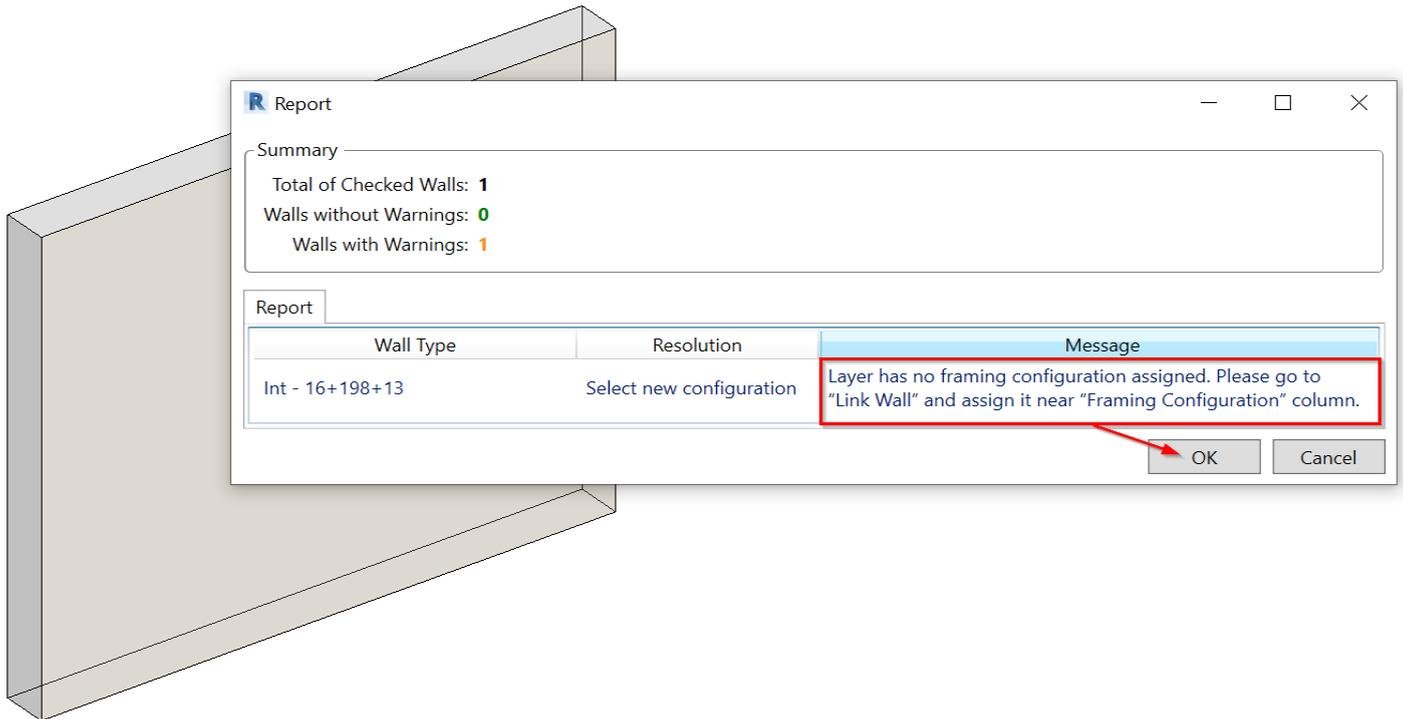

Selected a sample framing configuration, which automatically comes with **Wall+**, and click OK:

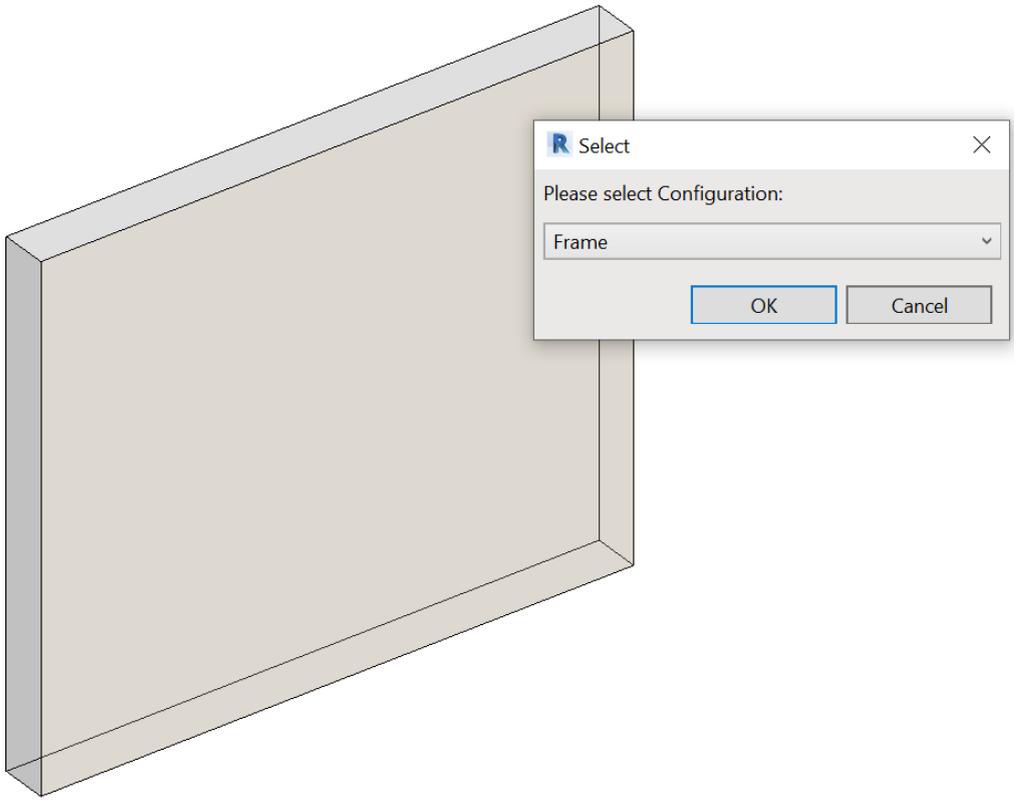

Result:

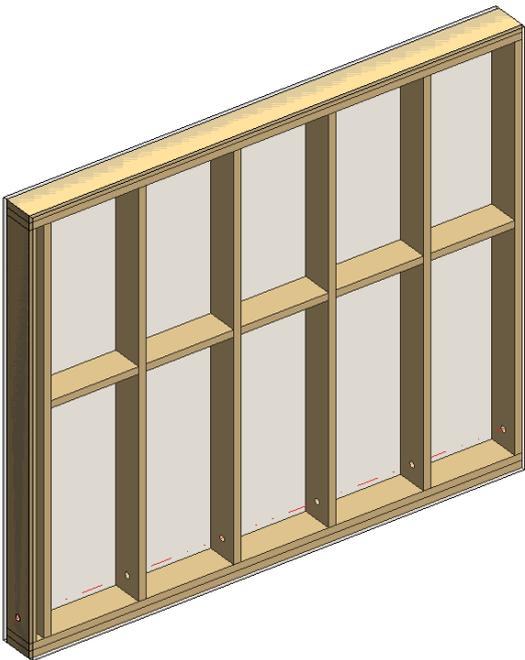

[Read more about Link Wall >>](https://agacad.freshdesk.com/support/solutions/articles/44001543580-link-wall) (<https://agacad.freshdesk.com/support/solutions/articles/44001543580-link-wall>).