



FRAMING CONFIGURATION – End Connection

Modified on: Sun, 10 Jan, 2021 at 5:55 PM


Framing Configuration may be found in two locations:

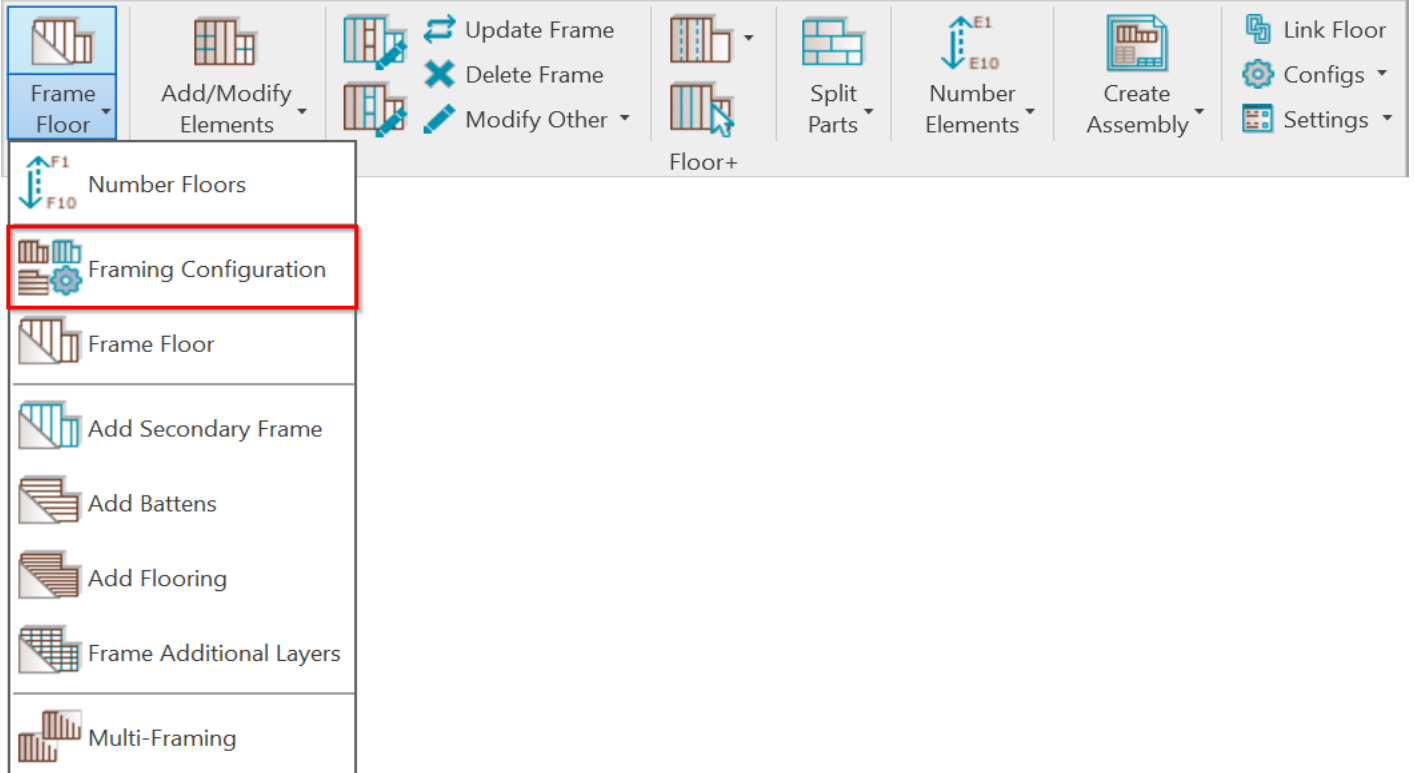

OR:

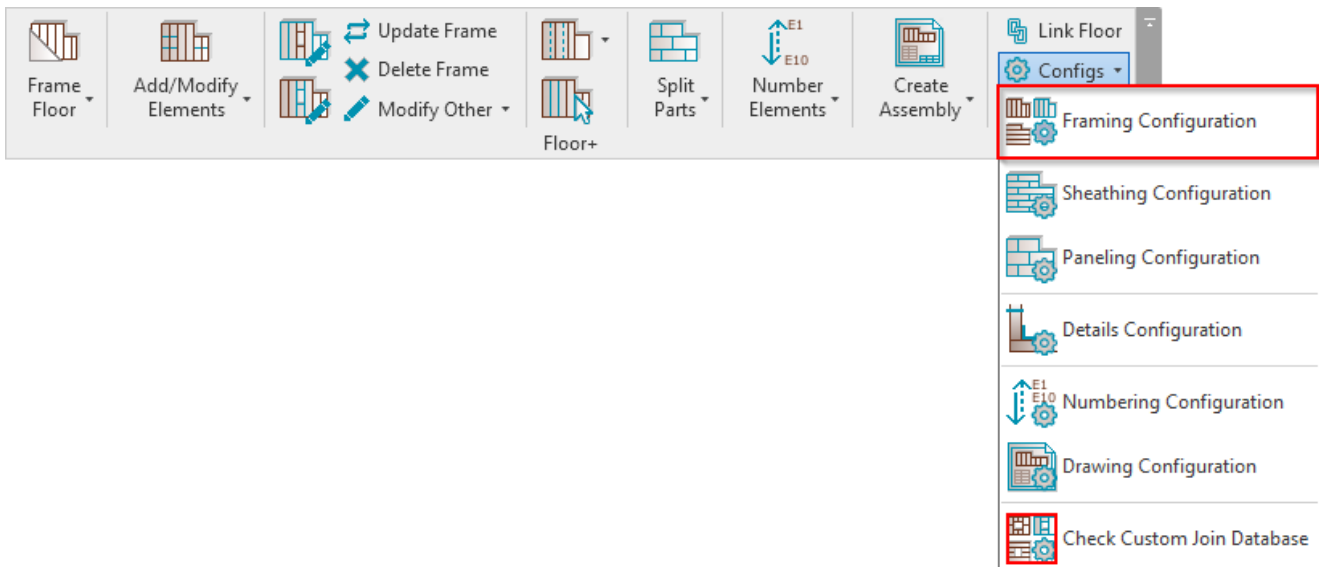


End Connection

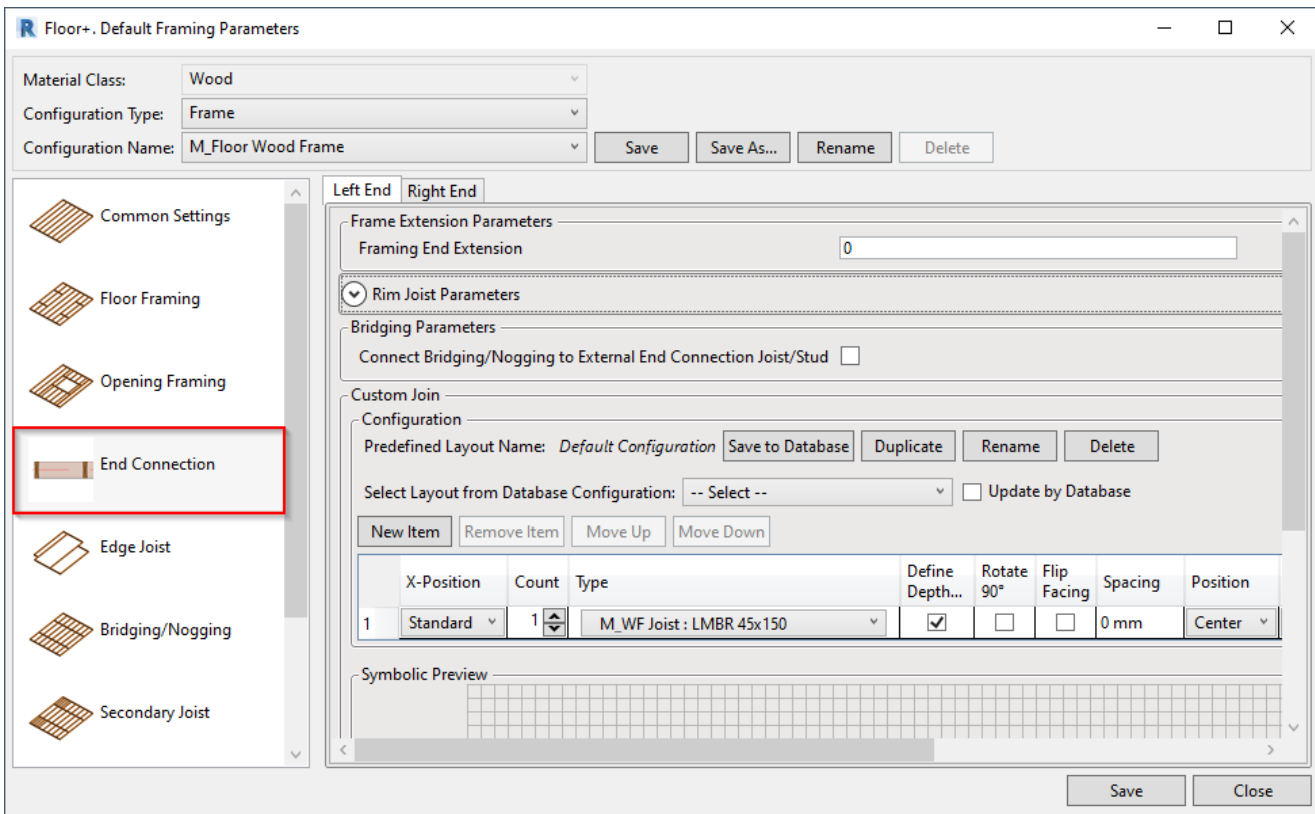

Floor+ supports various types of end connections. End connection joists are parallel to floor direction line.

Left End, Right End tabs – define ends of floor's left and right sides.

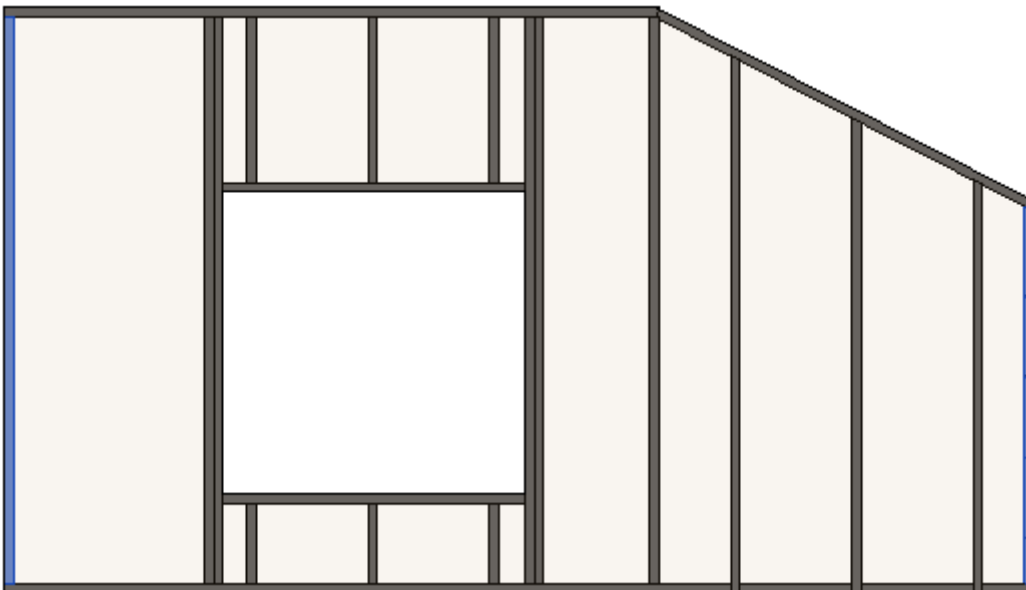

[Read more about every feature here >>](https://agacad.freshdesk.com/support/solutions/articles/44002142428-framing-configuration-%E2%80%93-end-connection) (<https://agacad.freshdesk.com/support/solutions/articles/44002142428-framing-configuration-%E2%80%93-end-connection>)