


MODIFY



Modified on: Sat, 5 Dec, 2020 at 7:35 PM

Modify Frame

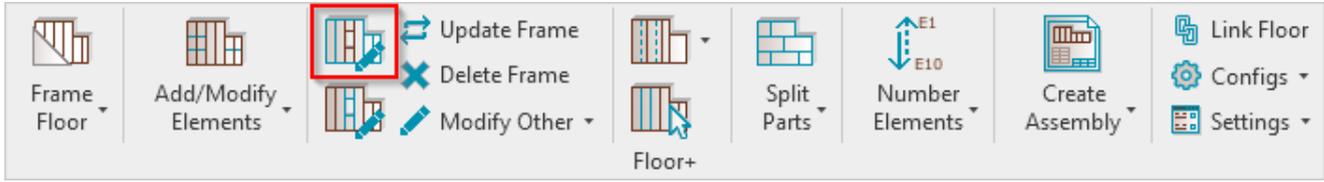


Modify Frame – modifies selected floor framing by custom settings if you need to make unique changes. All configuration settings are the same as in **Framing Configuration**.


*Example: Select any frame → **Modify Frame** → Make custom changes in the framing configuration → OK:*

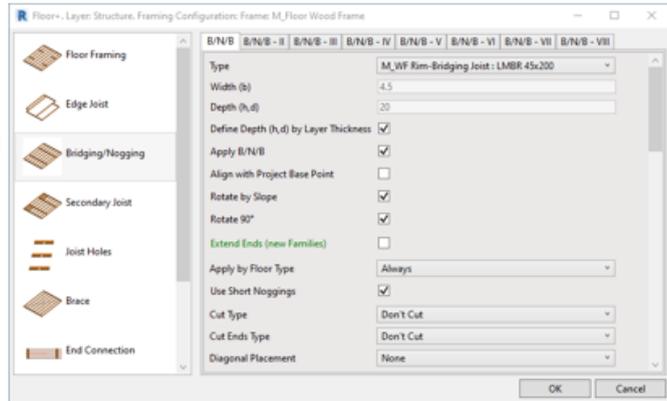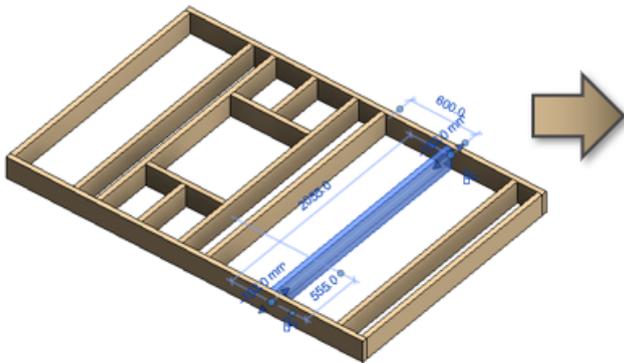

Result:


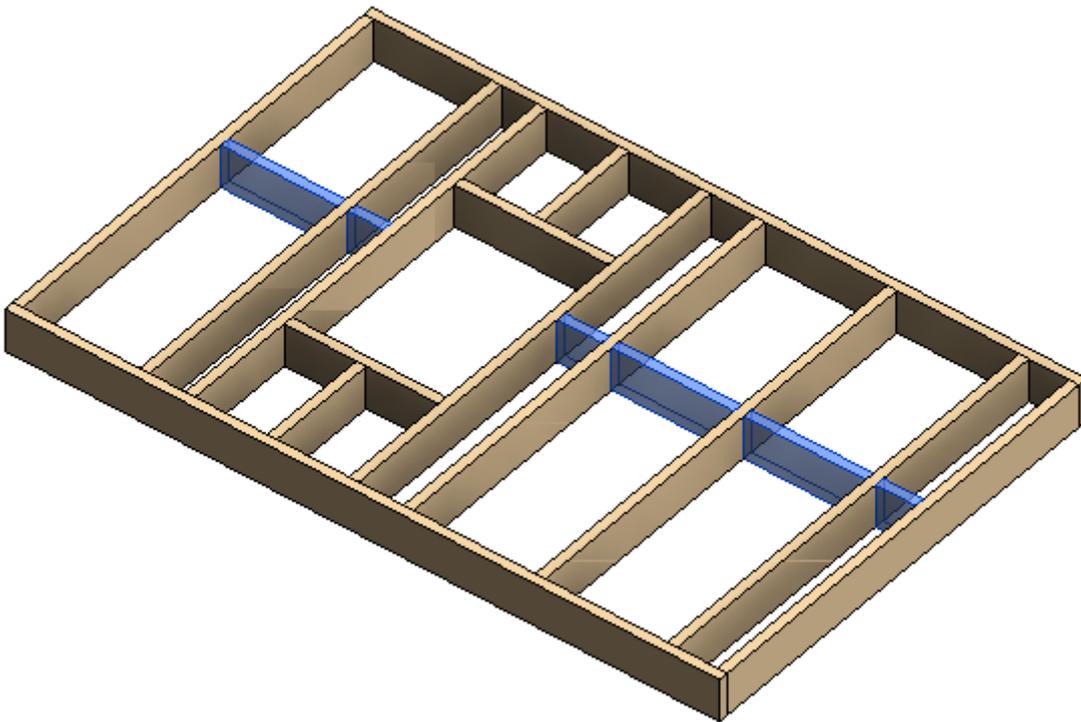


Modify Opening

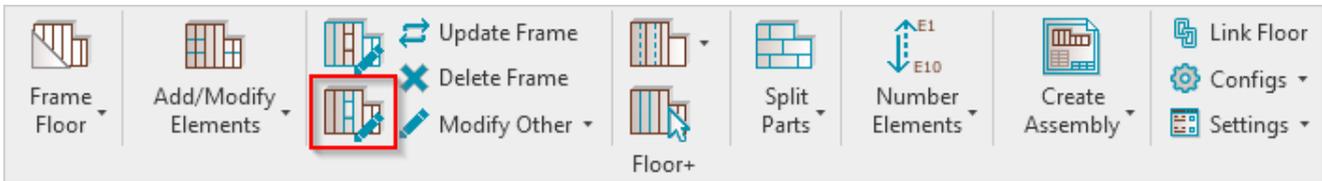


Modify Opening – modifies selected window, door, or other opening framing by custom settings if you need to make unique changes. All configuration settings are the same as in **Framing Configuration**.

*Example: Select any opening frame, like trimmer, king, cripple → **Modify Opening** → Make custom changes in the opening framing configuration → OK:*

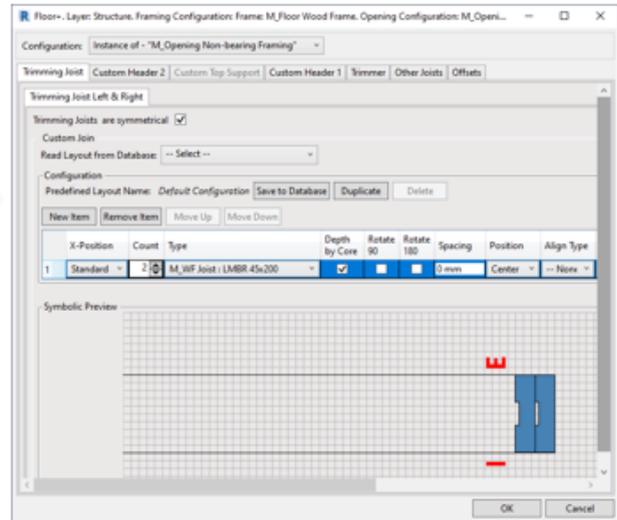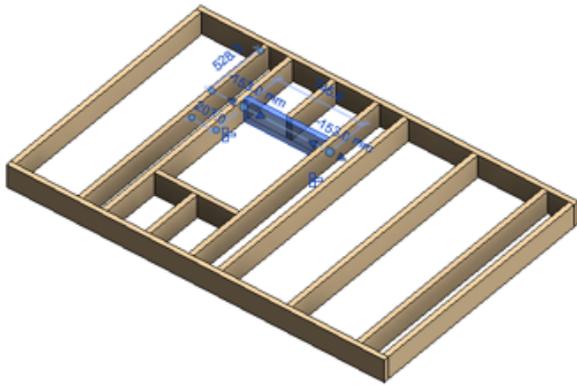


Result:

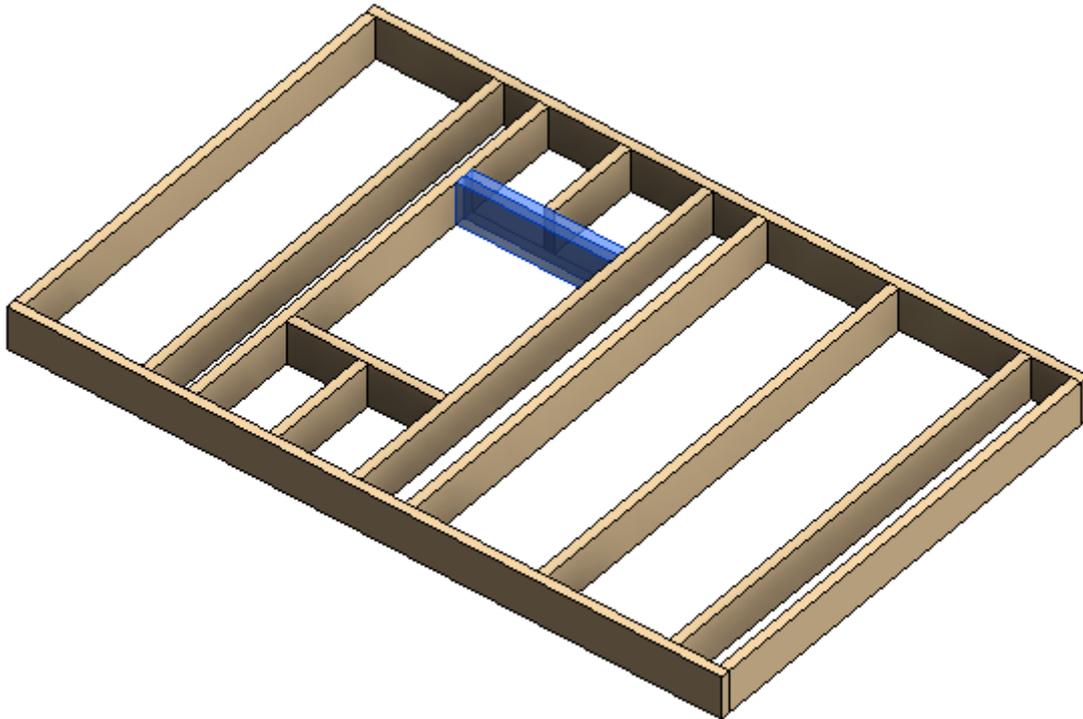

Update Frame




Update Frame – updates the frame if any changes were made to floor, e.g. floor boundary is extended.

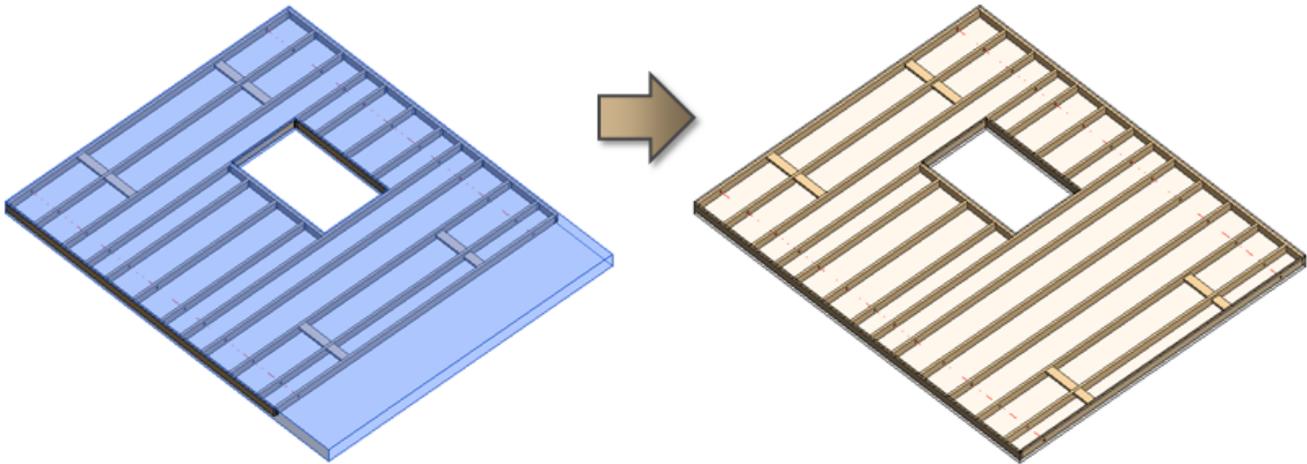


Delete Frame





Delete Frame – deletes the selected framing. You simply need to select one element (joist, rim joist, bridging etc.), and the tool will delete the whole frame from the floor. If you select a floor, then the tool will delete all framed layers.

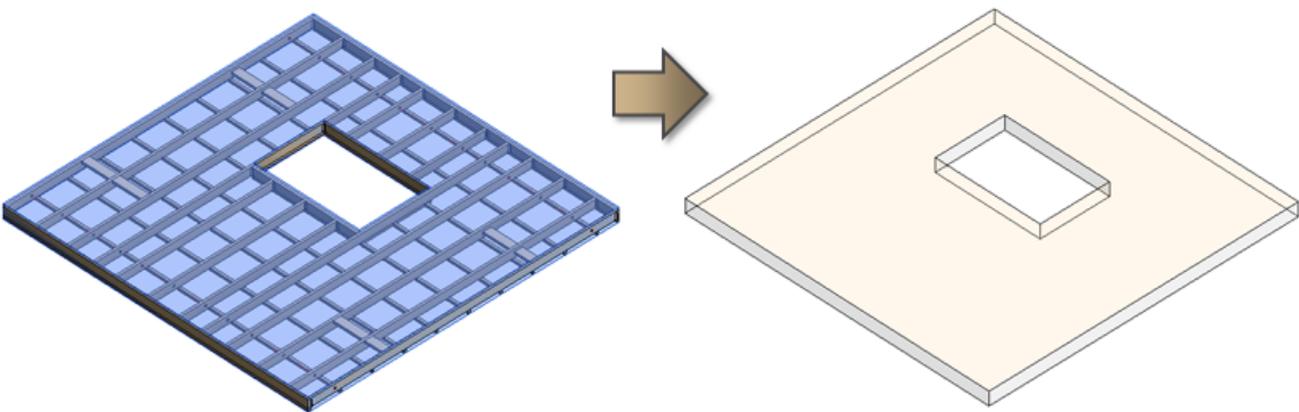


Modify Edge Joins

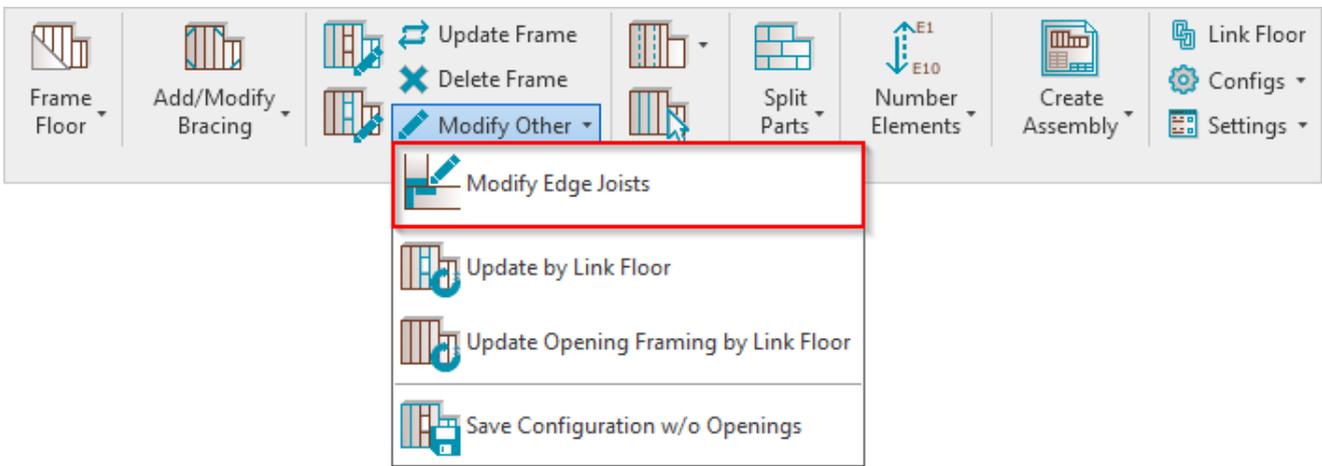


Modify Edge Joists – modifies selected join by custom settings if you need to make unique changes. All configuration settings are the same as in **Framing Configuration**.

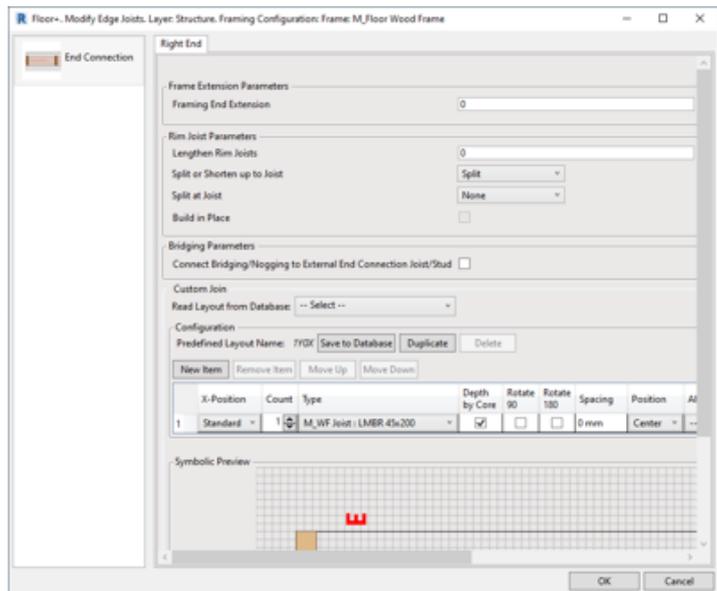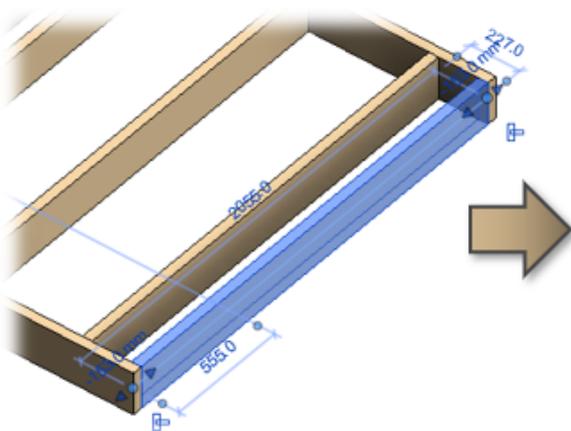

Result:

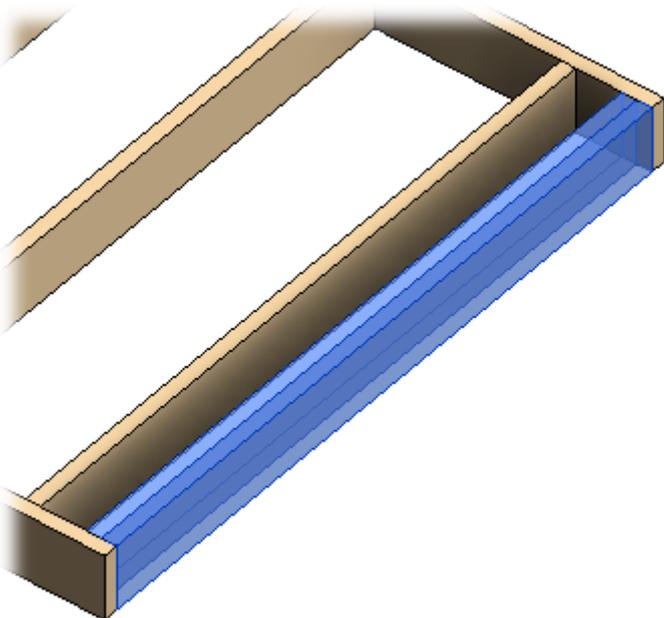


Update by Floor Link

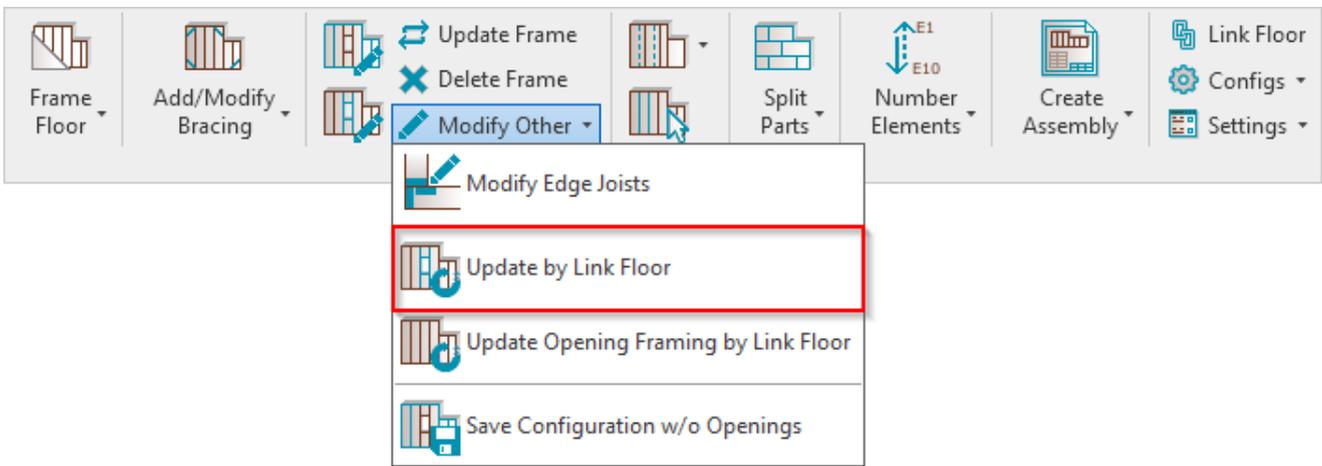


Update by Floor Link – reframes selected floor frame to default, which is configured under **Framing Configuration**.

Update Opening by Floor Link

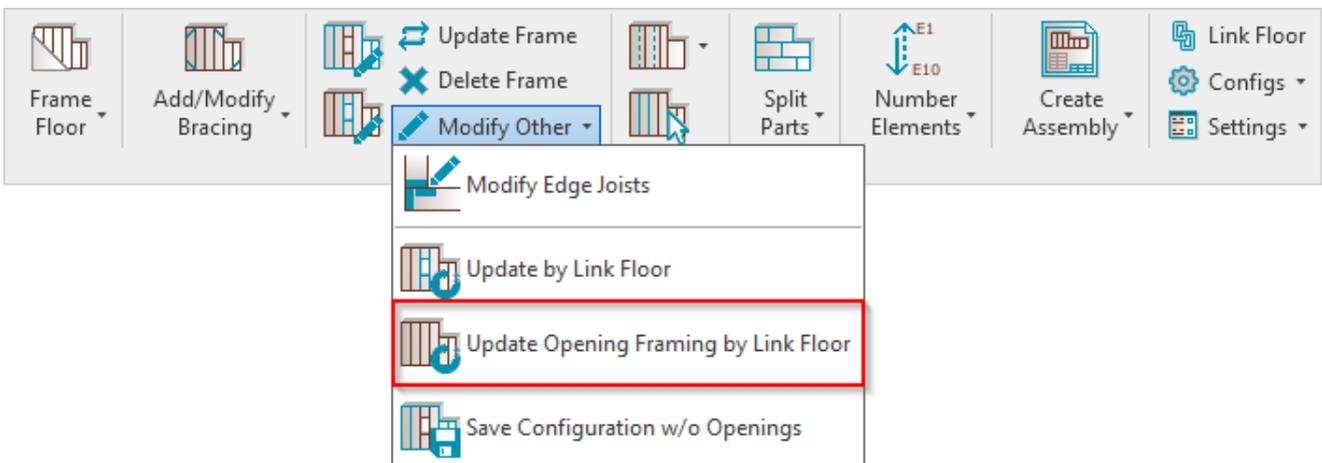

Update Opening by Floor Link – reframes selected window, door, or other opening frame to default, which is configured under **Framing Configuration**.

Save Configuration w/o Openings

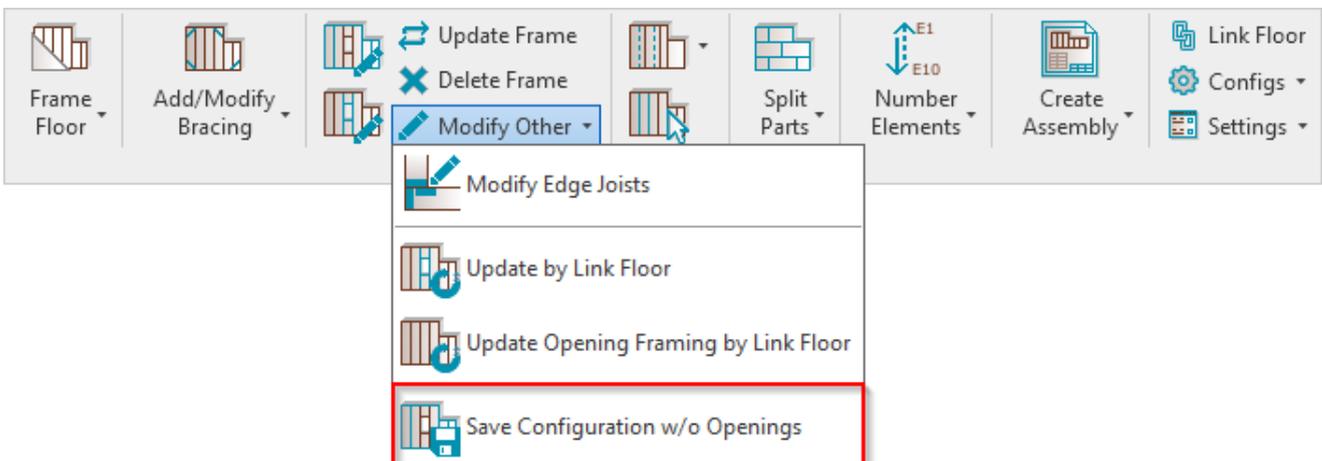

Save Configuration w/o Openings – saves configuration of selected frame without settings for openings. This feature is very useful if you have already framed a floor and you lost the configuration that was used for it. The configuration is needed to frame new floors.

Example: You just need to select any frame from a floor and save the configuration under your name:



Now you will be able to use this configuration for new or existing floors:

