


SELECT ELEMENTS


Modified on: Wed, 11 Sep, 2019 at 9:02 PM

Select Elements

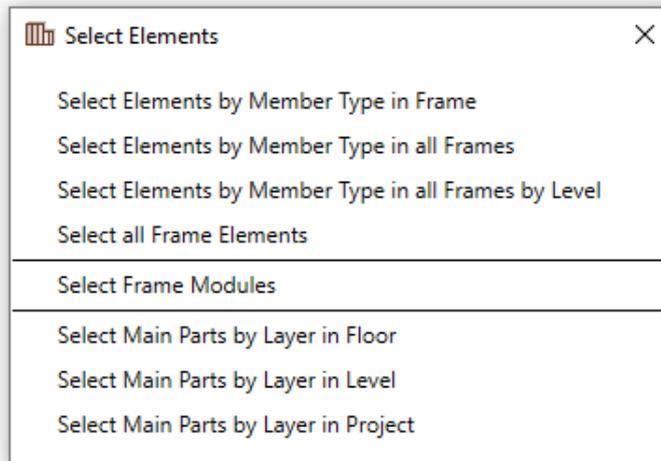


Select Elements – features for quickly selecting elements by different rules.

Select Elements by Member Type in Frame

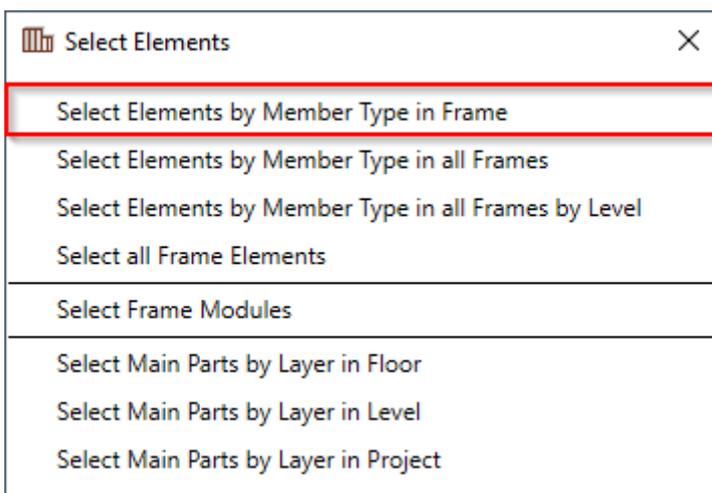


Select Element by Member Type in Frame – selects all framing members of the same type from the frame.

*Example: Select any joist → **Select Element by Member Type in Frame** → All joists from the frame will be selected:*

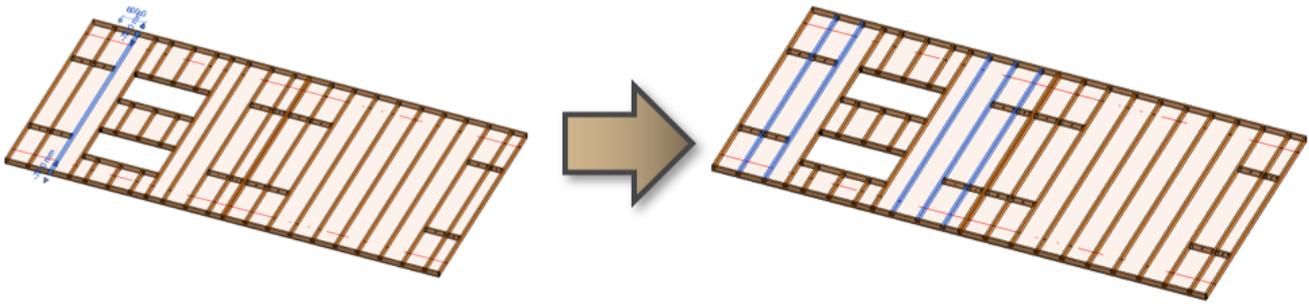


Select Elements by Member Type in all Frames

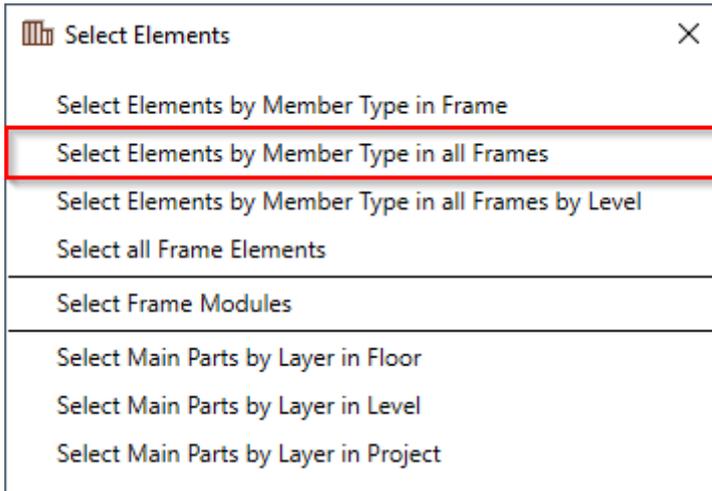


Select Element by Member Type in all Frames – selects all framing members of the same type from all frames in the project.

*Example: Select any joist → **Select Element by Member Type in all Frames** → All joists from all frames in the project will be selected:*

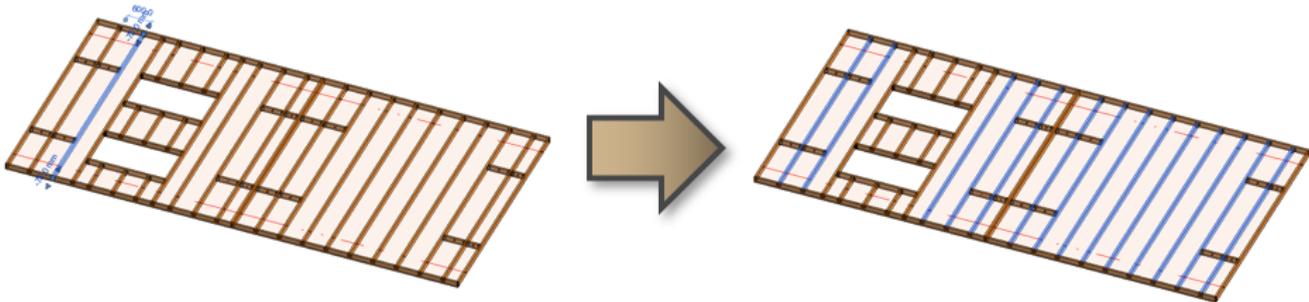


Select Elements by Member Type in all Frames by Level

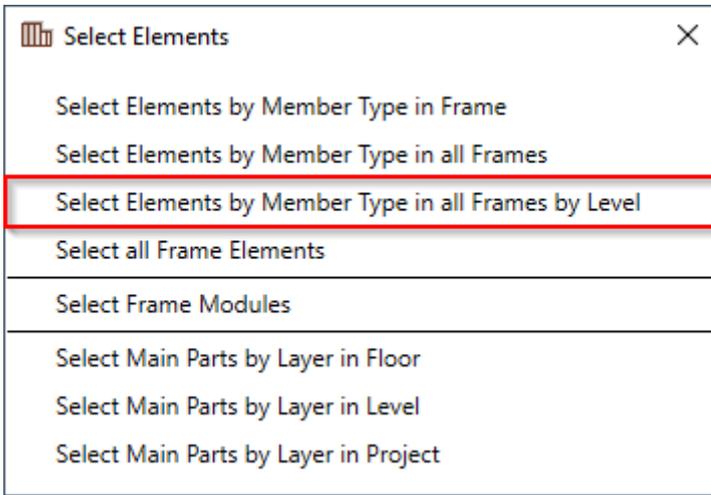


Select Element by Member Type in all Frames by Level – selects all framing members of the same type from all frames in the same level.

*Example: Select any joist → **Select Element by Member Type in all Frames by Level** → All joists from all frames in the same level will be selected:*

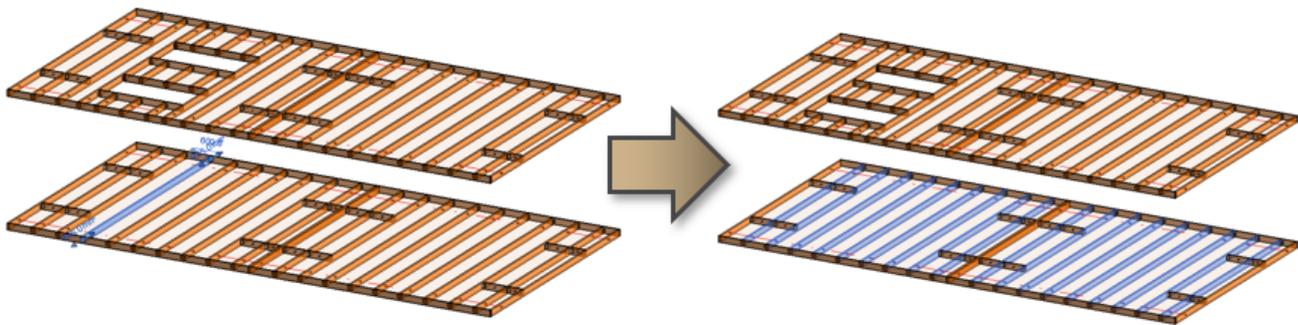


Select all Frame Elements

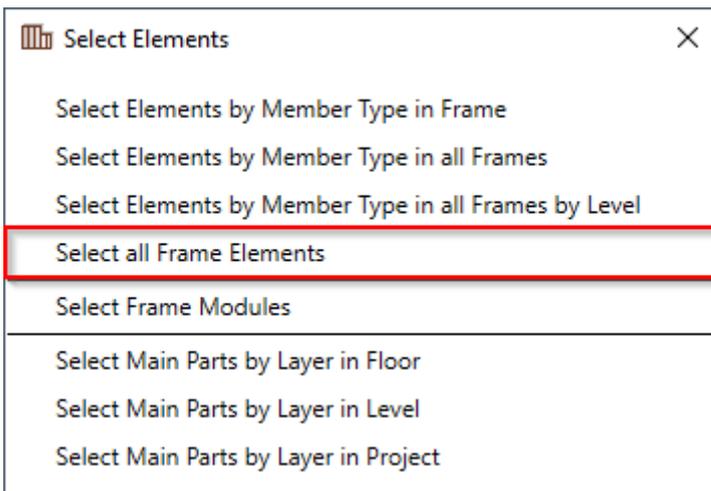


Select all Frame Elements – selects all framing members from the floor.

*Example: Select any joist → **Select all Frame Elements** → All elements, including joists, plates, trimmers, etc. will be selected:*

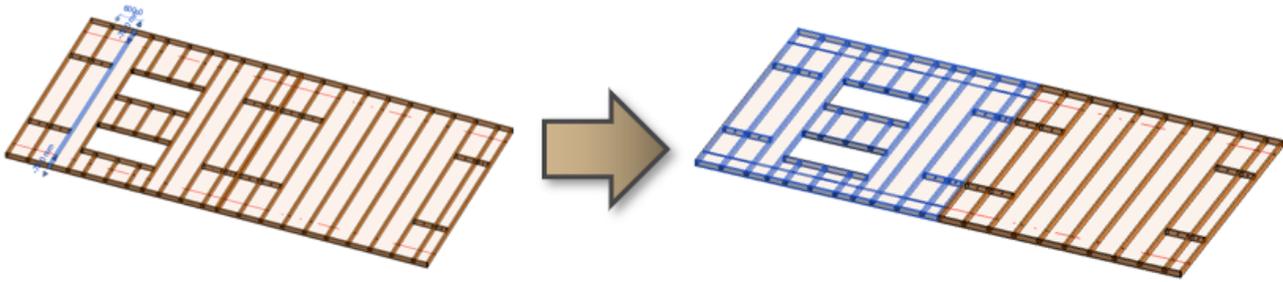


Select Frame Modules

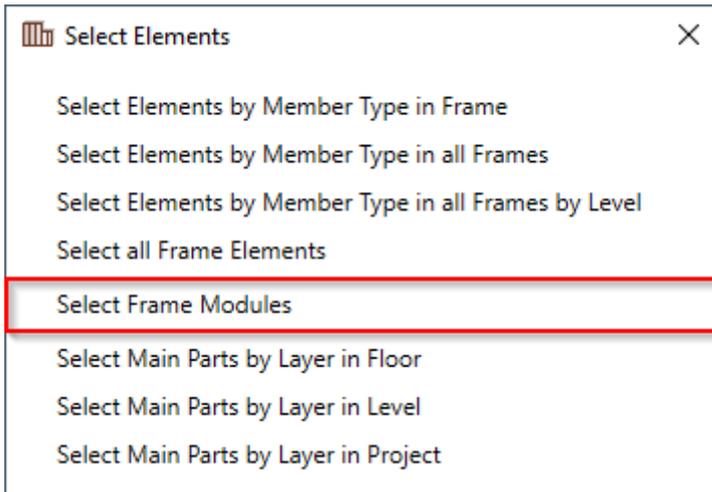


Select Frame Modules – selects preassembled elements.

*Example: Select any joist → **Select Frame Modules** → All elements set as preassembled are selected, like opening kings, trimmers, cripples, etc.:*

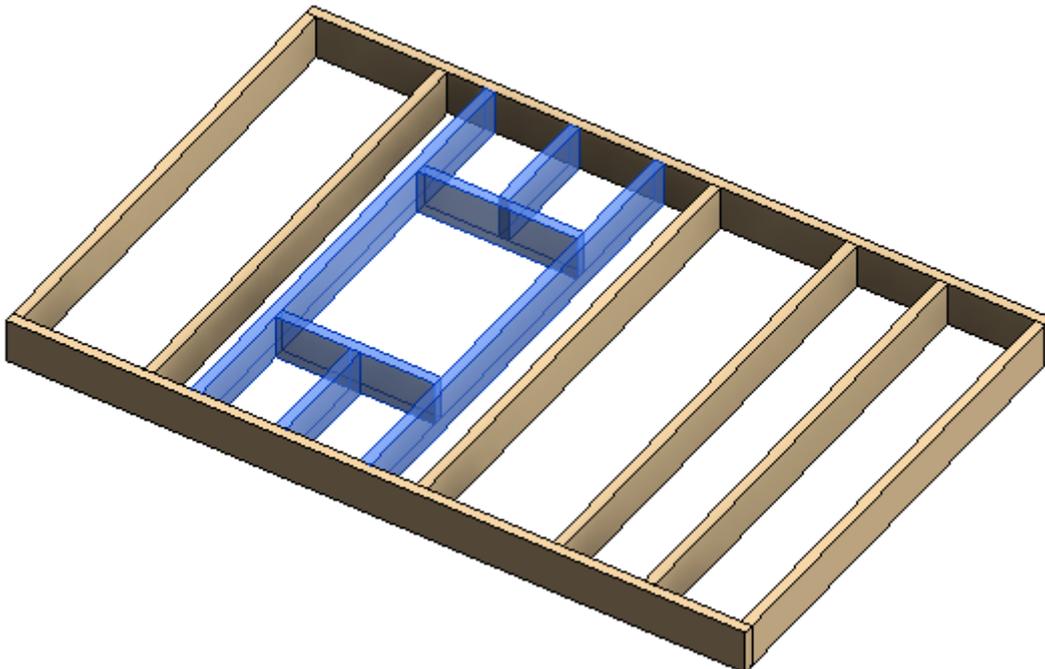


Select Main Parts by Layer in Floor

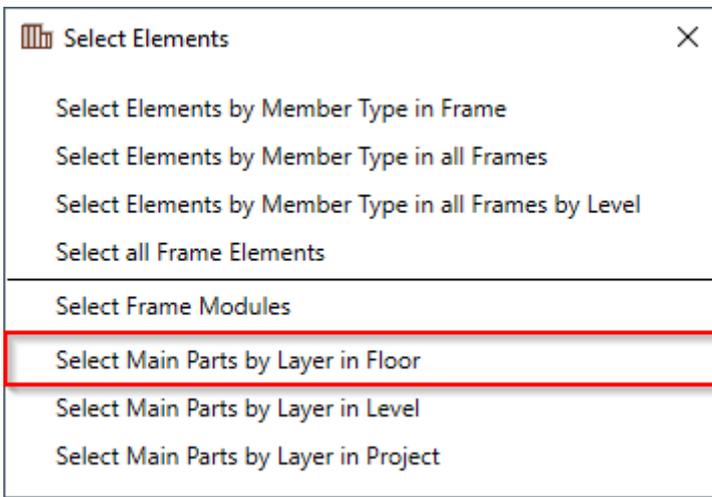


Select Main Parts by Layer in Floor – Selects main parts in the framed floor.


Please make sure **Show Parts** or **Show Both** is selected in **View Properties** → **Parts Visibility**:

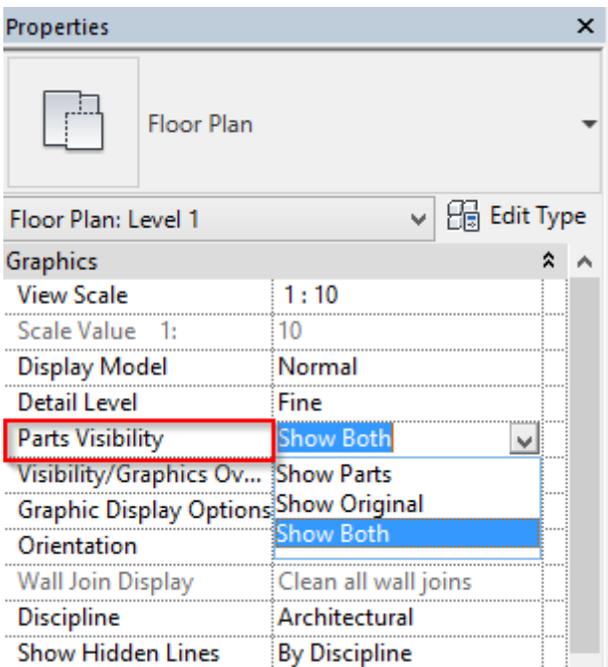

*Example: Click **Select Main Parts by Layer in Floor** and you will be able to select only main parts from the framed floor:*

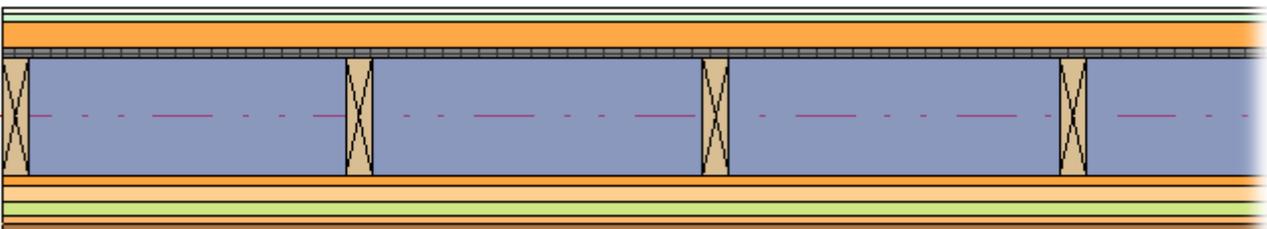


Select Main Parts by Layer in Level

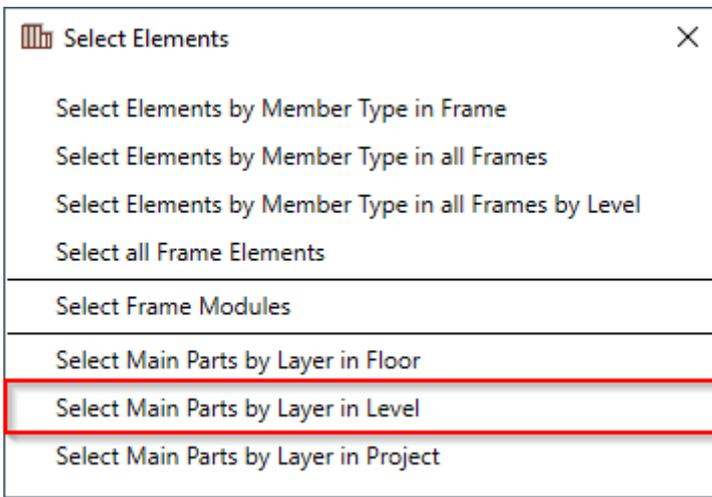


Select Main Parts by Layer in Level – selects main parts in the same type of framed floors in the same level.


Please make sure **Show Parts** or **Show Both** is selected in **View Properties** → **Parts Visibility**:

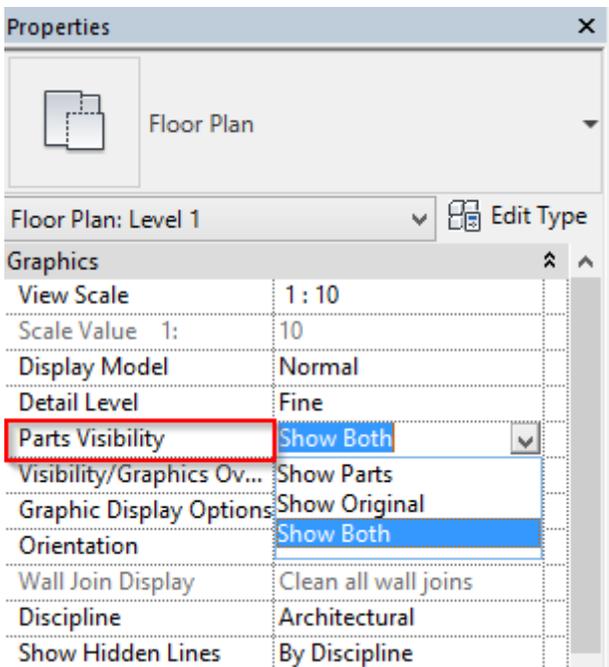

*Example: Click **Select Main Parts by Layer in Level** → Select one main part in the framed floor → All main parts of the same type in the same level will be selected:*

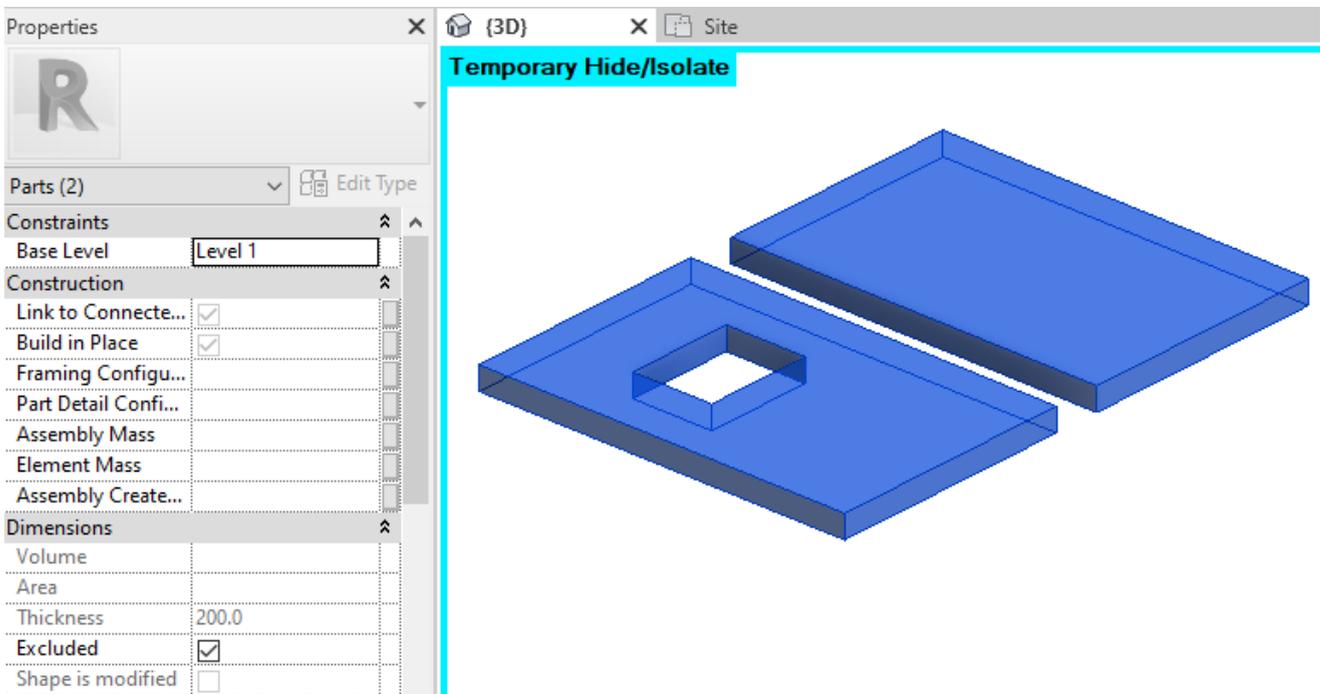


Select Main Parts by Layer in Project

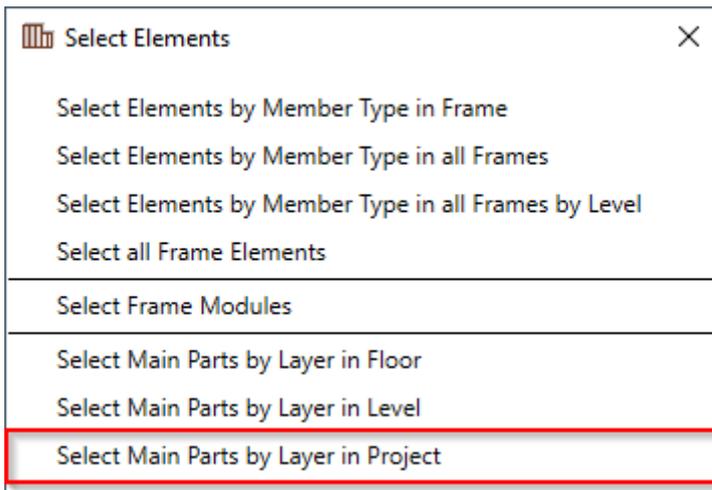

Select Main Parts by Layer in Project – selects main parts in the same type of framed floors in the whole project.

Please make sure **Show Parts** or **Show Both** is selected in **View Properties** → **Parts Visibility**:

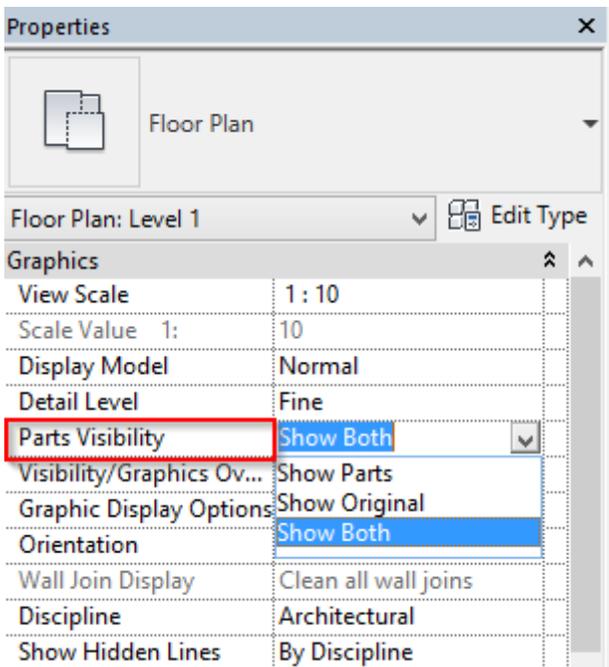

*Example: Click **Select Main Parts by Layer in Project** → Select one main part in the framed floor → All main parts of the same type in the whole project will be selected:*

