




SHEATHING and PANELING LAYOUTS – Main Features

Modified on: Mon, 26 Aug, 2019 at 3:59 PM

Sheathing and Paneling Layouts

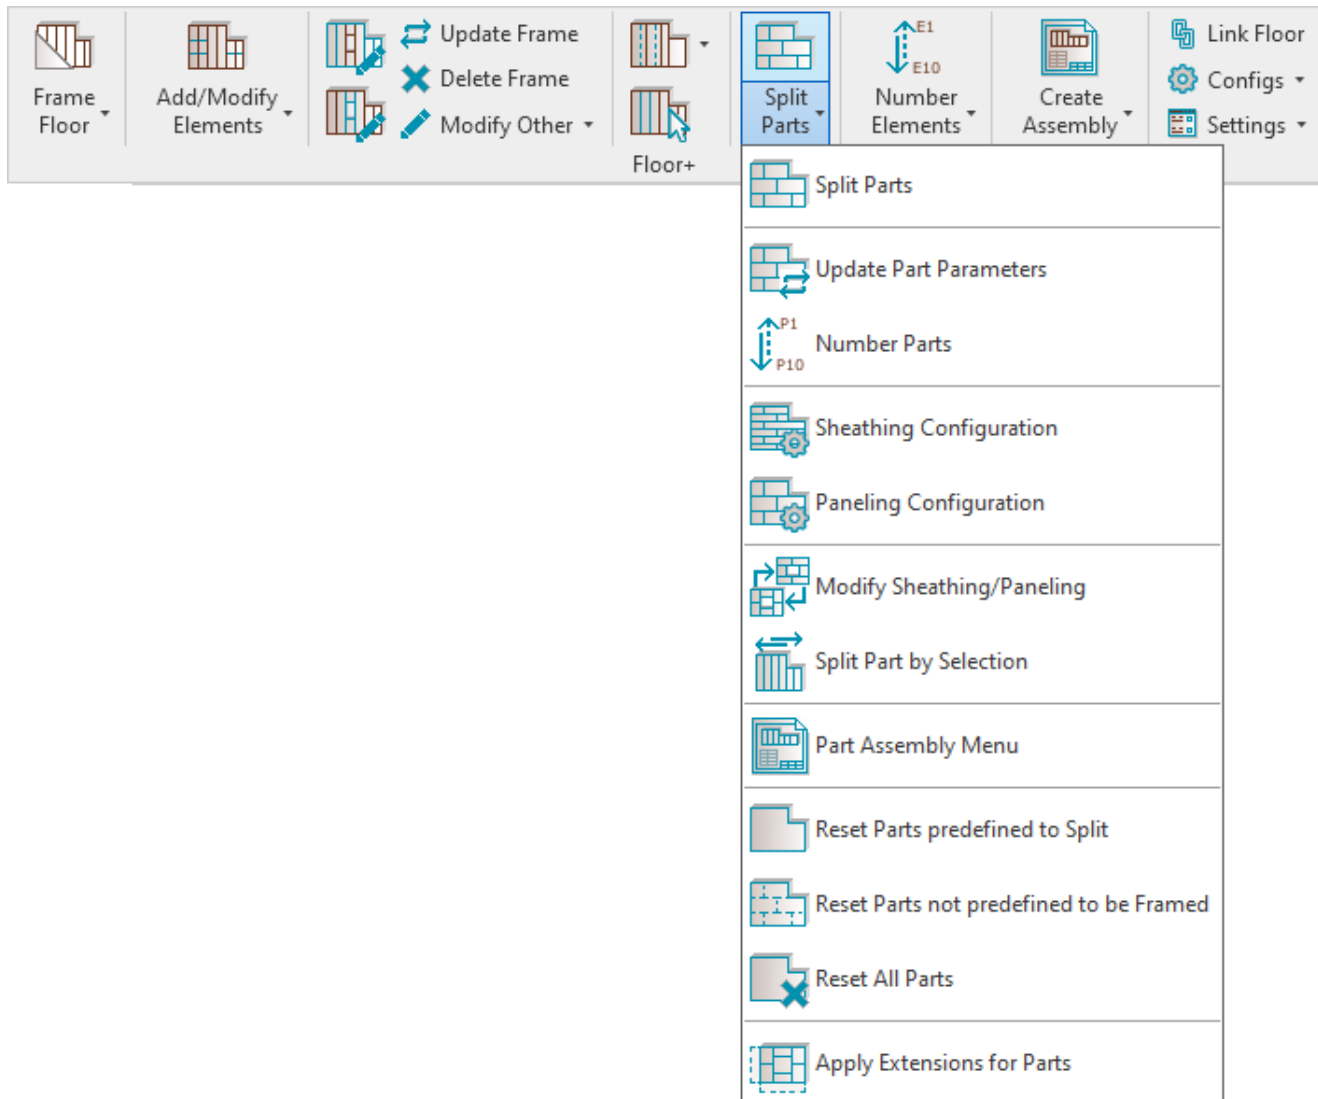

Wood Framing Floor+ automates the creation of sheathing and paneling layouts. Sheathing or paneling layouts can be generated and split by existing joists or other predefined rules.

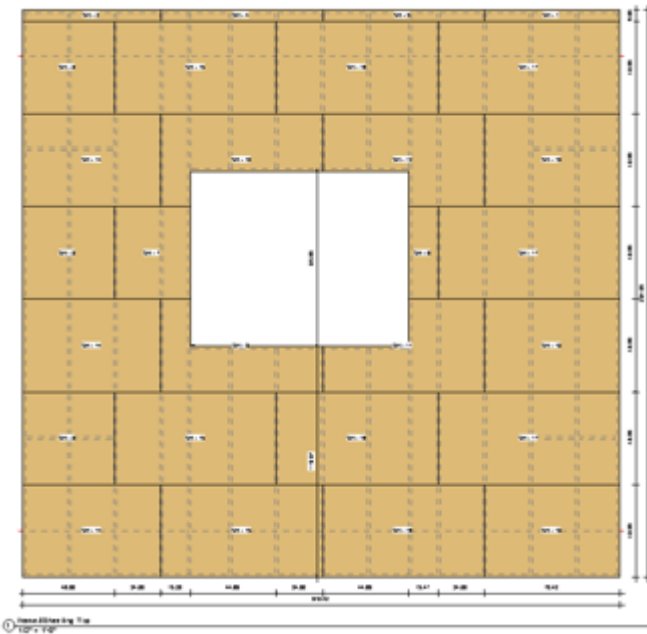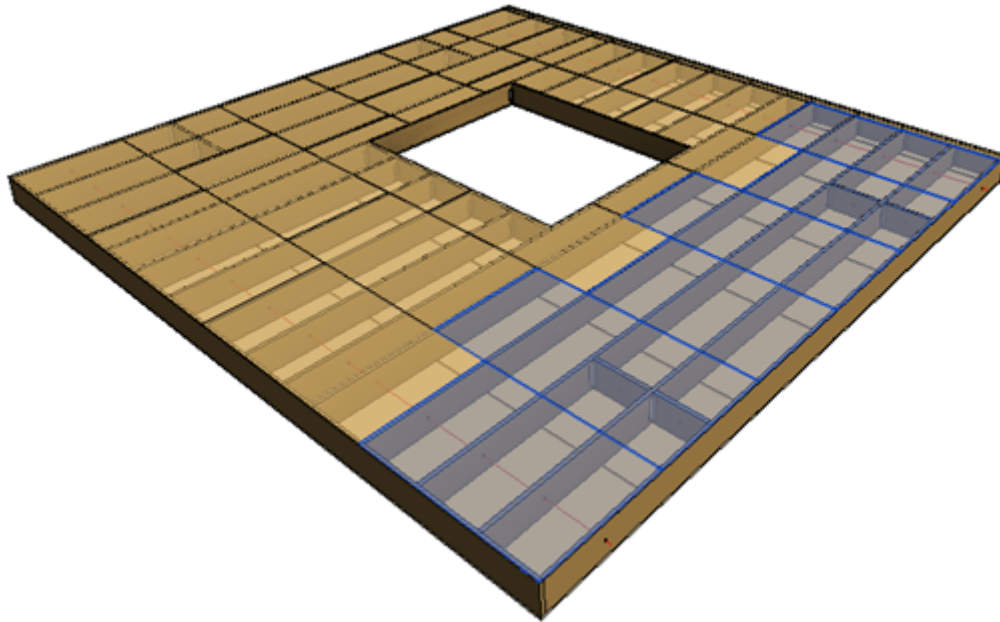


Sheathing Schedule				
FM SortMark	Thickness	Area	Count	Framing Member Mass
F4				
SH - 1	0.75	5.87 SF	2	12.64 lbm
SH - 2	0.75	3.00 SF	1	6.46 lbm
SH - 3	0.75	3.00 SF	1	6.46 lbm
SH - 4	0.75	6.99 SF	2	15.06 lbm
SH - 5	0.75	7.01 SF	2	15.09 lbm
SH - 6	0.75	10.31 SF	2	22.21 lbm
SH - 7	0.75	26.19 SF	2	56.40 lbm
SH - 8	0.75	96.00 SF	6	206.76 lbm
SH - 9	0.75	33.03 SF	2	71.15 lbm
SH - 10	0.75	38.81 SF	2	83.59 lbm
SH - 11	0.75	41.17 SF	2	88.67 lbm
SH - 12	0.75	44.92 SF	2	96.76 lbm
SH - 13	0.75	140.85 SF	6	303.35 lbm
SH - 14	0.75	144.00 SF	6	310.14 lbm
SH - 15	0.75	167.82 SF	6	361.44 lbm
SH - 16	0.75	168.18 SF	6	362.23 lbm
SH - 17	0.75	188.85 SF	6	406.73 lbm
56		1126.00 SF		2425.14 lbm


Before you start

Sheathing or paneling is created using Revit **Parts**.


In order to see the sheathing or paneling, you have to select **Show Parts** or **Show Both** in **View Properties** → **Parts Visibility**.

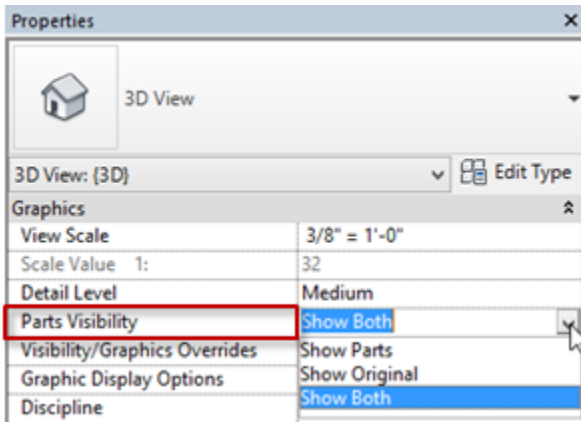

In the **Element Properties** you can find all information about every created sheathing/paneling segment. This information can later be used in tags and schedules.

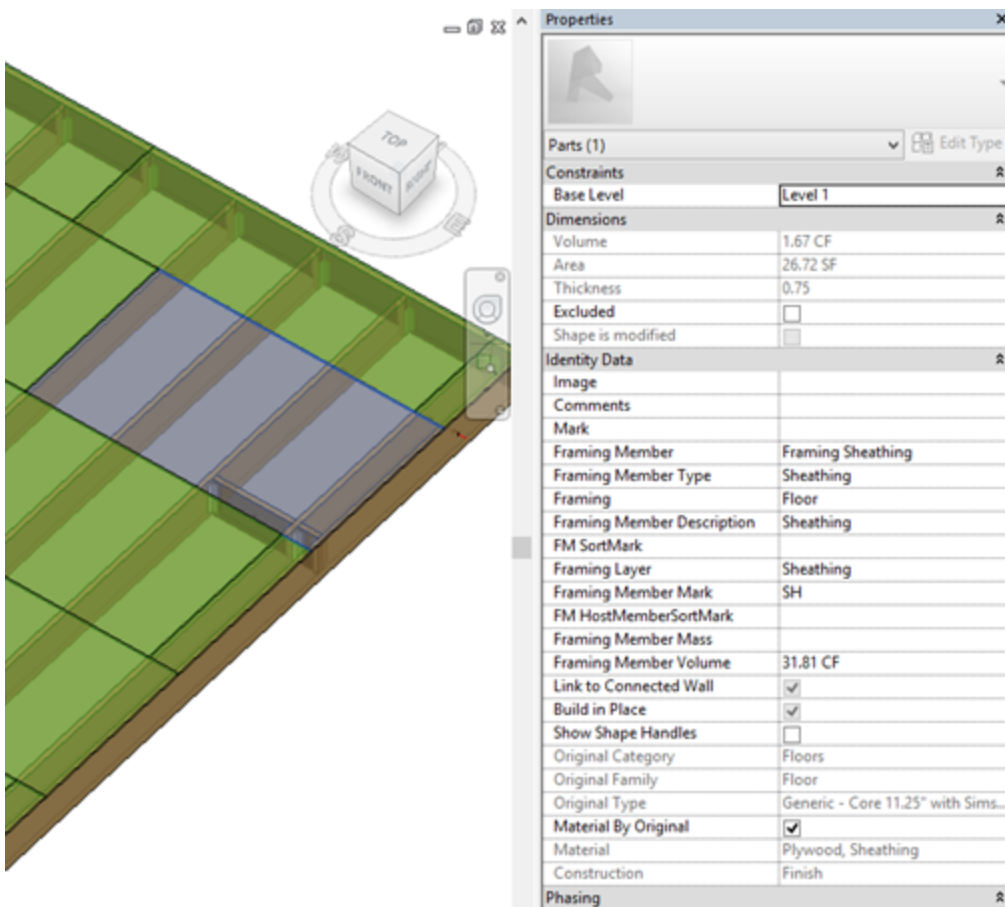


Split Parts

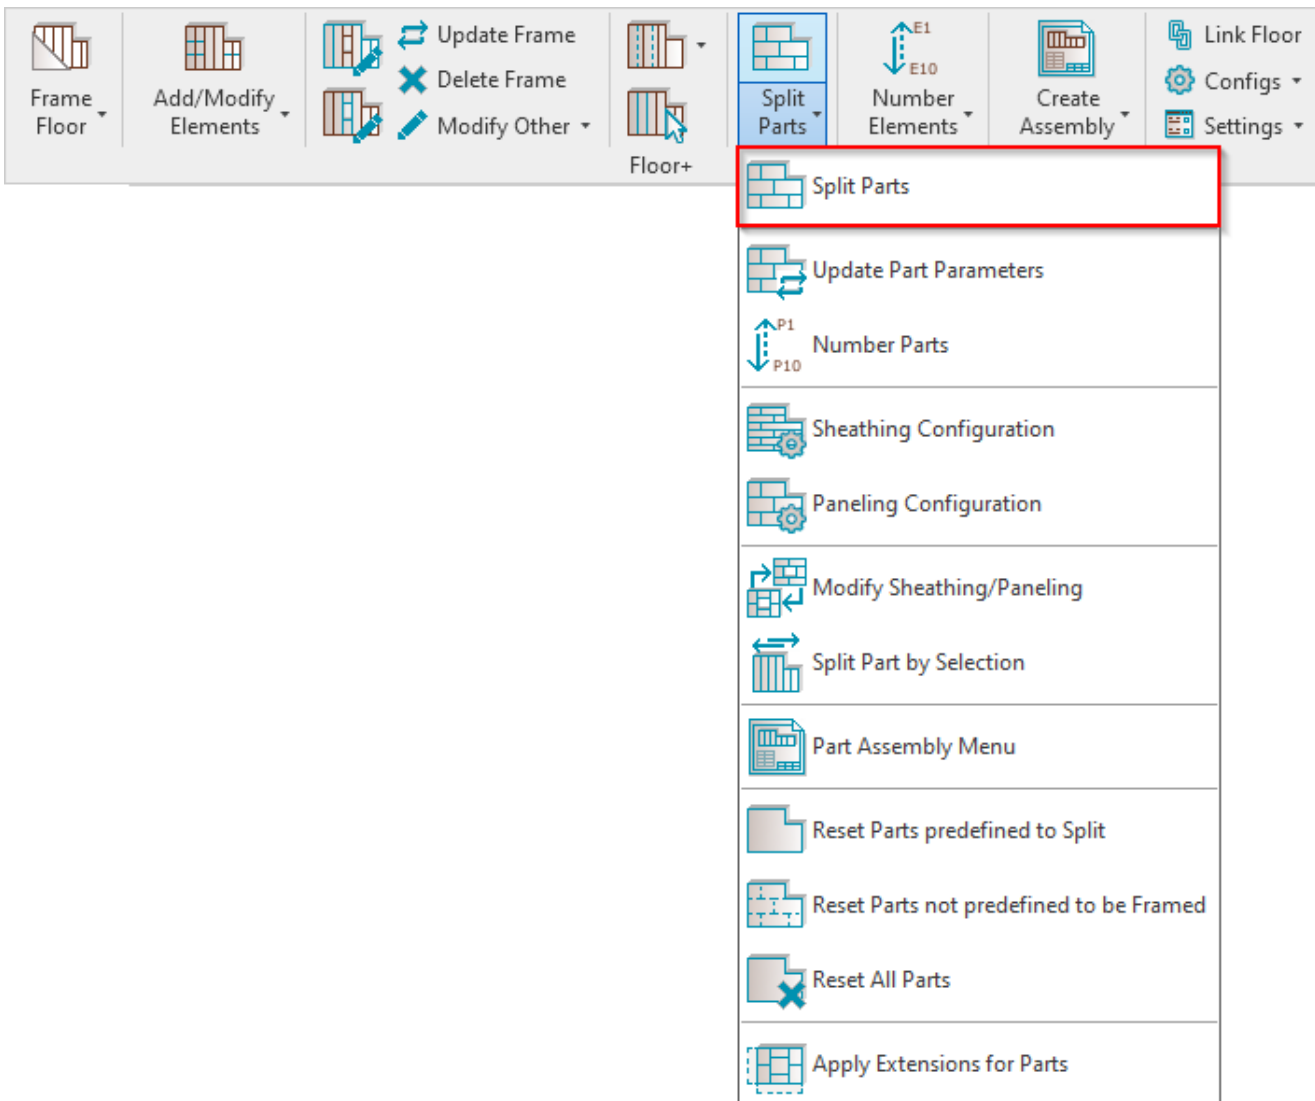



Split Parts – splits sheathing or paneling into segments by predefined **Sheathing Configuration** or **Paneling Configuration**. You just need to select a floor or any frame of a floor.

*Note: In order to see the sheathing, switch on **Show Parts** or **Show Both** under **Parts Visibility** in the **View Properties**.*

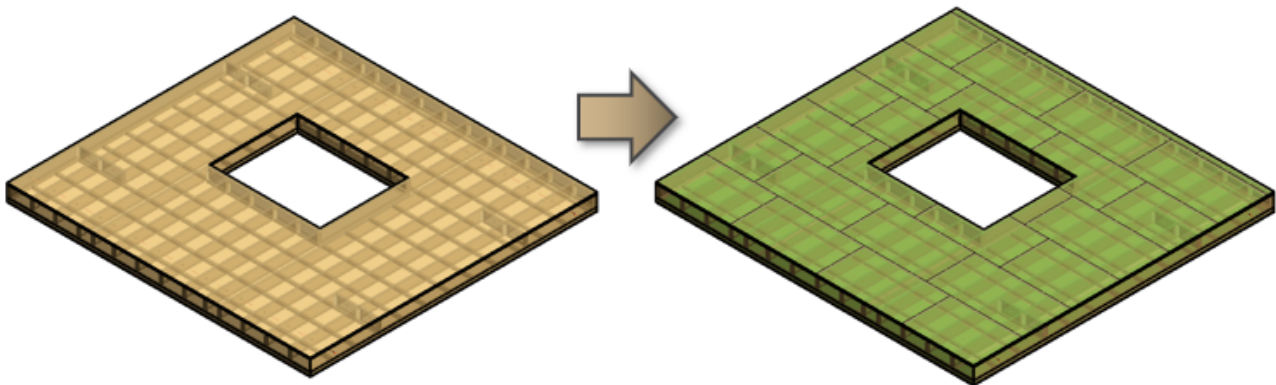


Sheathing or Paneling will be split if selected floor layer has the conditions below in **Link Floor**:


- **Framing Layer** predefined as **Sheathing**, **Sheathing II** or **Paneling**.
- **Sheathing/Paneling Configuration** name selected. It saves all settings for the sheathing/paneling layouts.
- **Split Parts** is ticked.

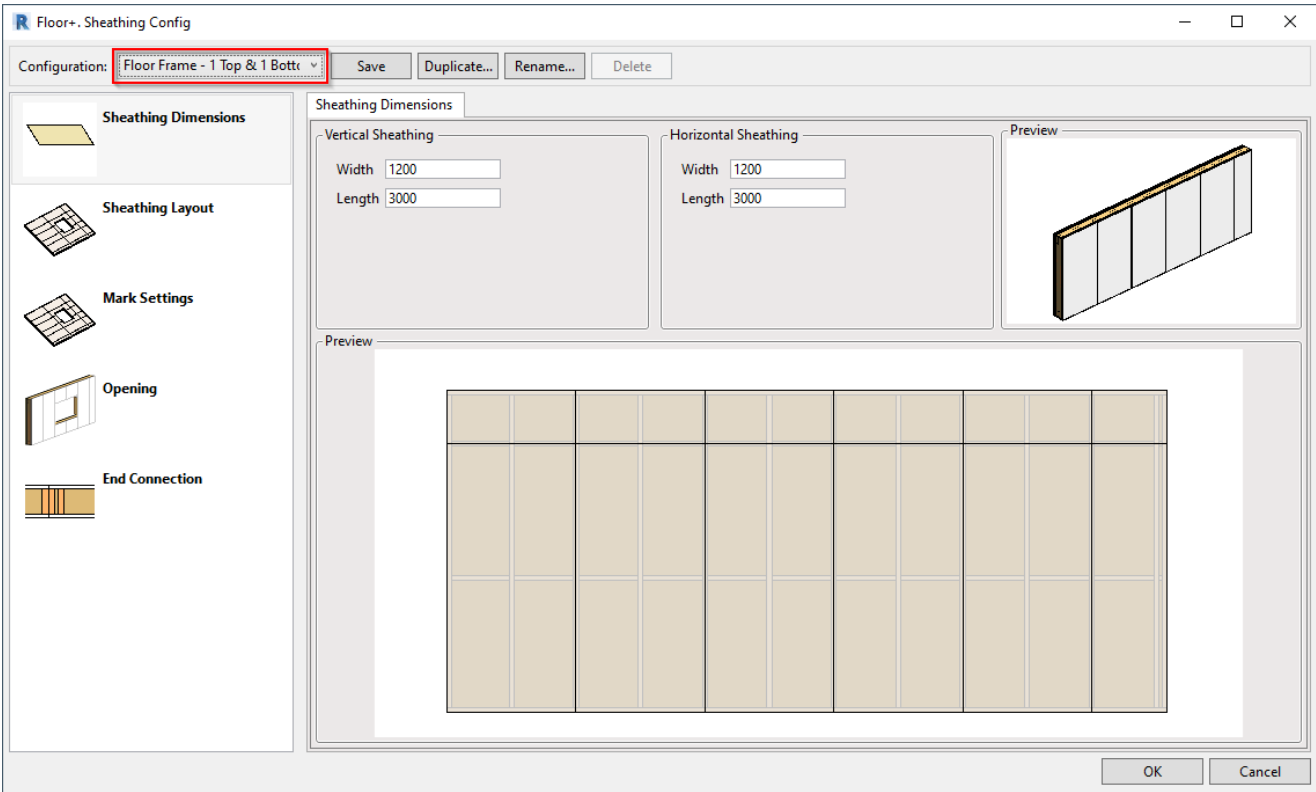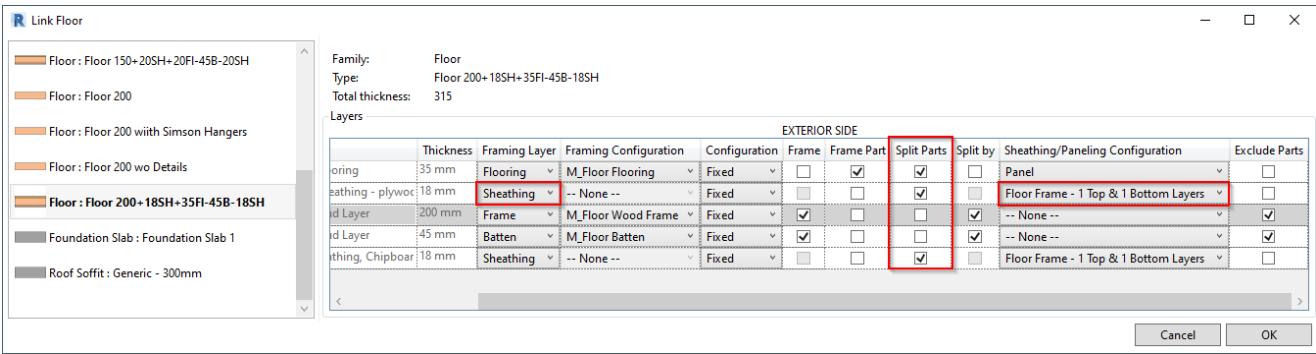

Split Parts – select if parts need to be split after using **Split Parts** function or should be split later. This is very useful if there are many layers in the floor, for example, two sheathing/paneling layers and you want to split only one.

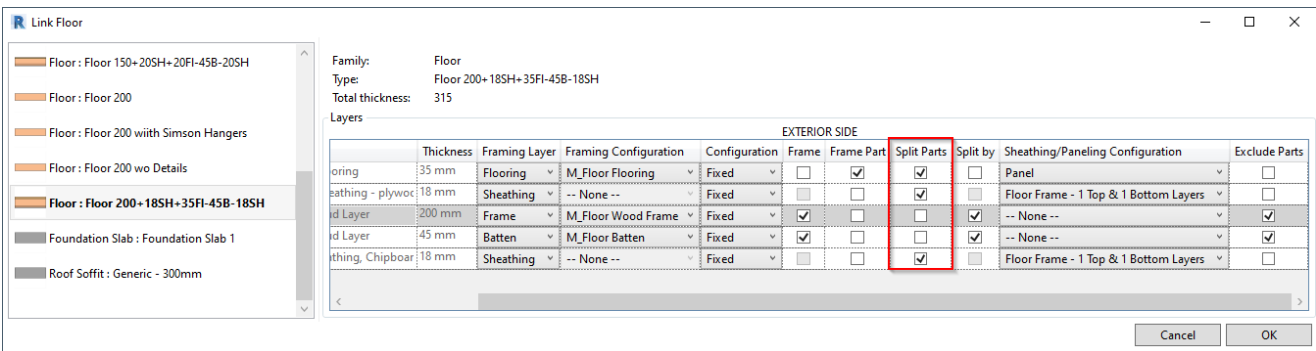


Update Part Parameters

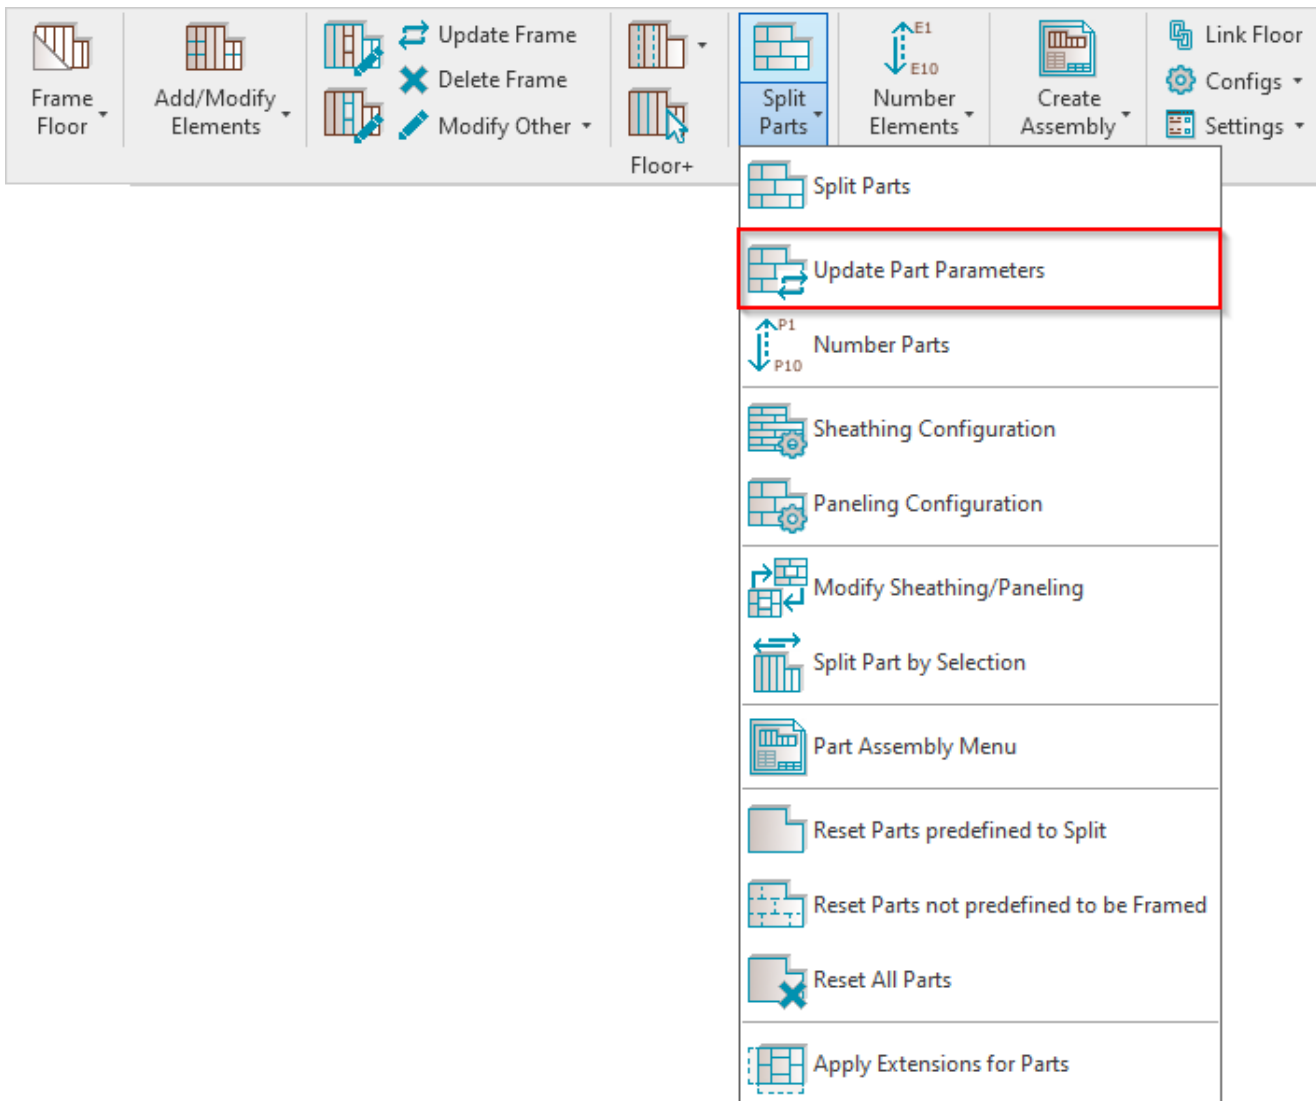


Update Part Parameters – updates part parameters from **Sheathing/Paneling Configuration** → **Mark Settings** without needing to use **Split Parts** on the floor again. Also enters **HostMemberSortMark** parameter.


Number Parts

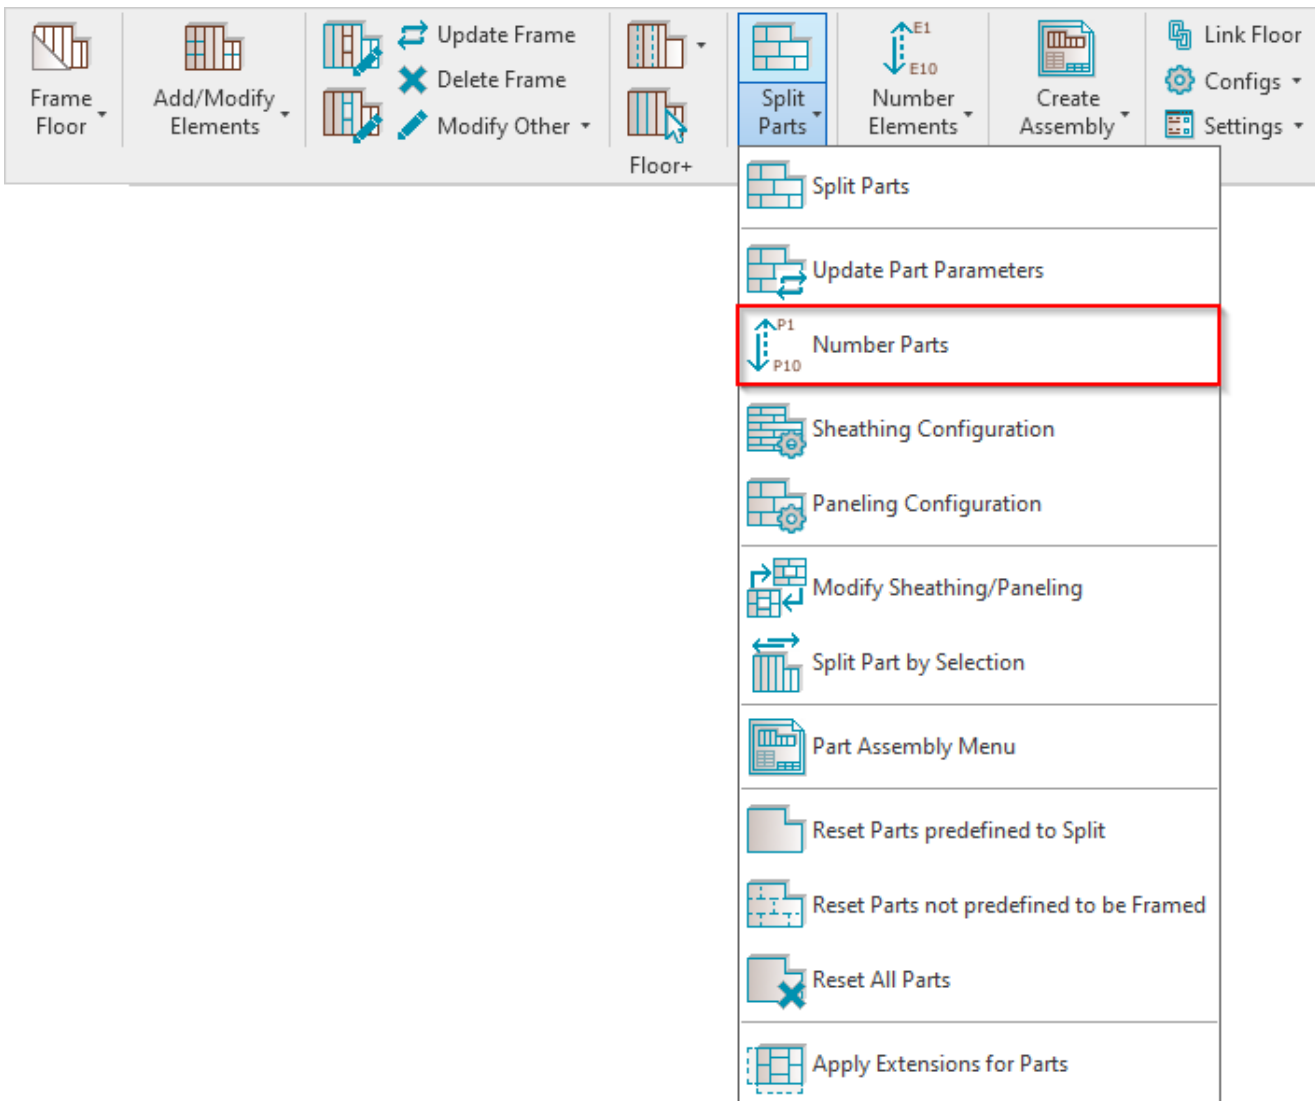

or:

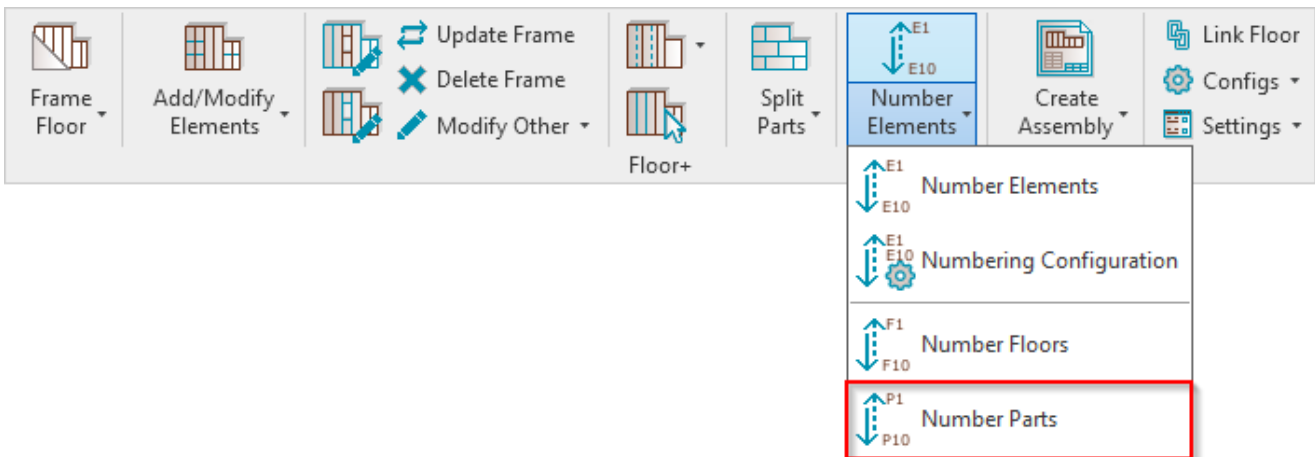


Number Parts – rennumbers all sheathing/paneling elements (Parts) by predefined configuration in **Numbering Setup** → **Part Numbering Configuration**. Part numbering configurations come from **Sort Mark** (<http://www.agacad.com/products/tools4revit/sort-mark>).

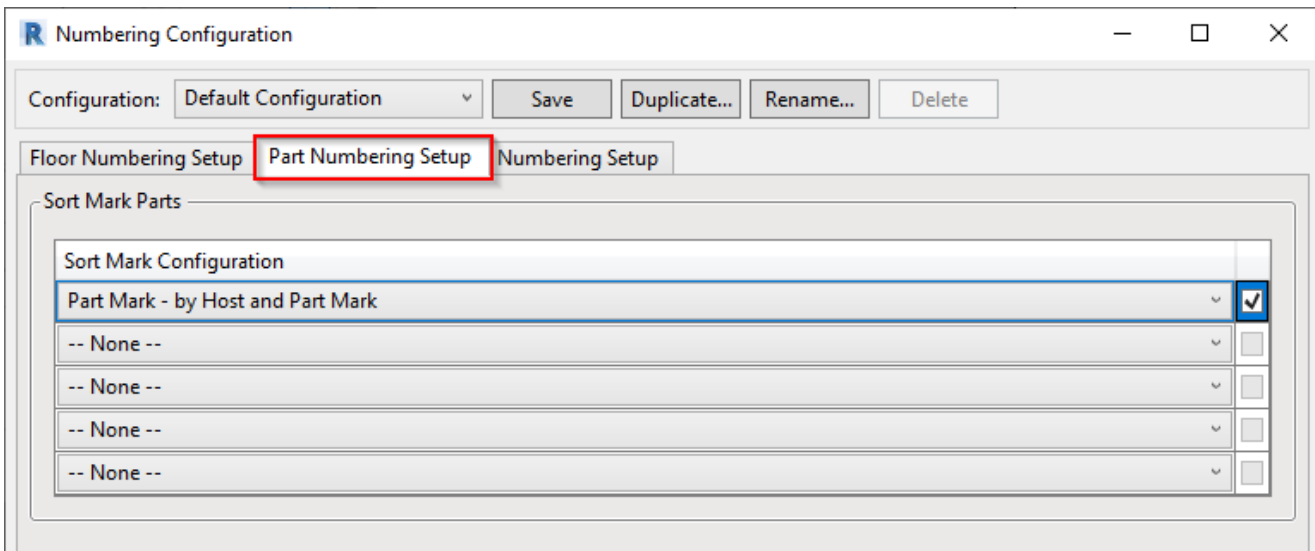


Example: All sheathing/paneling elements (Parts) are grouped by **Framing Member Mark**, uniquely numbered, and have **Framing Member Mark** value as a prefix. Result is written to the **Mark** instance parameter.

[Sort Mark E-Help >>](#)

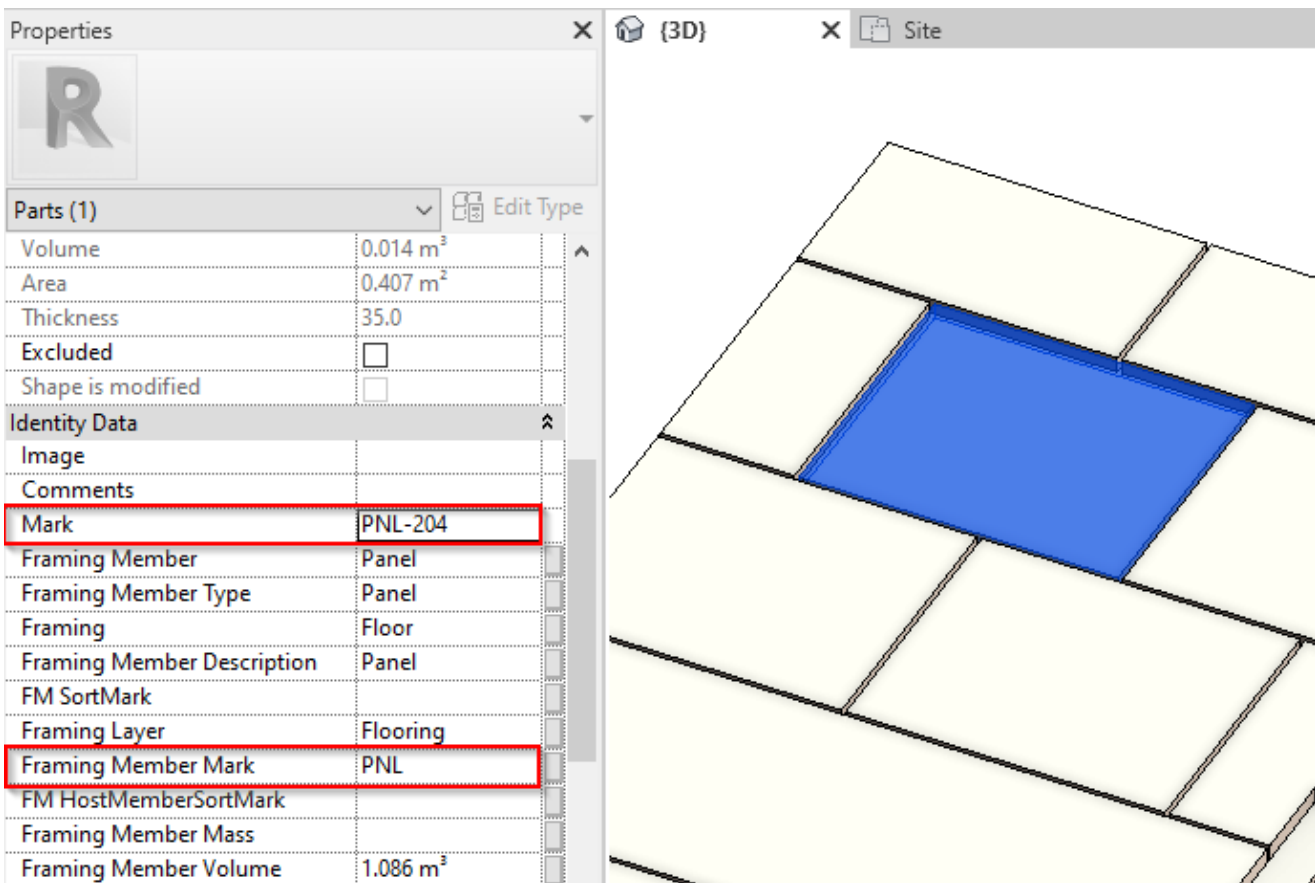


Sheathing Configuration

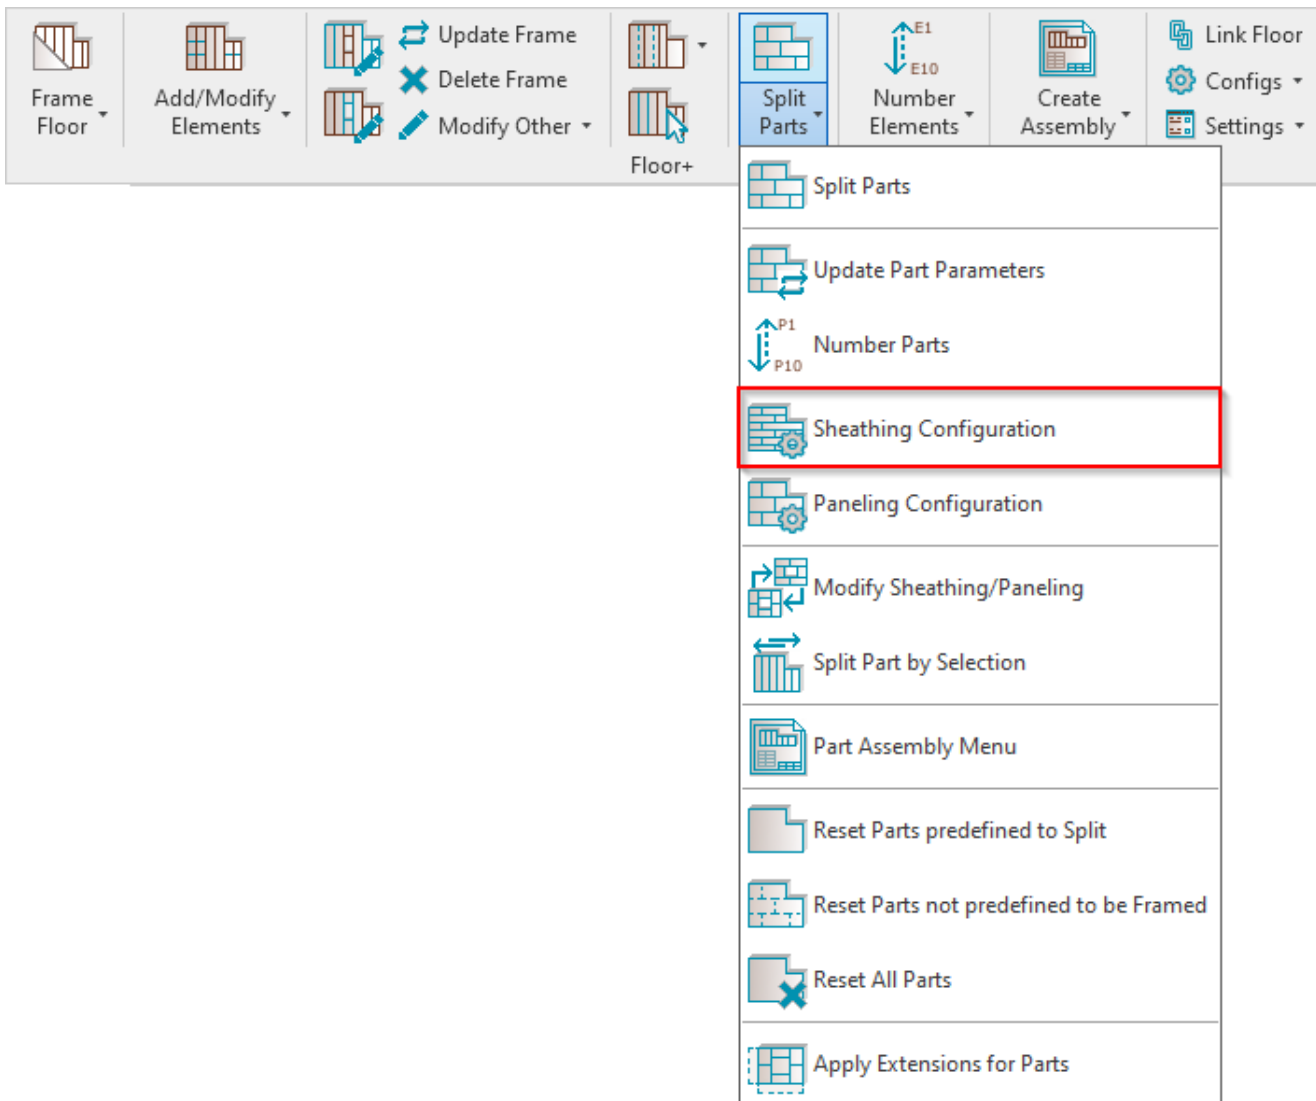

Sheathing Configuration – allows you to configure and save settings for the sheathing layouts. These settings can be saved and linked with floor layer using **Link Floor**.

Read more >> (<https://agacad.freshdesk.com/support/solutions/articles/44001784635-sheathing-and-paneling-layouts-sheathing-configuration>).


Paneling Configuration

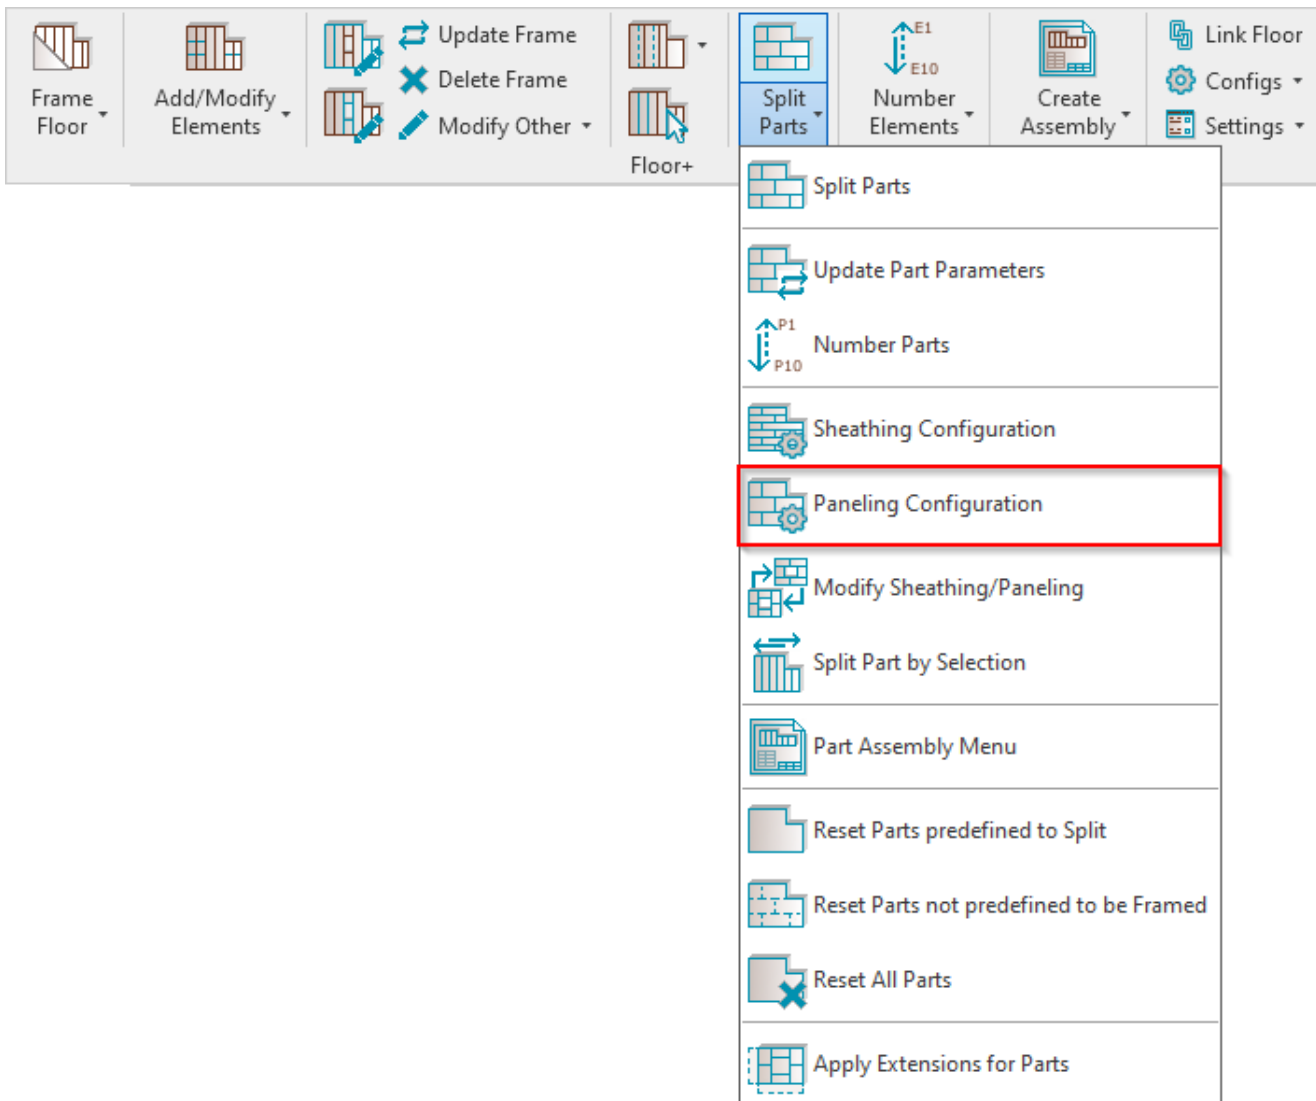


Paneling Configuration – allows you to configure and save settings for the paneling layouts. These settings can be saved and linked with floor layer using **Link Floor**.

Read more >> (<https://agacad.freshdesk.com/support/solutions/articles/44001784636-sheathing-and-paneling-layouts-paneling-configuration>).


Modify Sheathing/Paneling

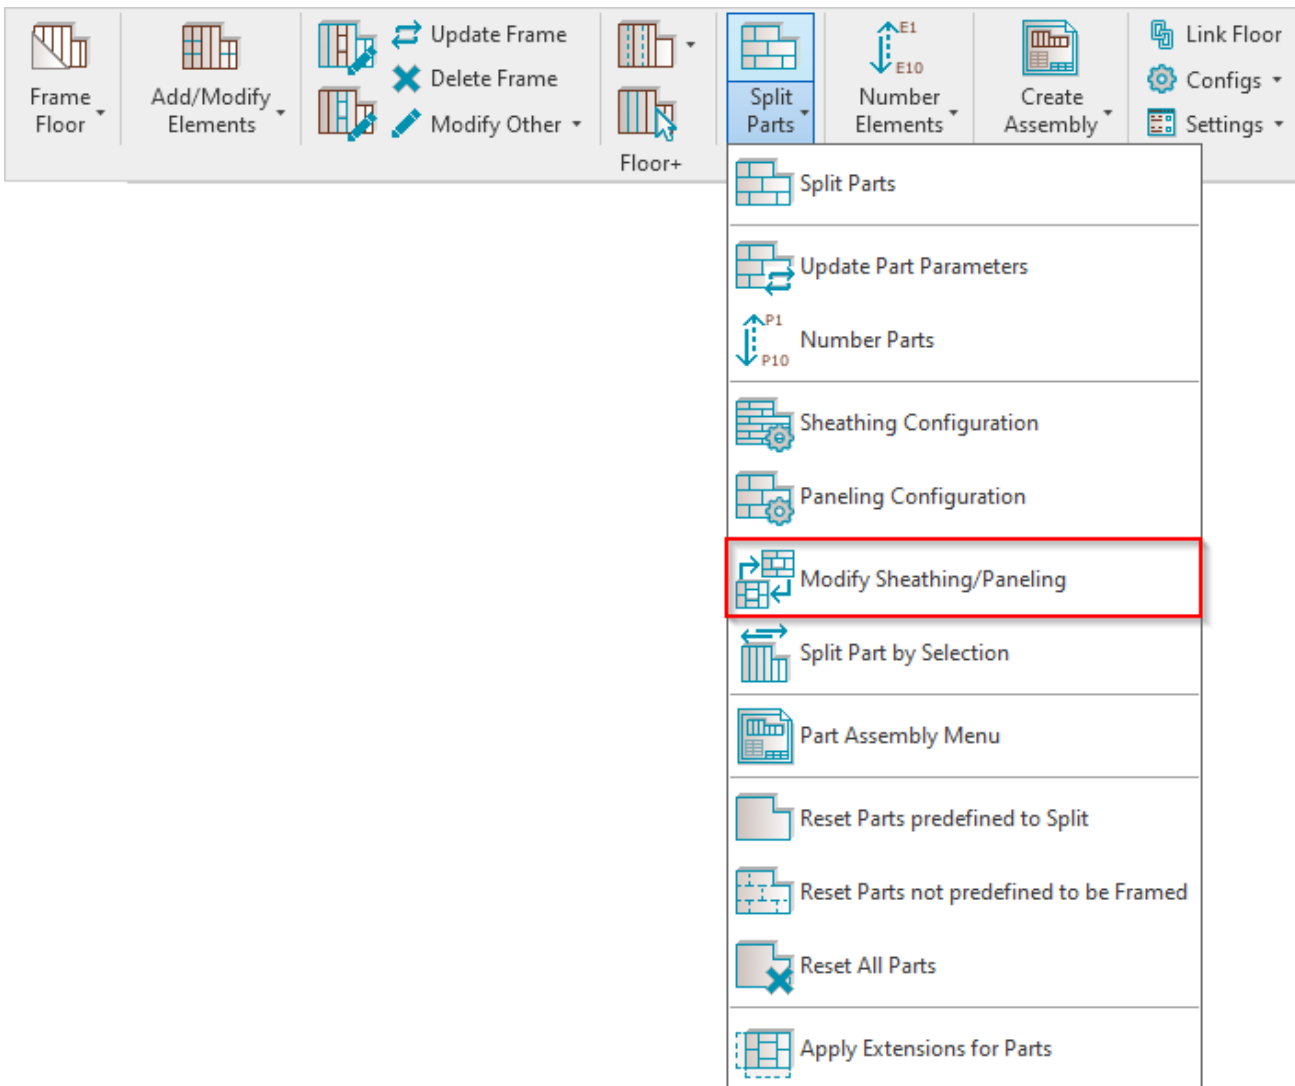



Modify Sheathing/Paneling – changes selected floor layer sheathing/paneling configuration to the new one from the list.

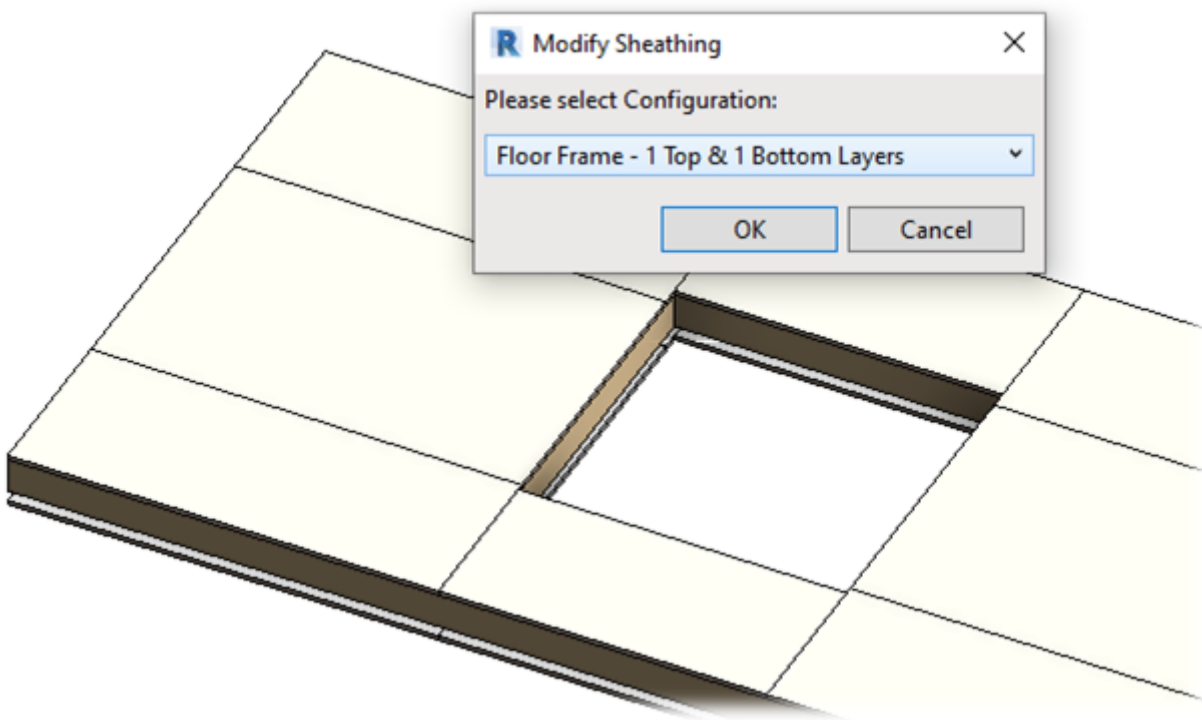


Split Part by Selection

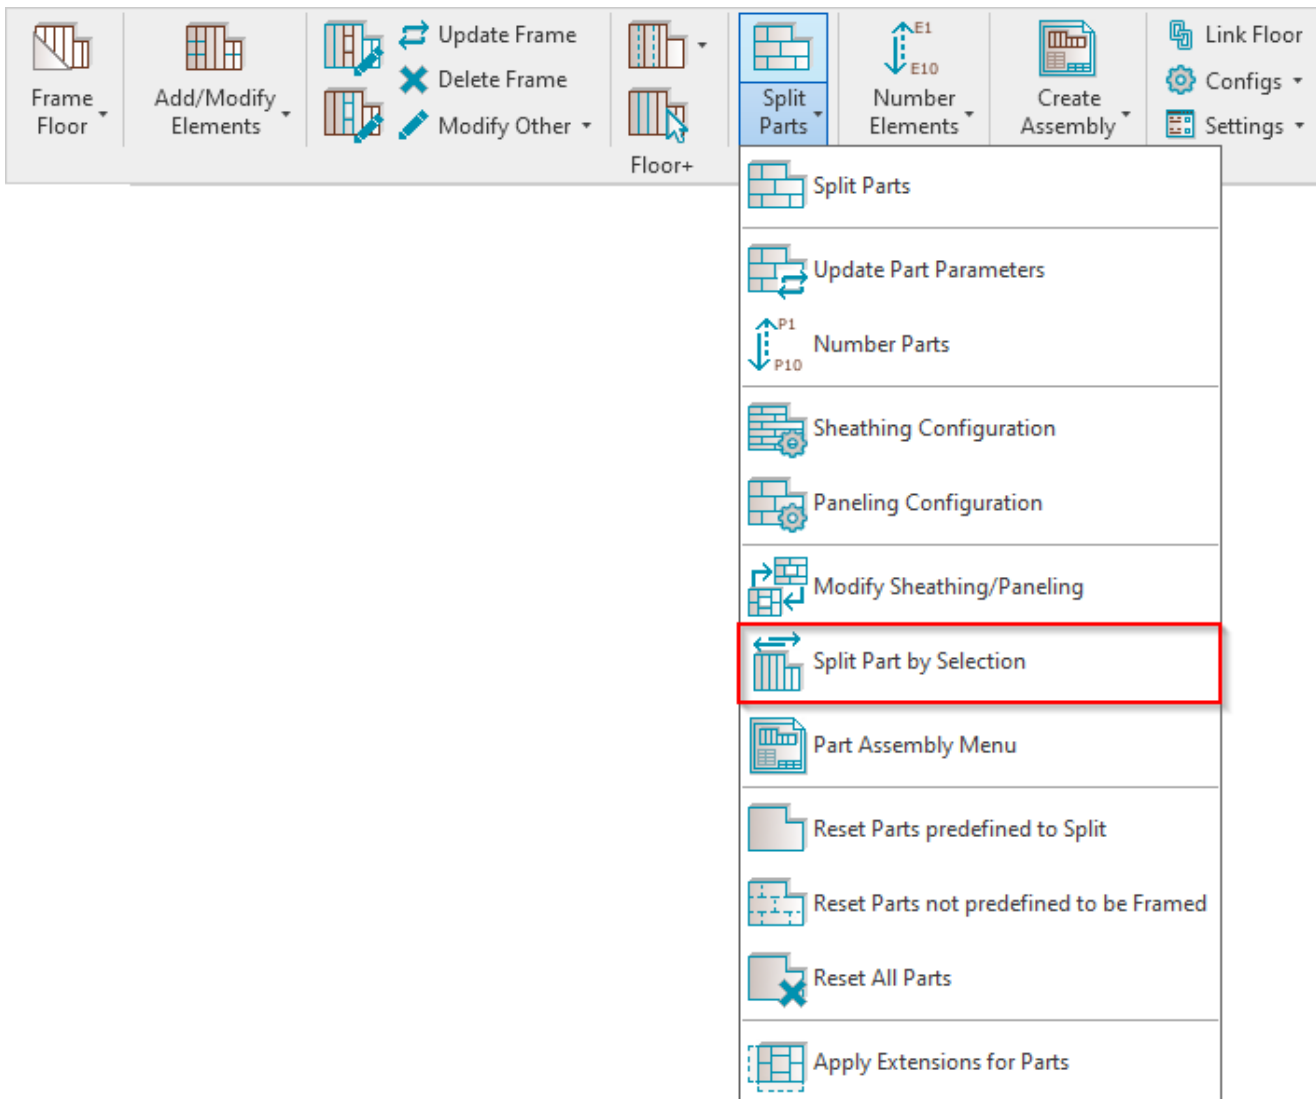


Split Part by Selection – splits selected sheathing/paneling layout by predefined placement direction: **From Start**, **From End**, or **From both Sides**.

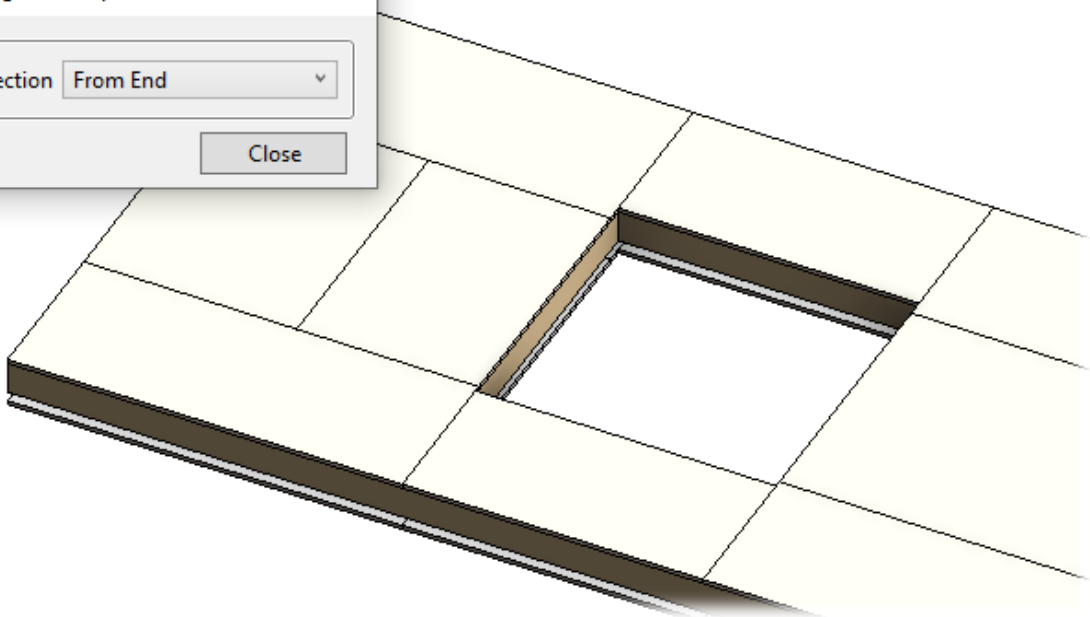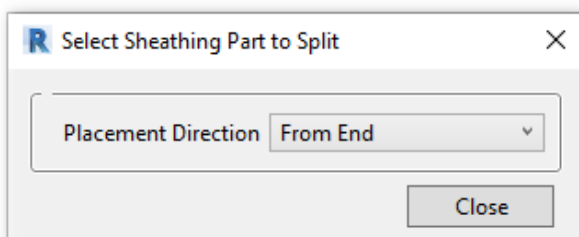


Reset Parts predefined to Split

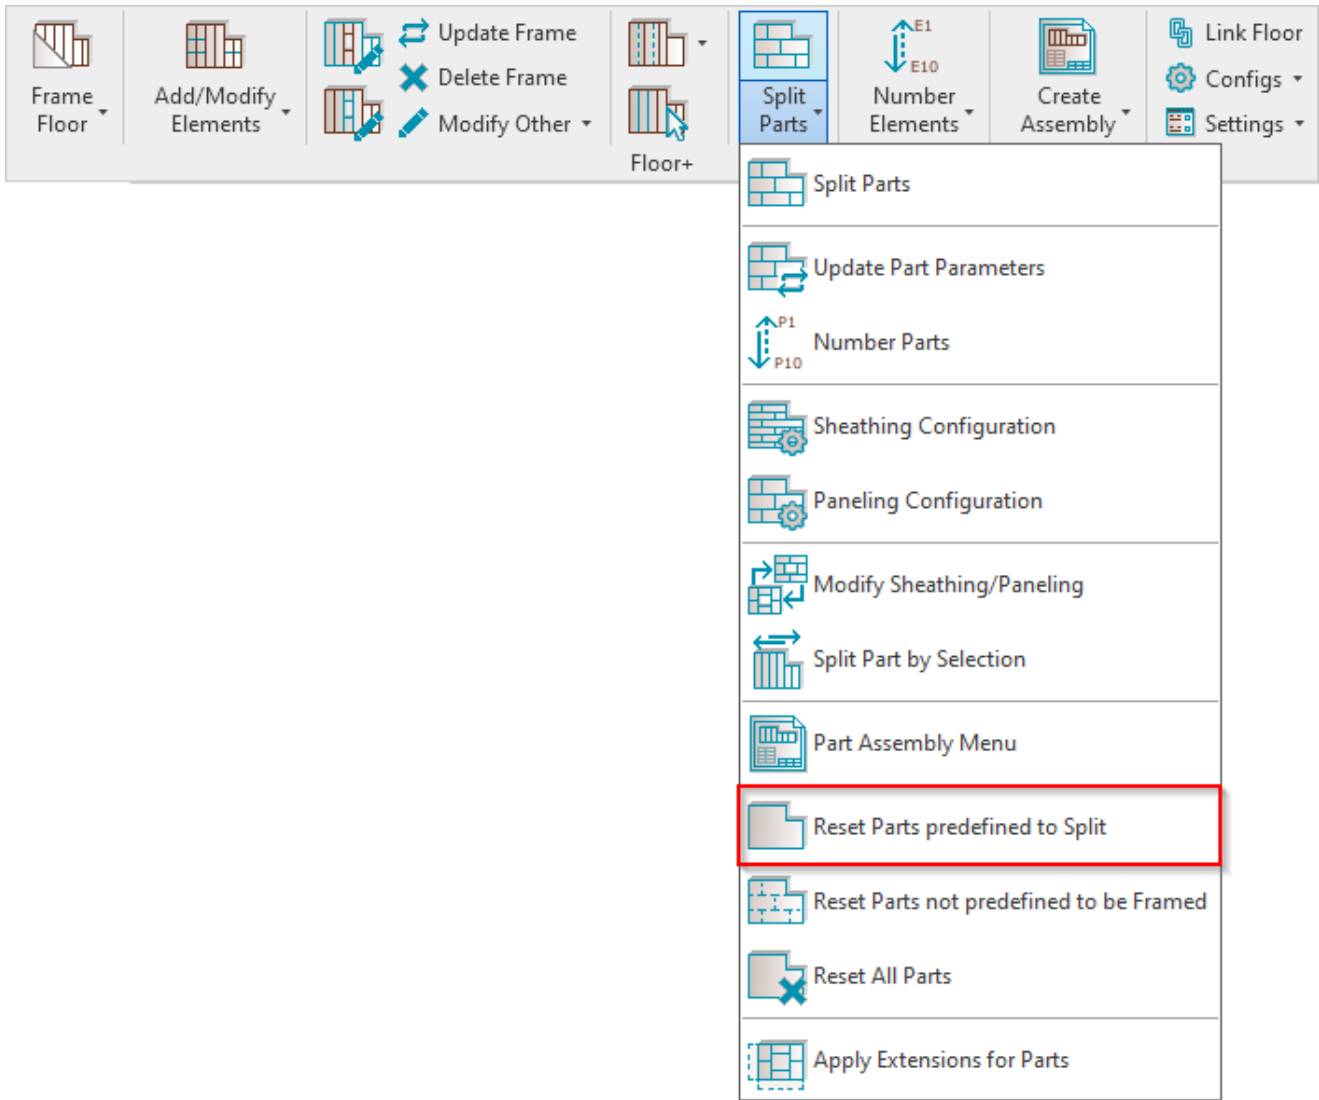

Reset Parts predefined to Split – resets sheathing/paneling layout to a single part.

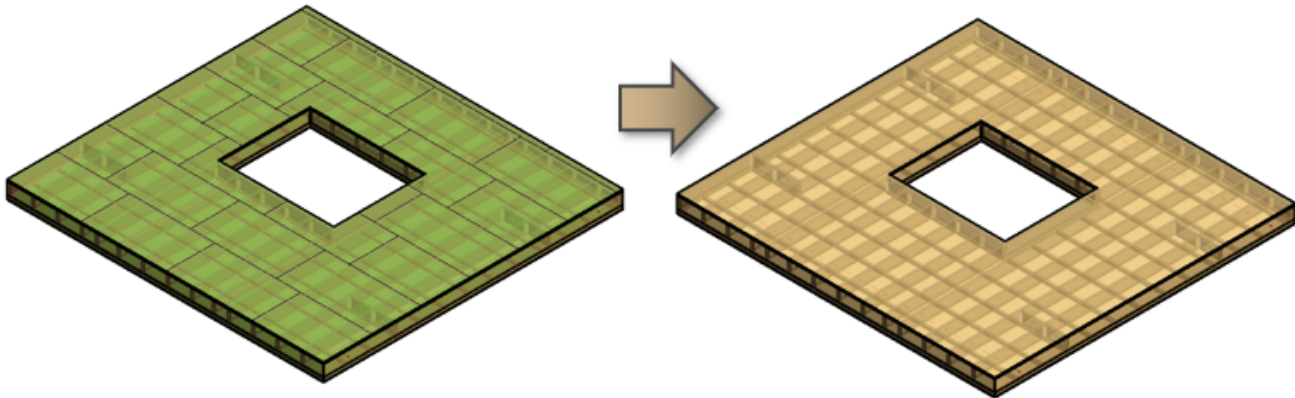


Reset Parts not predefined to be Framed

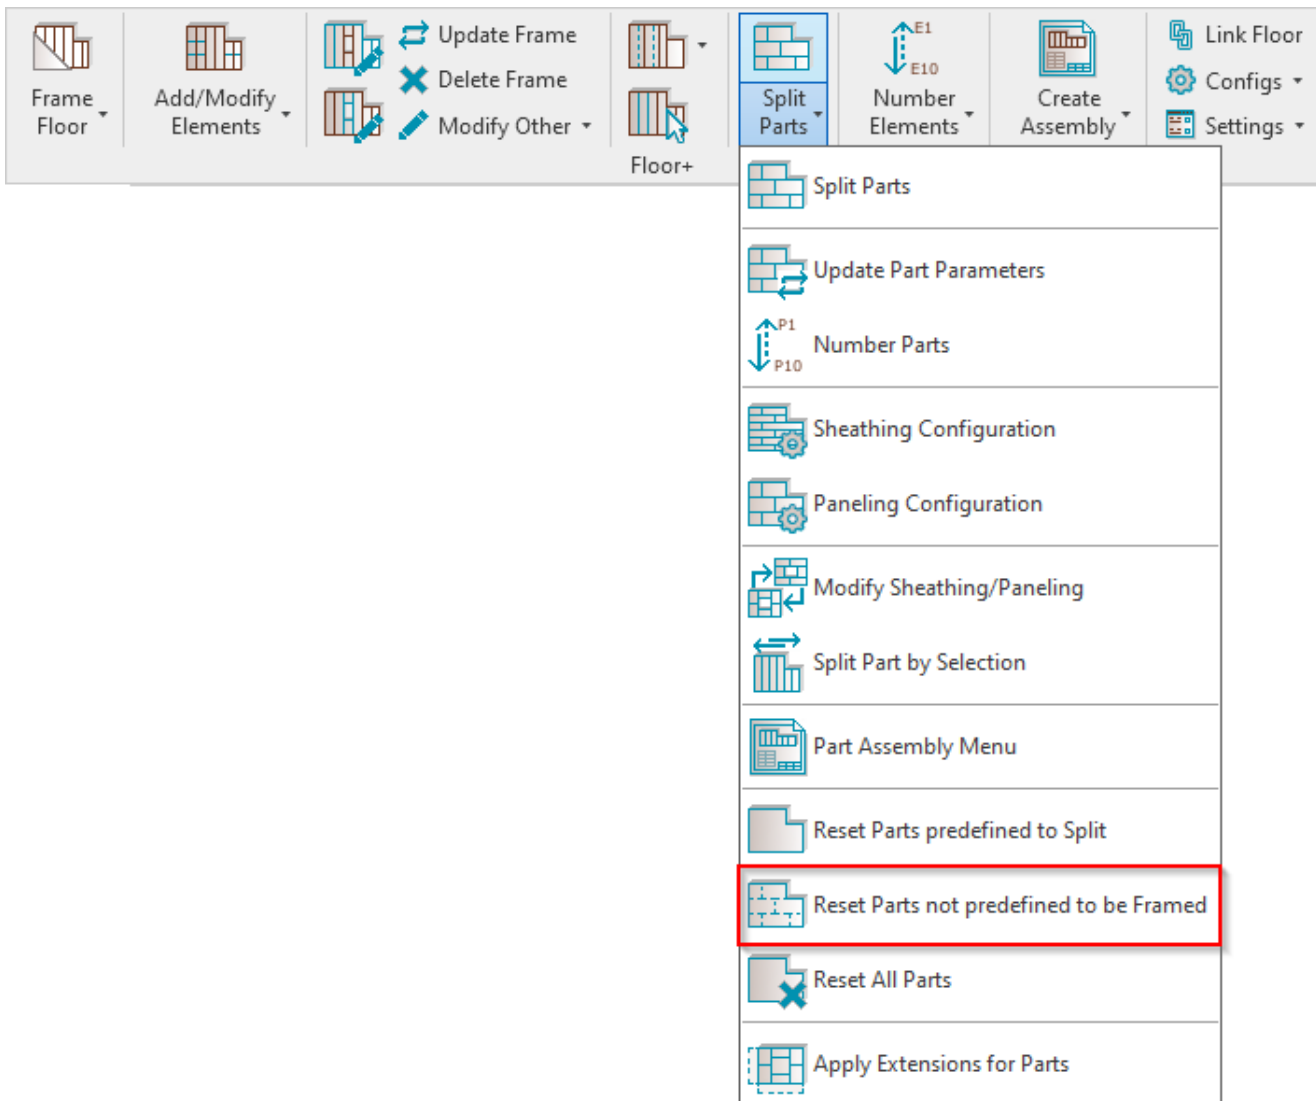


Reset Parts not predefined to be Framed – resets sheathing/paneling parts that were not predefined to be framed.


Reset All Parts

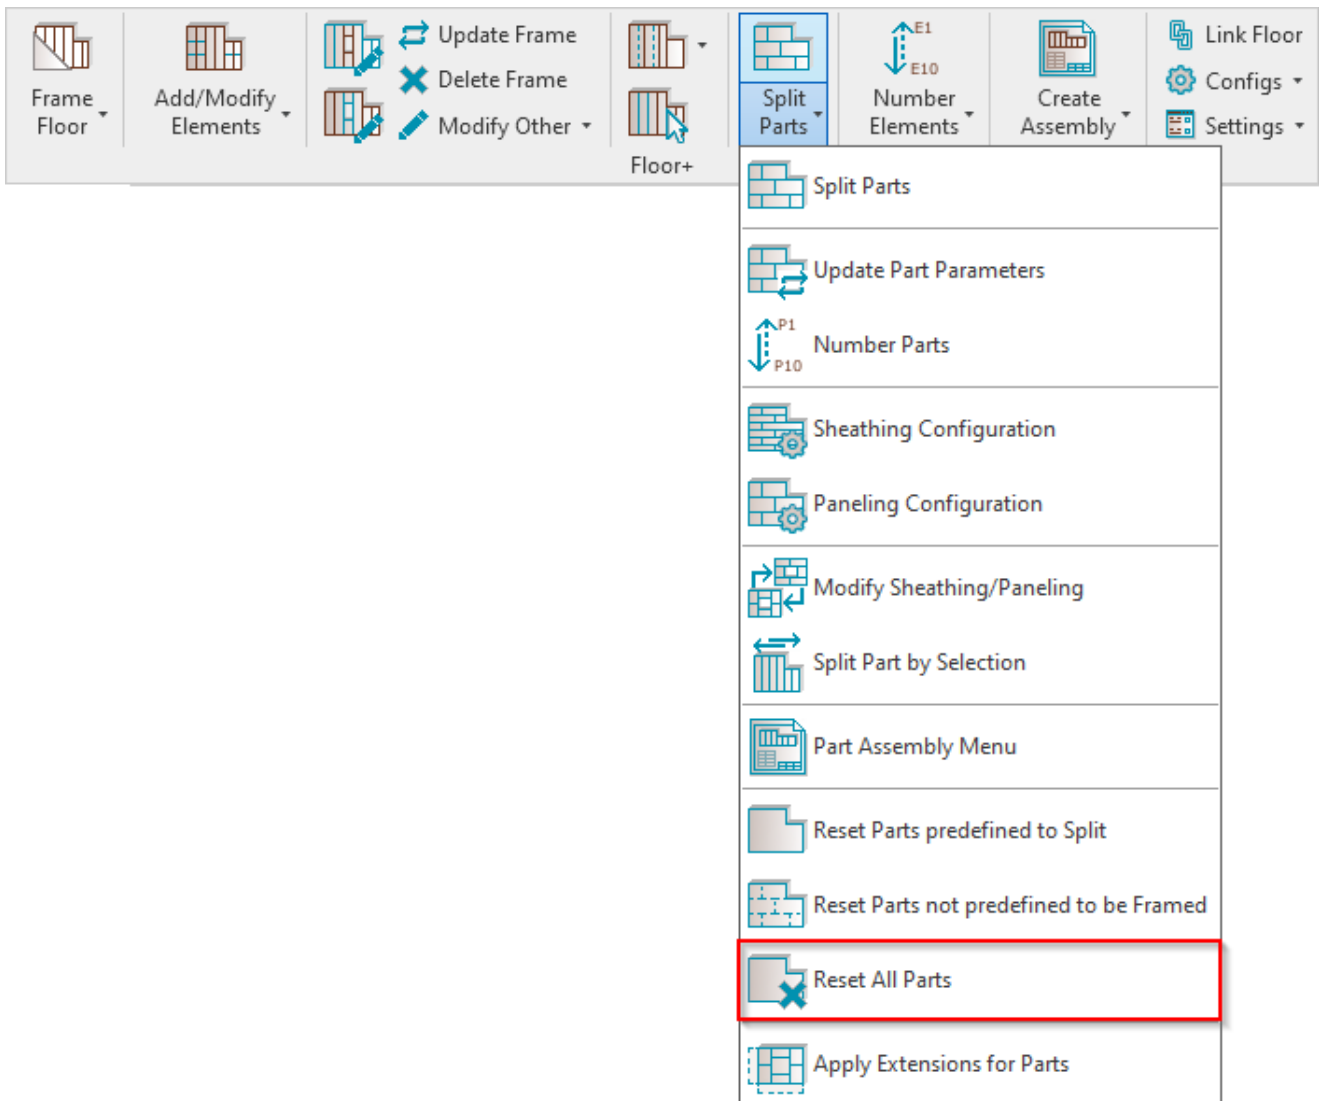

Reset All Parts – resets all sheathing/paneling layouts from selected floor.

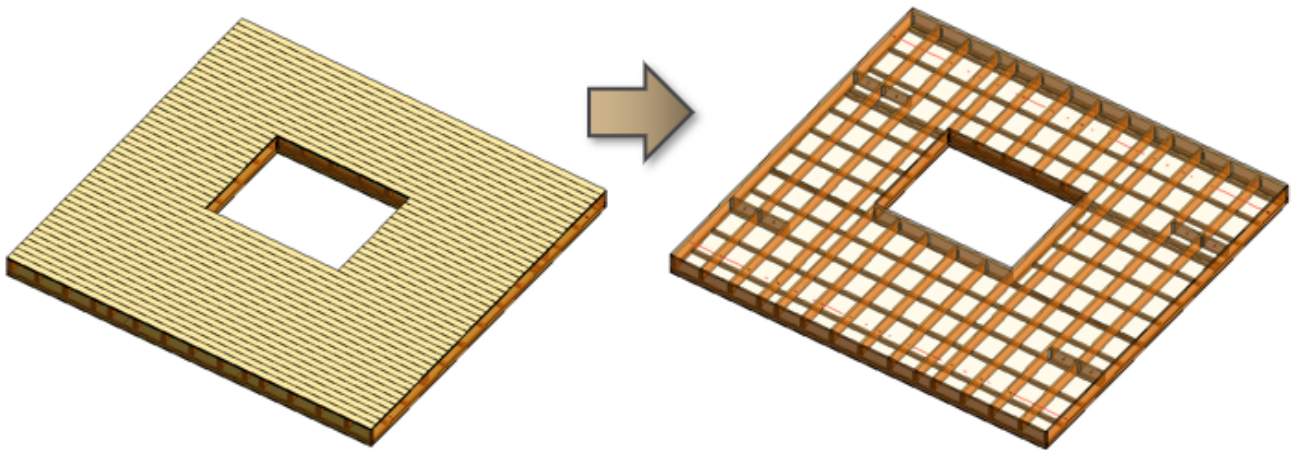

Apply Extensions for Parts

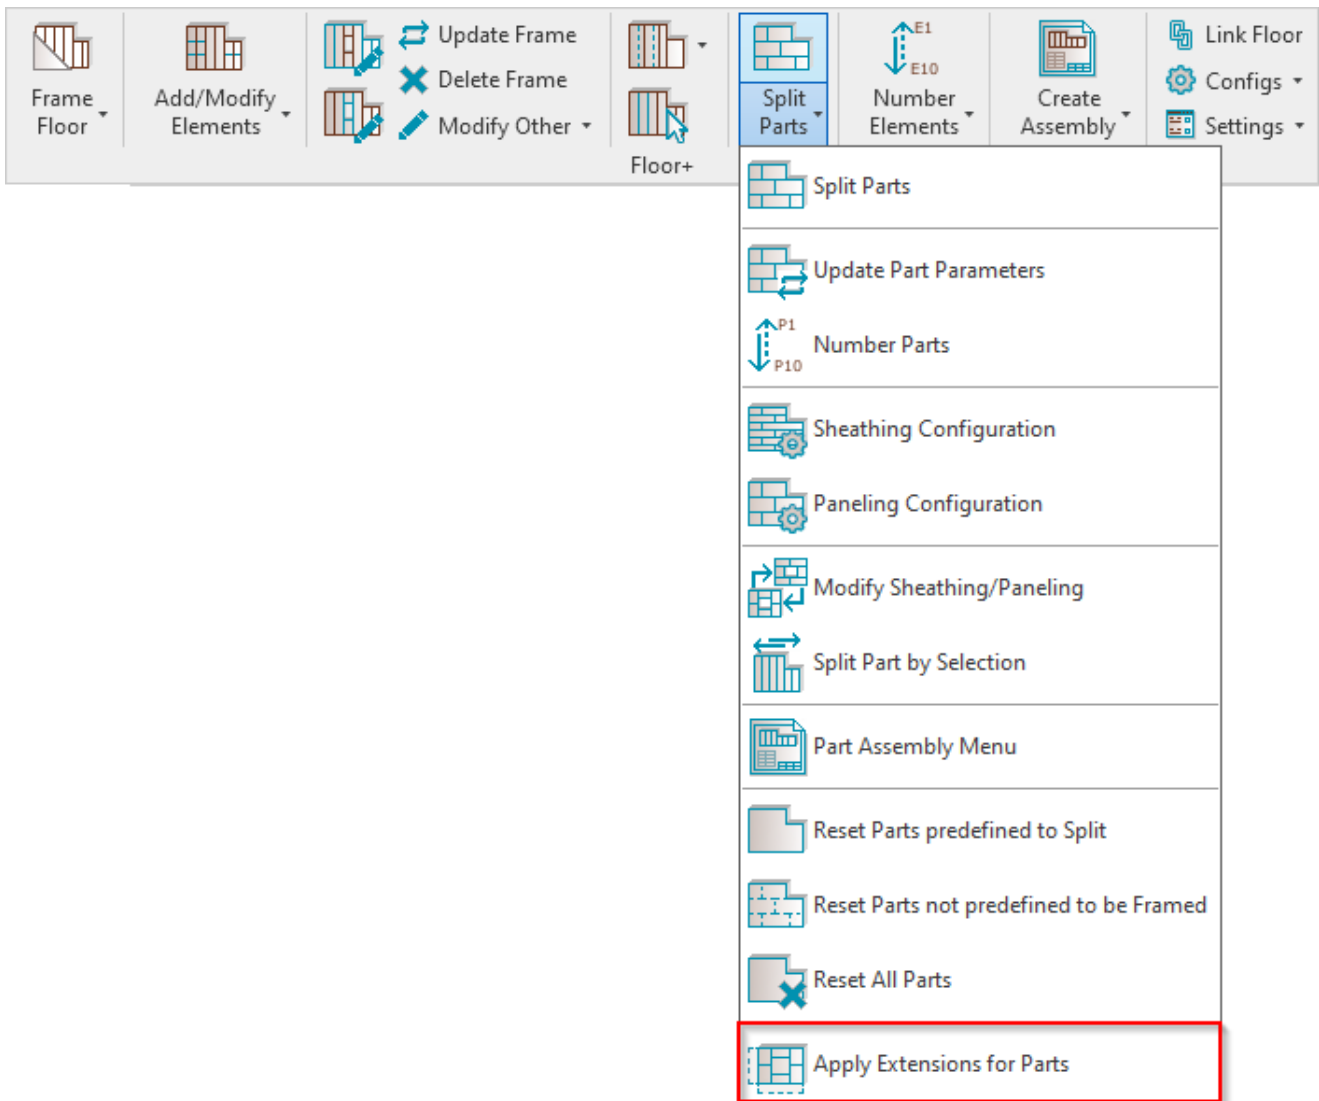

Apply Extensions for Parts – applies extensions for sheathing/paneling parts and merges all part segments. Extension values come from **Sheathing** or **Paneling Configuration**.

