



FRAMING CONFIGURATION – Common Settings – Modify Configuration Settings

Modified on: Sat, 9 Jan, 2021 at 8:09 PM


Framing Configuration may be found in two locations:

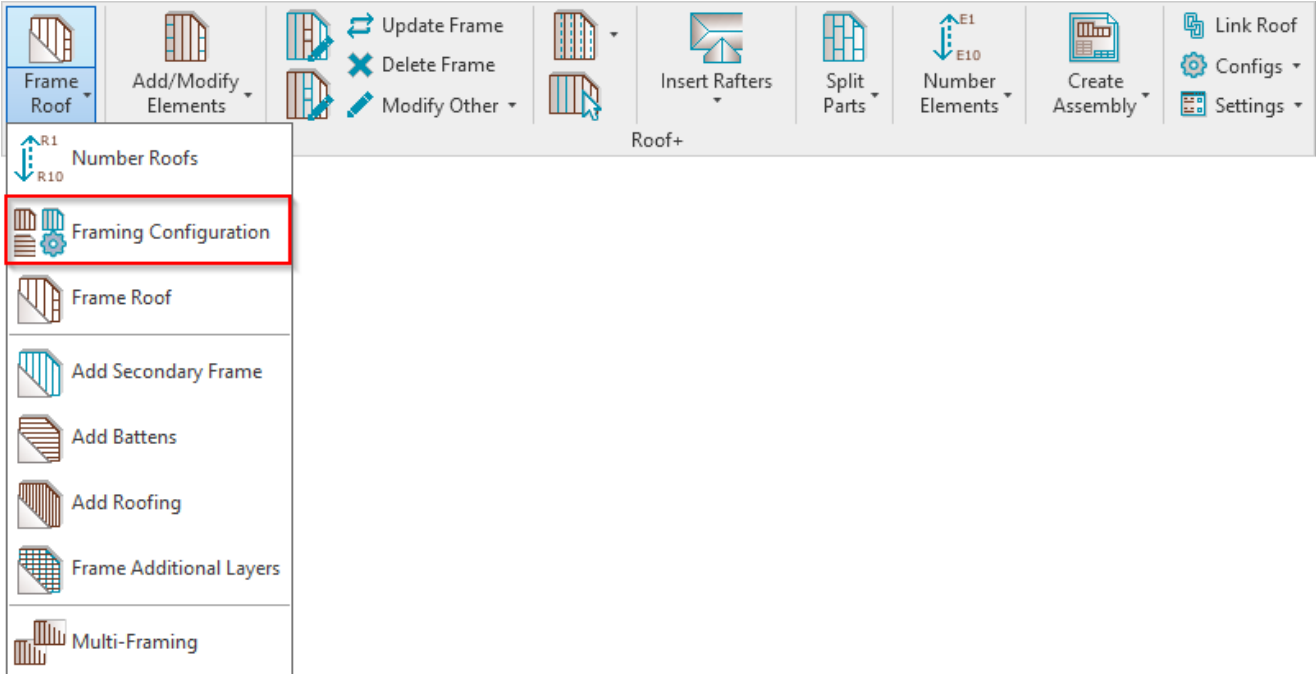

OR:

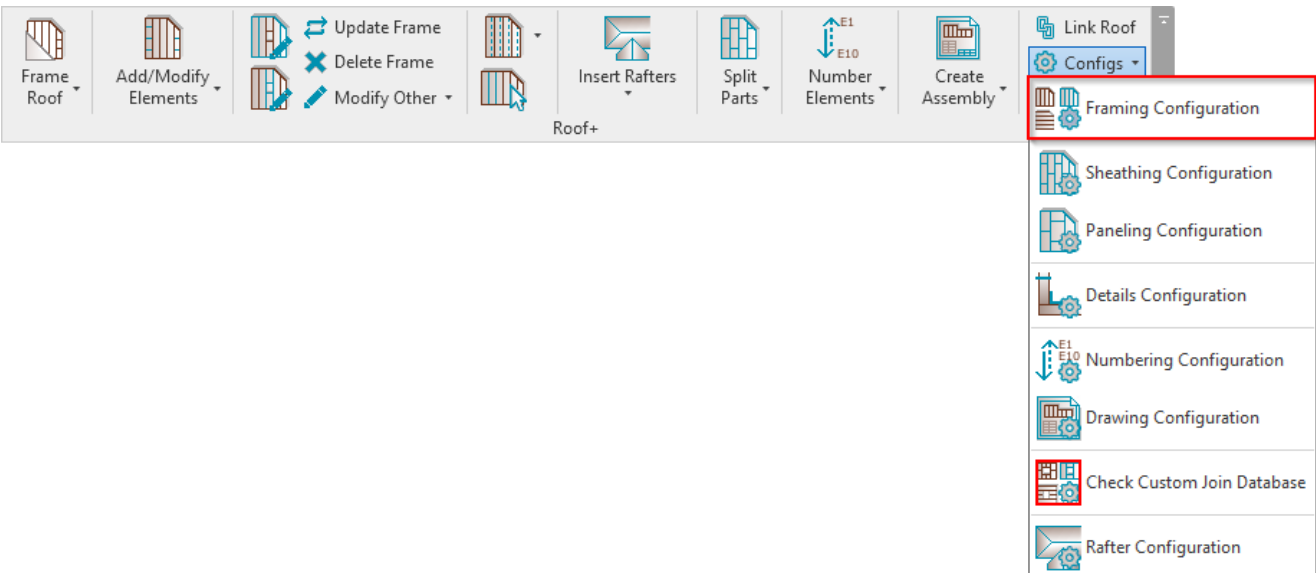

Modify Configuration Settings

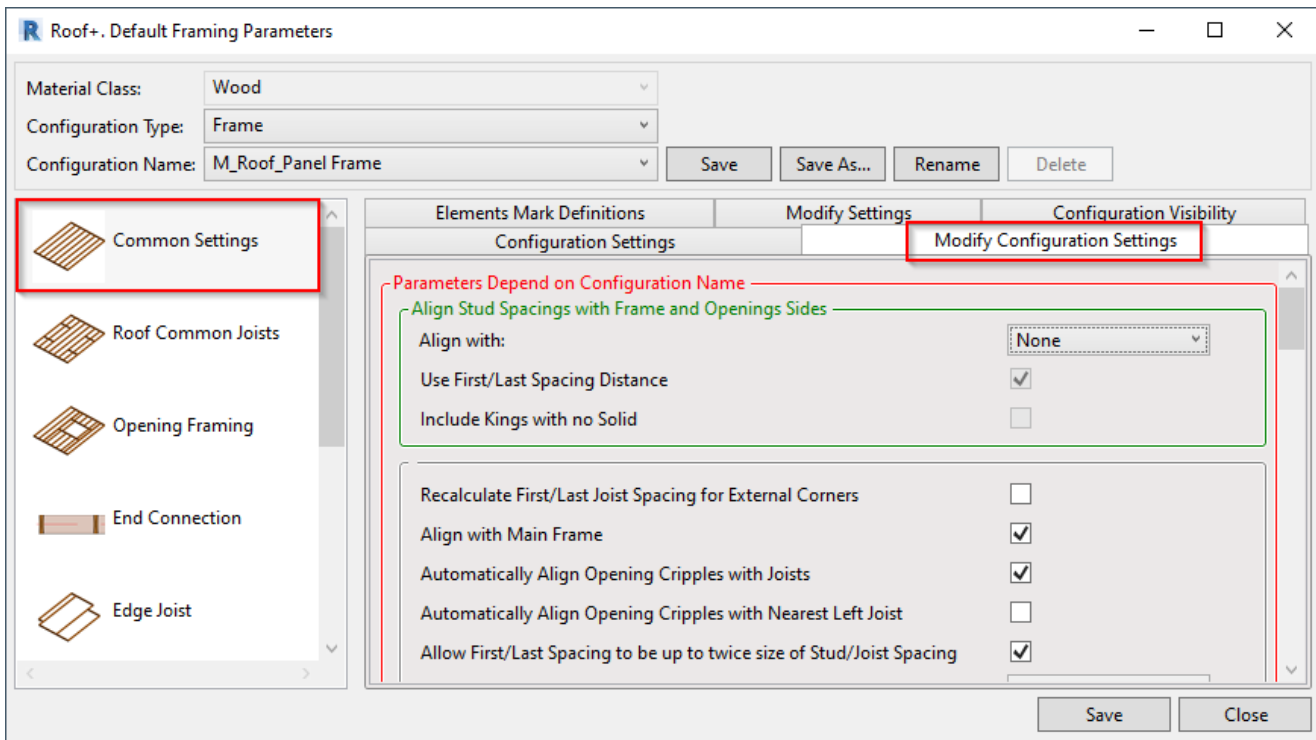

Modify Configuration Settings – tab with advanced settings for the selected configuration name.

(<https://agacad.freshdesk.com/support/solutions/articles/44002139157-modify-configuration-settings>).

[Read more about every feature here >>](https://agacad.freshdesk.com/support/solutions/articles/44002139157-modify-configuration-settings) (<https://agacad.freshdesk.com/support/solutions/articles/44002139157-modify-configuration-settings>).