



# FRAMING CONFIGURATION – Brace

Modified on: Tue, 12 Jan, 2021 at 8:26 PM


Framing Configuration may be found in two locations:

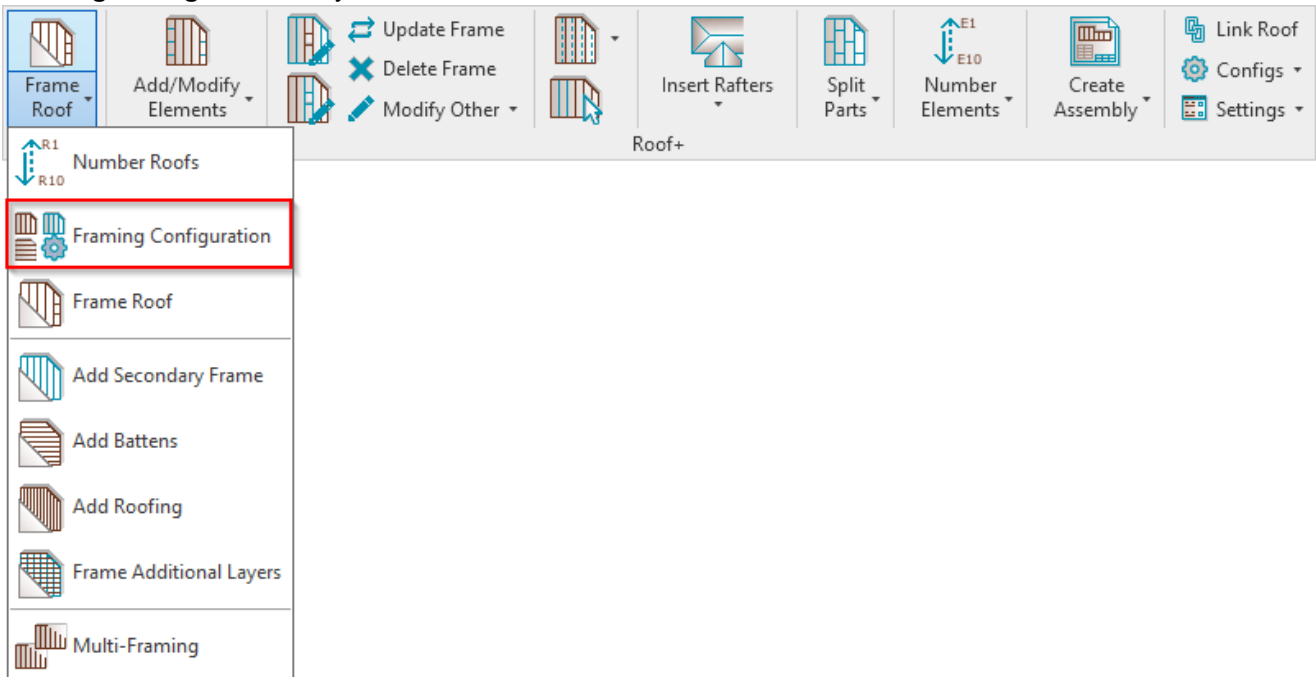


OR:

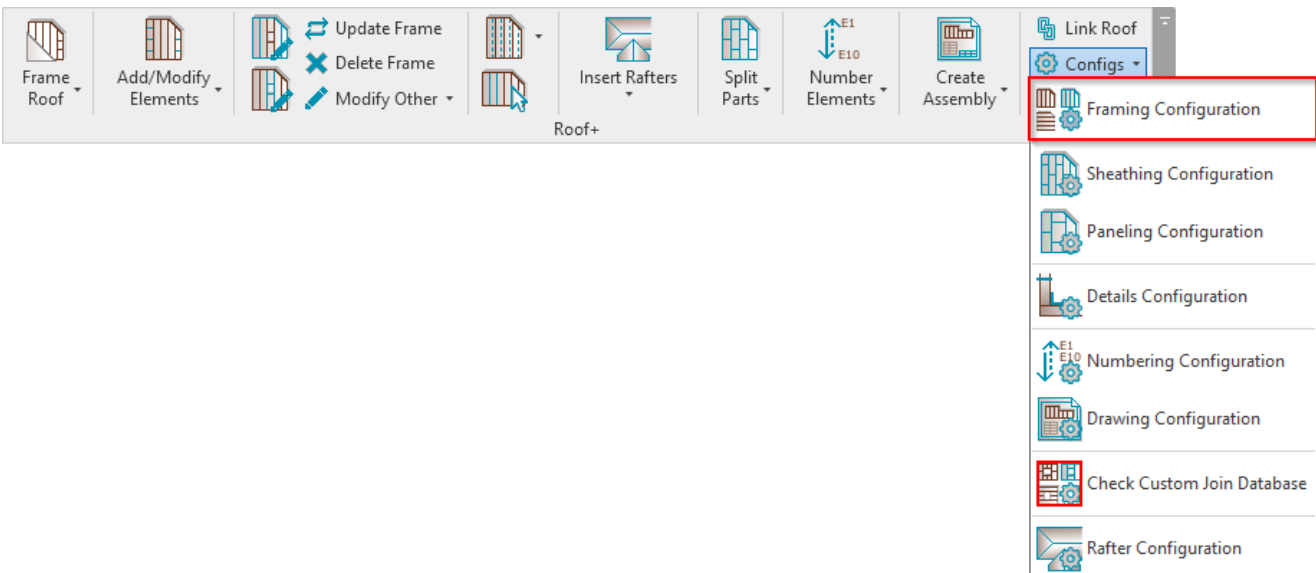

## Brace

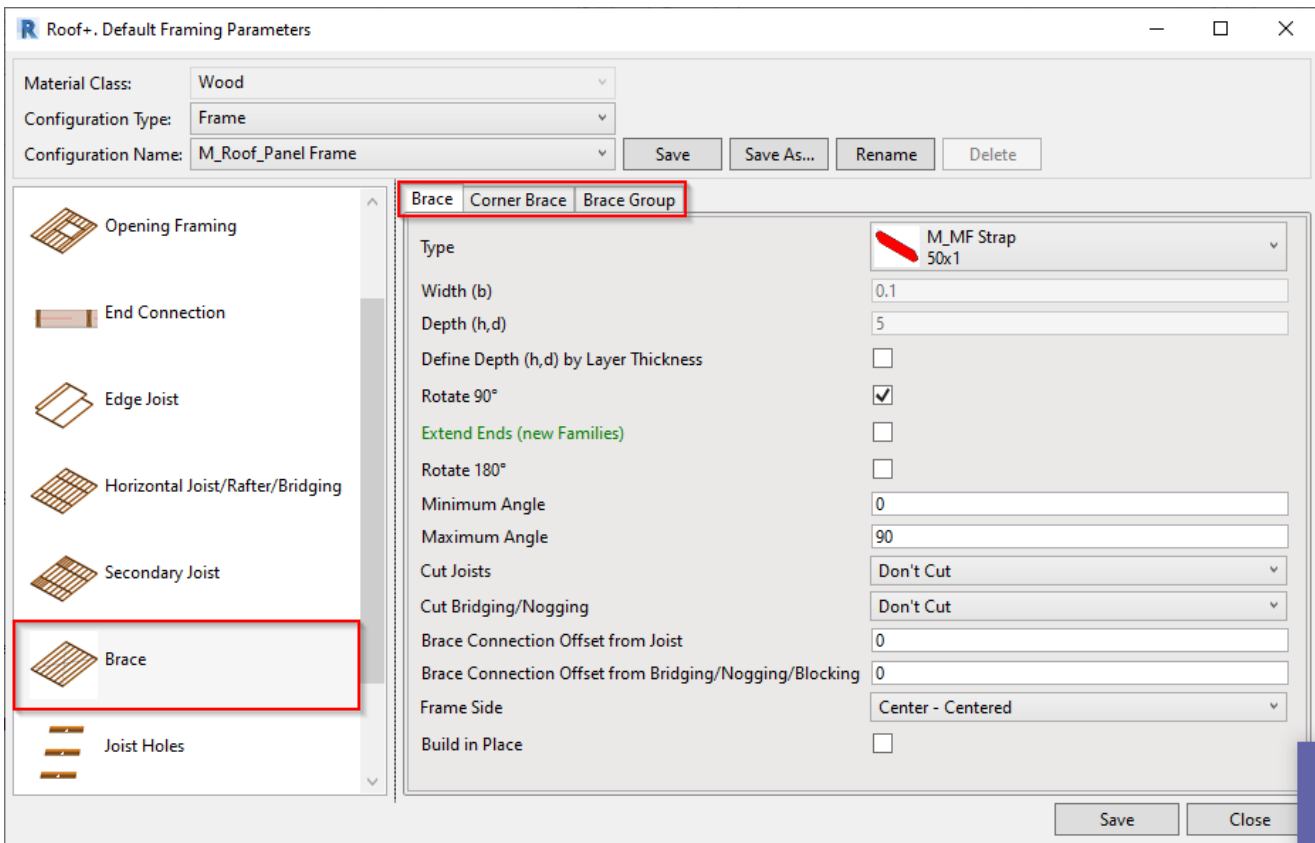

**Brace** – settings where you can predefine rules for adding wood or metal regular braces, corner braces, or brace groups.

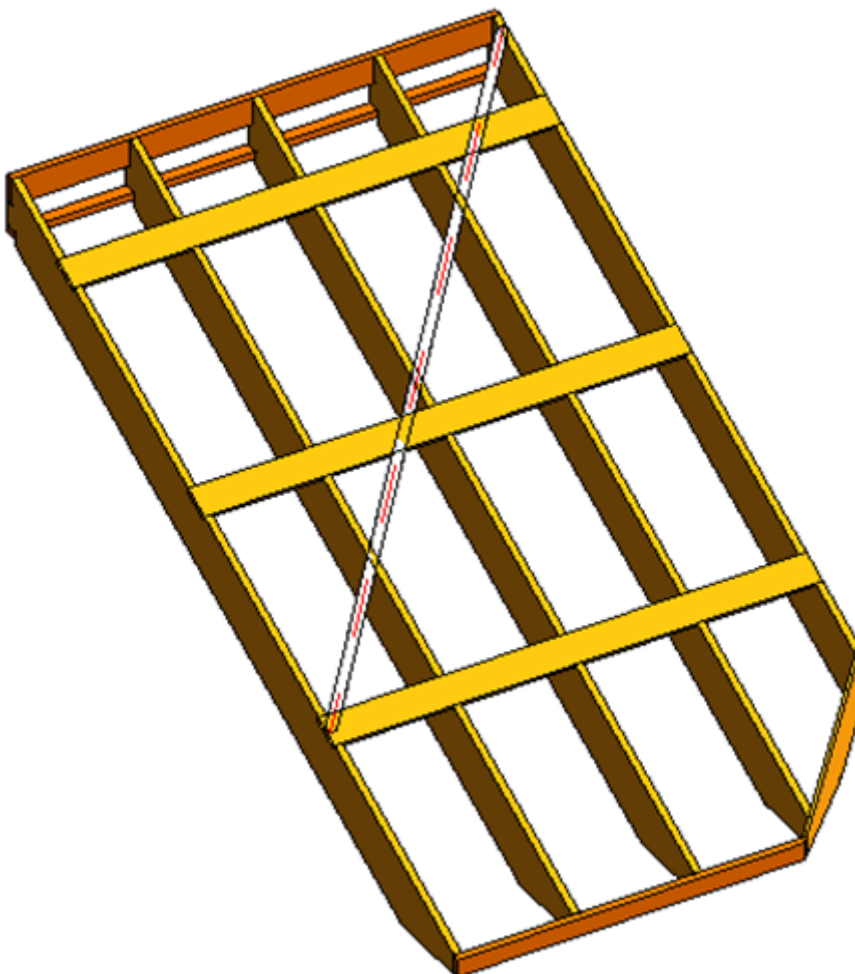

[Read more about every feature here >>](https://agacad.freshdesk.com/support/solutions/articles/44002140168-framing-configuration-%E2%80%93-brace) (<https://agacad.freshdesk.com/support/solutions/articles/44002140168-framing-configuration-%E2%80%93-brace>)

Braces can be added after **Roof+** → **Add/Modify Bracing**:

