


ADD/MODIFY BRACING – Modify Brace Group


Modified on: Tue, 12 Jan, 2021 at 9:18 PM

Add/Modify Bracing

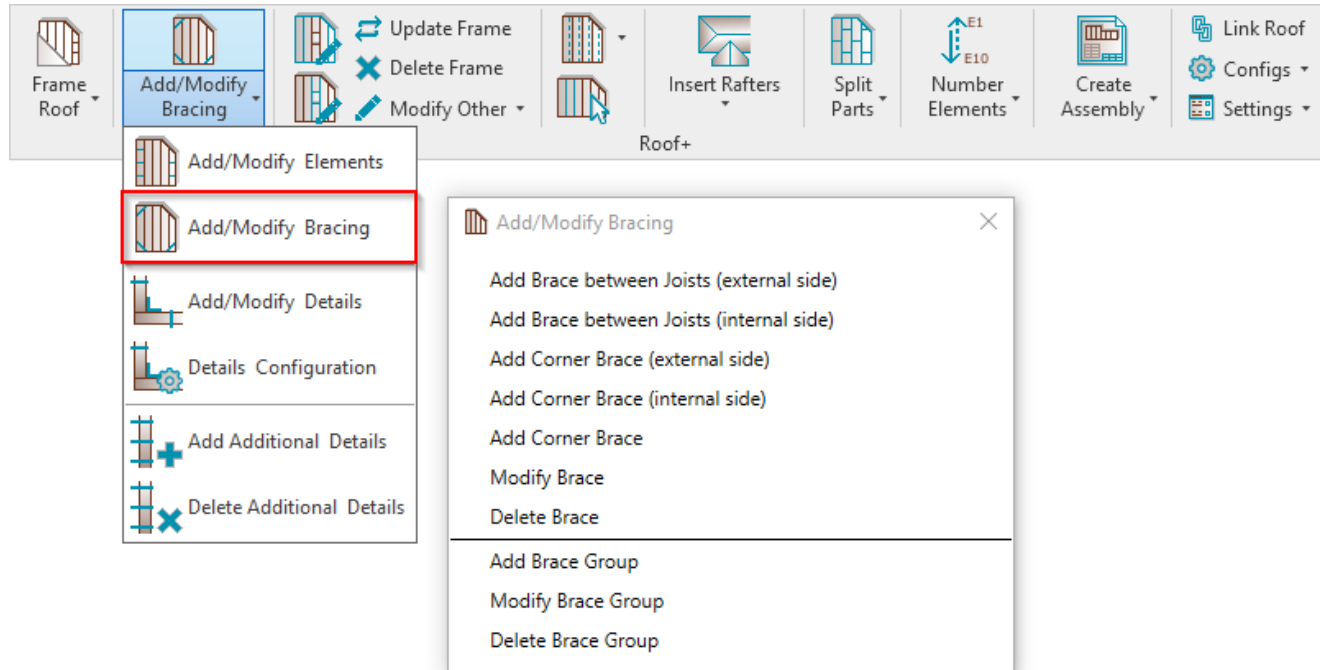

Add/Modify Bracing – features for adding/modifying braces between joists or rim joists, corner braces and brace groups.

Modify Brace Group

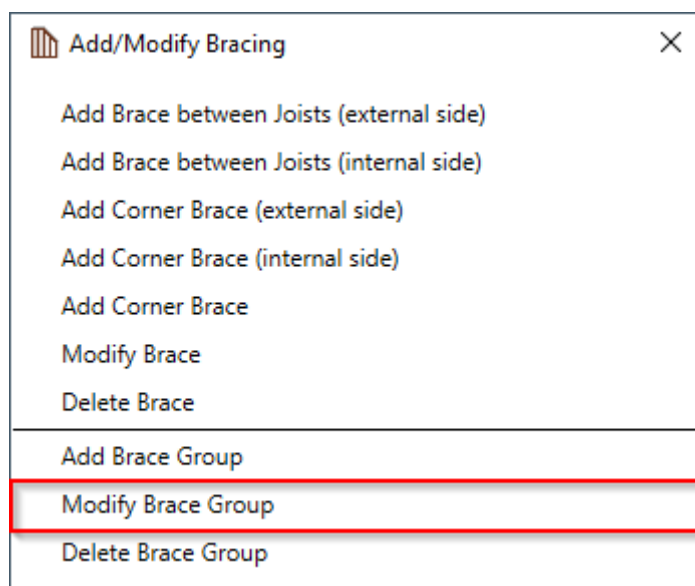

Modify Brace Group – modifies selected brace group in the frame.

[Read more about every feature here >>](https://agacad.freshdesk.com/support/solutions/articles/44002140186-add-modify-bracing-%E2%80%93-modify-brace-group) (<https://agacad.freshdesk.com/support/solutions/articles/44002140186-add-modify-bracing-%E2%80%93-modify-brace-group>).