


# MODIFY


Modified on: Sun, 27 Sep, 2020 at 4:57 PM

## Modify Frame

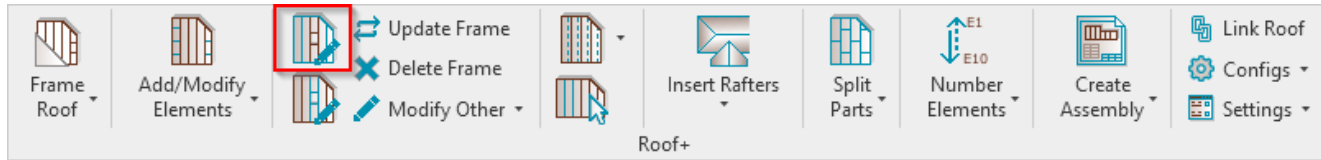


**Modify Frame** – modifies selected roof framing by custom settings if you need to make unique changes. All configuration settings are the same as in **Framing Configuration**.

*Example: Select any frame → **Modify Frame** → Make custom changes in the framing configuration → OK:*

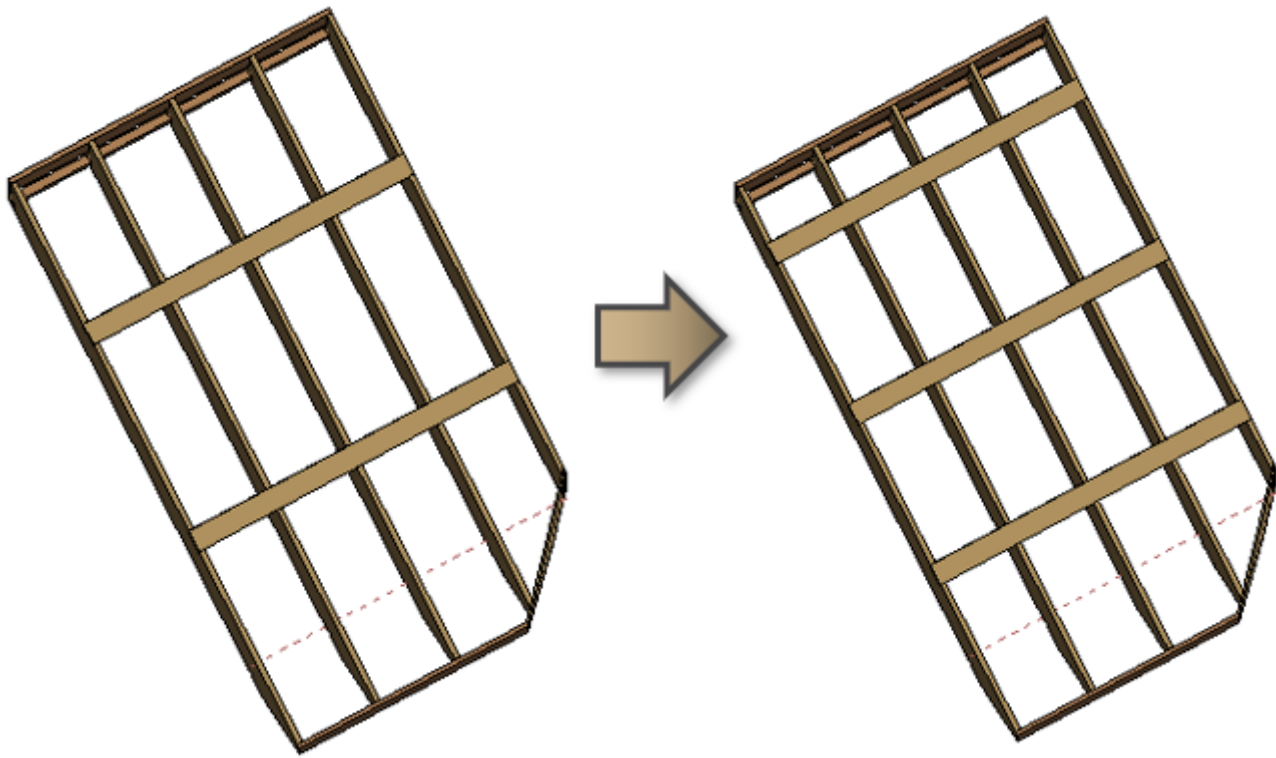


## Modify Opening

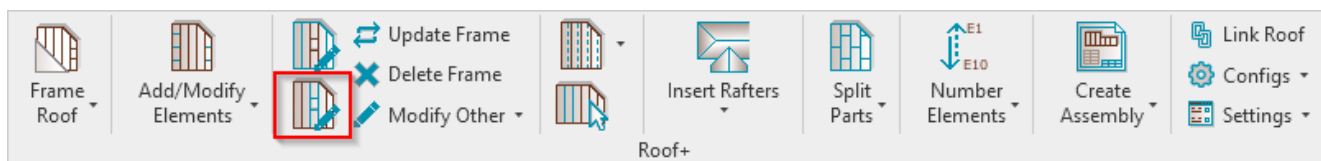


**Modify Opening** – modifies selected window, door, or other opening framing by custom settings if you need to make unique changes. All configuration settings are the same as in **Framing Configuration**.


*Example: Select any opening frame, like trimmer, king, cripple → **Modify Opening** → Make custom changes in the opening framing configuration → OK:*

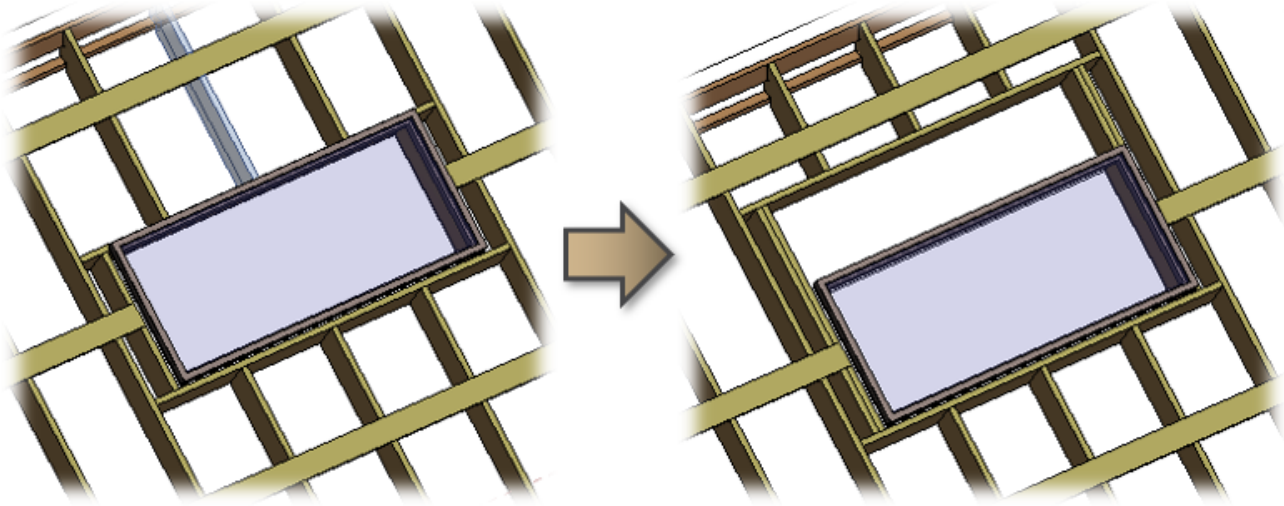


## Update Frame

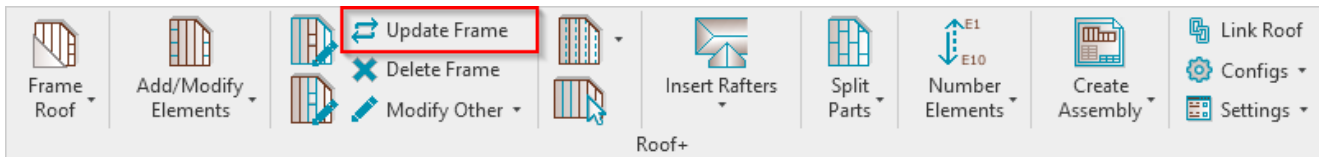


**Update Frame** – updates the frame if any changes were made to roof, e.g. roof boundary is extended.

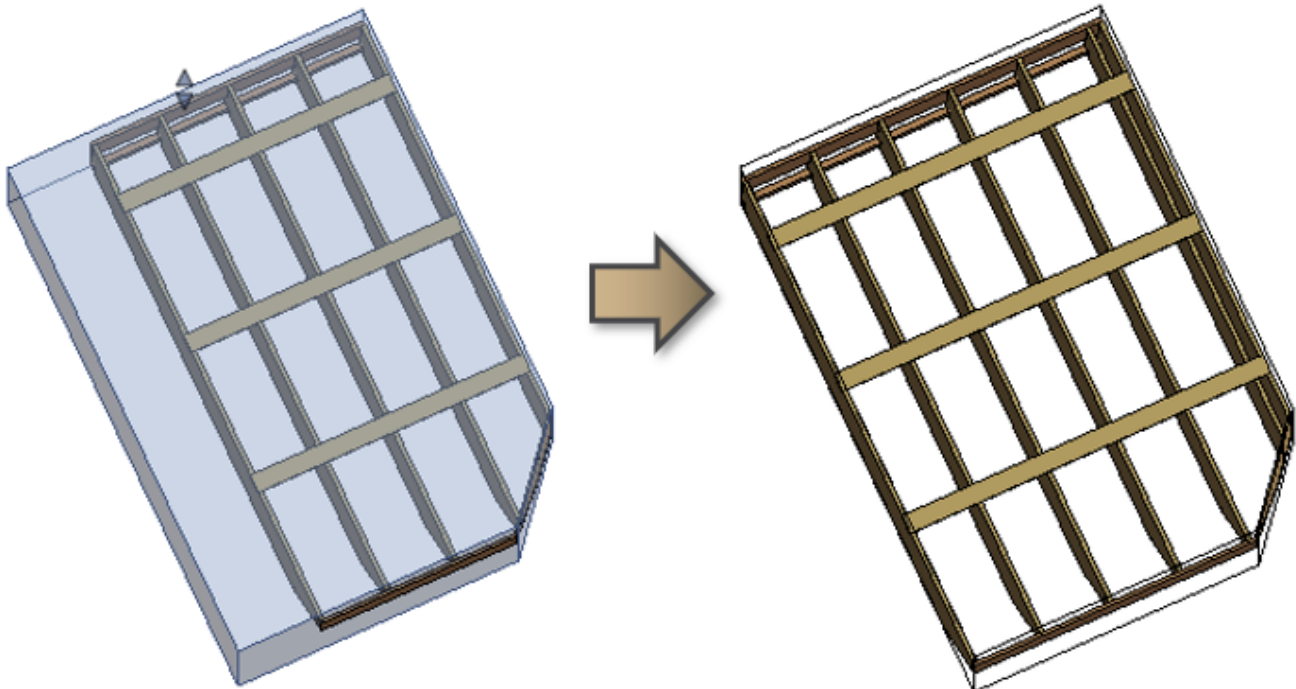


## Delete Frame

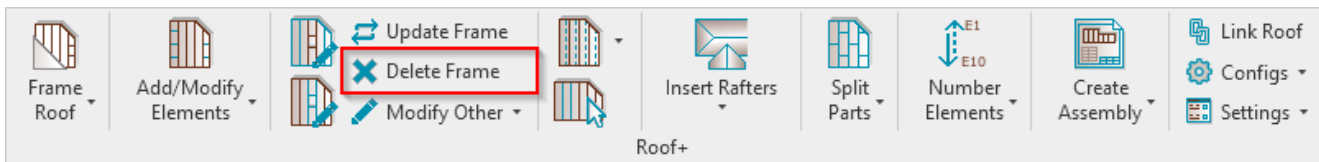


**Delete Frame** – deletes the selected framing. You simply need to select one element (joist, rim joist, bridging etc.), and the tool will delete the whole frame from the roof. If you select a roof, then the tool will delete all framed layers.

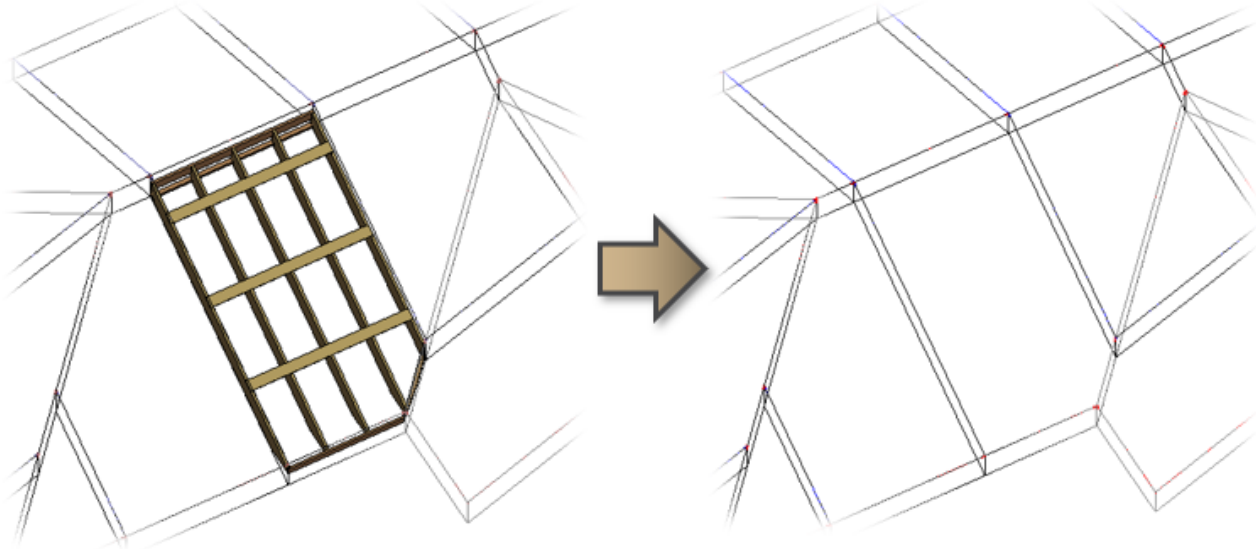


## Modify Edge Joins

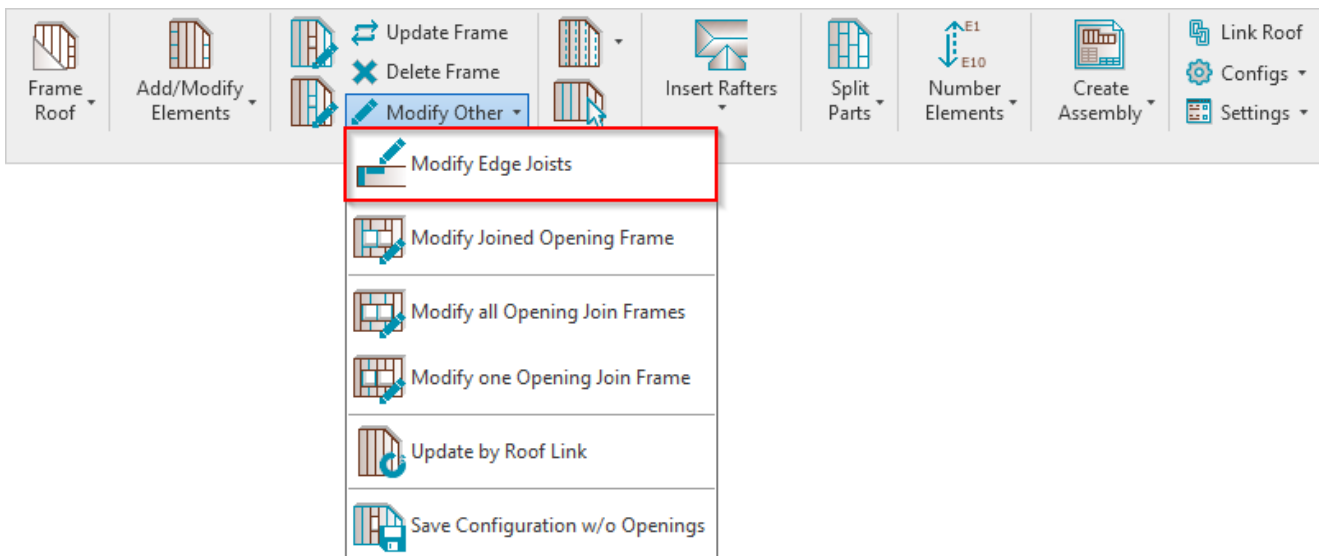

**Modify Edge Joins** – modifies selected join by custom settings if you need to make unique changes. All configuration settings are the same as in **Framing Configuration**.

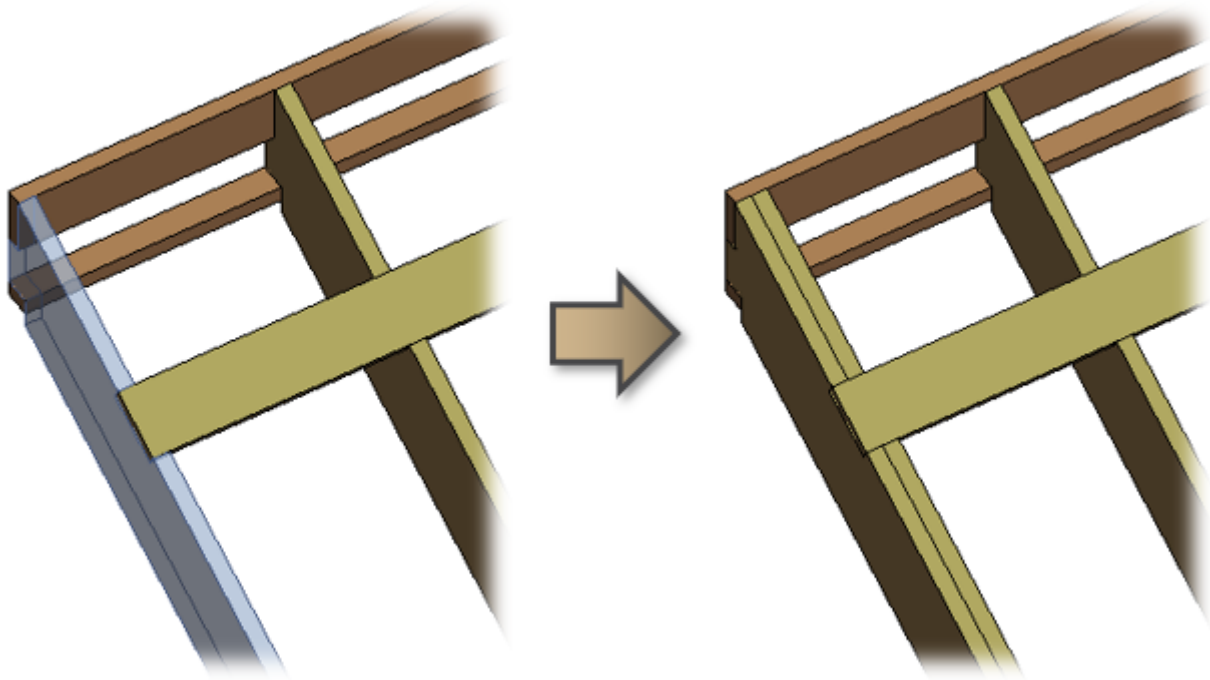


## Modify Joined Opening Frame

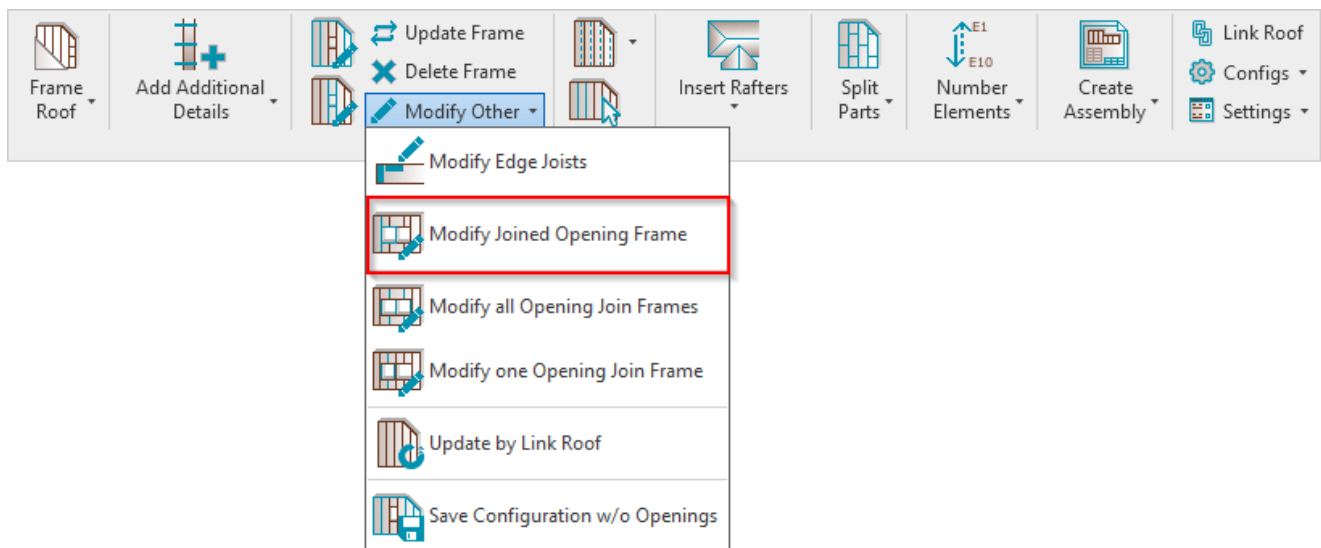


**Modify Joined Opening Frame** – modifies selected joined window, or other opening framing by custom settings if you need to make unique changes. All configuration settings are the same as in **Framing Configuration**.


*Example: Select opening which was joined, like window or MEP opening → **Modify Joined Opening Frame** → Make custom changes in the opening framing configuration → OK:*

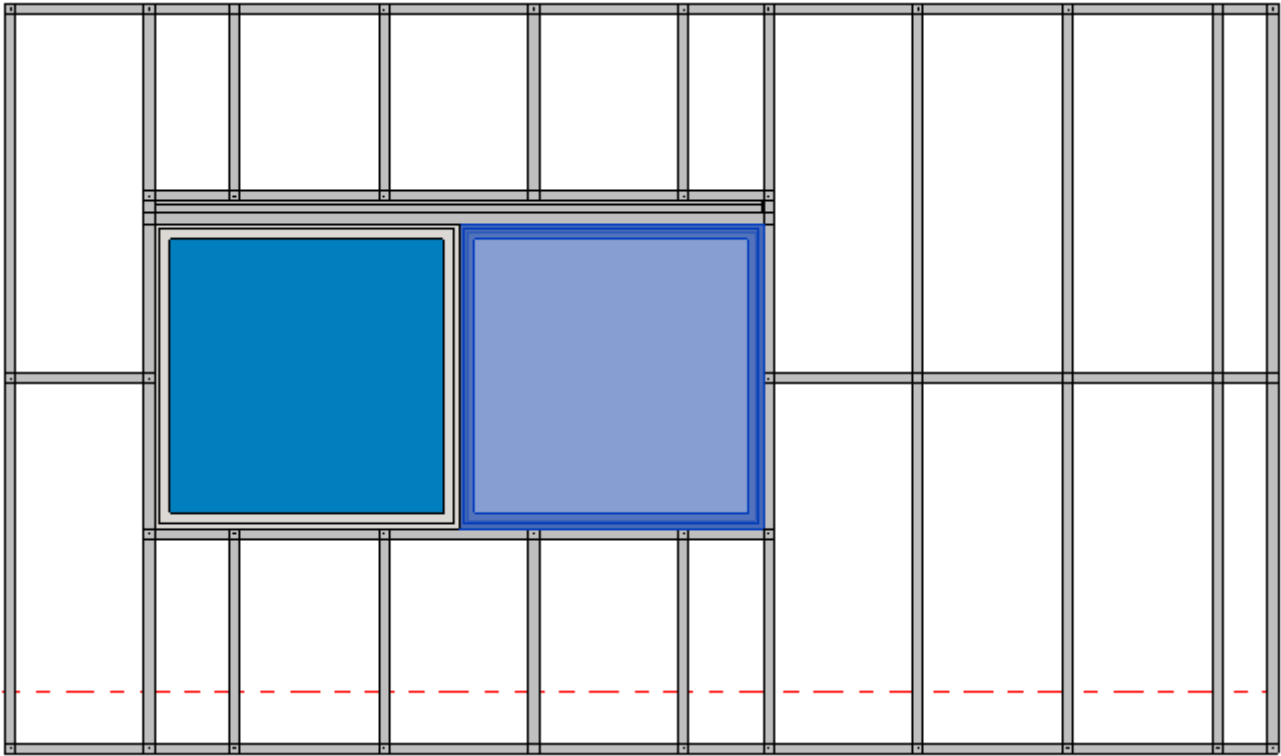

Result:

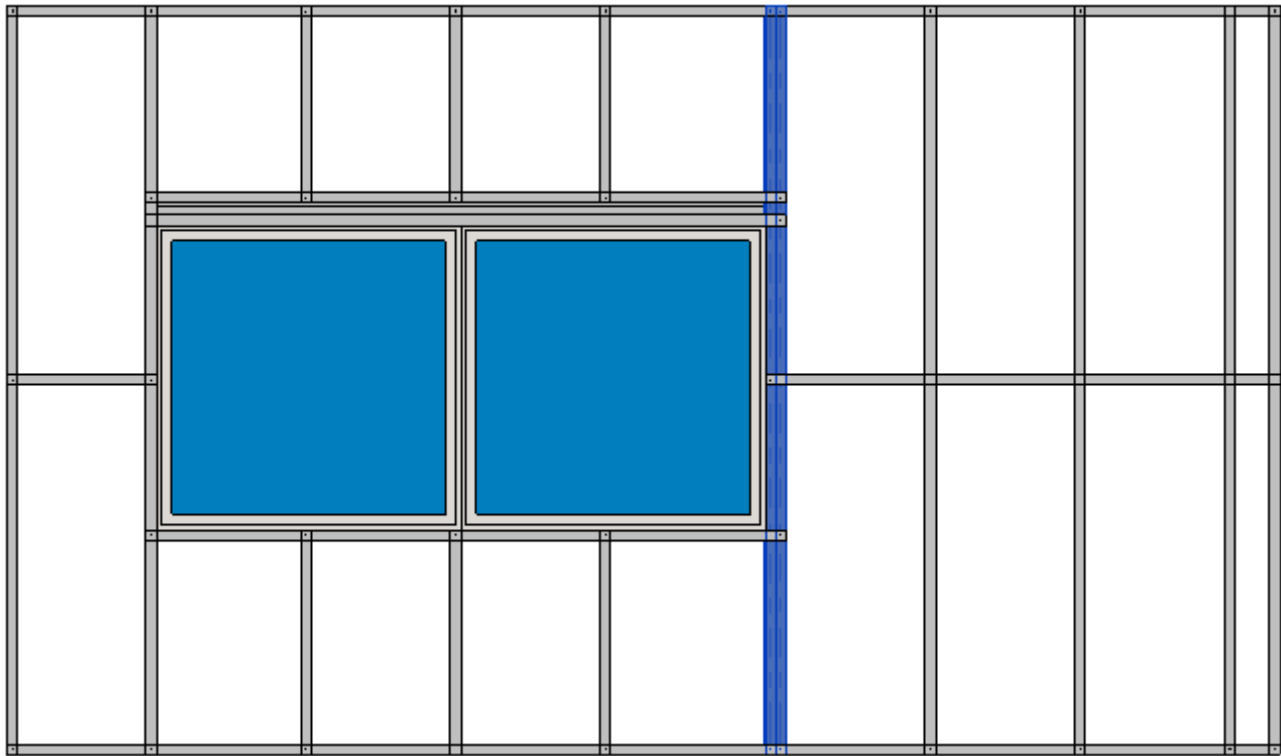


Modify all Opening Join Frames

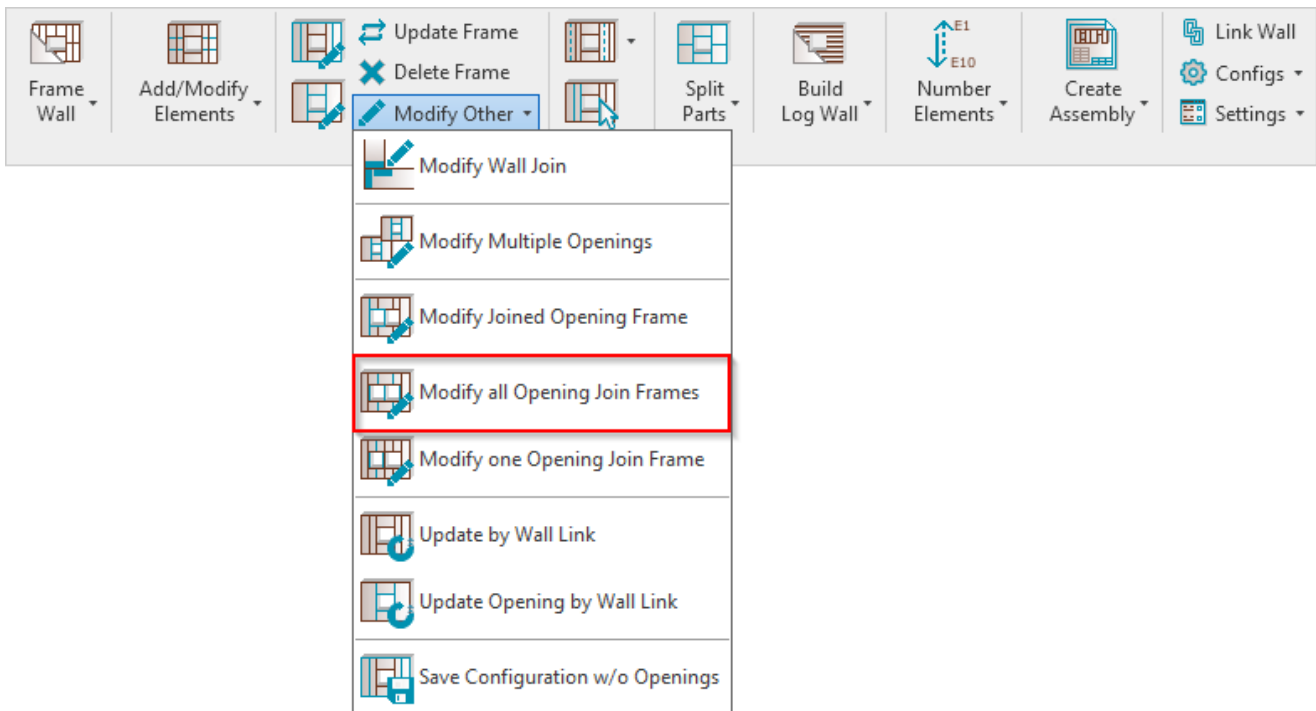


**Modify all Opening Join Frames** – modifies selected joined window, door, or other opening common framing, like trimmers and cripples, by custom settings if you need to make unique changes. All configuration settings are the same as in **Framing Configuration**.

*Example: Select joined opening common frames, like trimmer → **Modify all Opening Join Frames** → Make custom changes in the joined opening framing configuration → OK:*

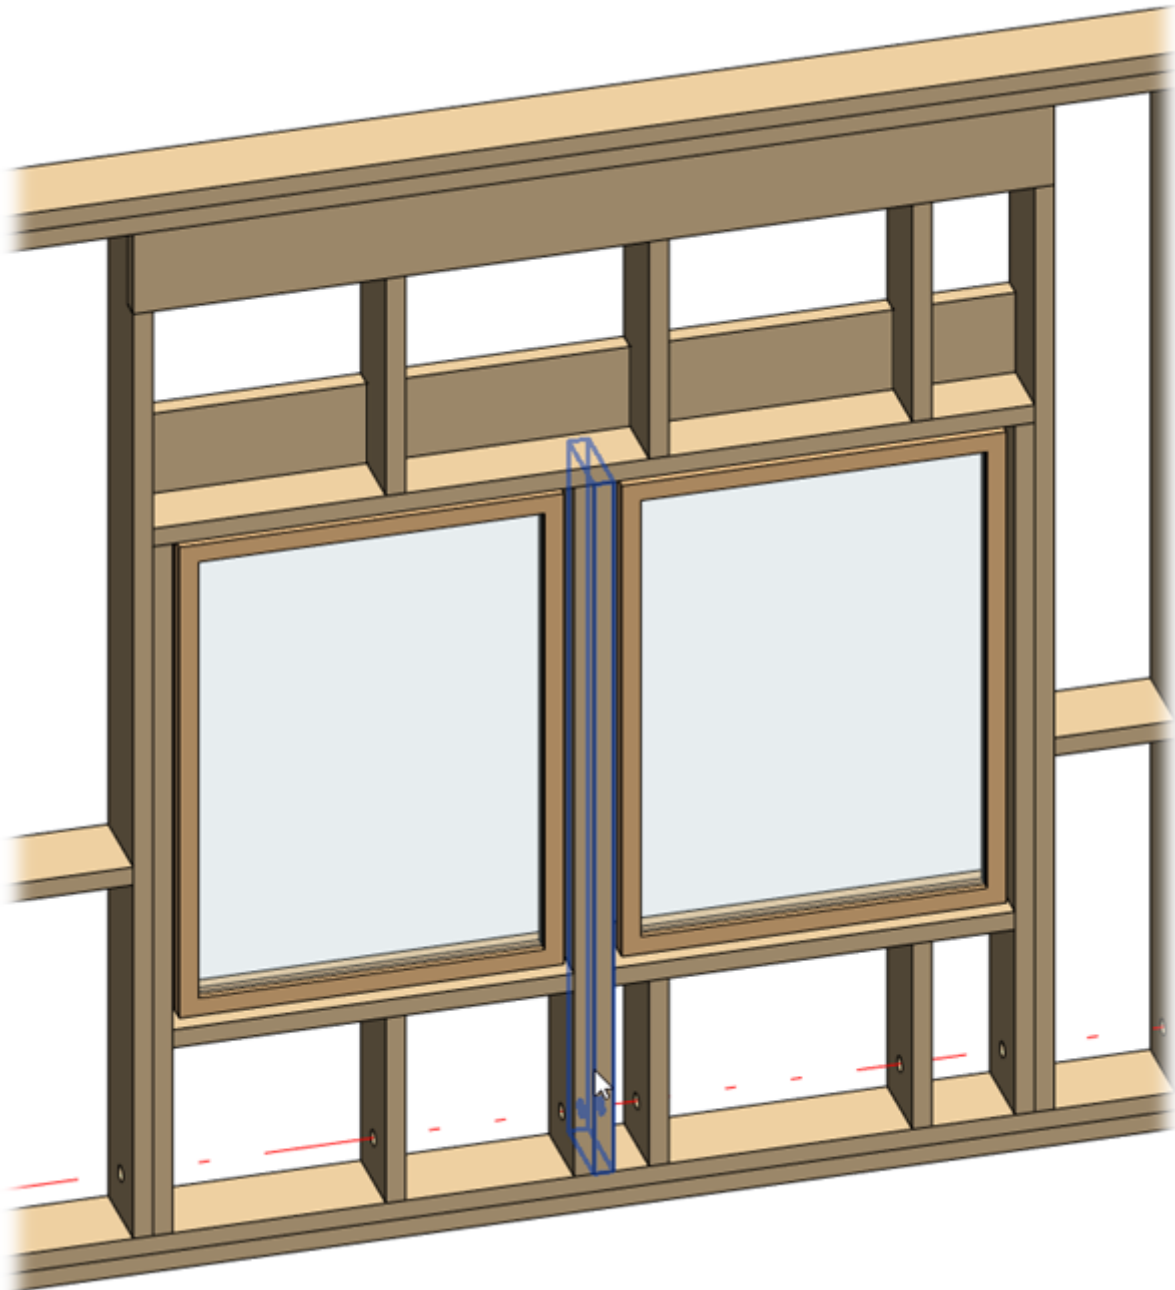


Result:

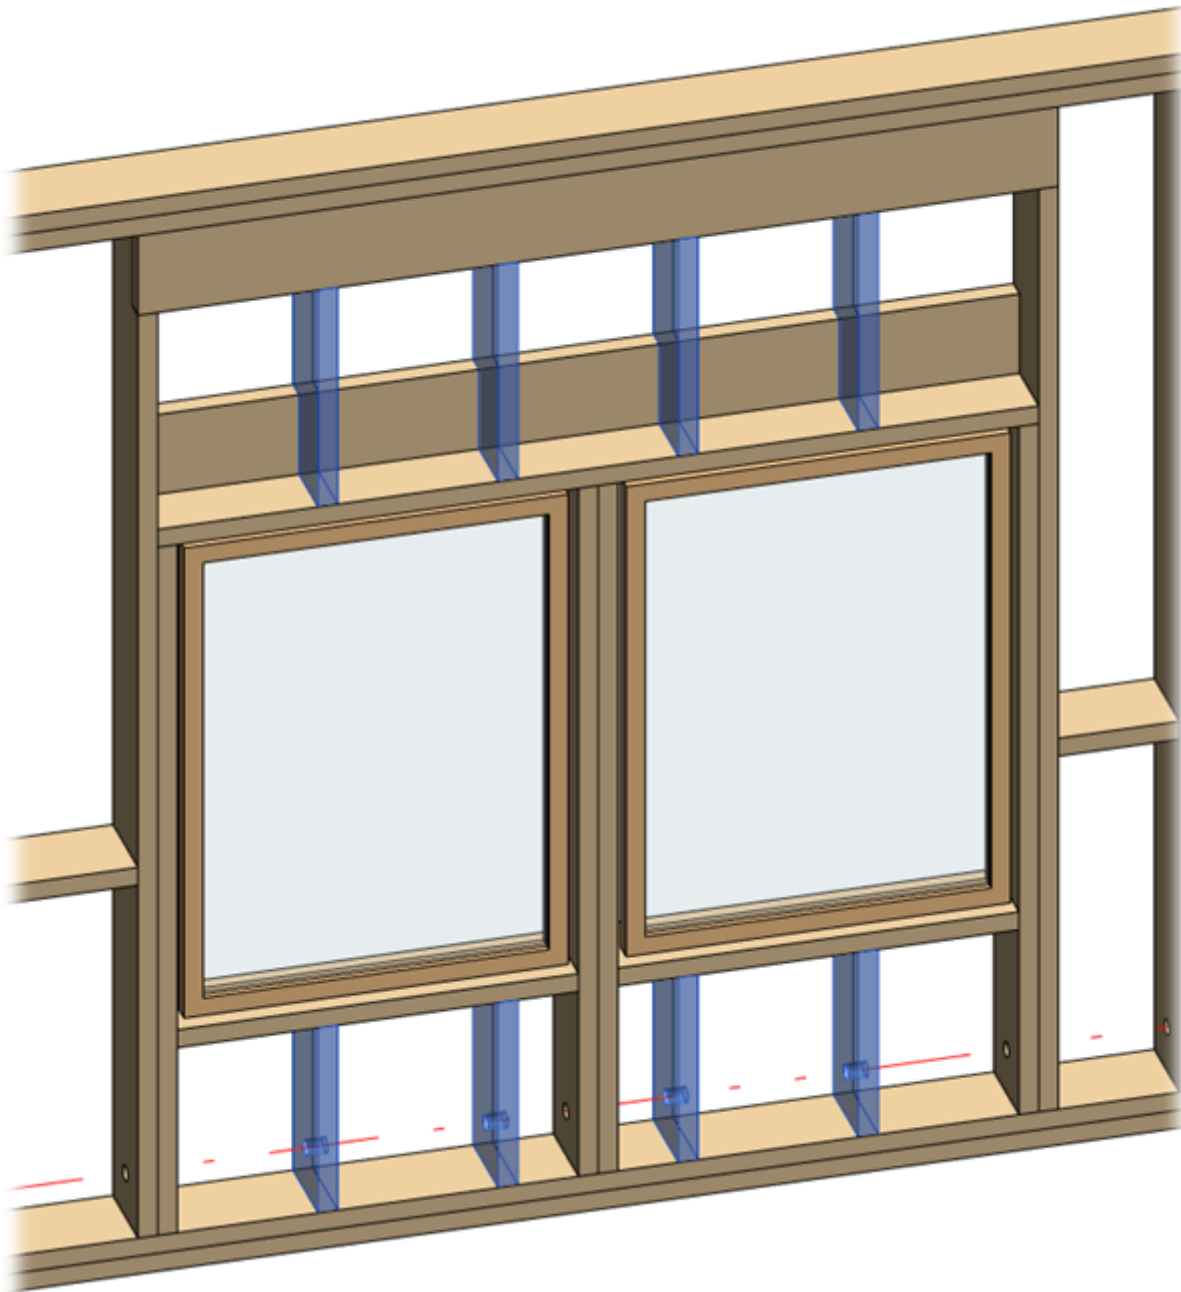


## Modify one Opening Join Frame



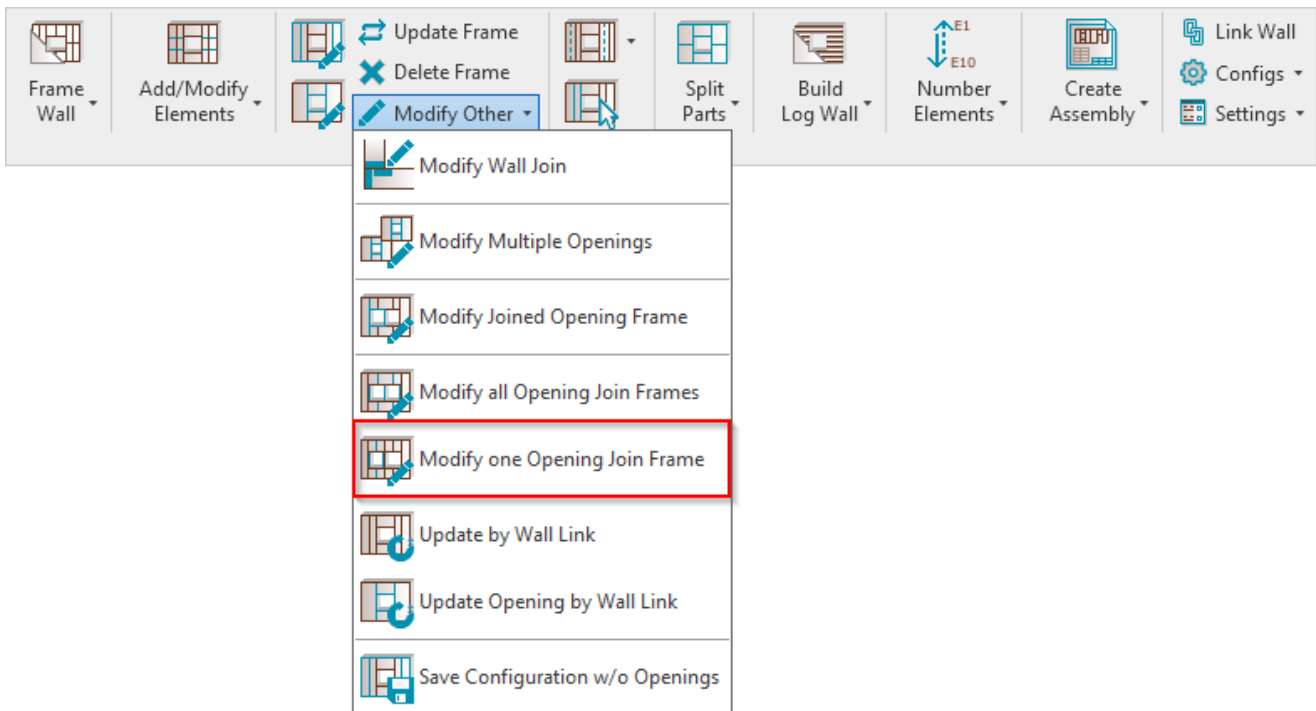


**Modify one Opening Join Frame** – modifies a single window, door, or other joined opening common framing, like trimmers or cripples, by custom settings if you need to make unique changes. All configuration settings are the same as in Framing Configuration.

## Update by Roof Link

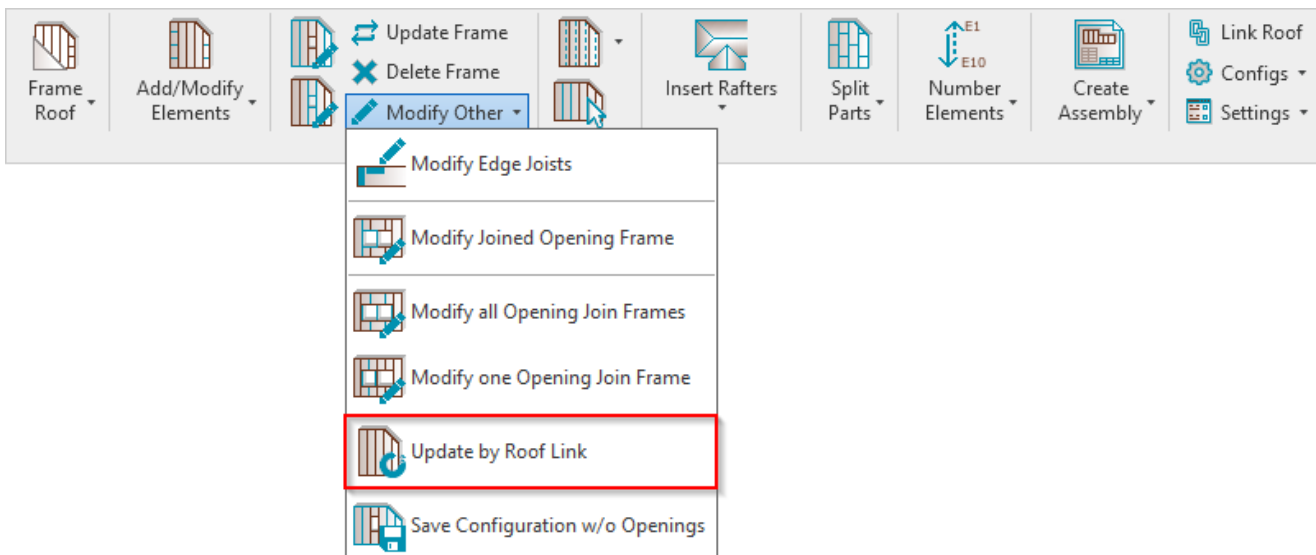


**Update by Roof Link** – reframes selected roof frame to default, which is configured under **Framing Configuration**.

## Save Configuration w/o Openings

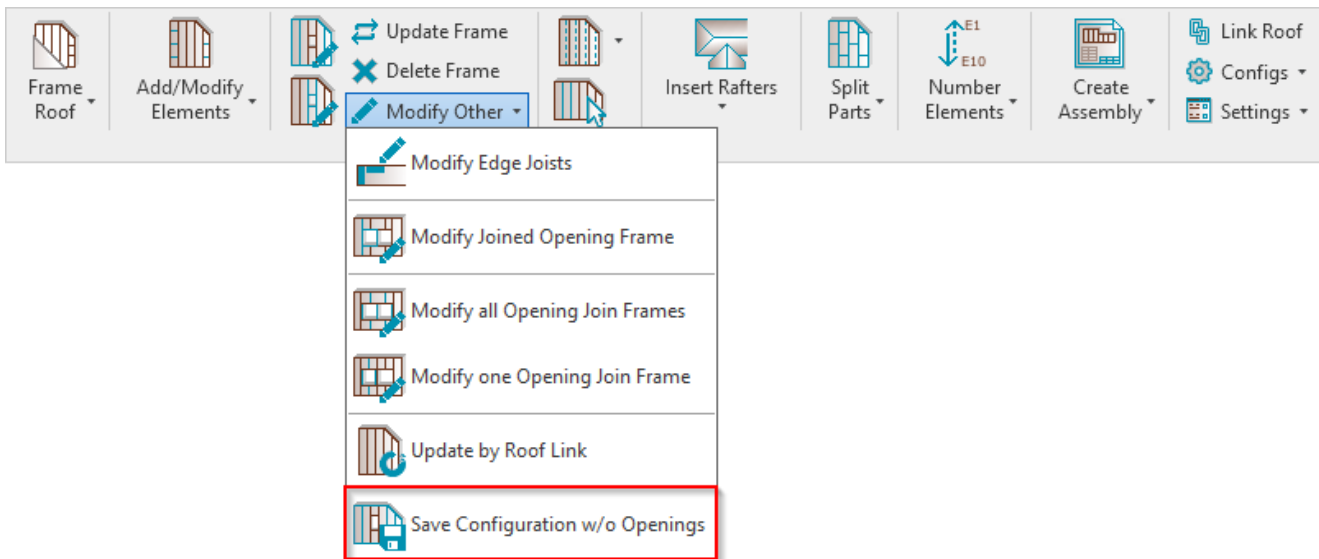

**Save Configuration w/o Openings** – saves configuration of selected frame without settings for openings. This feature is very useful if you have already framed a roof and you lost the configuration that was used for it. The configuration is needed to frame new roofs.

*Example: You just need to select any frame from a roof and save the configuration under your name:*

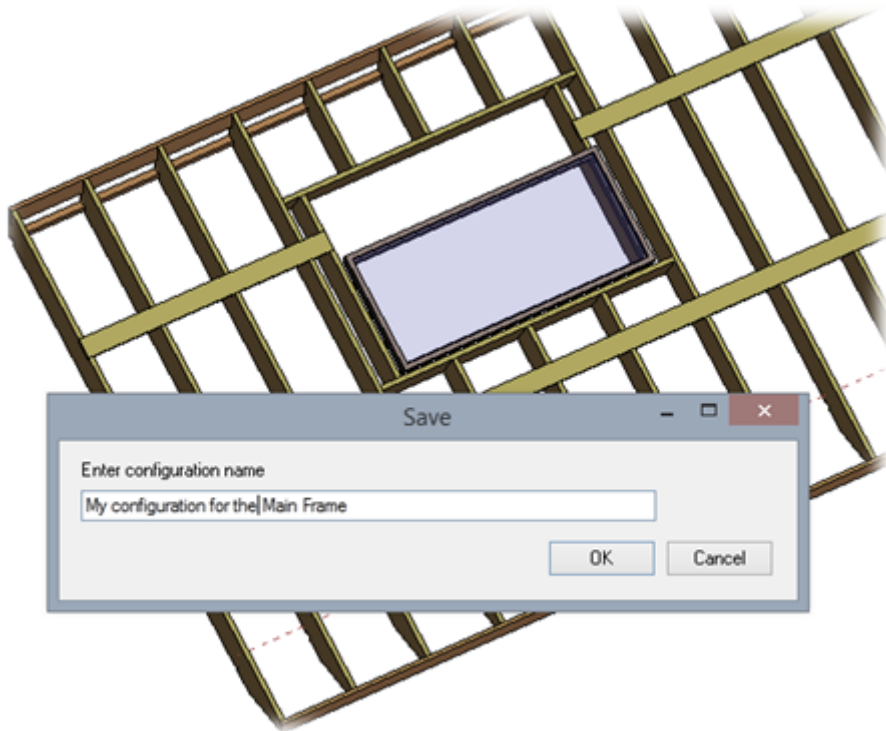



*Now you will be able to use this configuration for new or existing roofs:*


Material Class:Wood

Configuration Type:Frame

Configuration Name:My configuration for the Main Frame

Common Section

Roof Framing

Opening Framing

I\_Roof\_Panel Main Frame Modified

I\_Roof\_Panel Main Frame

I\_Roof\_Rafter Main Fame

My configuration for the Main Frame

SaveSave As

Elements Mark Definitio

Elements (except Openings)

Main Type of Joists

Width (b)

Depth (h,d)

Main Type of Rim Joists

Width (b)