



# FRAMING CONFIGURATION – Common Settings – Modify Configuration Settings

Modified on: Sun, 3 Jan, 2021 at 8:56 PM


Framing Configuration may be found in two locations:

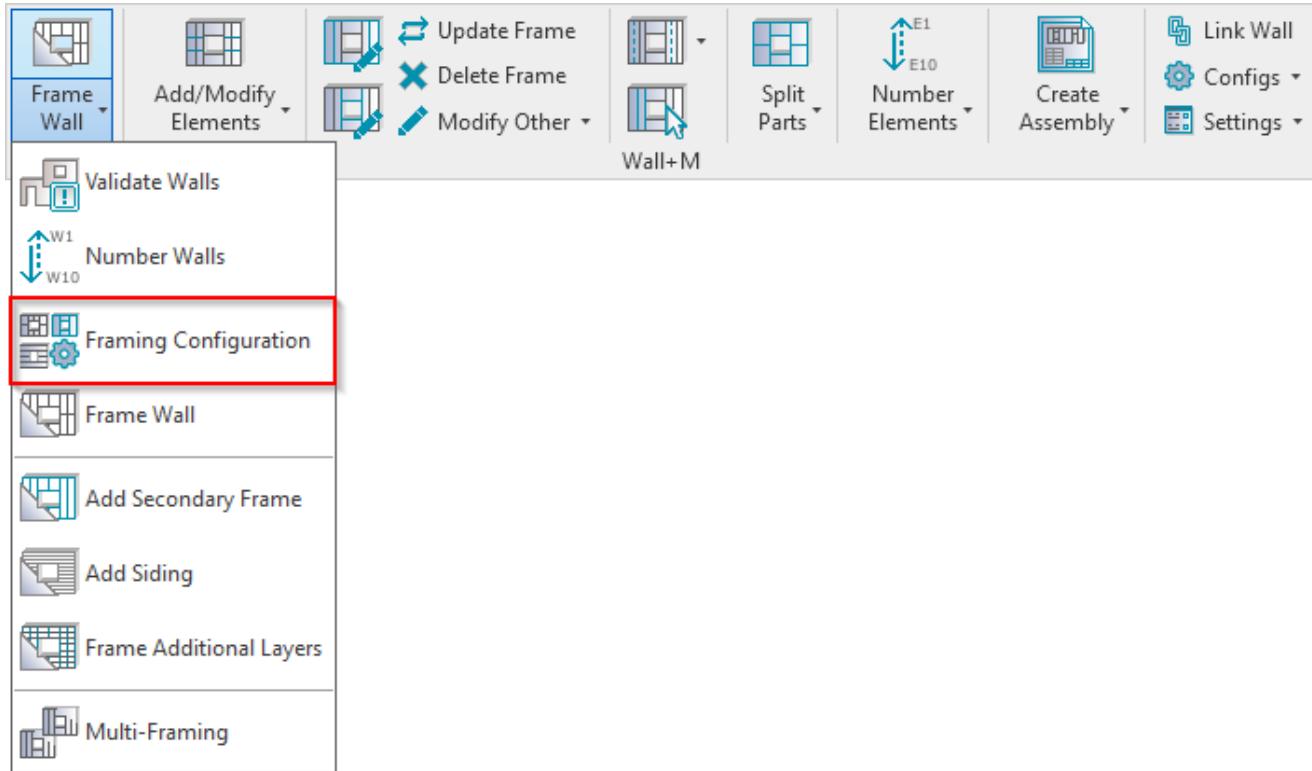

or:

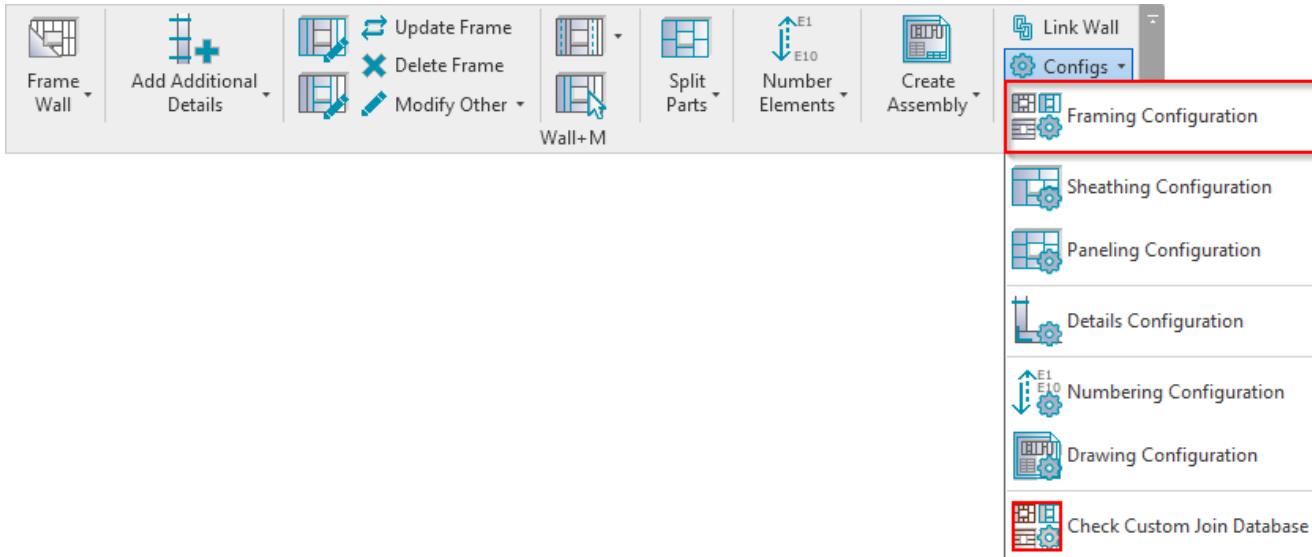

## Modify Configuration Settings

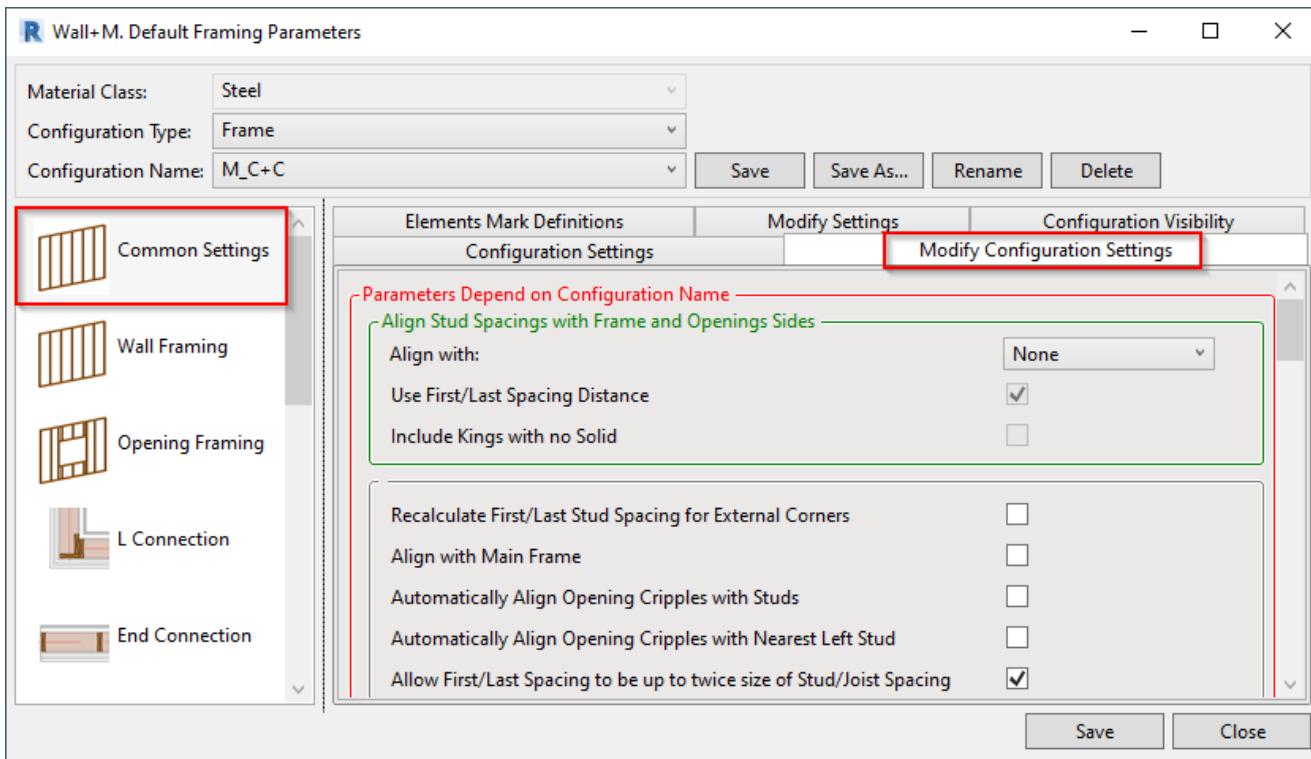

**Modify Configuration Settings** – tab with advanced settings for the selected configuration name.

**Read more about every feature here >>** (<https://agacad.freshdesk.com/support/solutions/articles/44002139157-modify-configuration-settings>).