


SELECT ELEMENTS


Modified on: Sat, 7 Sep, 2019 at 1:12 PM

Select Elements

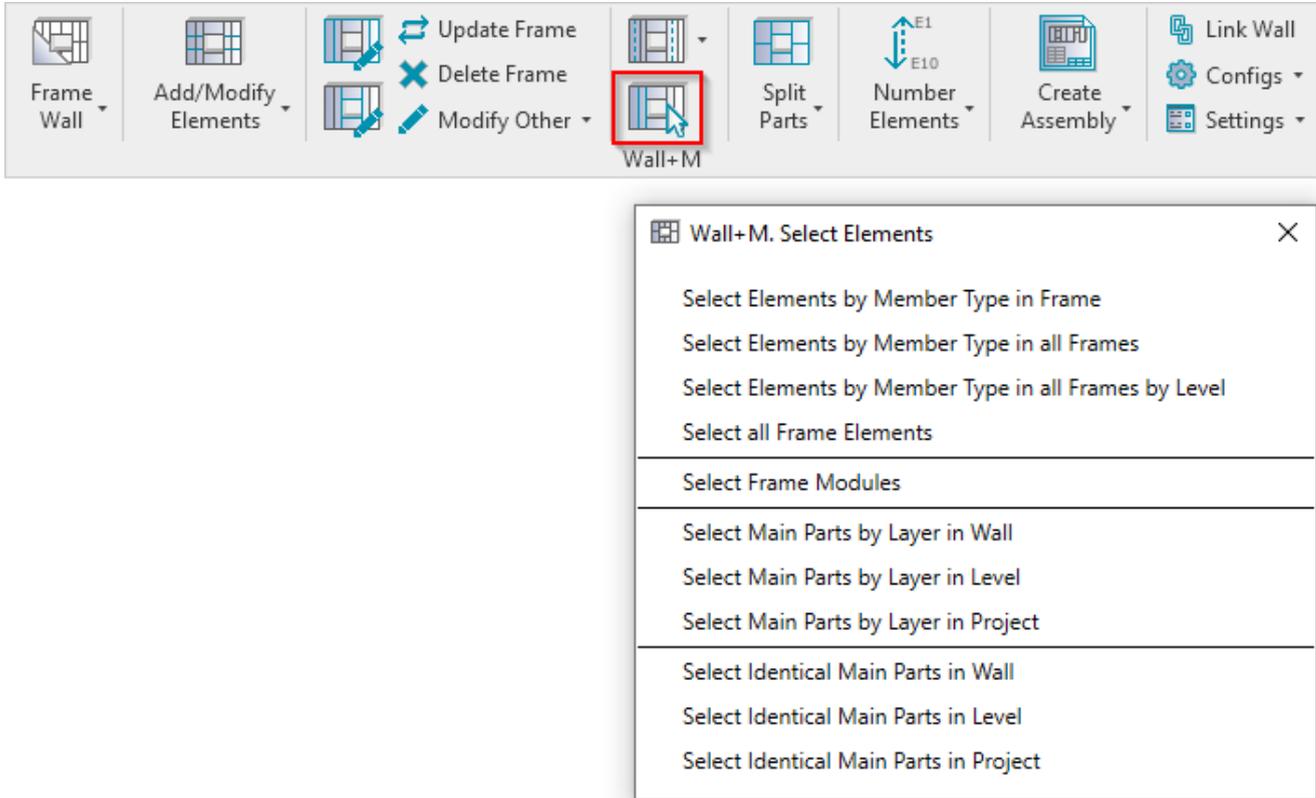


Select Elements – features for quickly selecting elements by different rules.

Select Elements by Member Type in Frame

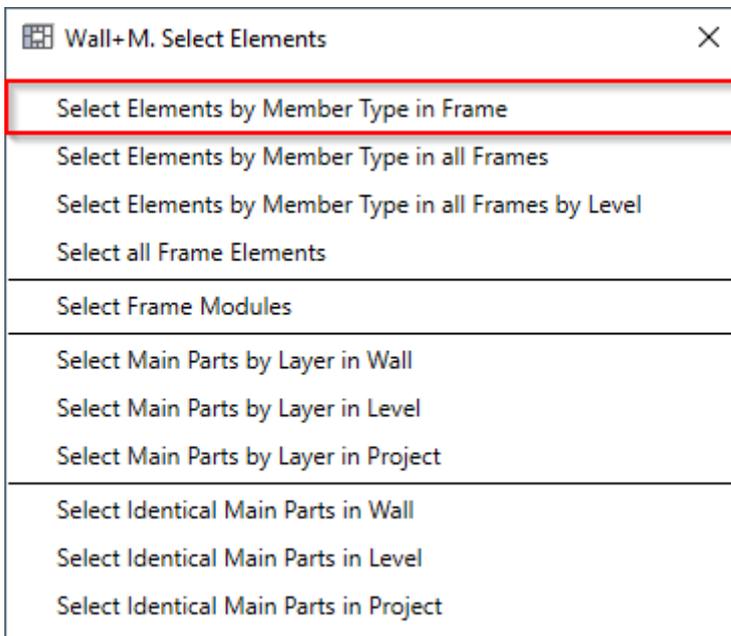


Select Element by Member Type in Frame – selects all framing members of the same type from the frame.


*Example: Select any stud → **Select Element by Member Type in Frame** → All studs from the frame will be selected:*

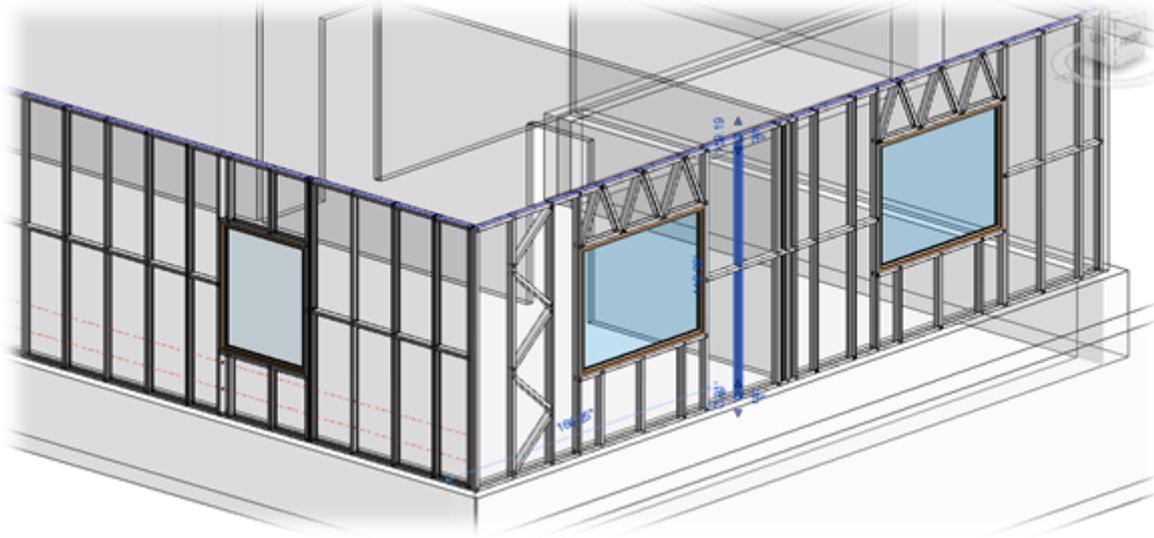

Result:

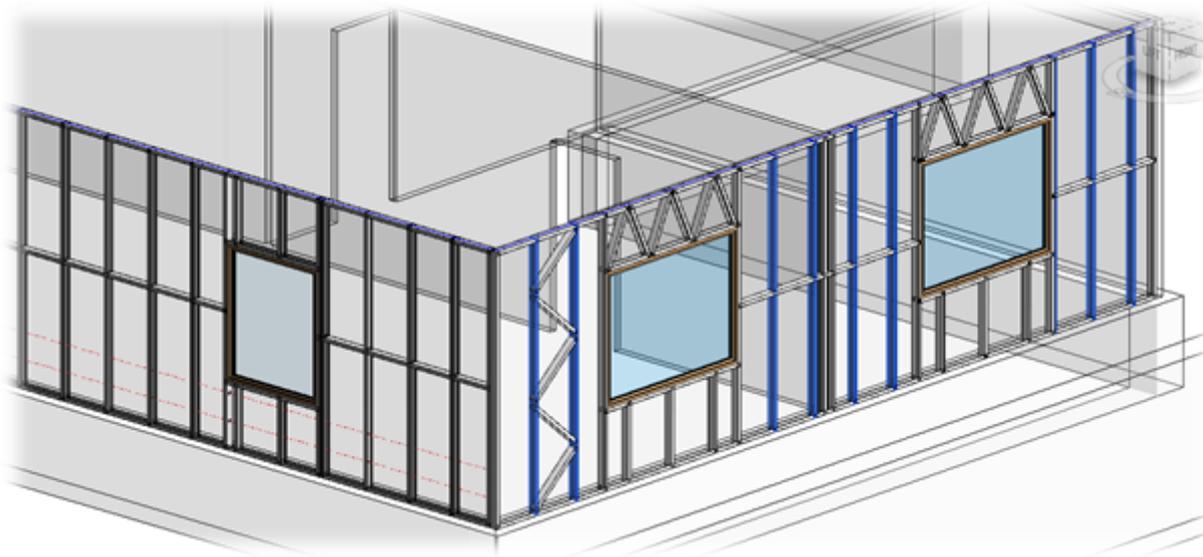


Select Elements by Member Type in all Frames

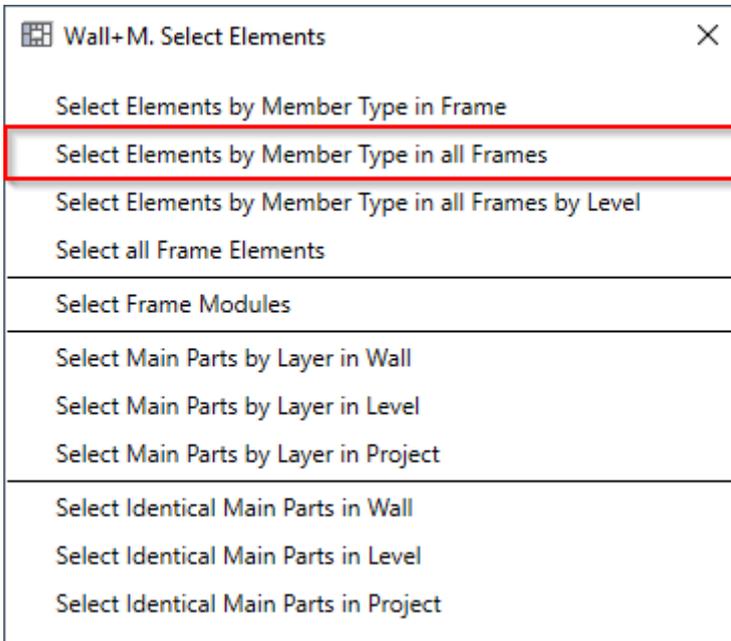


Select Element by Member Type in all Frames – selects all framing members of the same type from all frames in the project.


*Example: Select any stud → **Select Element by Member Type in all Frames** → All studs from all frames in the project will be selected:*

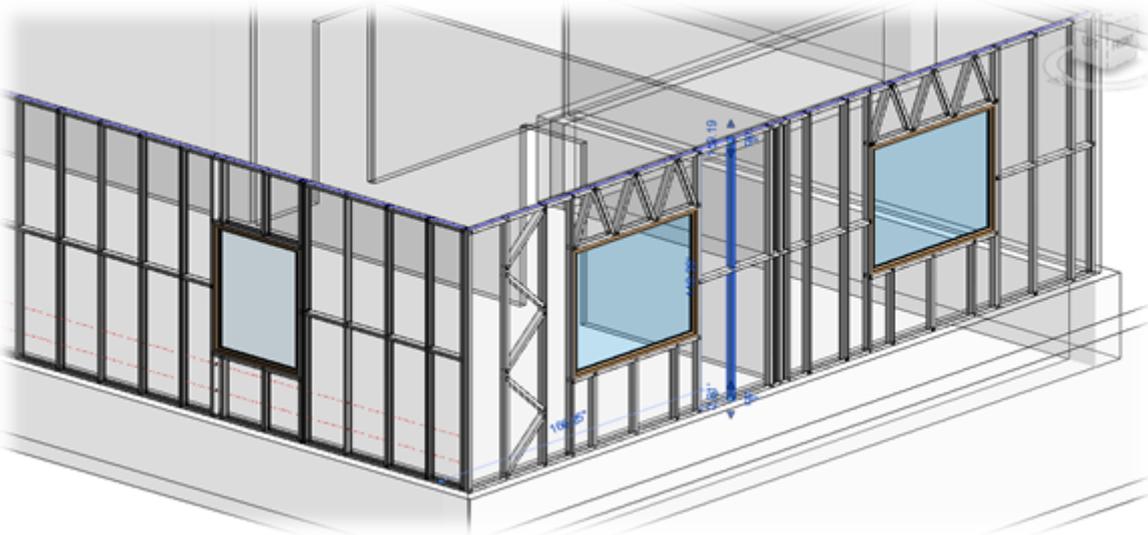

Result:

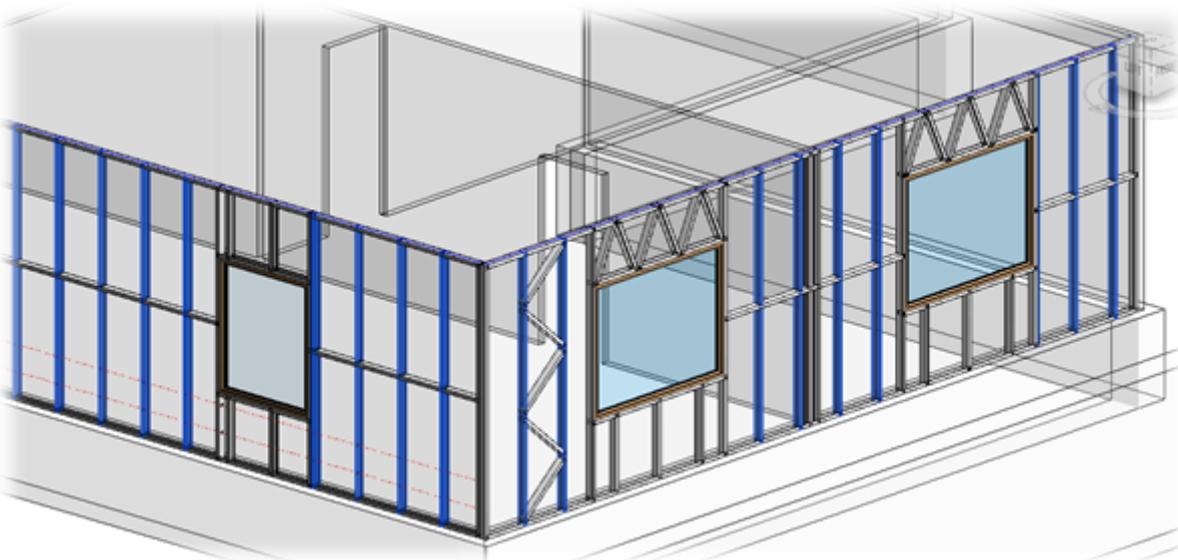


Select Elements by Member Type in all Frames by Level

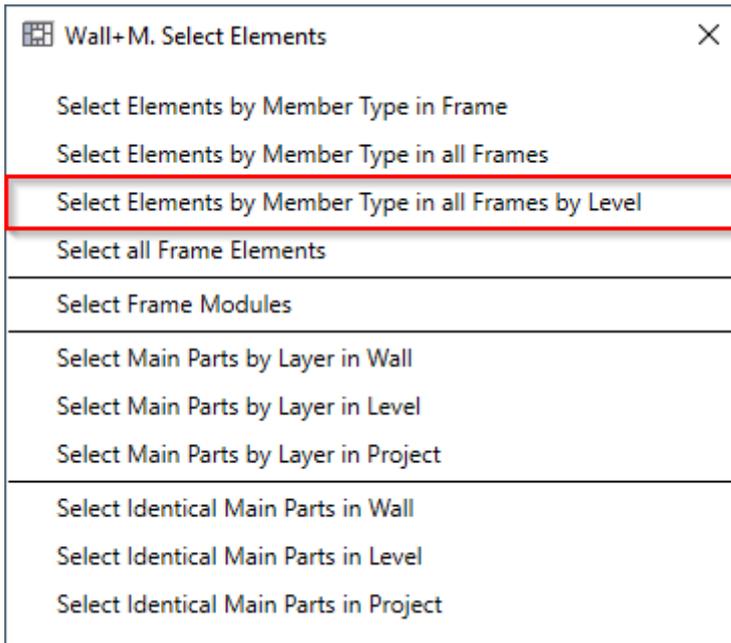


Select Element by Member Type in all Frames by Level – selects all framing members of the same type from all frames in the same level.


*Example: Select any stud → **Select Element by Member Type in all Frames by Level** → All studs from all frames in the same level will be selected:*

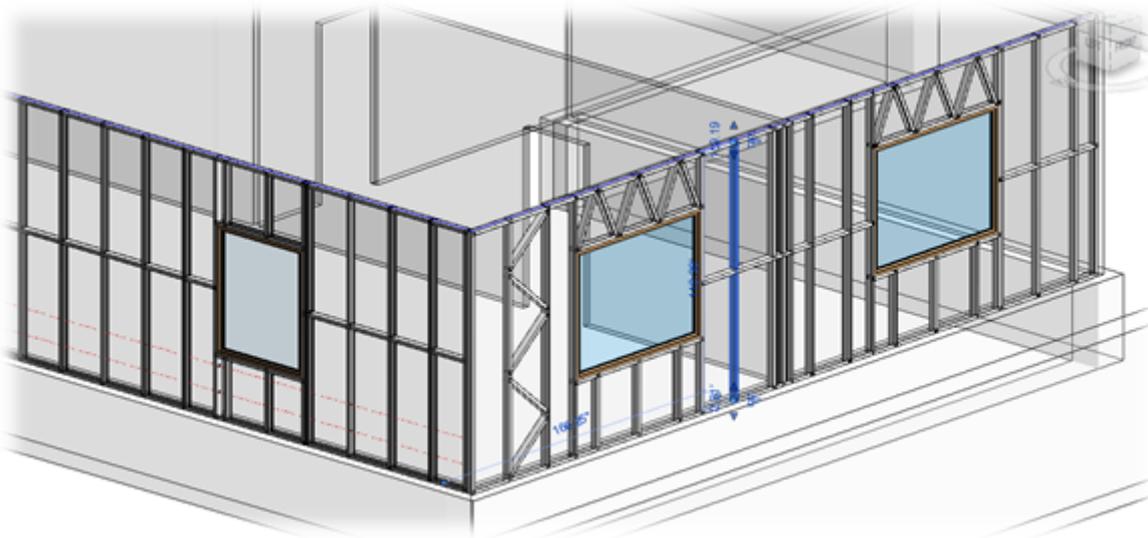

Result:

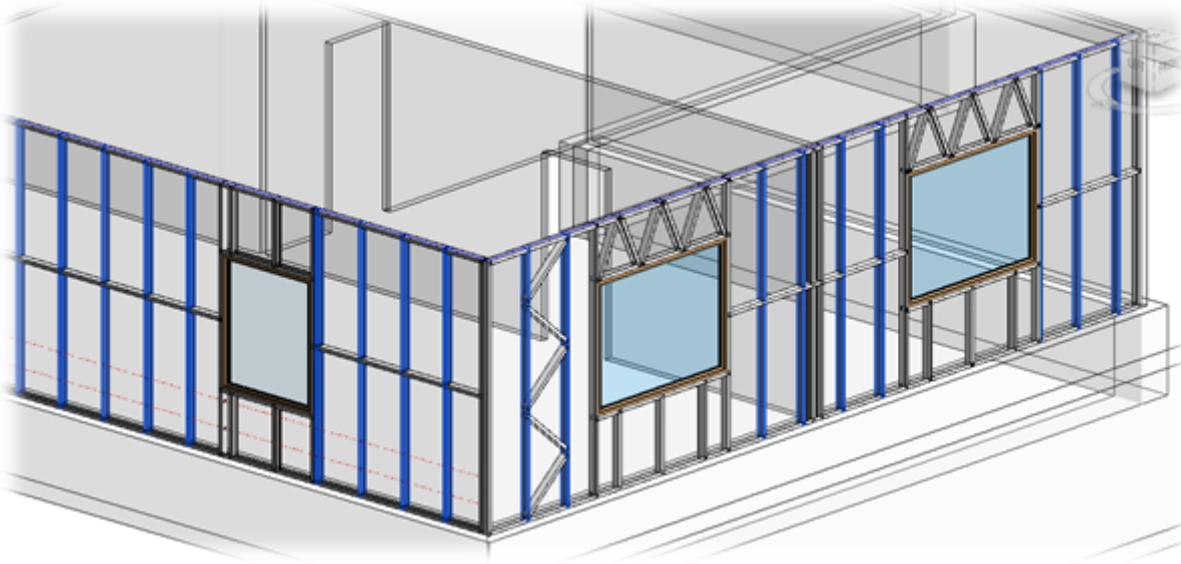


Select all Frame Elements

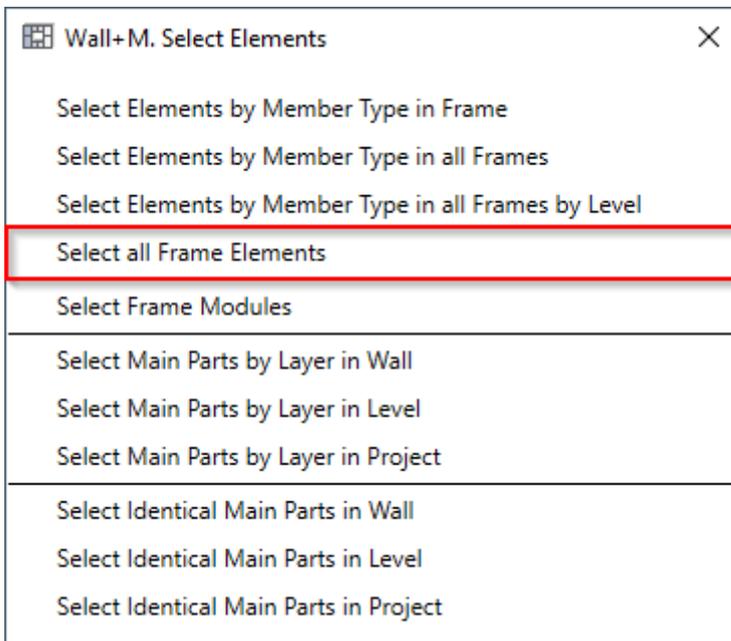


Select all Frame Elements – selects all framing members from the wall.


*Example: Select any stud → **Select all Frame Elements** → All elements, including studs, plates, trimmers, etc. will be selected:*

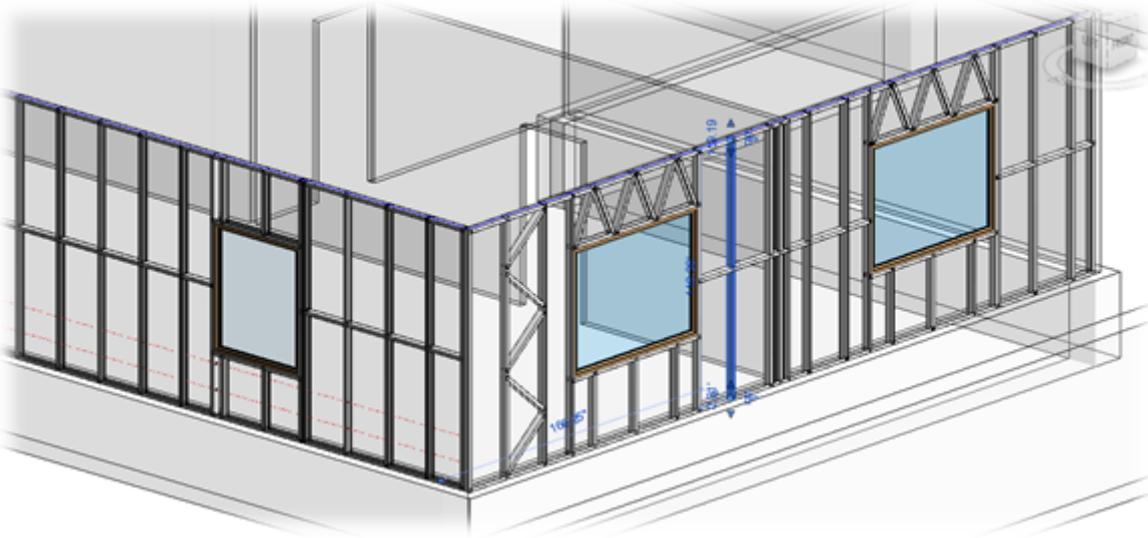

Result:

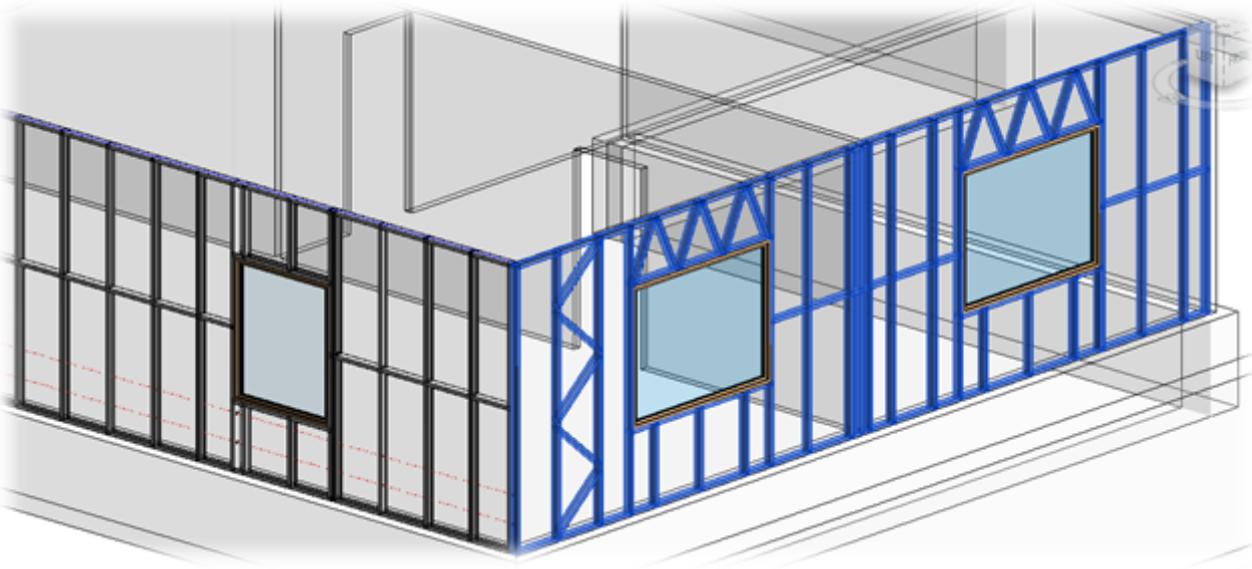


Select Frame Modules

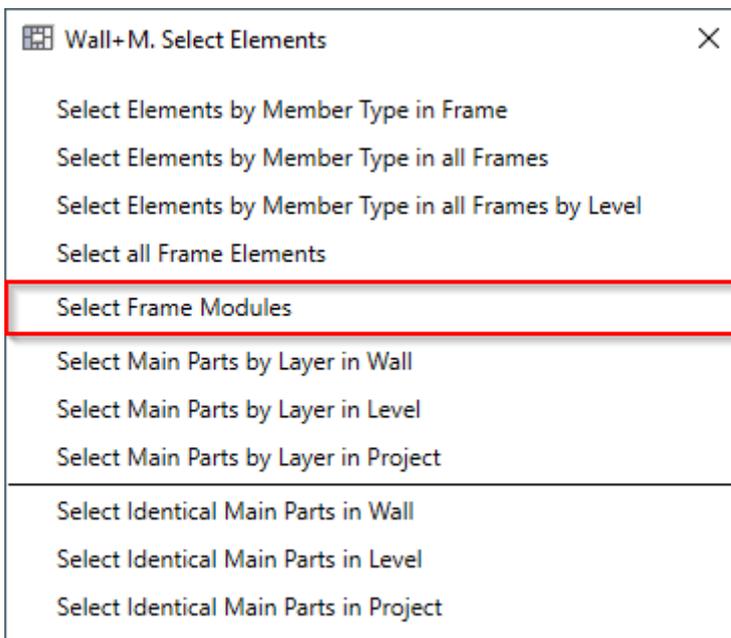


Select Frame Modules – selects preassembled elements.

Example: Select any stud → **Select Frame Modules** → All elements set as preassembled are selected, like opening kings, trimmers, cripples, etc.:

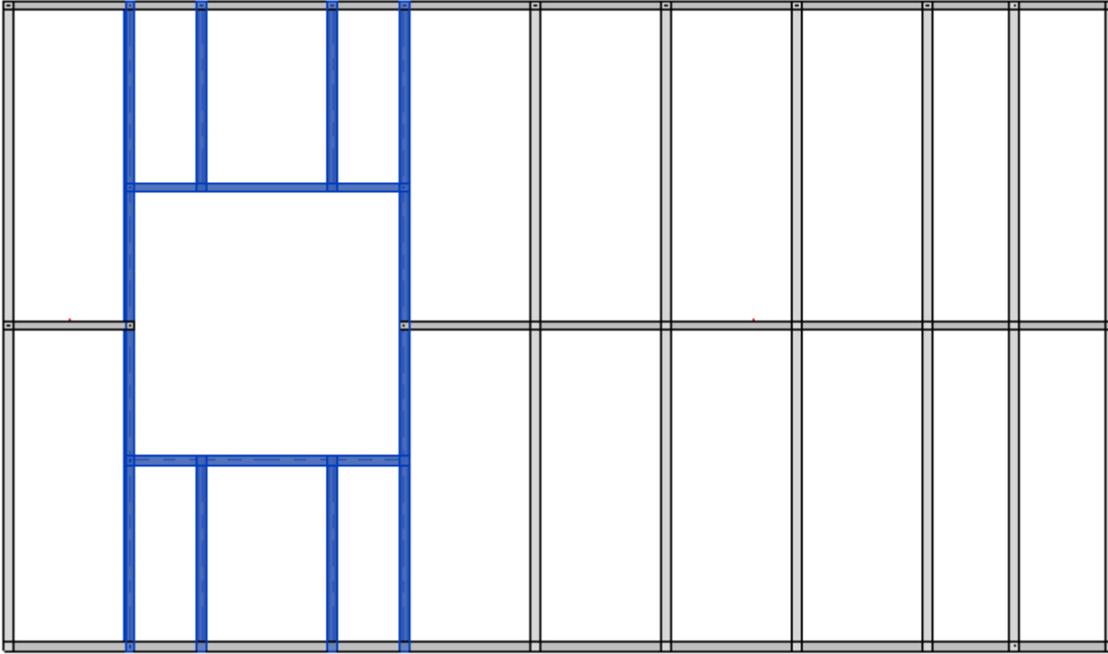


Select Main Parts by Layer in Wall

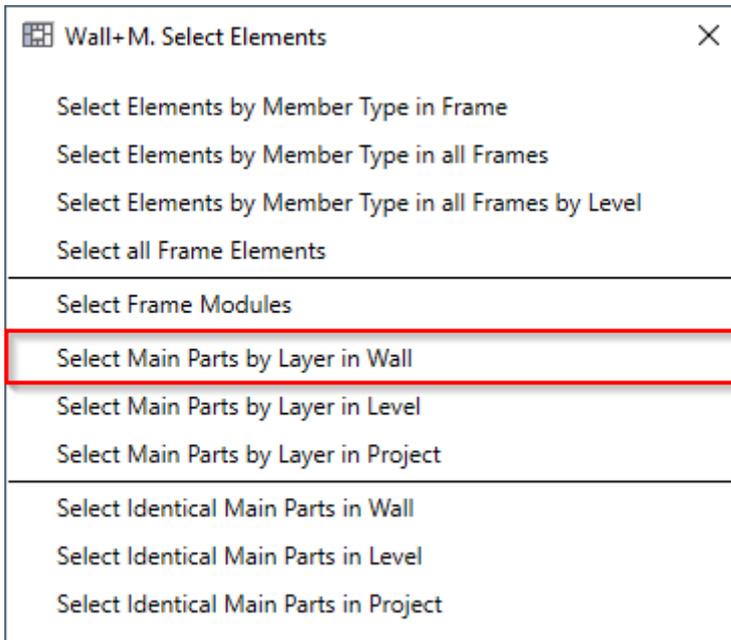

Select Main Parts by Layer in Wall – selects main parts in the framed wall.


Please make sure **Show Parts** or **Show Both** is selected in **View Properties** → **Parts Visibility**:

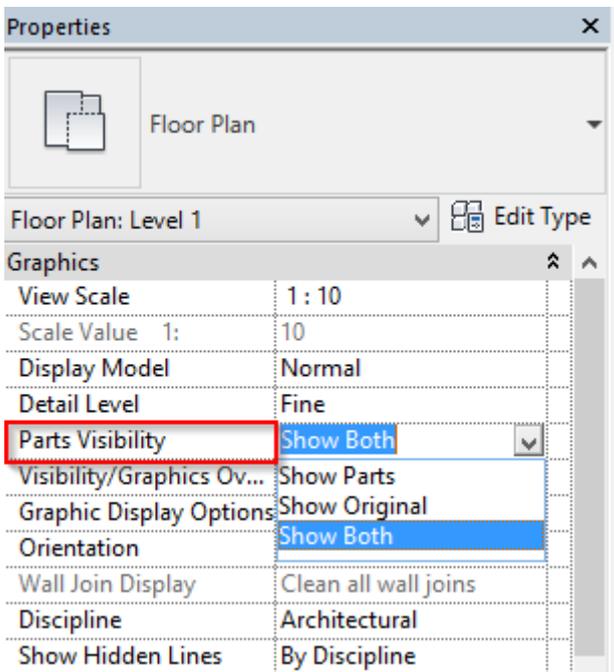

*Example: Click **Select Main Parts by Layer in Wall** and you will be able to select only main parts from the framed wall:*




Select Main Parts by Layer in Level

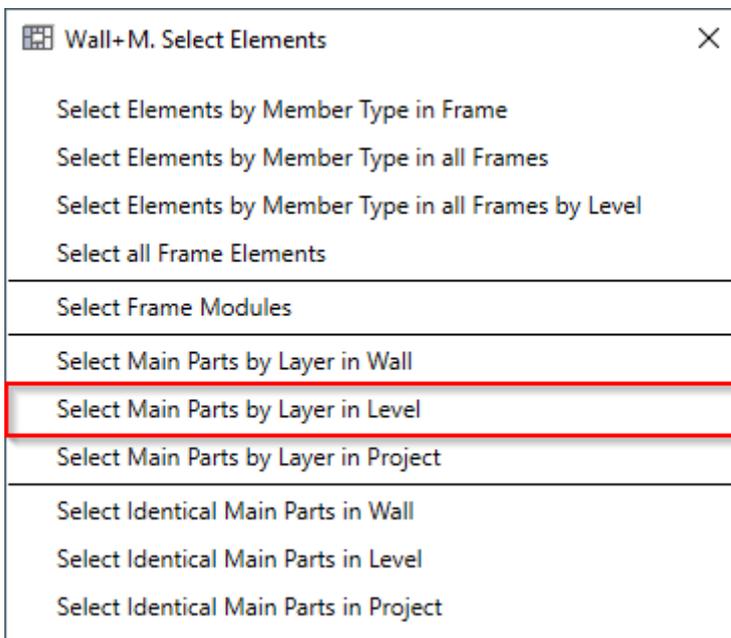


Select Main Parts by Layer in Level – selects main parts in the same type of framed walls in the same level.


Please make sure **Show Parts** or **Show Both** is selected in **View Properties** → **Parts Visibility**:

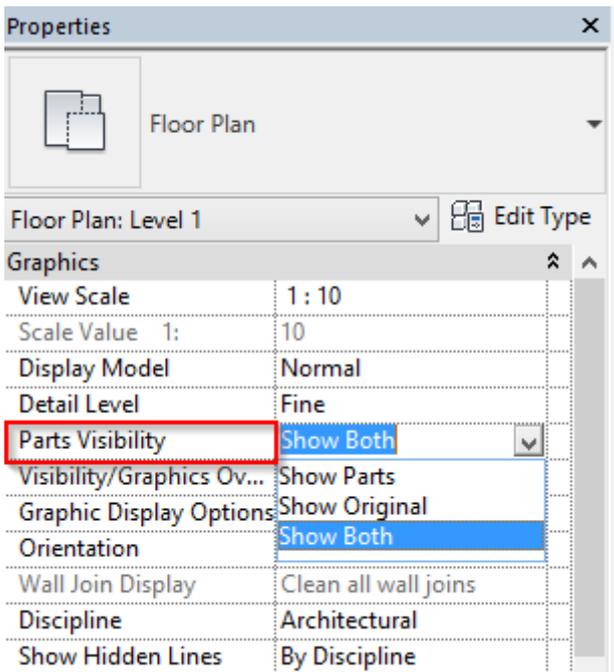

*Example: Click **Select Main Parts by Layer in Level** → Select one main part in the framed wall → All main parts of the same type in the same level will be selected. In this example, the main parts of external walls in the same level are selected:*

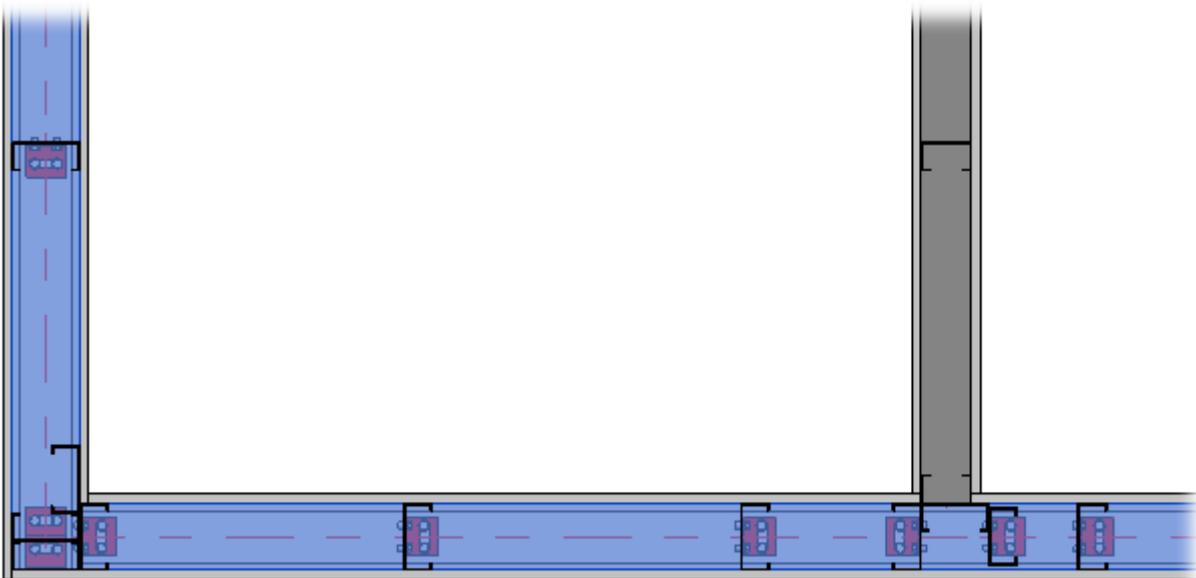


Select Main Parts by Layer in Project

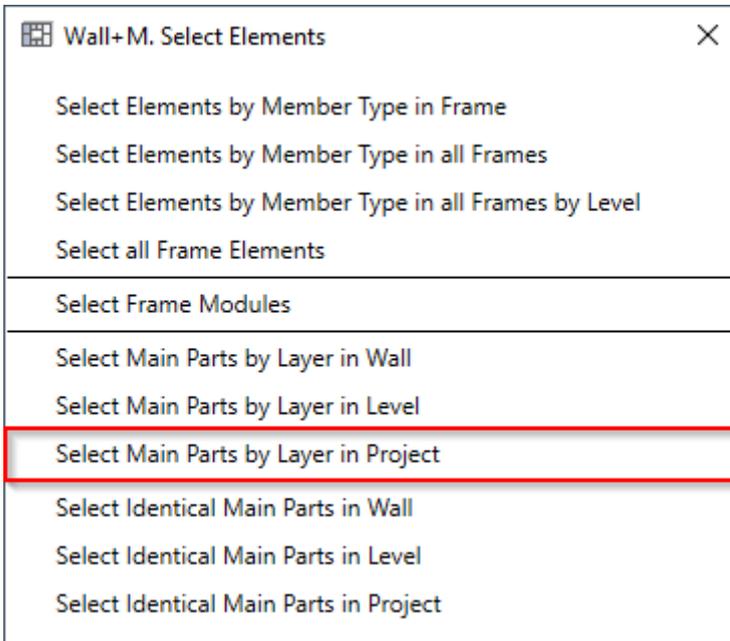


Select Main Parts by Layer in Project – selects main parts in the same type of framed walls in the whole project.


Please make sure **Show Parts** or **Show Both** is selected in **View Properties** → **Parts Visibility**:

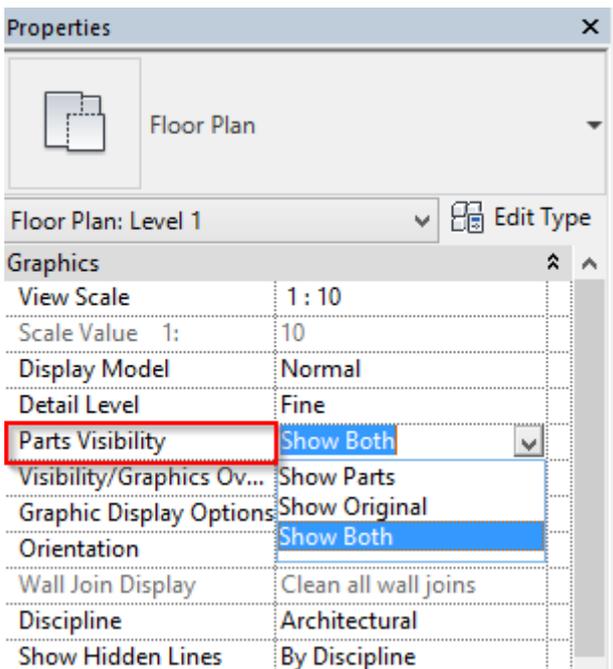

*Example: Click **Select Main Parts by Layer in Project** → Select one main part in the framed wall → All main parts of the same type in the whole project will be selected. In this example, the main parts of external walls are selected from all levels:*


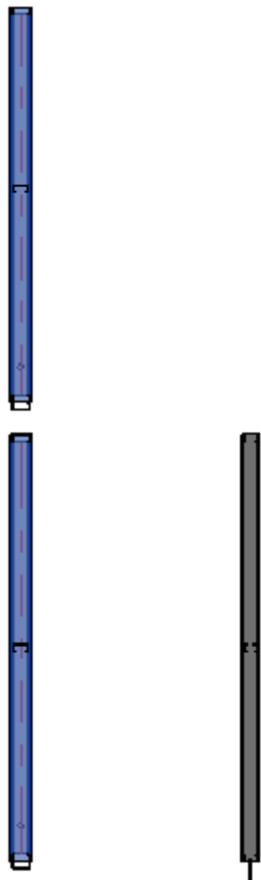


Select Identical Main Parts in Wall

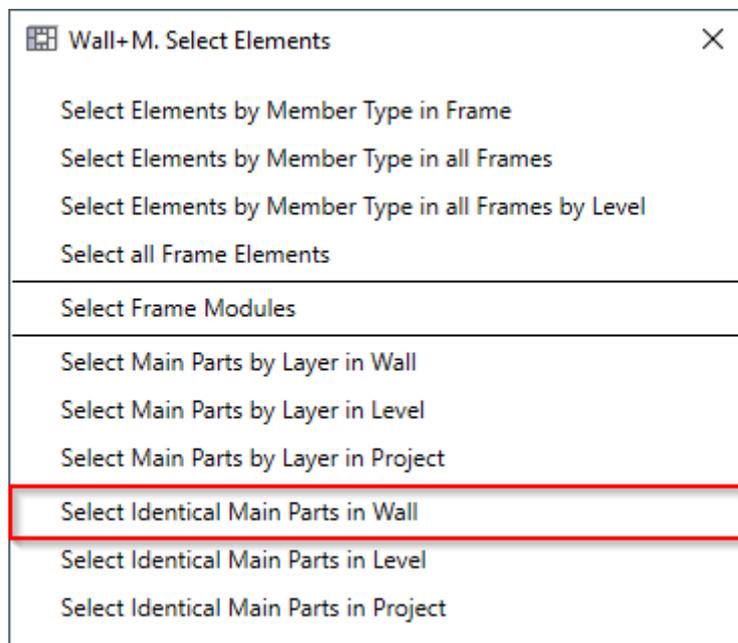


Select Identical Main Parts in Wall – selects identical main parts in the framed wall.

Please make sure **Show Parts** or **Show Both** is selected in **View Properties** → **Parts Visibility**:

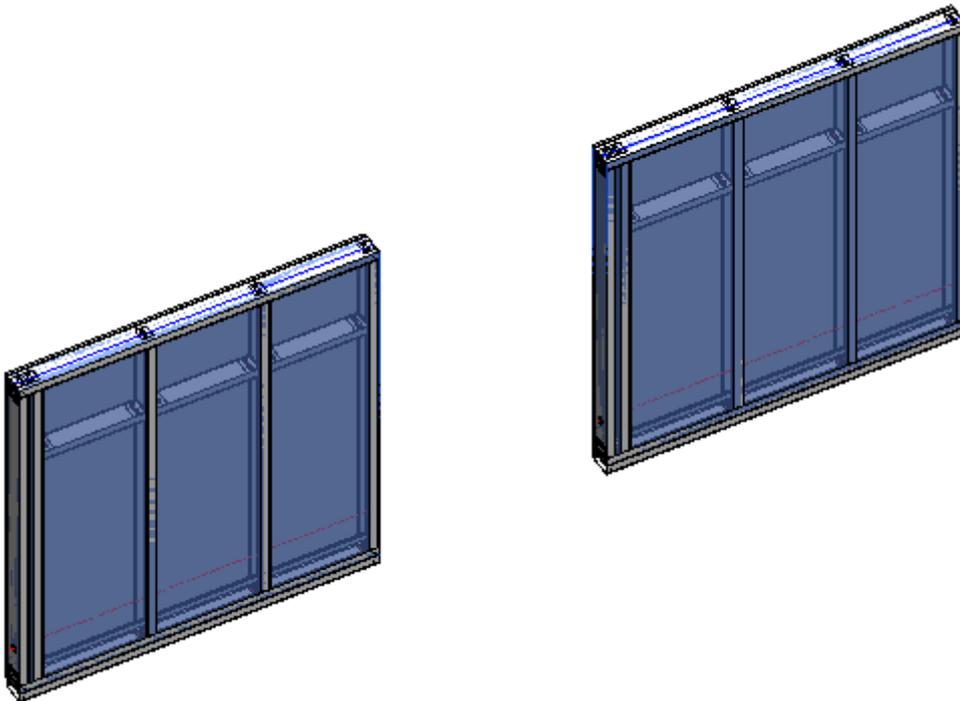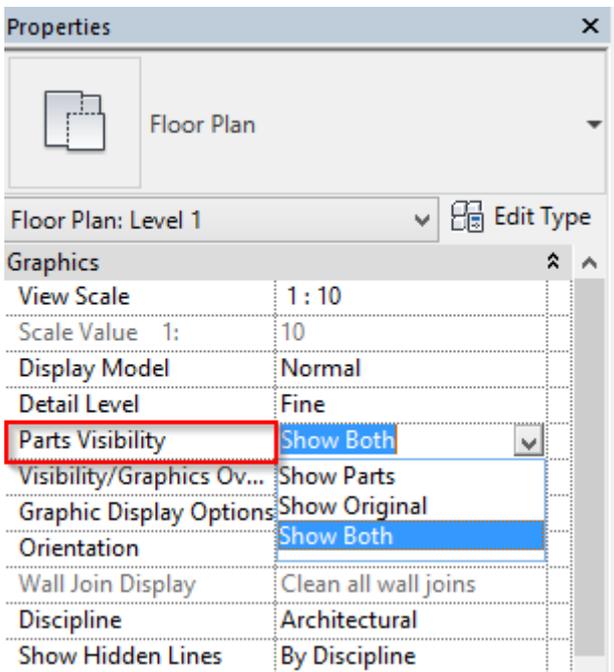


Select Identical Main Parts in Level

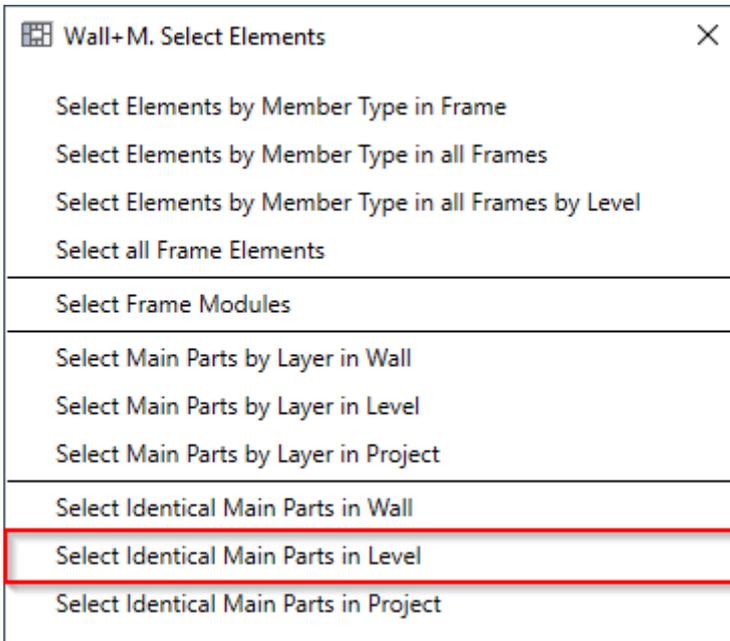


Select Identical Main Parts in Level – selects identical main parts of framed walls in the same level.


Please make sure **Show Parts** or **Show Both** is selected in **View Properties** → **Parts Visibility**:

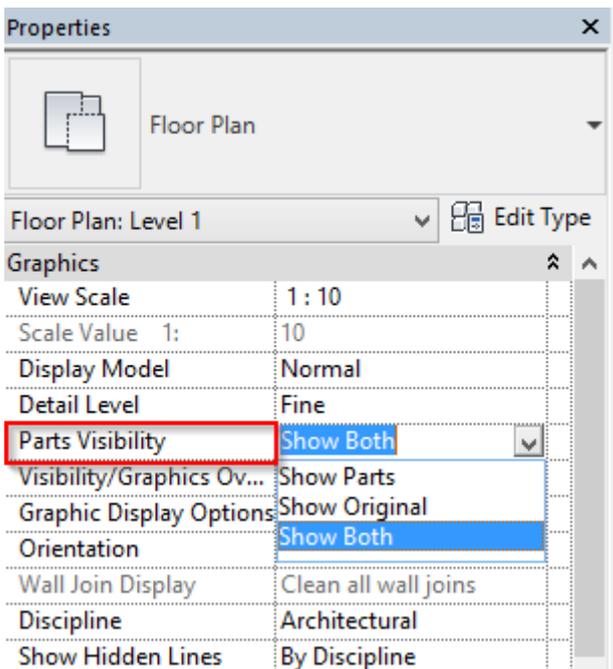

*Example: Click **Select Identical Main Parts in Level** → Select one main part in the framed wall → All identical main parts in the same level will be selected:*

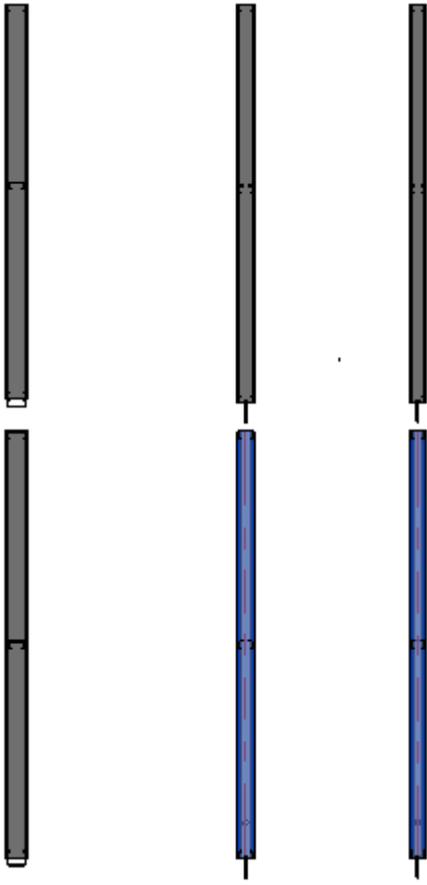


Select Identical Main Parts in Project

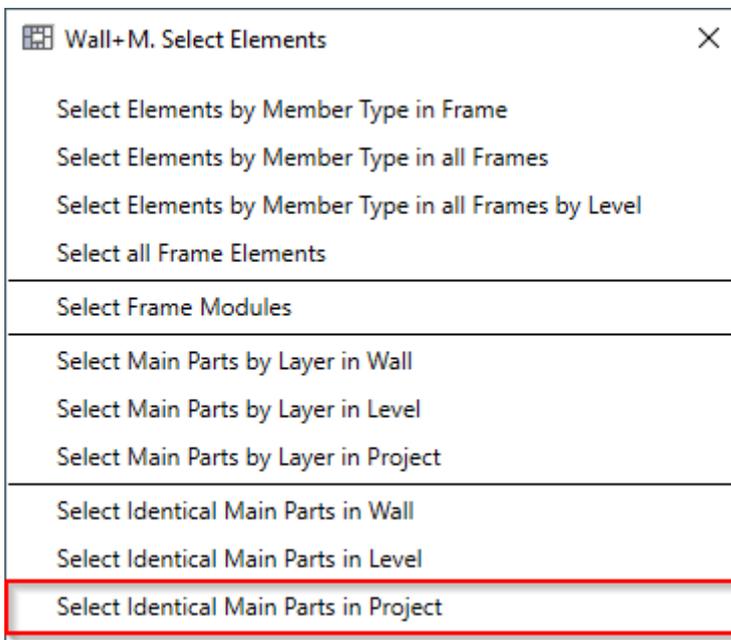

Select Identical Main Parts in Project – selects identical main parts of framed walls in the whole project.

Please make sure **Show Parts** or **Show Both** is selected in **View Properties** → **Parts Visibility**:

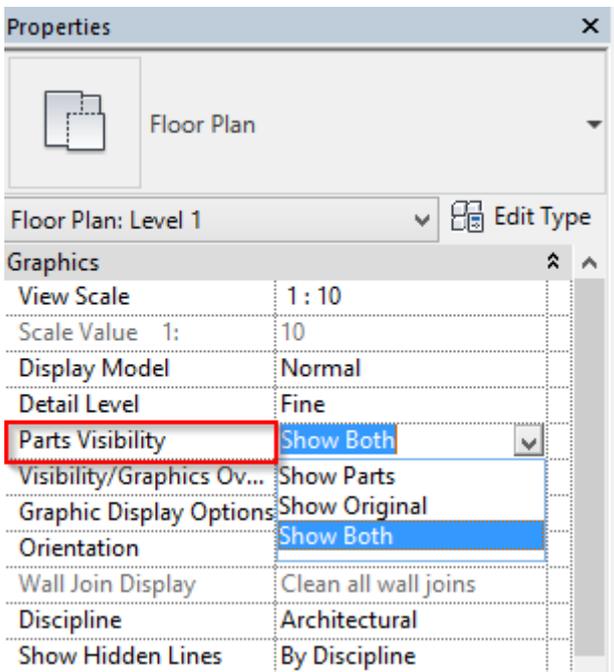

*Example: Click **Select Identical Main Parts in Project** → Select one main part in the framed wall → All identical main parts in the whole project will be selected. In this example, identical main parts are selected from all levels:*

