



FRAMING CONFIGURATION – Common Settings – Configuration Settings

Modified on: Sun, 3 Jan, 2021 at 8:40 PM


Framing Configuration may be found in two locations:

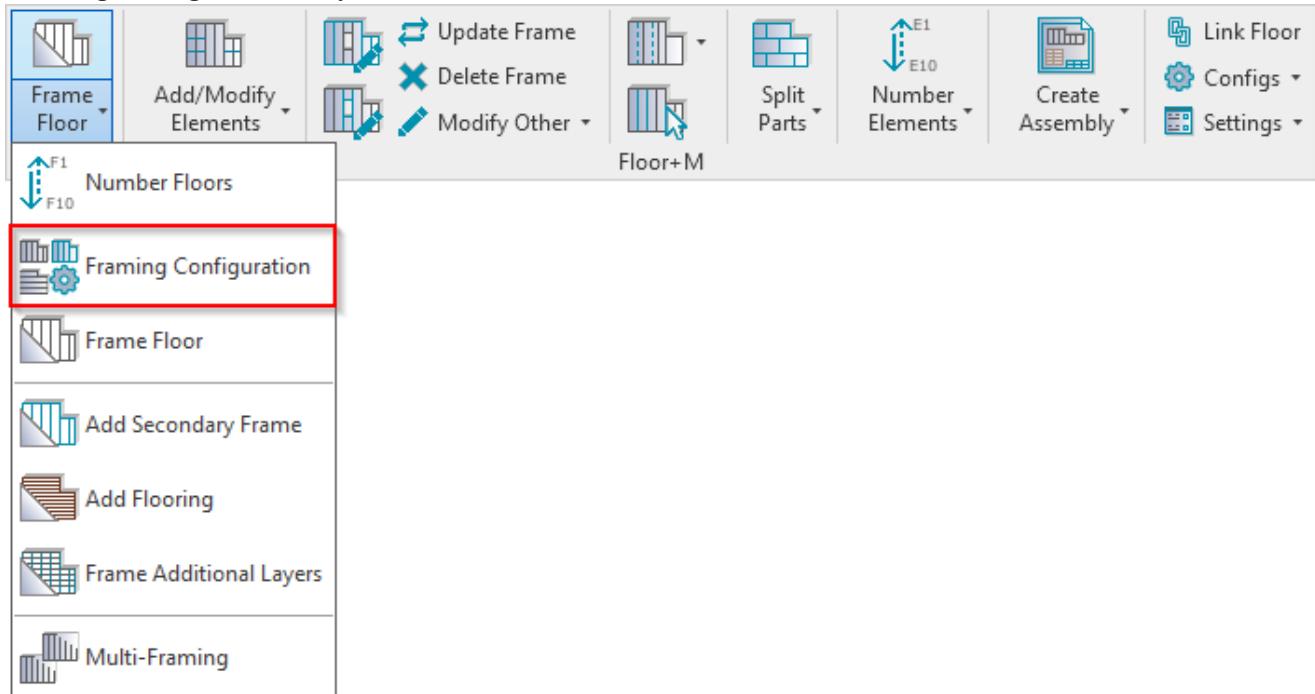

OR:

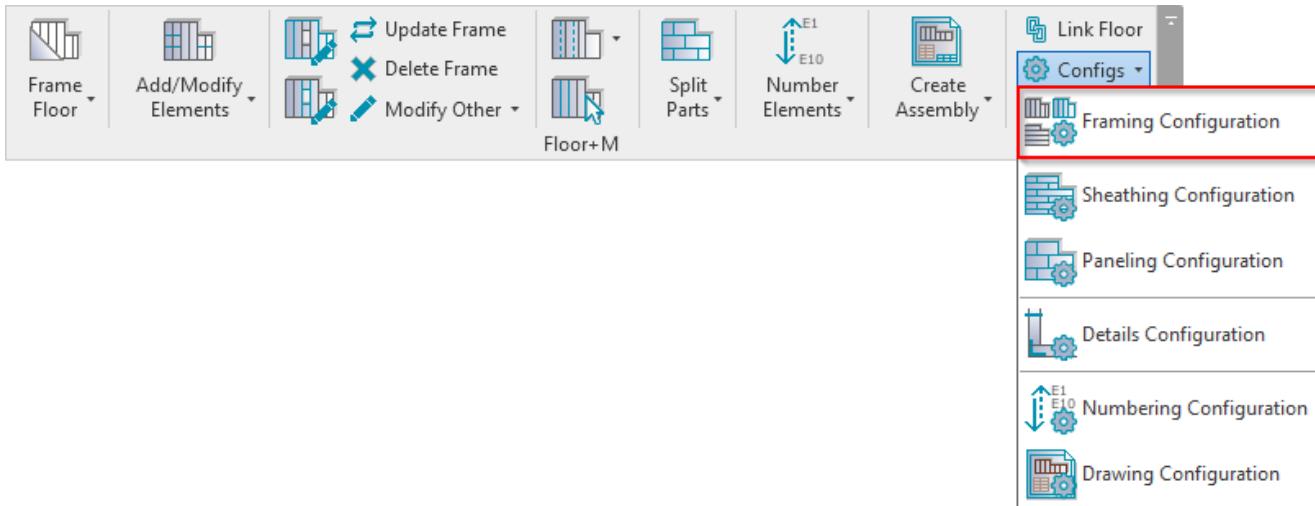

Configuration Settings

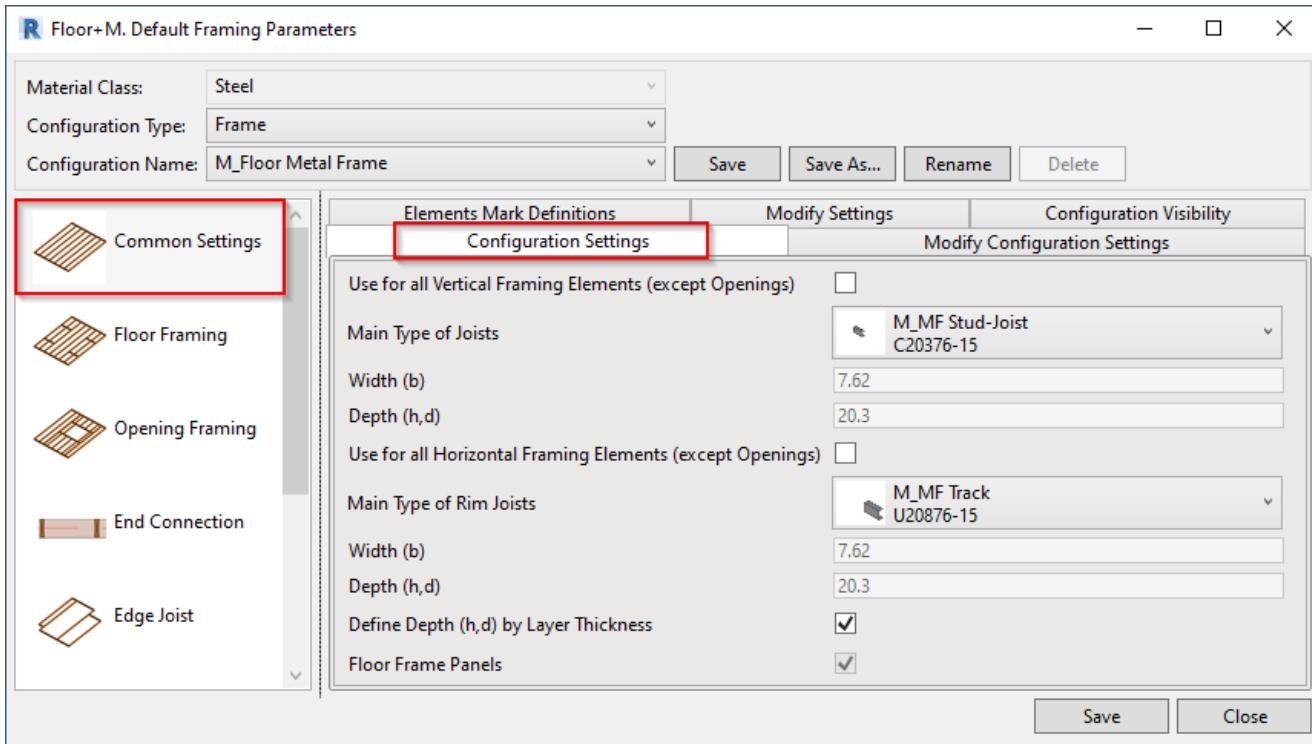

Use for all Vertical/Horizontal Framing Elements (except Openings) – if ON, then the selected Joist and Rim Joist families will be used for other vertical/horizontal framing elements, like connections, bridgings, noggings, etc. without an option to change it to a custom family.

Main Type of Joists (or Rim Joists) – pick a family and type for the Joist or Rim Joist.

For **C+C system** – *M_MF C+C Stud* and *M_MF C+C Plate*

For **C+C Chamfered system** – *M_MF C+C_CH Stud* and *M_MF C+C_CH Plate*

For **C+U system** – *M_MF Stud-Joist* and *M_MF Track*

M goes for Metric system, *I* goes for Imperial.

Do not use any other families!

You can use other families only in special cases. Contact us support@agacad.com

Width (b) – shows the width b parameter value of the selected family type.

Depth (h, d) – shows the depth h or d parameter value of the selected family type.

Define Depth (h, d) by Layer Thickness – the software will create a new type for the selected family and change the depth value to the floor layer thickness so that the frames will fit the layer in the wall.

Floor Frame Panels – if ON, then floor frames are assembled in factory; if OFF – assembled on site.