



FRAMING CONFIGURATION – Common Settings – Modify Configuration Settings

Modified on: Sun, 3 Jan, 2021 at 9:07 PM


Framing Configuration may be found in two locations:

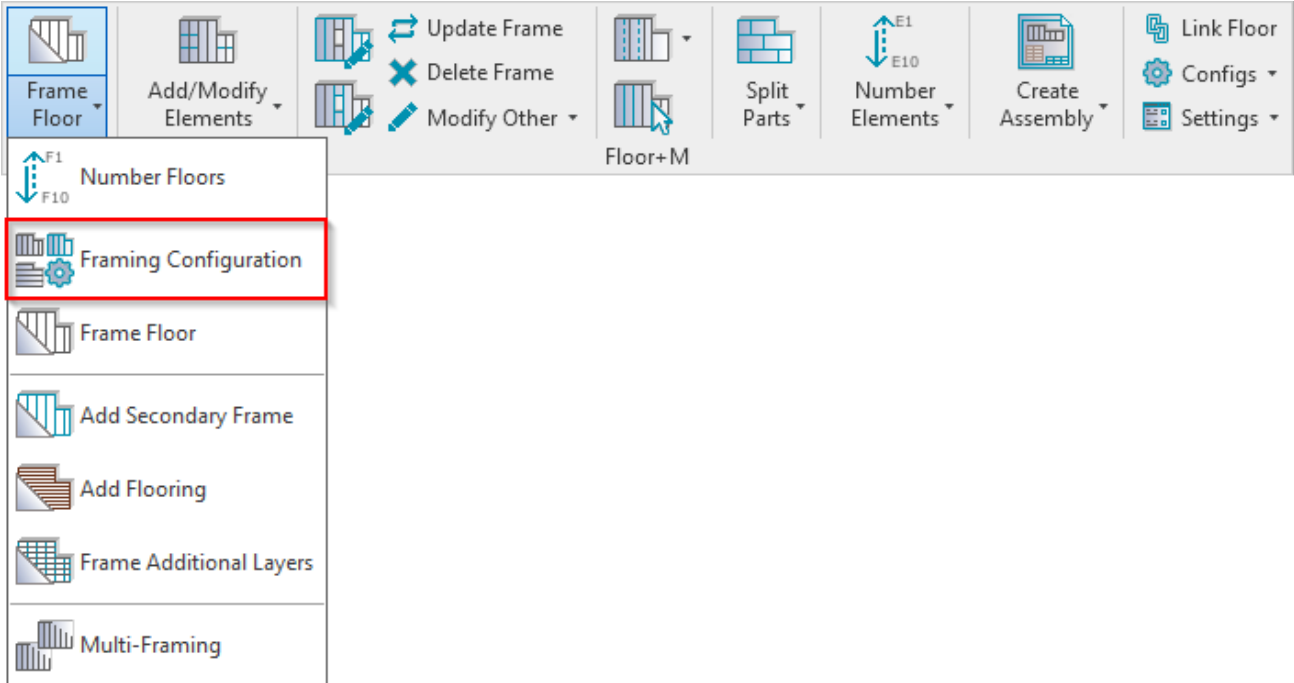

OR:

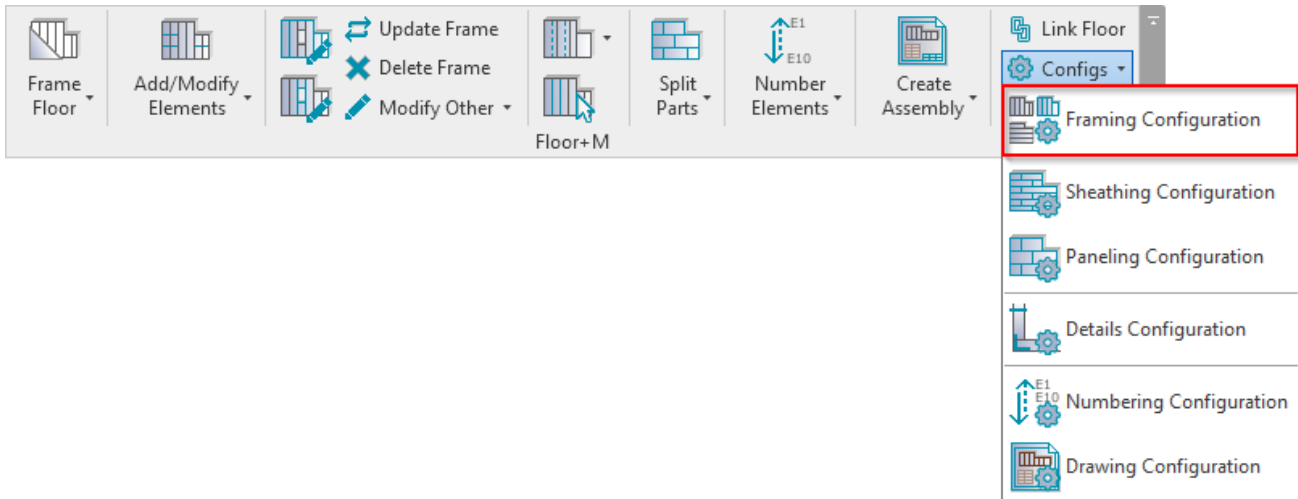

Modify Configuration Settings

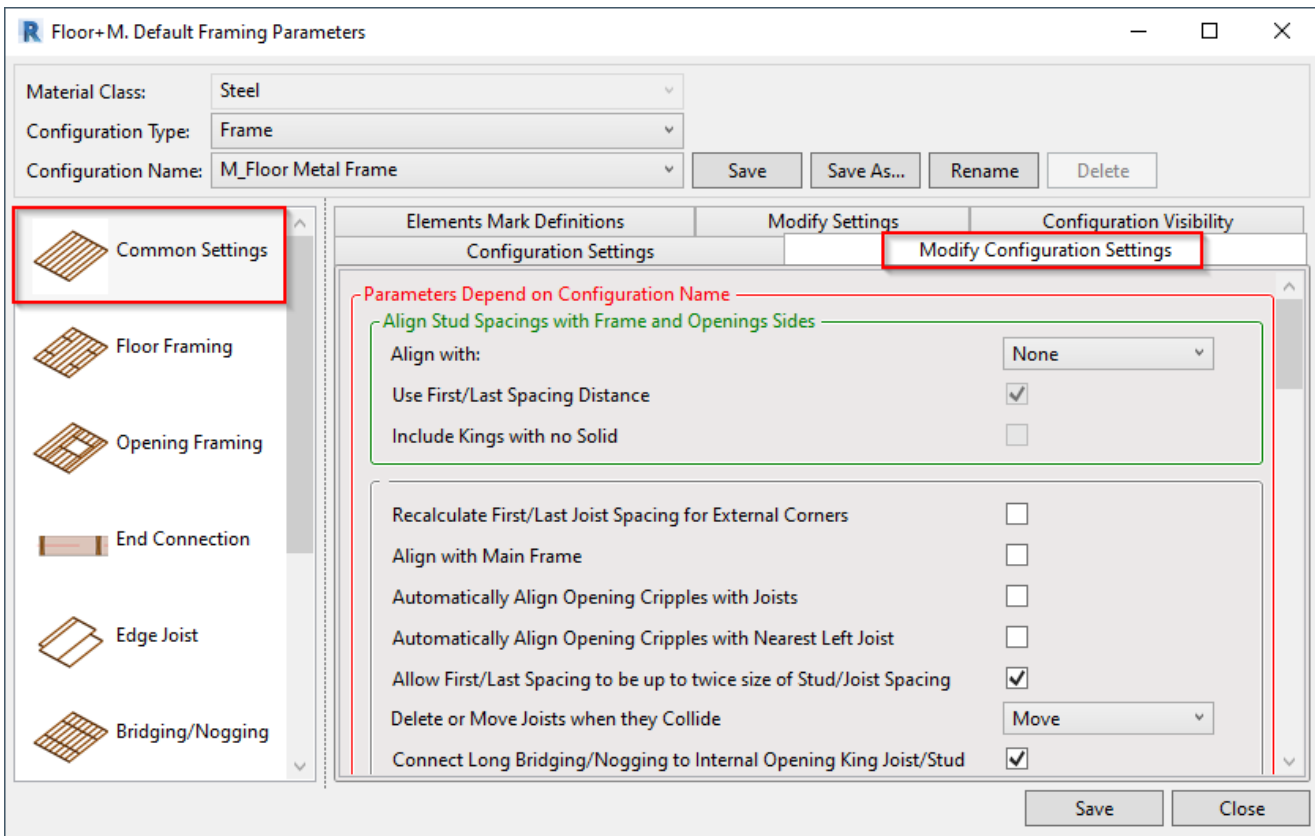

Modify Configuration Settings – tab with advanced settings for the selected configuration name.

Read more about every feature here >> (<https://agacad.freshdesk.com/support/solutions/articles/44002139157-modify-configuration-settings>).