



FRAMING CONFIGURATION – Common Settings – Modify Settings

Modified on: Mon, 4 Jan, 2021 at 8:58 PM

Framing Configuration may be found in two locations:

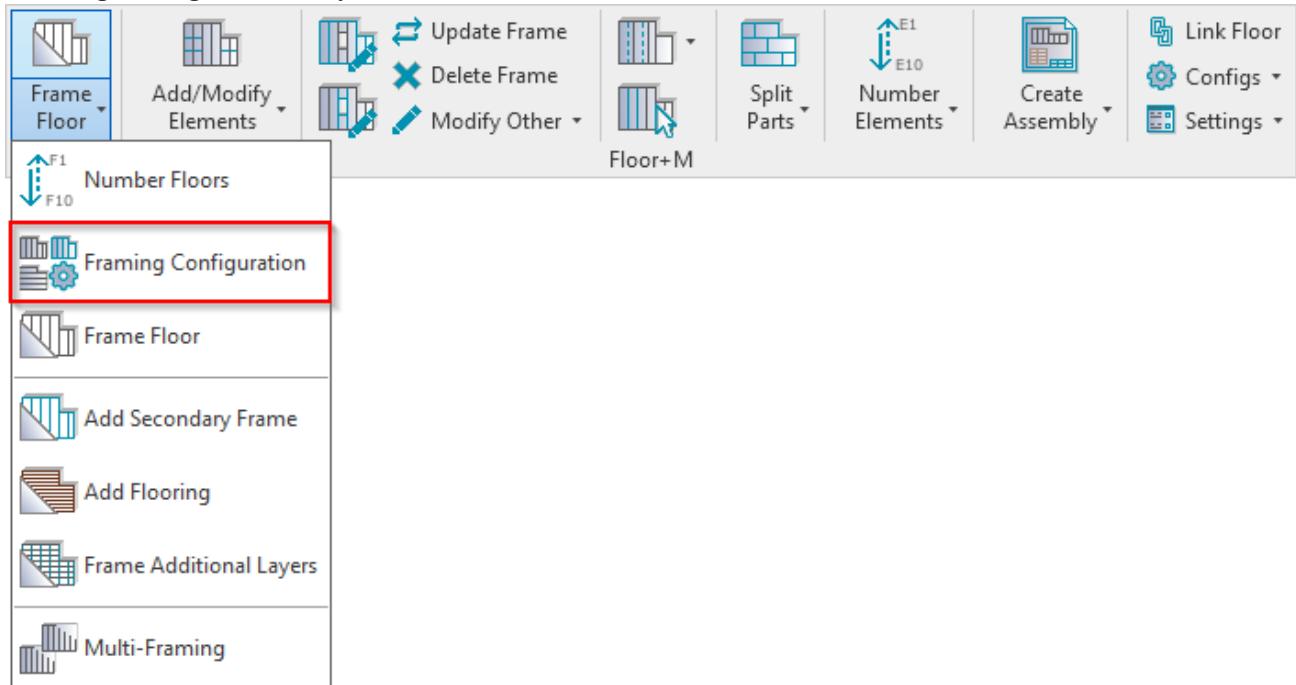

Or:

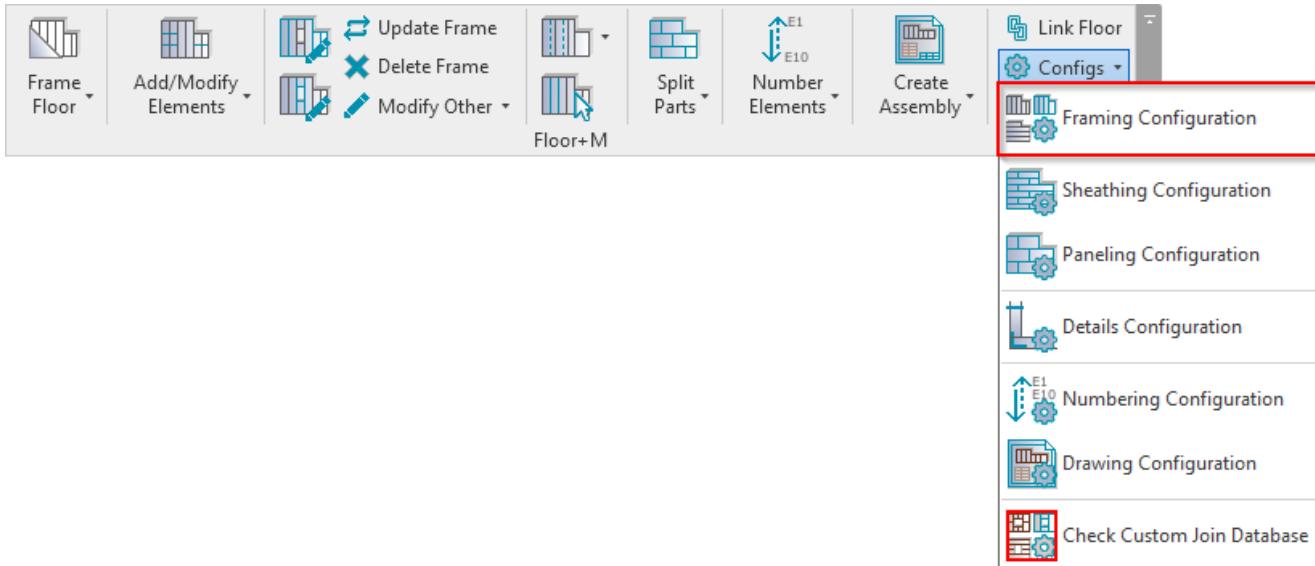

Modify Settings

Configuration Settings	Elements Mark Definitions	Modify Configuration Settings	Configuration Visibility
Common Settings for All Configurations			
Automatically Load Standard Profile Types	<input type="checkbox"/>		
Allow to Create new Types for Metal Profiles	<input type="checkbox"/>		
Allow to Rename Families and Types now	<input type="checkbox"/>		
Frame Floor by Span Direction	<input type="checkbox"/>		
Frame Floor Perpendicular to Slope Direction	<input type="checkbox"/>		
Set "z Justification" to Top	<input type="checkbox"/>		
Align Frame with Bottom Face	<input type="checkbox"/>		

Modify Settings – advanced settings that are applied to all configuration names, regardless of which configuration name is selected.

Read more about every feature here >> (<https://agacad.freshdesk.com/support/solutions/articles/44002139159-framing-configuration-%E2%80%93-modify-settings>).