



FRAMING CONFIGURATION – Bridging/Nogging

Modified on: Thu, 7 Jan, 2021 at 8:09 PM


Framing Configuration may be found in two locations:

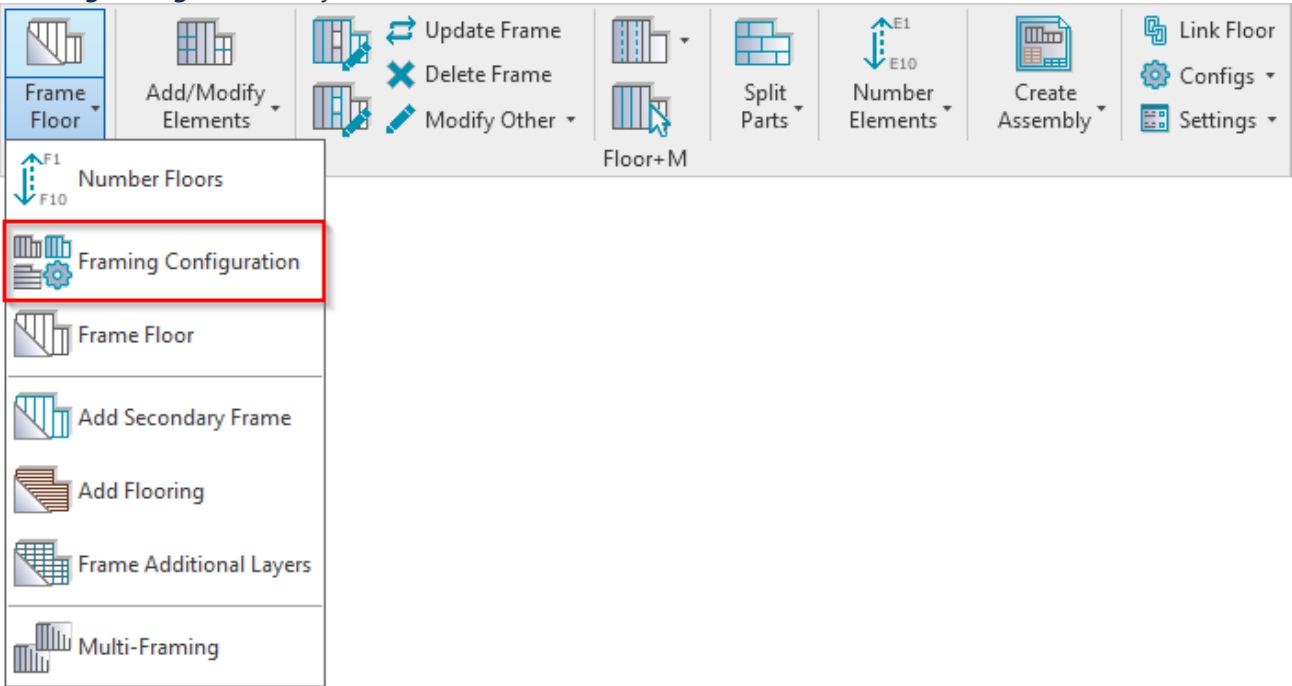


OR:

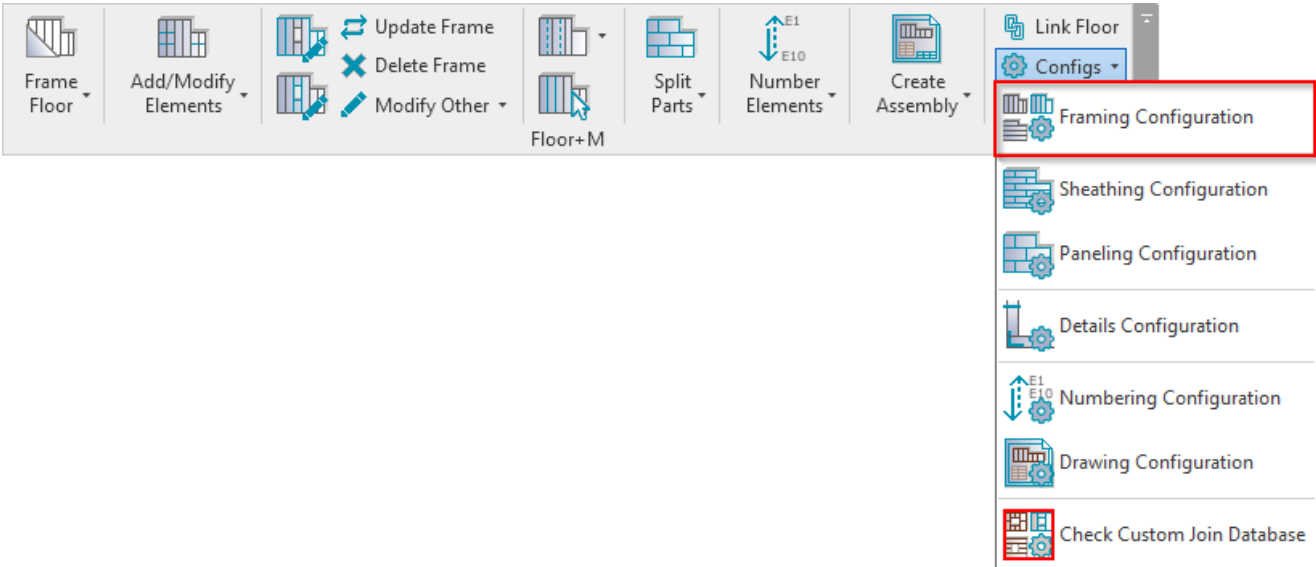

Bridging/Nogging

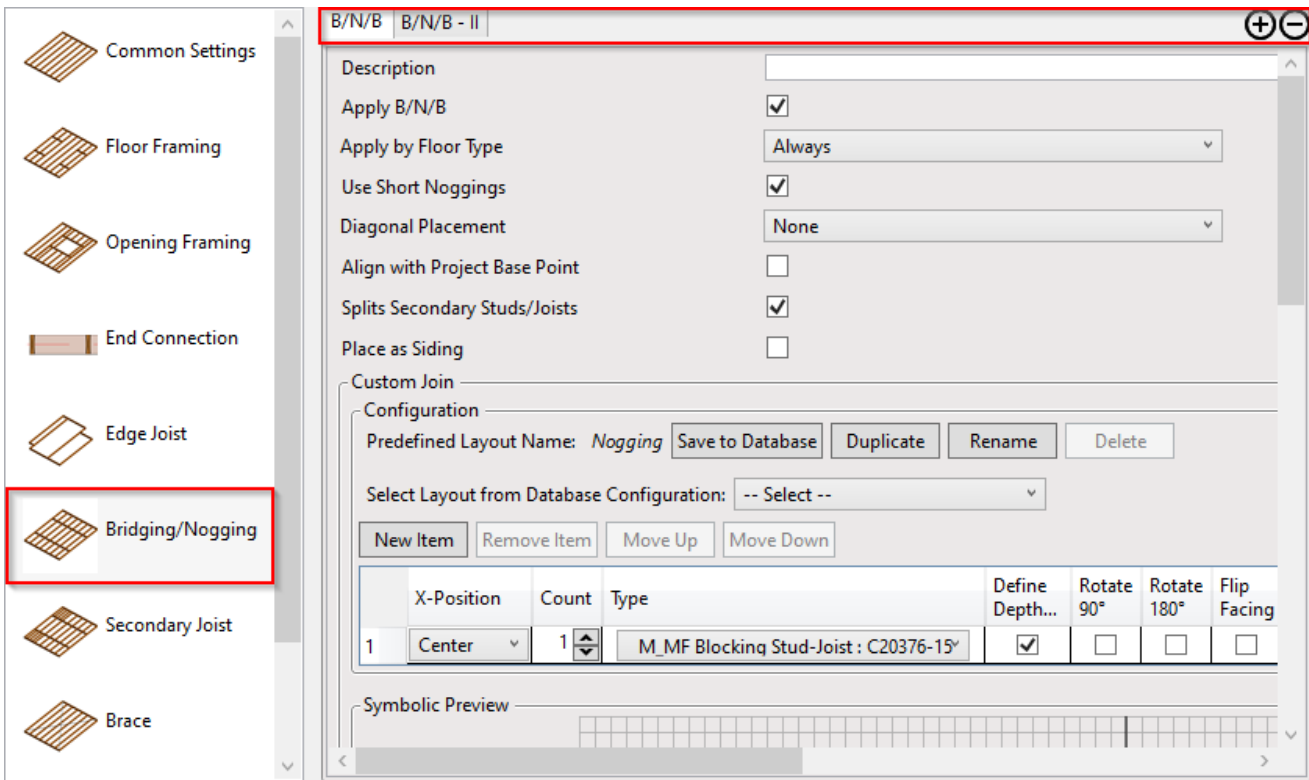

You can add different types of continuous or non-continuous **Bridging, Nogging** or **Blocking** into framing using different rules.

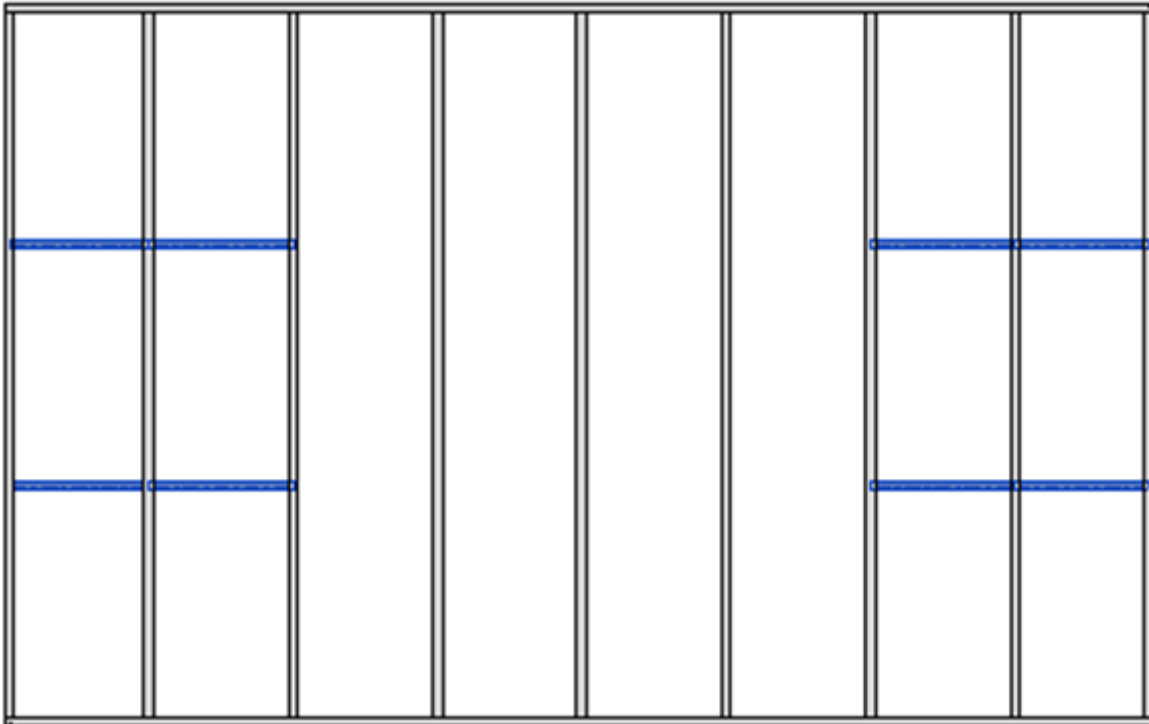

[Read more about every feature here >>](https://agacad.freshdesk.com/support/solutions/articles/44002140167-framing-configuration-%E2%80%93-blocking-nogging) (<https://agacad.freshdesk.com/support/solutions/articles/44002140167-framing-configuration-%E2%80%93-blocking-nogging>).