ADD/MODIFY ELEMENTS – Main Features

Modified on: Fri, 8 Jan, 2021 at 7:52 PM

Add/Modify Elements



Add/Modify Elements - features for adding/modifying additional joists, support joists, bridging/noggin elements, etc.

Add Additional Bridging/Nogging/Blocking



Add Additional Bridging/Nogging/Blocking – adds additional bridging/nogging/blocking between selected two joists with predefined settings.

ADD/MODIFY ELEMENTS - Main Features : AGACAD

Read more >> (https://agacad.freshdesk.com/support/solutions/articles/44001781867-add-modify-elements-add-

additional-bridging-nogging-blocking)



Add Additional Joist

Add/Modify Elements ×
Add Additional Bridging/Nogging/Blocking
Add Additional Joist
Add Vertical Block
Add Additional Support Joist
Modify Additional Element
Delete Additional Elements
Add External Element to Frame
Remove External Element from Frame
Add External Element as Bridge/Brace and Split Jo
Remove Added External Elements

Add Additional Joist – adds additional joist into selected frame with predefined settings.

<u>Read more >> (https://agacad.freshdesk.com/support/solutions/articles/44001795127-add-modify-elements-%E2%80%93-add-additional-joist)</u>





Add Vertical Block

7/9/2021

Add/Modify Elements	×
Add Additional Bridging/Nogging/Blocking	
Add Additional Joist	
Add Vertical Block	
Add Additional Support Joist	
Modify Additional Element	
Delete Additional Elements	
Add External Element to Frame	
Remove External Element from Frame	
Add External Element as Bridge/Brace and Split	Je
Remove Added External Elements	

Add Vertical Block – adds additional vertical block using joists into selected frame with predefined settings.

<u>Read more >> (https://agacad.freshdesk.com/support/solutions/articles/44001795864-add-modify-elements-%E2%80%93-add-vertical-block)</u>



Add Additional Support Joist

Add/Modify Elements ×
Add Additional Bridging/Nogging/Blocking
Add Additional Joist
Add Vertical Block
Add Additional Support Joist
Modify Additional Element
Delete Additional Elements
Add External Element to Frame
Remove External Element from Frame
Add External Element as Bridge/Brace and Split Jo
Remove Added External Elements

Add Additional Support Joist – adds additional support joist between two selected plates.

The features are the same as Add Additional Joist.

Read more >> (https://agacad.freshdesk.com/support/solutions/articles/44001795127-add-modify-elements-%E2%80%93add-additional-joist)



Modify Additional Element



Modify Additional Element – modifies selected additional element with custom settings if you need to make unique changes. All settings are the same as were used in the adding process.





Delete Additional Elements

Add/Modify Elements ×
Add Additional Bridging/Nogging/Blocking
Add Additional Joist
Add Vertical Block
Add Additional Support Joist
Modify Additional Element
Delete Additional Elements
Add External Element to Frame
Remove External Element from Frame
Add External Element as Bridge/Brace and Split Jo
Remove Added External Elements

Delete Additional Elements – deletes any previously created additional bridging/nogging/blocking, joist, vertical block, or support joist.





Add External Element to Frame

Add/Modify Elements	×
Add Additional Bridging/Nogging/Blocking	
Add Additional Joist	
Add Vertical Block	
Add Additional Support Joist	
Modify Additional Element	
Delete Additional Elements	
Add External Element to Frame	
Remove External Element from Frame	
Add External Element as Bridge/Brace and Split	Je
Remove Added External Elements	

Add External Element to Frame – adds external element to the frame. Select external element or multiple elements and then the floor frame where it should be added. Such element will be included while creating assemblies for shop drawings.

Remove External Element From Frame

Add/Modify Elements	(
Add Additional Bridging/Nogging/Blocking	
Add Additional Joist	
Add Vertical Block	
Add Additional Support Joist	
Modify Additional Element	
Delete Additional Elements	
Add External Element to Frame	
Remove External Element from Frame	
Add External Element as Bridge/Brace and Split Jo	
Remove Added External Elements	

Remove External Element From Frame – removes external element from the frame which was previously added to the floor frame.

Add External Element as Bridge/Brace and Joist Split

Madd/Modify Elements	×
Add Additional Bridging/Nogging/Blocking	
Add Additional Joist	
Add Vertical Block	
Add Additional Support Joist	
Modify Additional Element	
Delete Additional Elements	
Add External Element to Frame	
Remove External Element from Frame	
Add External Element as Bridge/Brace and Split J	(
Remove Added External Elements	

Add External Element as Bridge/Brace and Joist Split – adds external element to the floor frame and splits the joists. Select external element or multiple elements and then the floor frame where it should be added.

Example, joists before using the function:



Example, joists after using the function:

ADD/MODIFY ELEMENTS – Main Features : AGACAD



Remove Added External Elements

III Add/Modify Elements	×
Add Additional Bridging/Nogging/Blocking	
Add Additional Joist	
Add Vertical Block	
Add Additional Support Joist	
Modify Additional Element	
Delete Additional Elements	
Add External Element to Frame	
Remove External Element from Frame	
Add External Element as Bridge/Brace and Split J	k
Remove Added External Elements	

Remove Added External Elements - removes external elements from the frame which was previously added to the floor frame.

Example, the element becomes external and will not be added to the frame assembly:



2 ^

\$