


# ALIGN/TRIM/EXTEND – Split Elements


Modified on: Sat, 9 Jan, 2021 at 5:15 PM

## Split Elements

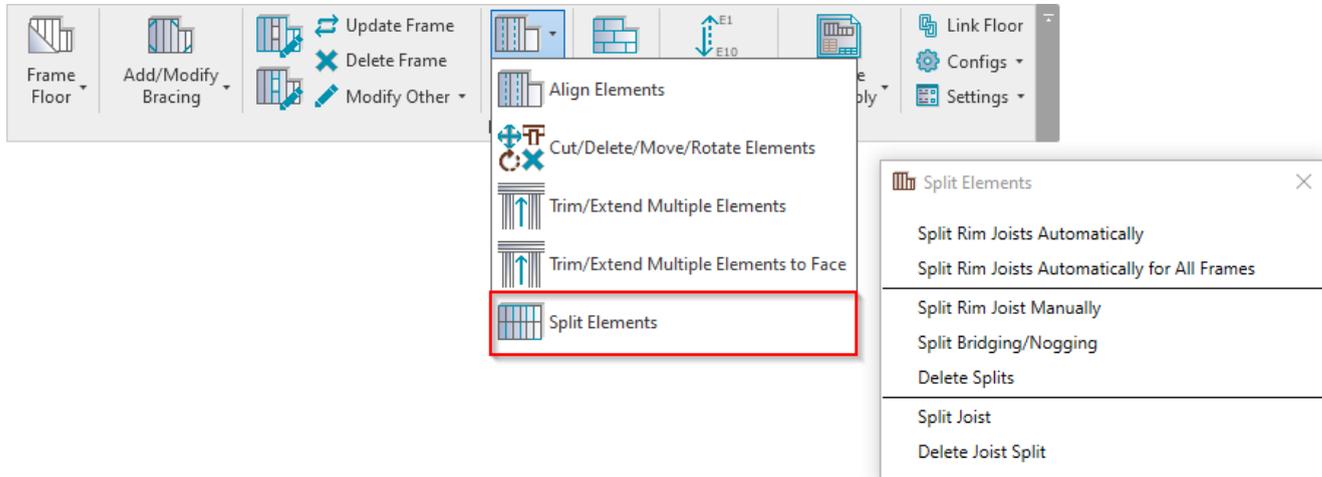


**Split Elements** – features for splitting joists, rim joists, bridging/nogging elements by different rules.


## Split Rim Joists Automatically

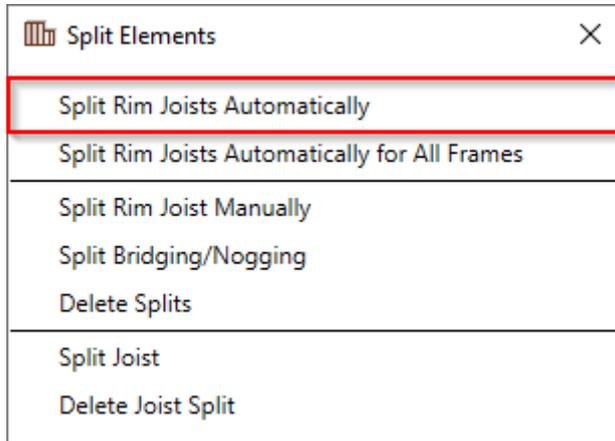

**Split Rim Joists Automatically** – splits rim joists for selected floor according to predefined settings in **Framing Configuration**.

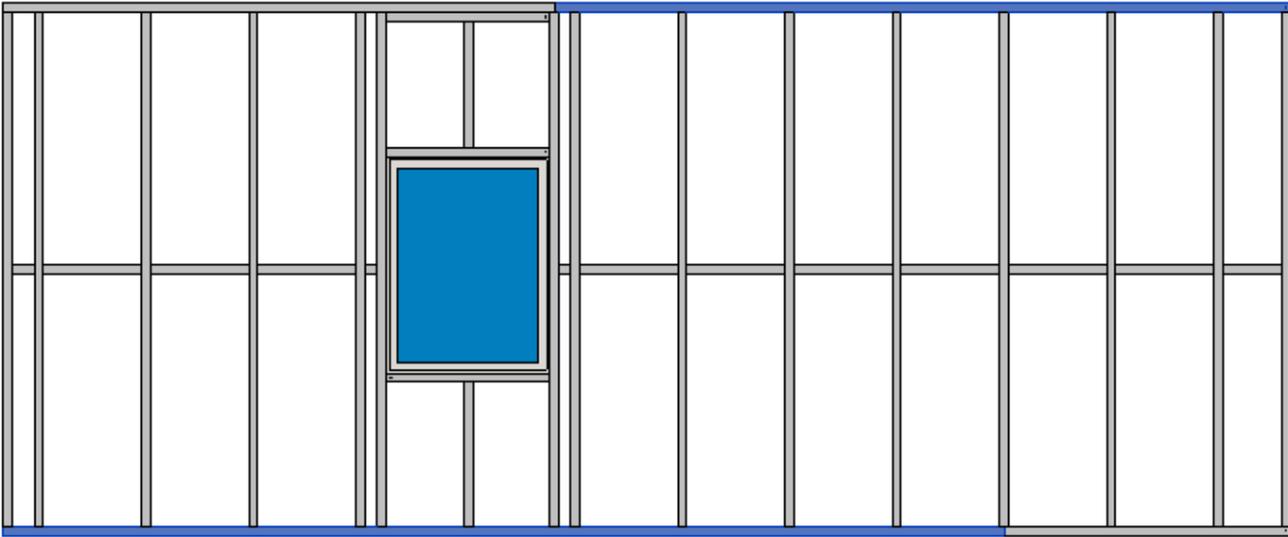


Split settings come from **Configs** → **Framing Configuration** → **Common Settings** → **Modify Configuration Settings** tab:

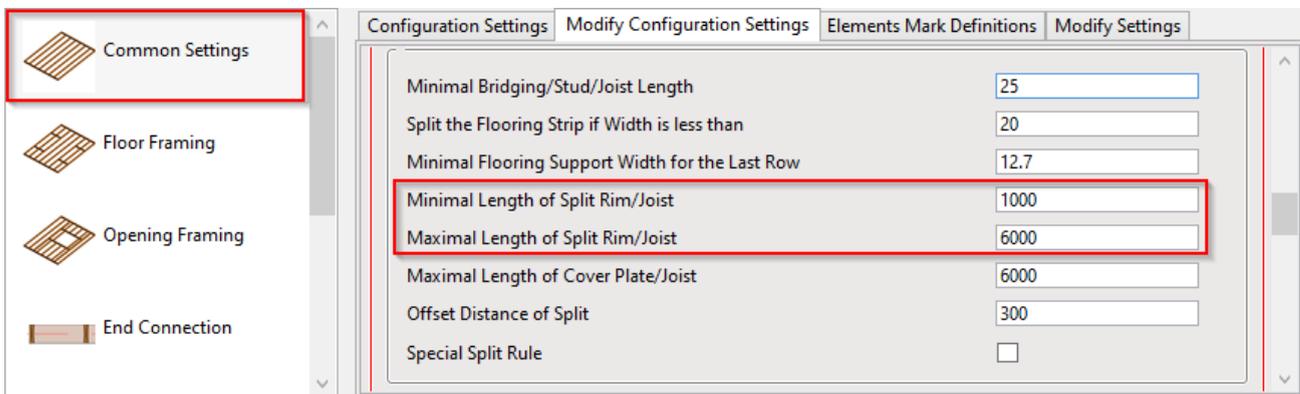


**Minimal/Maximal Length of Split Rim/Joist** – predefines min/max length for splitting rim joists.

Also, pay attention to **Offset Distance of Split** parameter in **Configs** → **Framing Configuration** → **Common Settings** → **Modify Configuration Settings** tab:

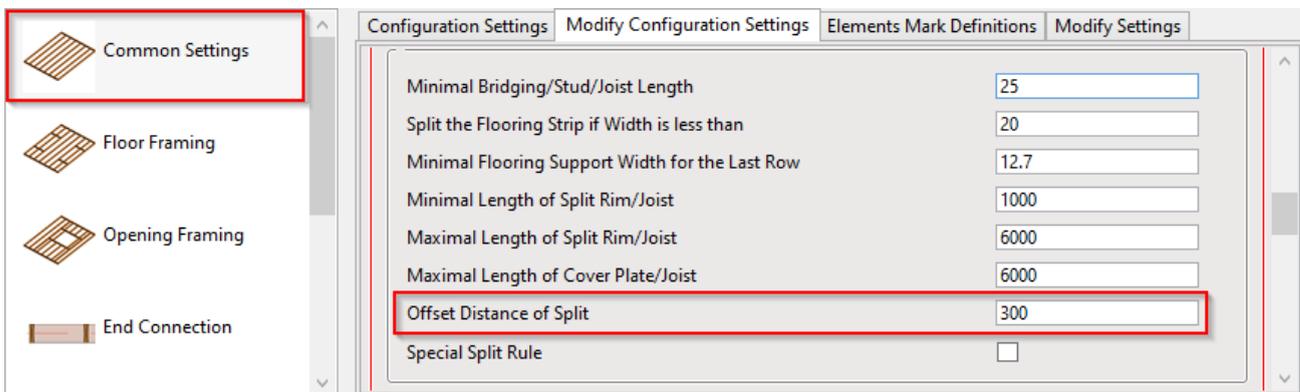


**Offset Distance of Split** – defines splitting distance for selected rim joist from selected joist.

*Example: Offset Distance of Split = 300mm:*

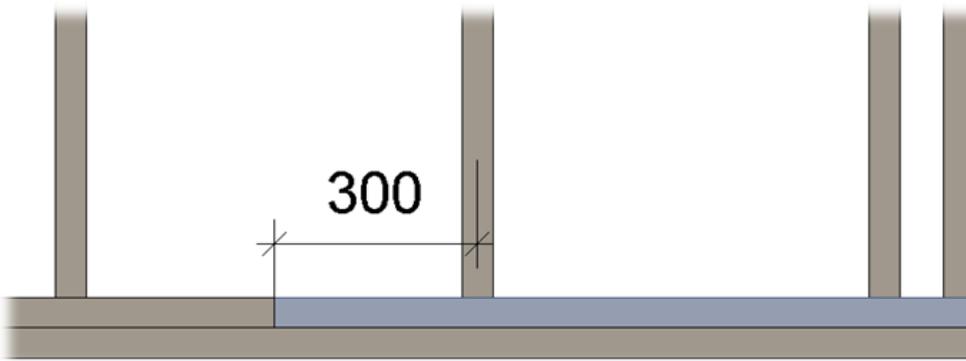


## Split Rim Joists Automatically for All Frames

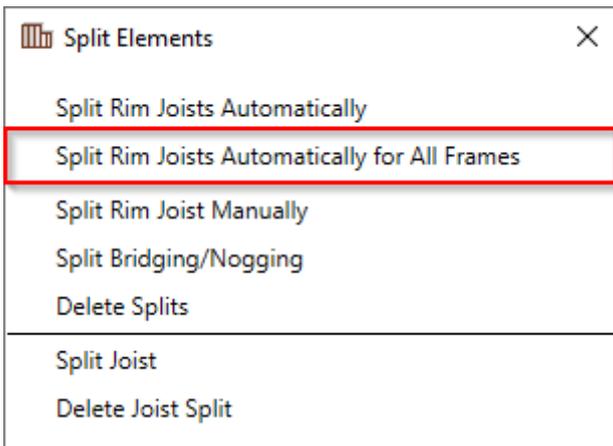

**Split Rim Joists Automatically for All Frames** – splits rim joists for all floors in the current project according to predefined settings in **Framing Configuration**.


## Split Rim Joist Manually

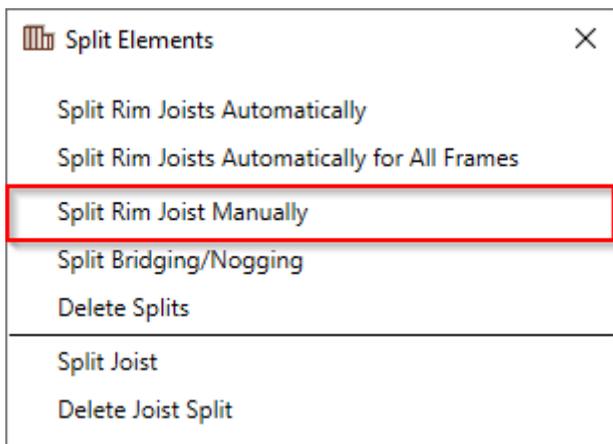


**Split Rim Joist Manually** – splits selected rim joist by selected joist.

1. *Select a joist which will split top/bottom plate;*


2. Select a top or bottom plate which will be split.

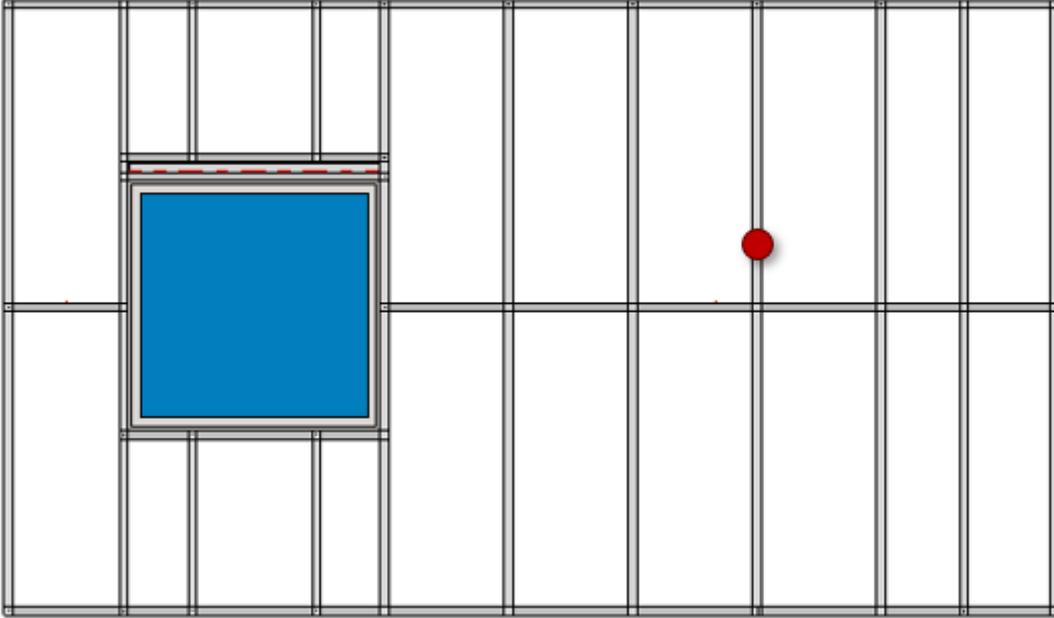

Result:

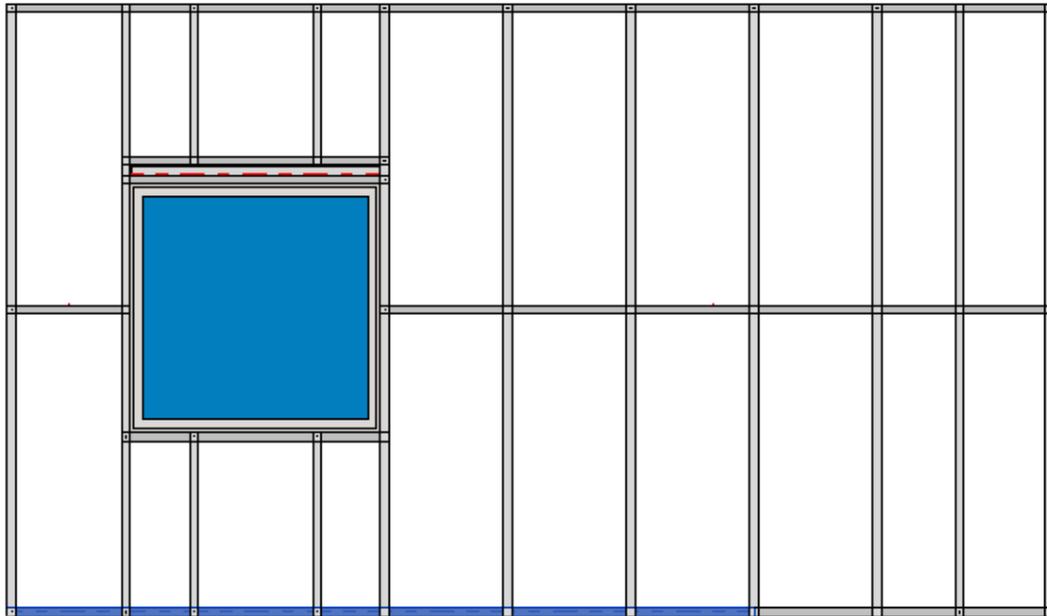


Also, pay attention to **Offset Distance of Split** parameter in **Configs** → **Framing Configuration** → **Common Settings** → **Modify Configuration Settings** tab:

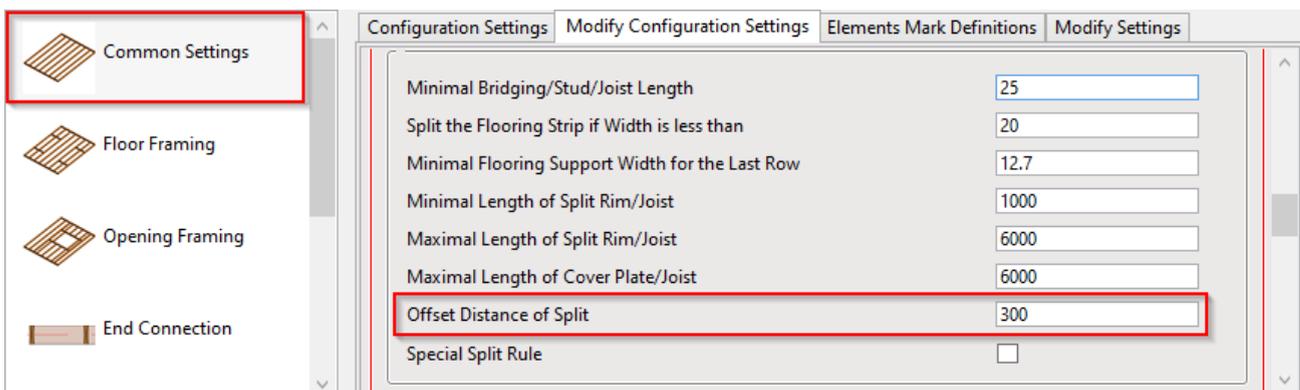


**Offset Distance of Split** – defines splitting distance for selected rim joist from selected joist.


Example: **Offset Distance of Split = 300mm:**

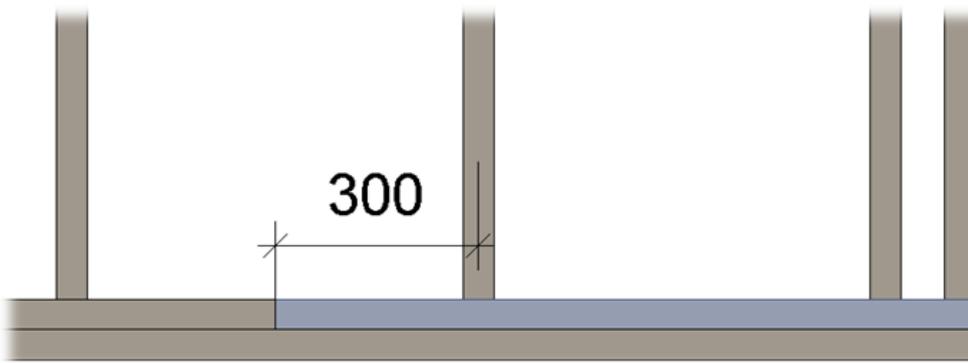


### Split Bridging/Nogging

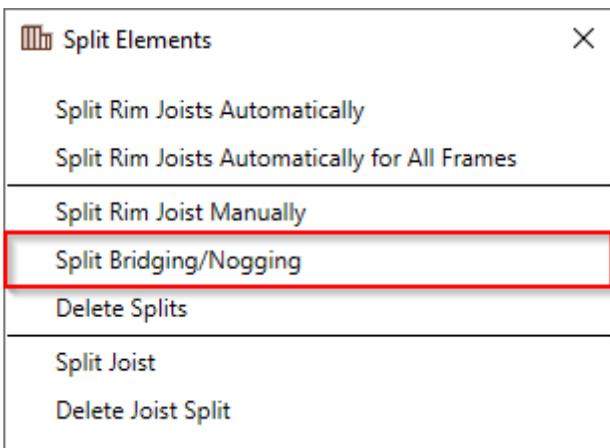

**Split Bridging/Nogging** – splits selected bridging/nogging by selected joist.

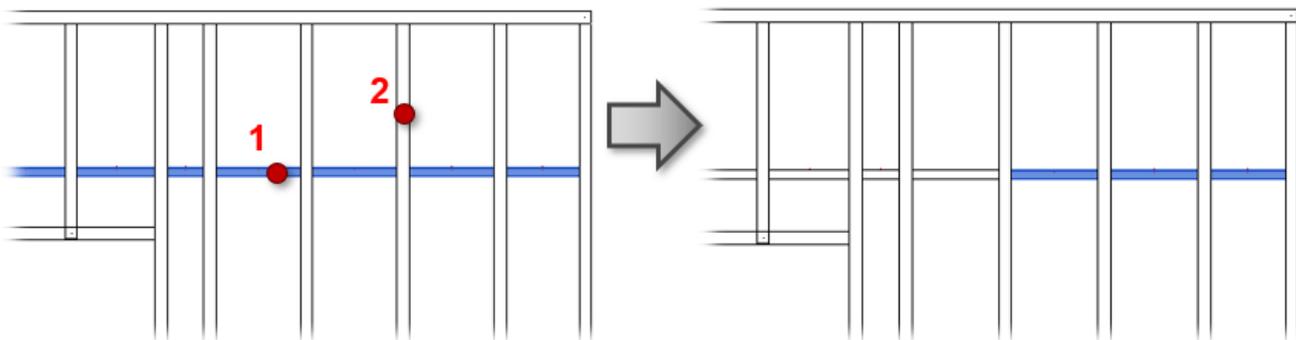


### Delete Splits

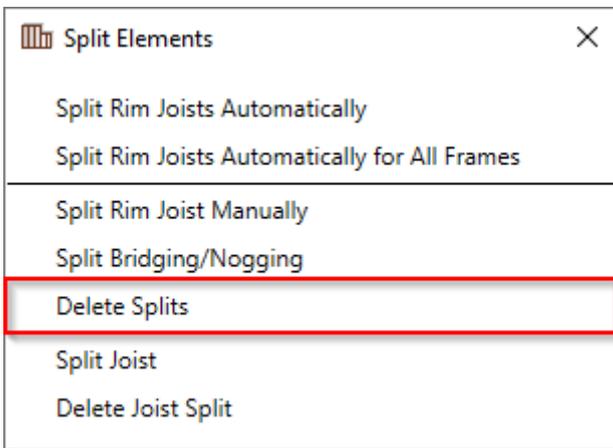


**Delete Splits** – resets selected floor rim joists to original length before splitting.

*Example: rim joists were split...*

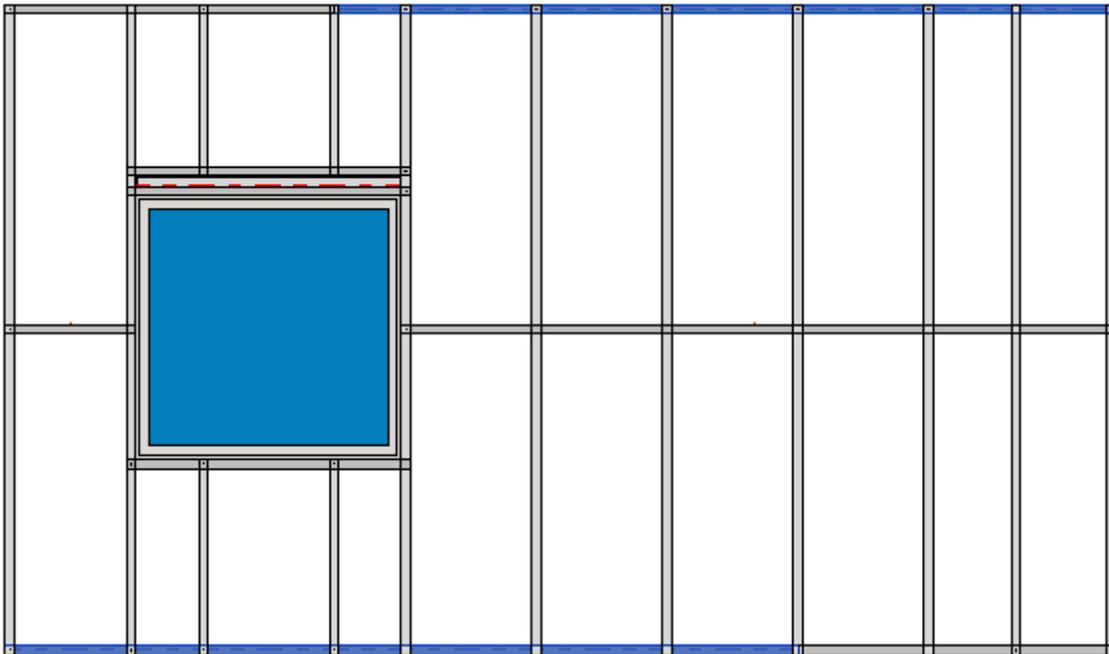

*...after using **Delete Splits**, the rim joists are whole again:*

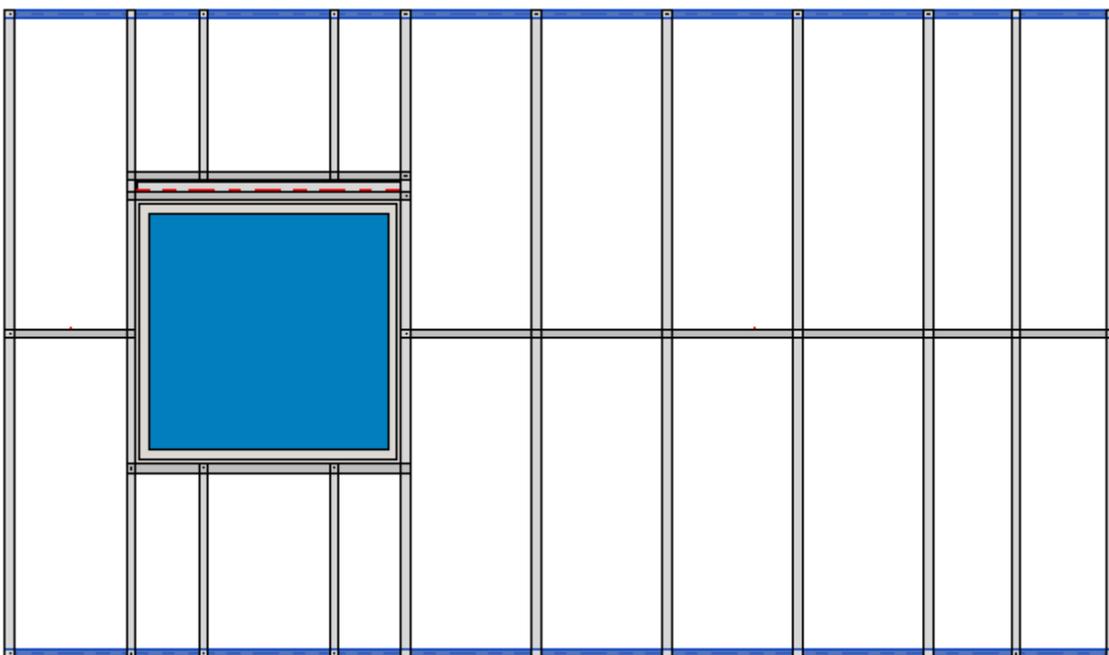


## Split Joist




**Split Joist** – splits selected joists by predefined settings.


*You can select one joist or multiple.*

*For joist splitting you will see a dialog with settings where you can predefine the offset, spacing, number of splits, minimal length of last element, etc.*

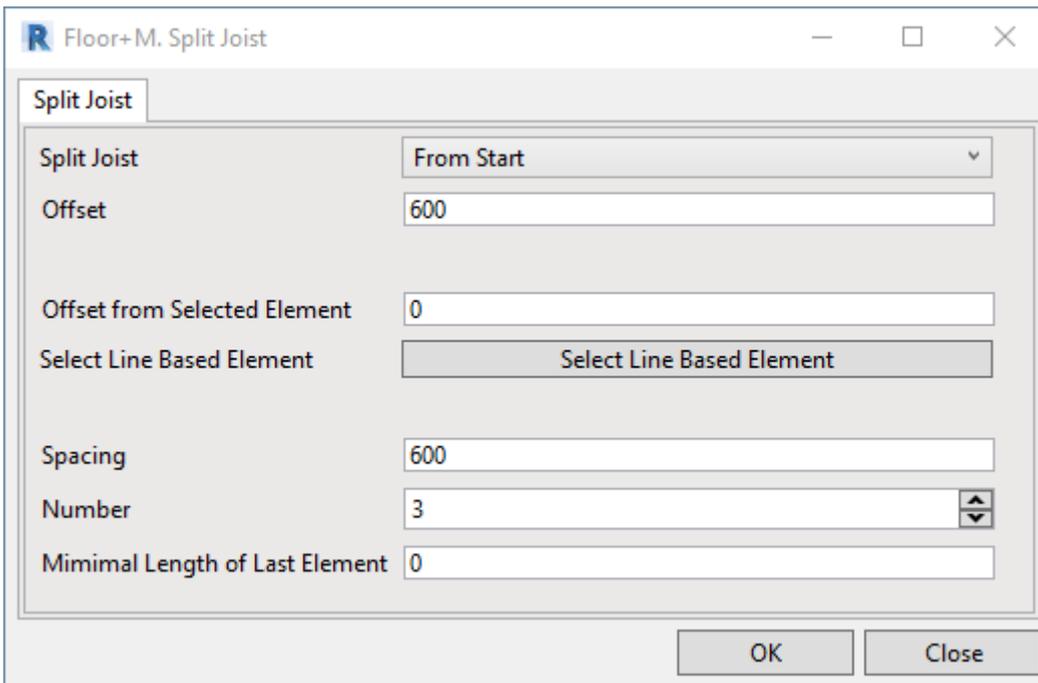

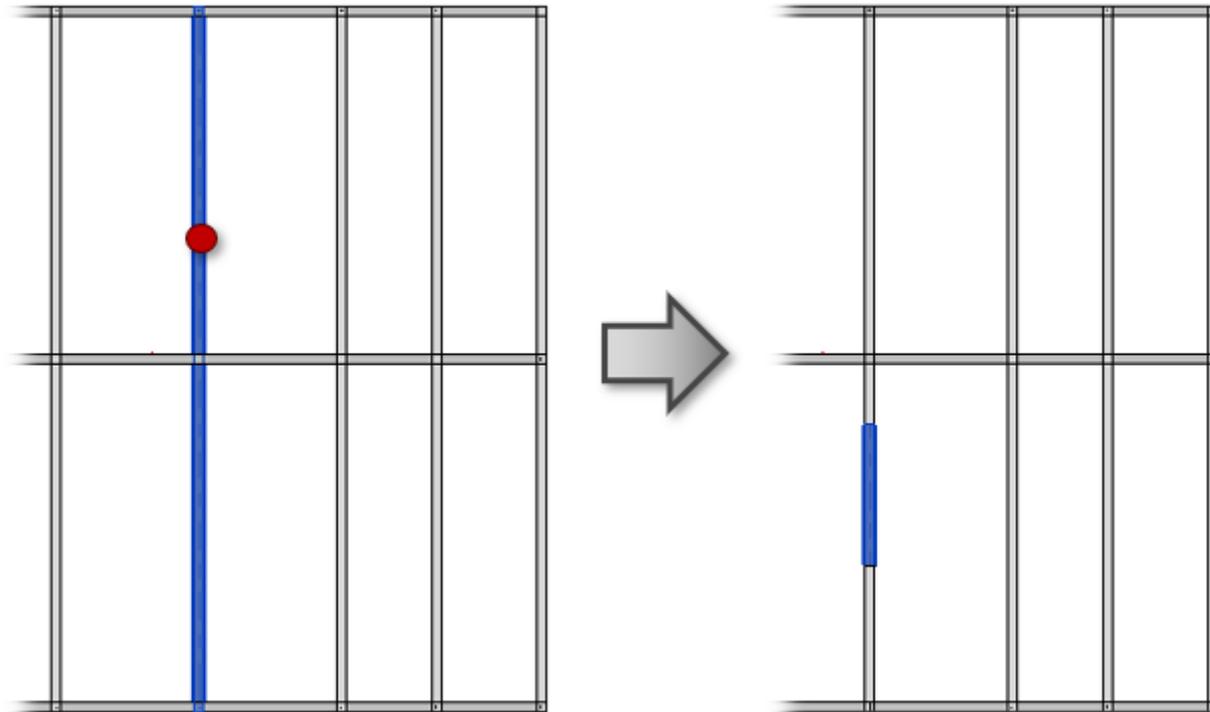

## Delete Joist Split

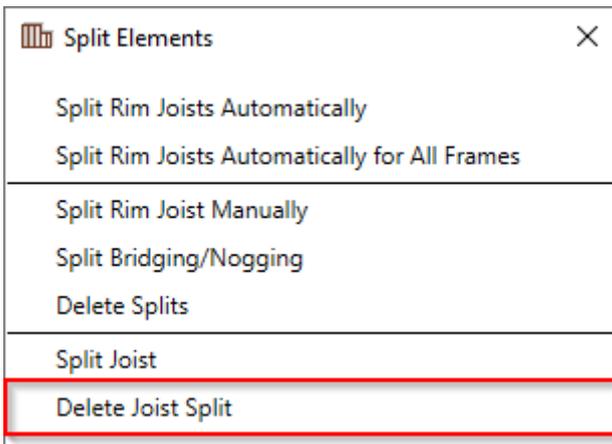

**Delete Joist Split** – resets selected joists to original length before splitting.

*Select the joist that was split, after clicking **Delete Joist Split**, the joists are restored to original length:*

