



NUMBERING – Numbering Configuration


Modified on: Thu, 12 Sep, 2019 at 8:53 PM

Numbering Configuration

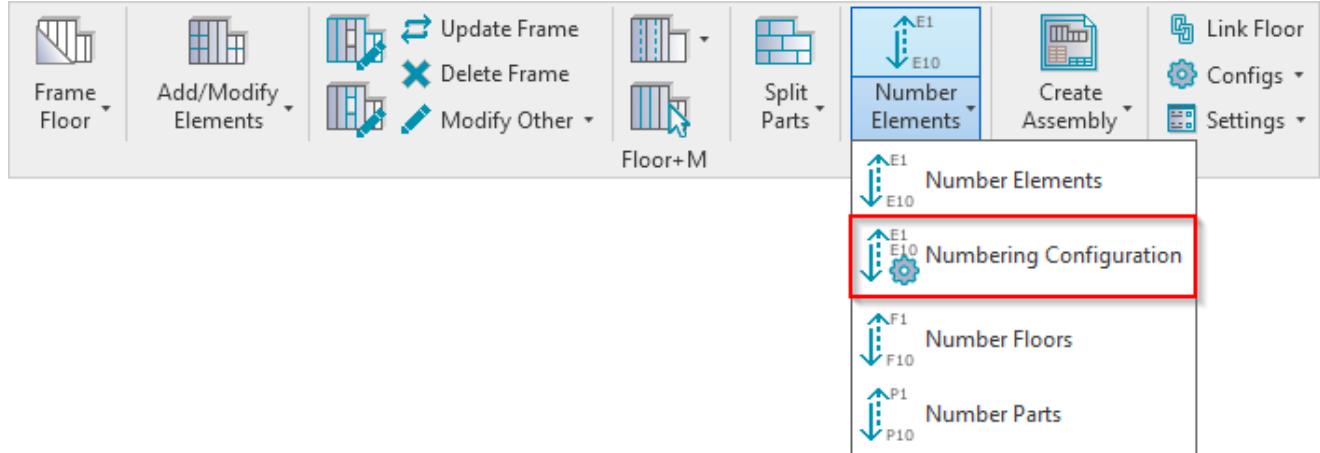


or:

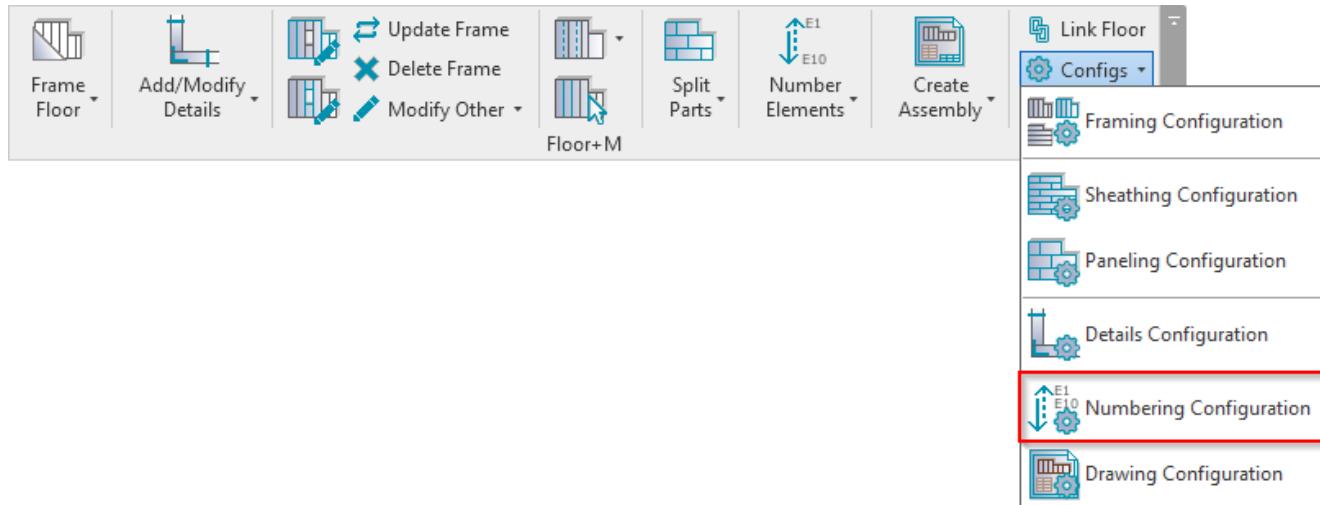

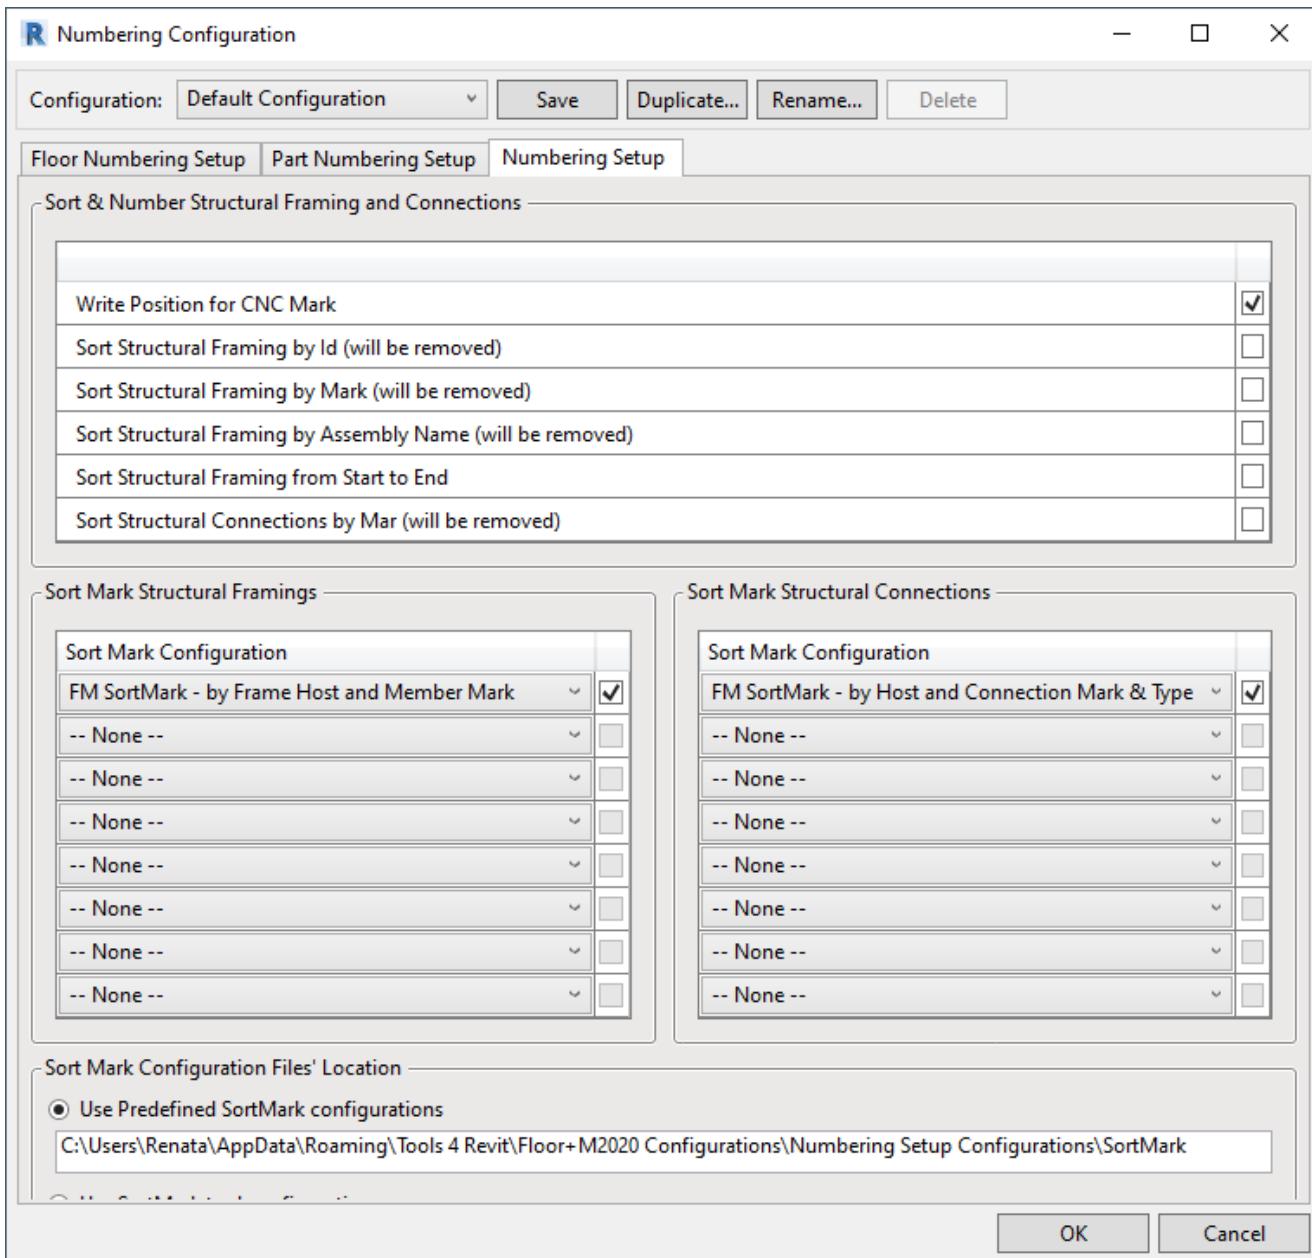


Numbering Configuration – allows you to configure and save automatic numbering settings for floors, sheathings/panelings (Parts), framing elements (under Structural Framing category), and details (Structural Connections) by using functionality from the framing software and [Sort Mark](http://www.agacad.com/products/tools4revit/sort-mark) (<http://www.agacad.com/products/tools4revit/sort-mark>) configurations.

[Sort Mark](http://www.agacad.com/products/tools4revit/sort-mark) (<http://www.agacad.com/products/tools4revit/sort-mark>) can renumber any Revit® elements in just the way you want.

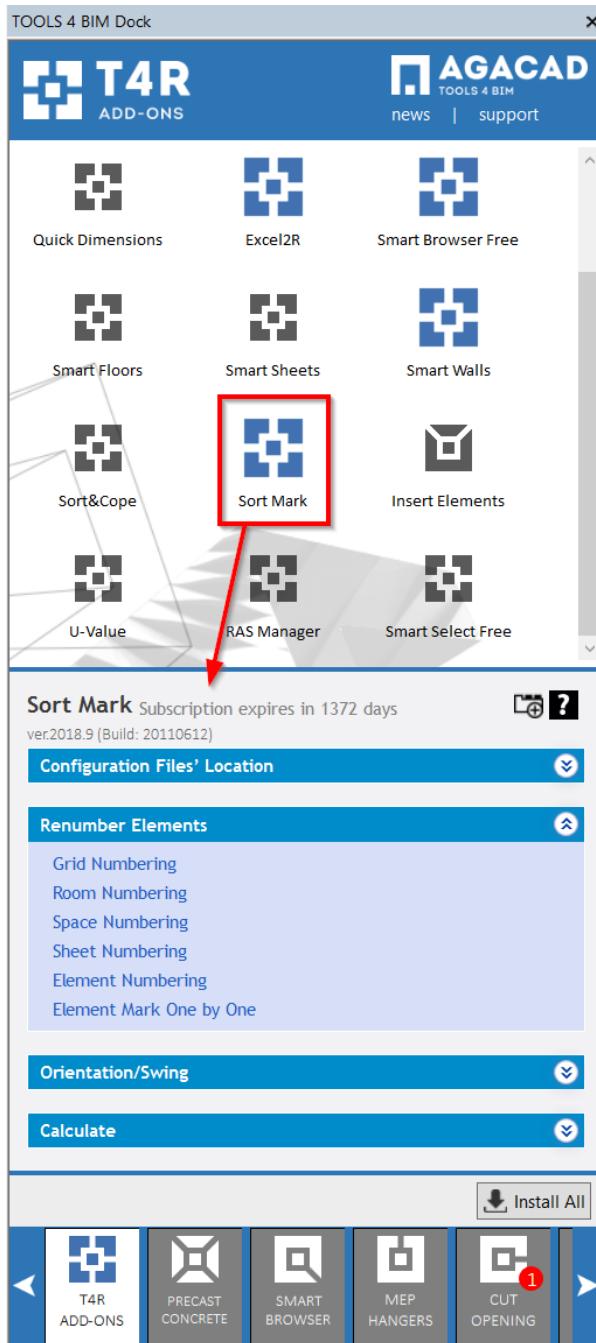

Sort Mark E-Help >> (<http://www.agacad.com/products/tools4revit/sort-mark/e-help>).

Configuration

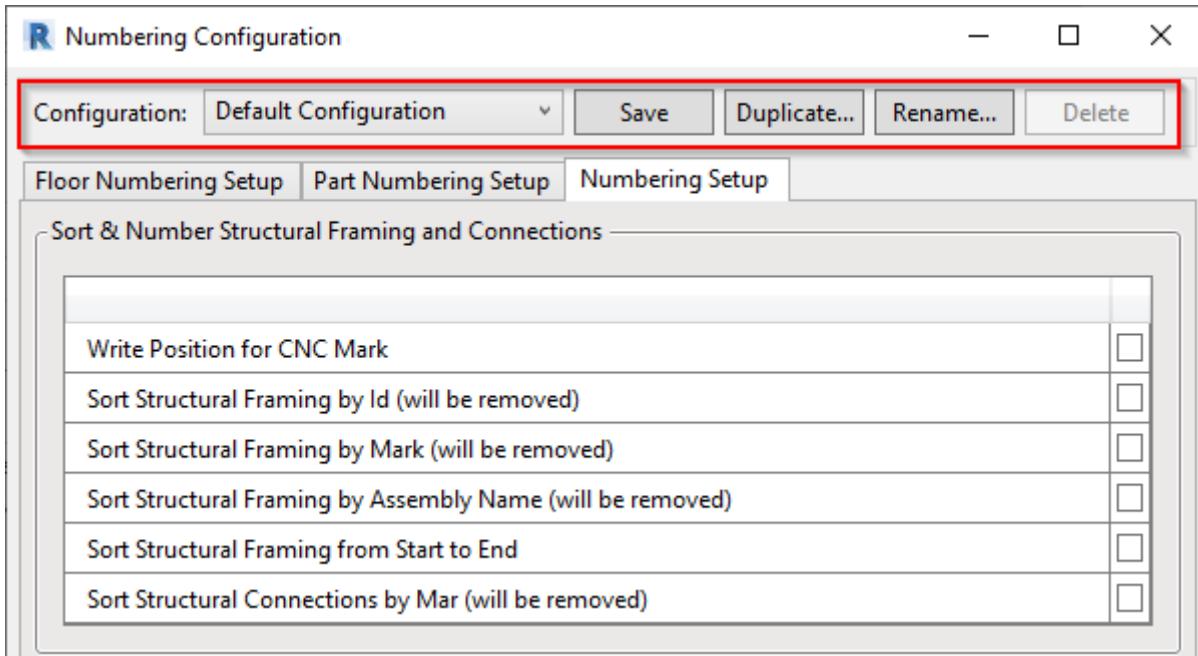


Configuration – configuration with all numbering settings. You can use the sample configurations or create new ones. Also, you can rename, duplicate, or delete existing configurations.

By default, **Floor+M** detail configurations are saved in [C:\Users\user name\AppData\Roaming\Tools 4 Revit\Floor+M2020 Configurations \(or other version\)\Numbering Setup Configurations catalog](C:\Users\user name\AppData\Roaming\Tools 4 Revit\Floor+M2020 Configurations (or other version)\Numbering Setup Configurations catalog). The content from this catalog can be copied to other users' computers if needed. Also, the path can be changed in **Floor+M → Settings → Configuration Files' Location**.

C:\Users\Renata\AppData\Roaming\Tools 4 Revit\Floor+ M2020 Configurations		
Name	Date modified	Type
CustomFramingJoints	2019-09-10 18:28	File folder
Details Configurations	2019-07-29 13:43	File folder
Framing Configurations	2019-09-11 20:41	File folder
Mark Configurations	2019-09-11 20:41	File folder
Numbering Setup Configurations	2019-09-08 20:32	File folder
Part Configurations	2019-07-25 17:01	File folder
Sheathing Configurations	2019-07-25 17:01	File folder
Shop Drawing Configurations	2019-07-25 18:25	File folder
Workshop Configurations	2019-09-12 20:16	File folder


Sort Mark Configuration Files' Location

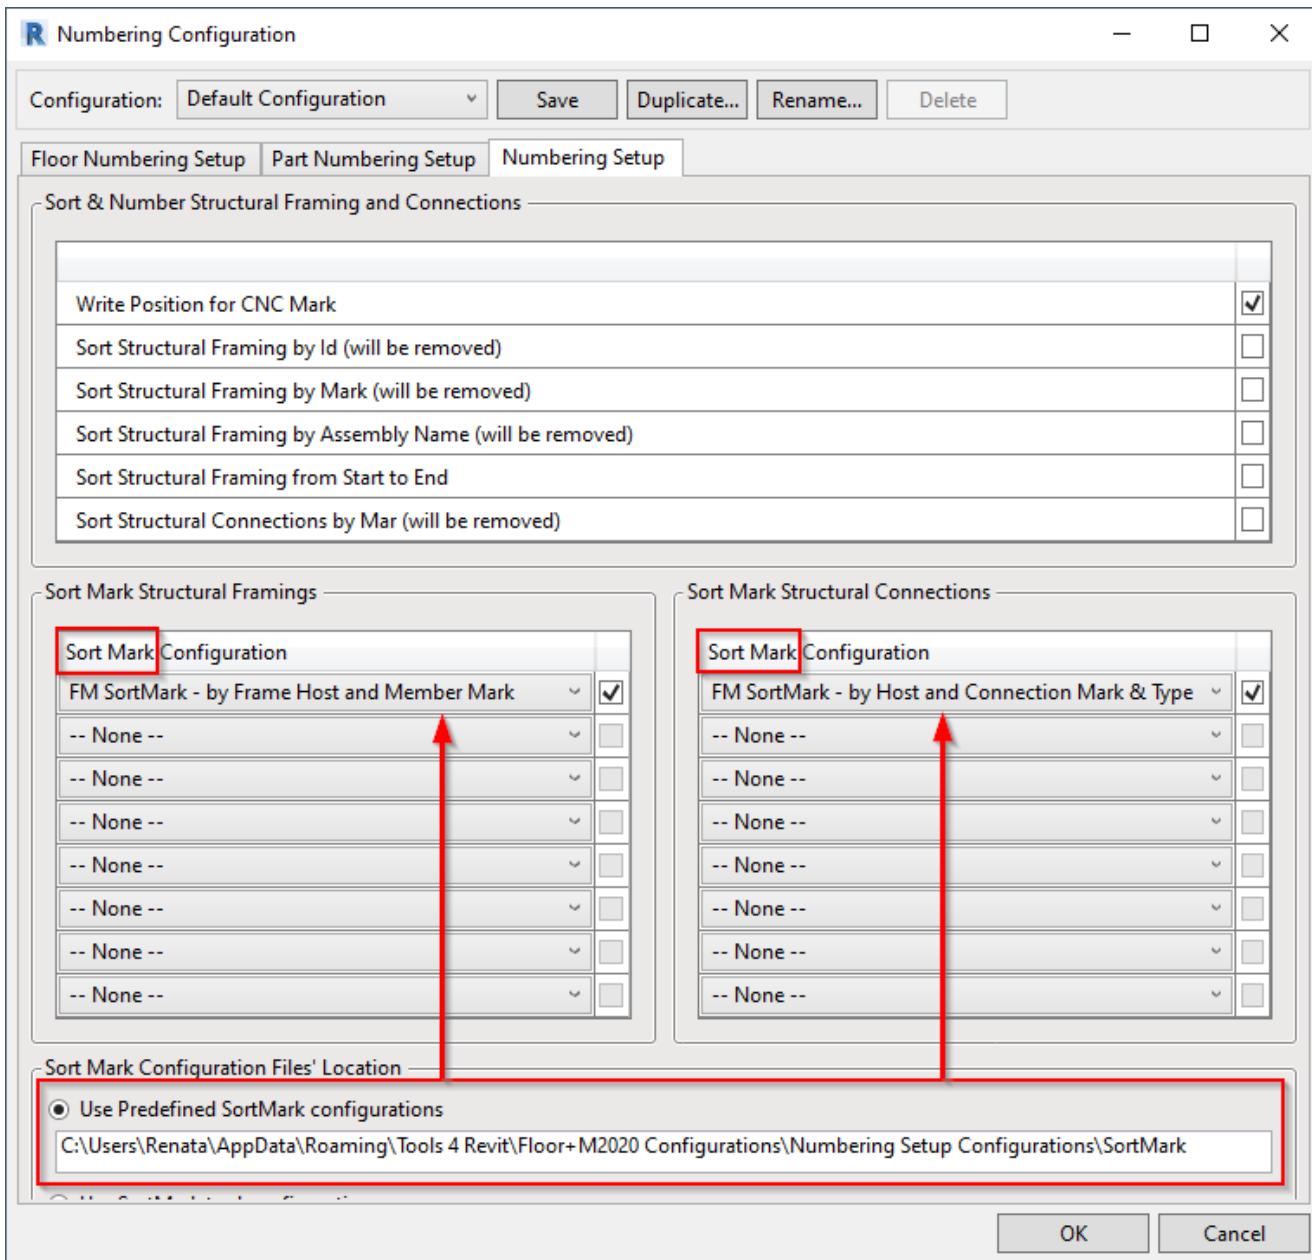

Sort Mark Configuration Files' Location – location of **Sort Mark** (<http://www.agacad.com/products/tools4revit/sort-mark>) configuration files.

Sort Mark Structural Framings – configuration for numbering all framing elements (under Structural Framing category). The list of configurations comes from **Sort Mark Configuration Files' Location**.


Sort Mark Structural Connections – configuration for numbering all details (under Structural Connections category). The list of configurations comes from **Sort Mark Configuration Files' Location**.

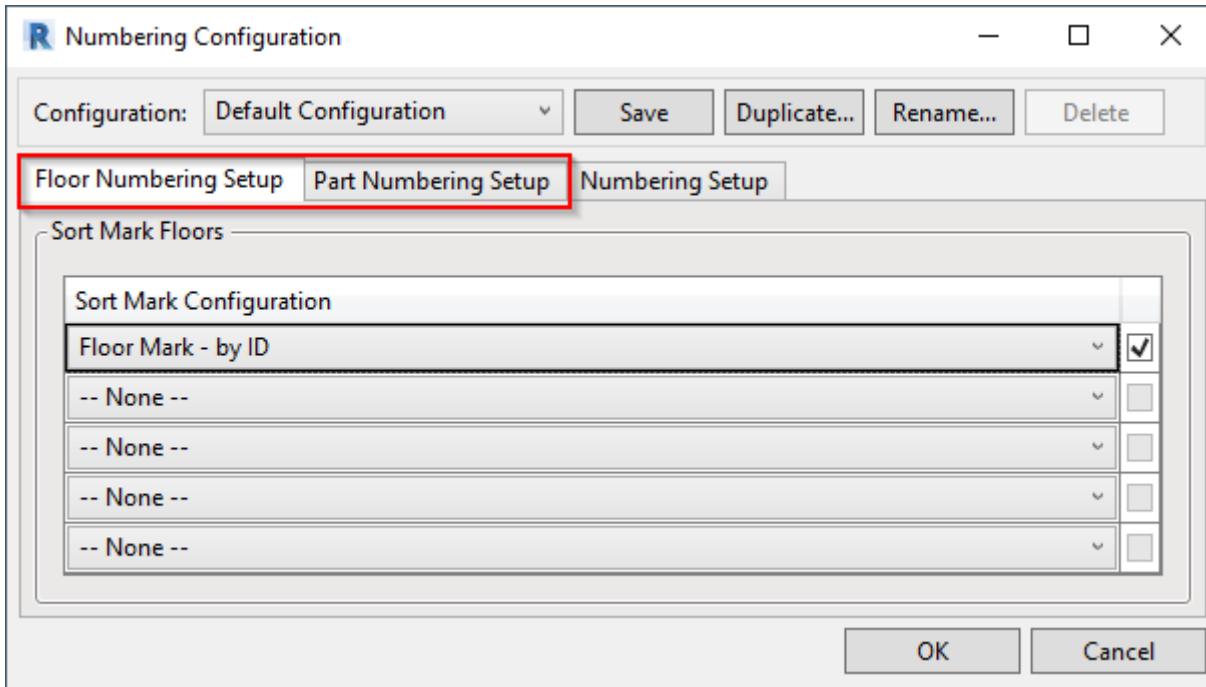

Floor Numbering Setup – configuration for numbering all floors. The list of configurations comes from **Sort Mark Configuration Files' Location**.


Part Numbering Setup – configuration for numbering all sheathing/paneling (under Part category). The list of configurations comes from **Sort Mark Configuration Files' Location**.

Sort & Number Structural Framing and Connections

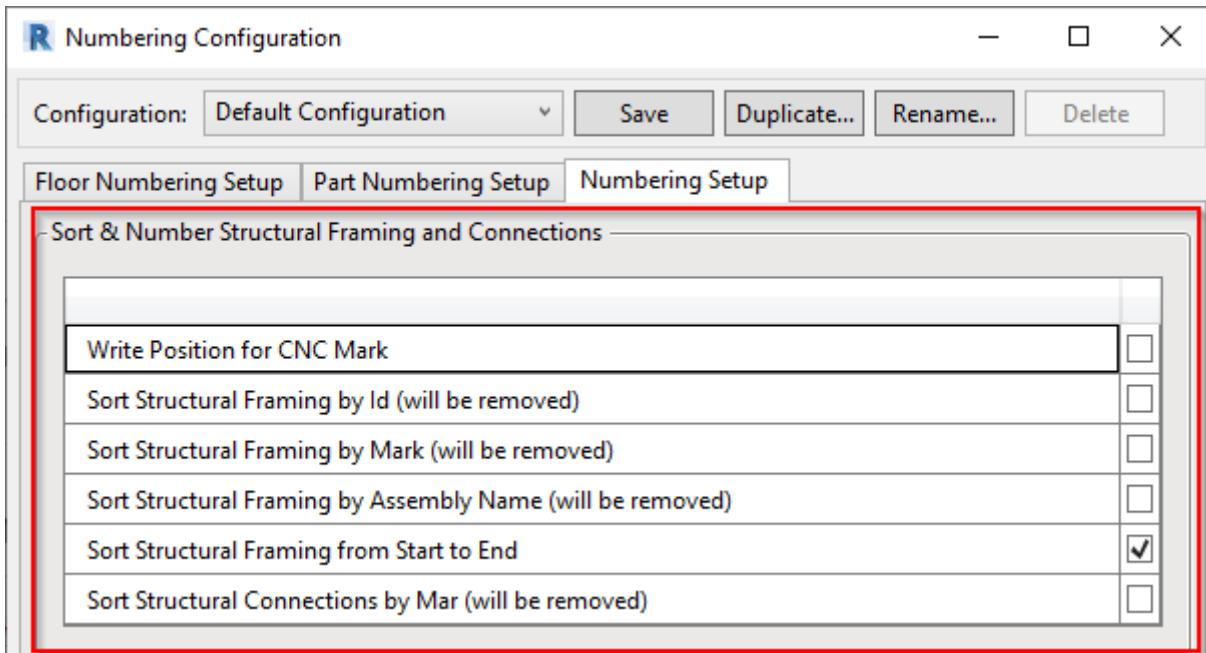

Sort & Number Structural Framing and Connections – different automatic numbering rules for framing elements (under Structural Framing category) and details (under Structural Connections category).

Make sure that the numbering rules are selected before saving configuration:

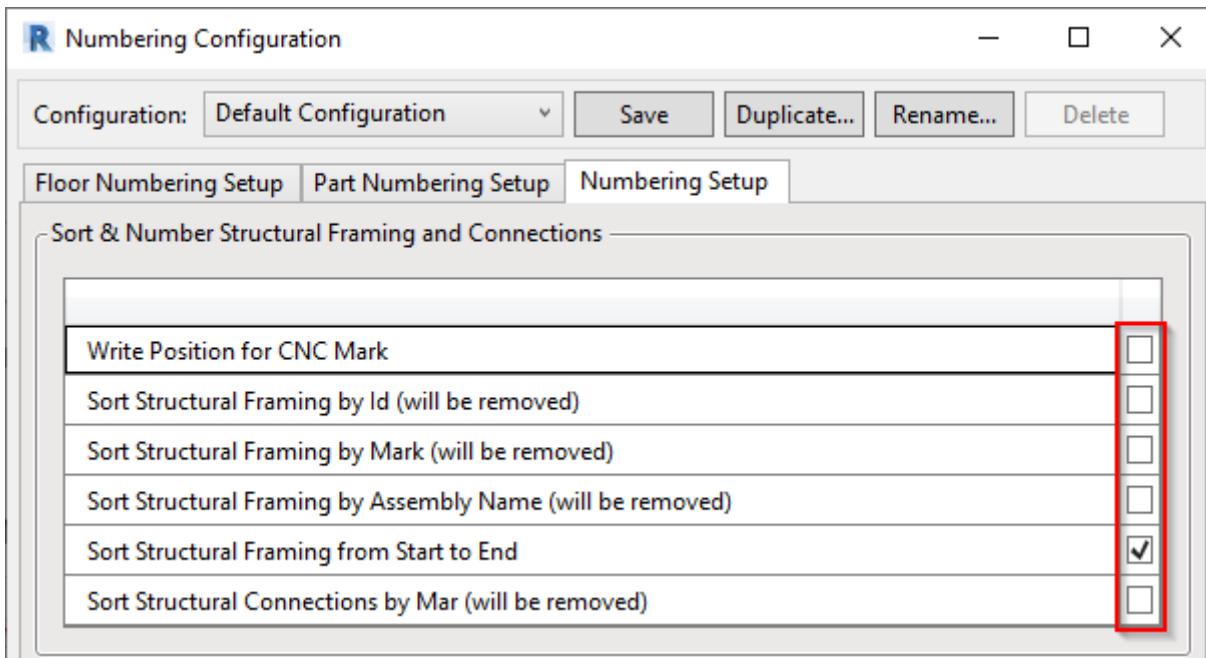

FM SortMark – parameter with the result. You can find it in **Element Properties** → **Identity Data**. It contains the **Framing Member Mark** value from **Framing Configuration** and a number that is sorted by selected value (ID, Mark, Assembly Name, from start to End).