
FRAMING CONFIGURATION – Common Settings – Modify Settings

Modified on: Sat, 9 Jan, 2021 at 8:24 PM

Framing Configuration may be found in two locations:

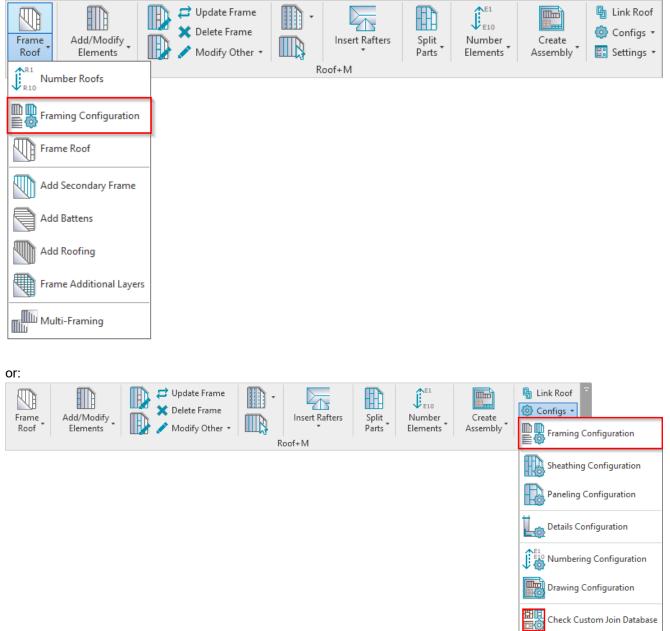

Modify Settings

Rafter Configuration

10

09/21, 08:44		FRAMING CONFIGURATION – Common Settings – Modify Settings : AGACAD					
🥂 Roof+M. Default Fr	raming Paramet	ers			_		×
Material Class:	Steel	Ŷ					
Configuration Type:	Frame M_Roof Metal Panel						
Configuration Name:			Save	Save As	Rename	Delete	
Common Settings		Configuration Settings		Modify C	Configuration S	ettings	
		Elements Mark Definitions	Modify S	ettings	Configuration Visibility		
Roof Common Joists		Common Settings for All Configura Automatically Load Standard Pr Allow to Create new Types for M Allow to Rename Families and T	ofile Types Ietal Profiles]		
End Connection		Frame Roof by Span Direction Frame Roof Perpendicular to Slo	ope Direction]		
Edge Joist		Align Frame with Bottom Face]		
					Save	Clo	se

Modify Settings – advanced settings that are <u>applied to all configuration names</u>, regardless of which configuration name is selected.

<u>Read more about every feature here >> (https://agacad.freshdesk.com/support/solutions/articles/44002139159-framing-configuration-%E2%80%93-modify-settings)</u>