



# NUMBERING – Numbering Configuration

Modified on: Sun, 17 Jan, 2021 at 6:47 PM

## Numbering Configuration

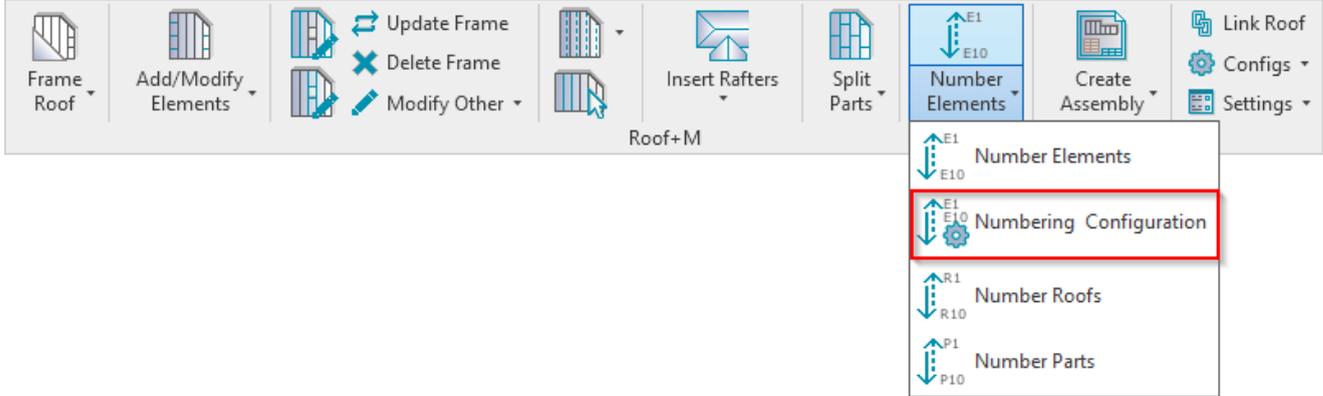


OR:

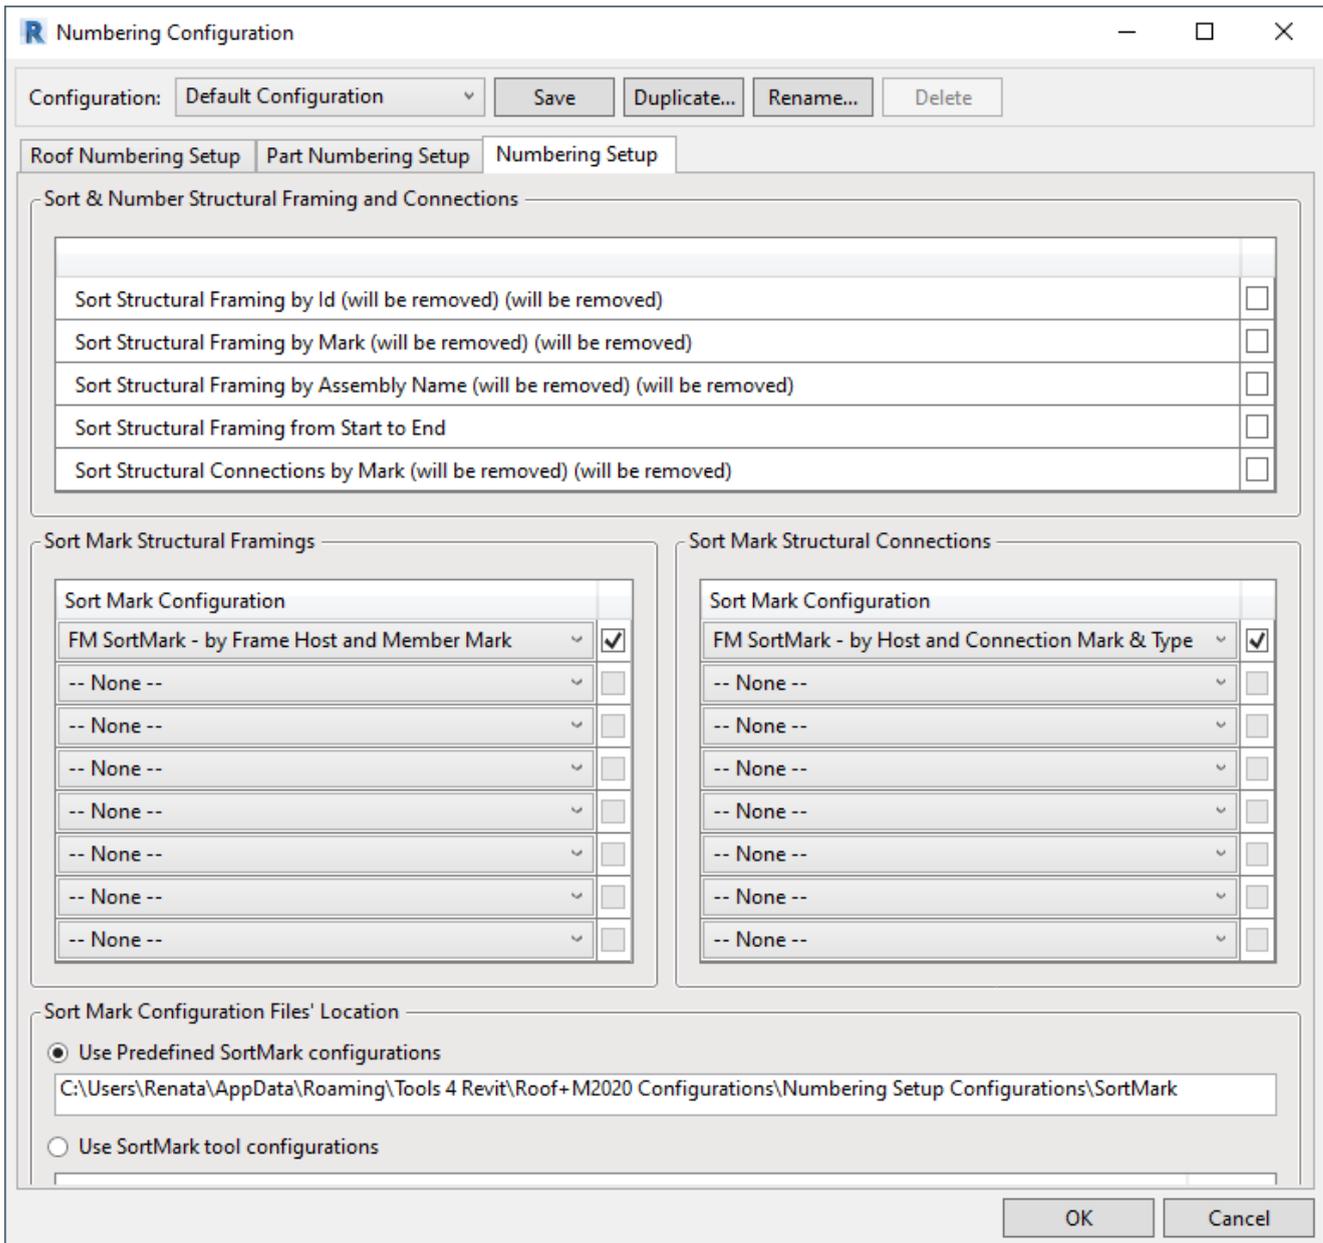


**Numbering Configuration** – allows you to configure and save automatic numbering settings for roofs, sheathings/panelings (Parts), framing elements (under Structural Framing category), and details (Structural Connections) by using functionality from the framing software and **Sort Mark** (<http://www.aga-cad.com/products/tools4revit/sort-mark>), configurations.

**Sort Mark** (<http://www.aga-cad.com/products/tools4revit/sort-mark>) can renumber any Revit® elements in just the way you want.

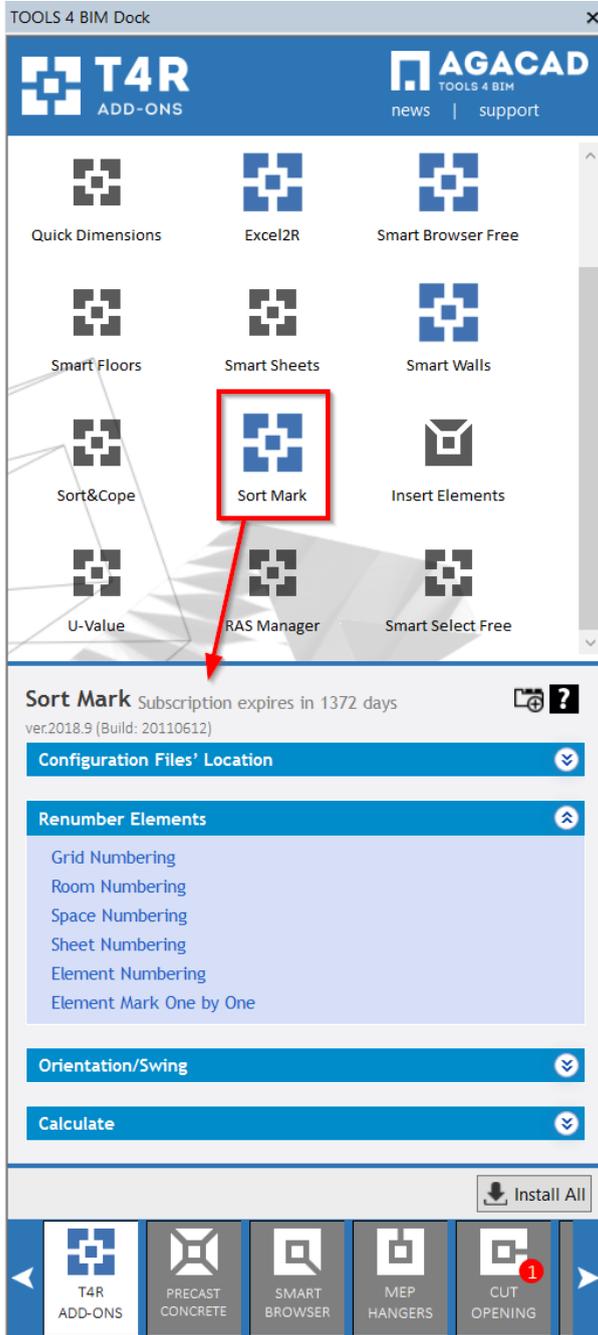

**Sort Mark E-Help >>** (<http://www.aga-cad.com/products/tools4revit/sort-mark/e-help>).

## Configuration

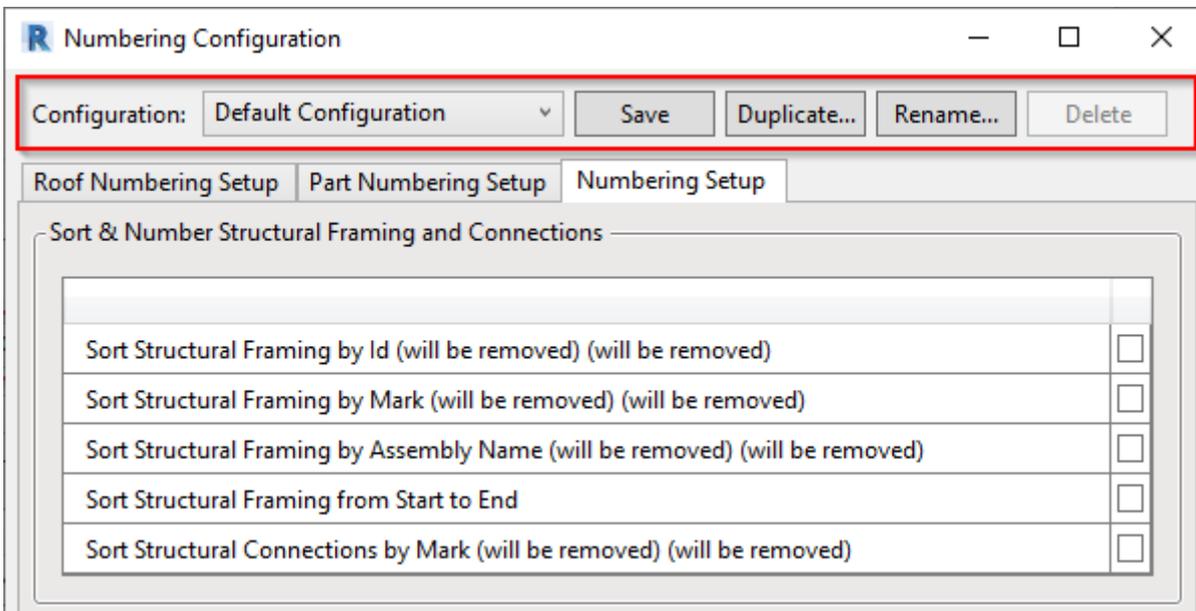


**Configuration** – configuration with all numbering settings. You can use the sample configurations or create new ones. Also, you can rename, duplicate, or delete existing configurations.

By default, **Roof+M** detail configurations are saved in *C:\Users\user name\AppData\Roaming\Tools 4 Revit\Roof+M2020 Configurations (or other version)\Numbering Setup Configurations* catalog. The content from this catalog can be copied to other users' computers if needed. Also, the path can be changed in **Roof+M** → **Settings** → **Configuration Files' Location**.

C:\Users\Renata\AppData\Roaming\Tools 4 Revit\Roof+M2020 Configurations\

| Name                                  | Date modified    | Type        |
|---------------------------------------|------------------|-------------|
| CustomFramingJoins                    | 2019-09-16 20:24 | File folder |
| Details Configurations                | 2019-09-14 17:23 | File folder |
| Framing Configurations                | 2019-07-31 20:14 | File folder |
| HipValley Configurations              | 2019-07-31 20:14 | File folder |
| Mark Configurations                   | 2019-09-14 17:30 | File folder |
| <b>Numbering Setup Configurations</b> | 2019-09-12 20:29 | File folder |
| Part Configurations                   | 2019-07-31 20:14 | File folder |
| Sheathing Configurations              | 2019-07-31 20:14 | File folder |
| Shop Drawing Configurations           | 2019-09-16 18:41 | File folder |
| Workshop Configurations               | 2019-09-19 20:03 | File folder |


## Sort Mark Configuration Files' Location

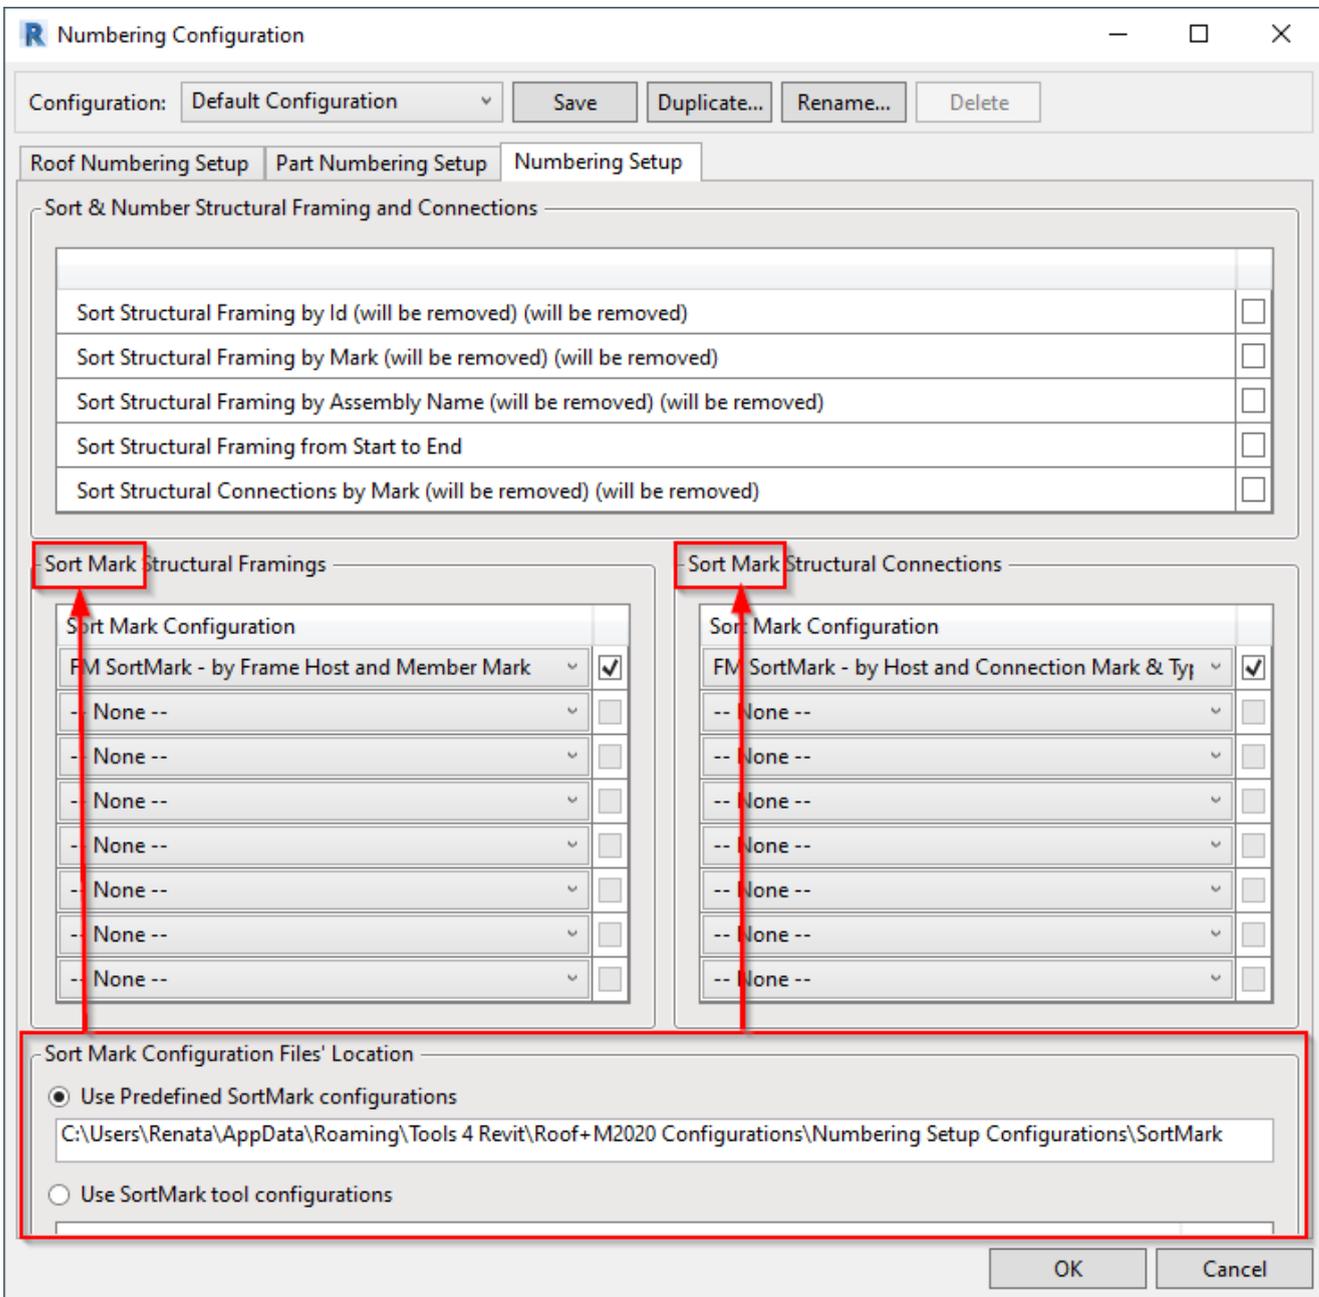

**Sort Mark Configuration Files' Location** – location of **Sort Mark** (<http://www.aga-cad.com/products/tools4revit/sort-mark>), configuration files.

**Sort Mark Structural Framings** – configuration for numbering all framing elements (under Structural Framing category). The list of configurations comes from **Sort Mark Configuration Files' Location**.


**Sort Mark Structural Connections** – configuration for numbering all details (under Structural Connections category). The list of configurations comes from **Sort Mark Configuration Files' Location**.

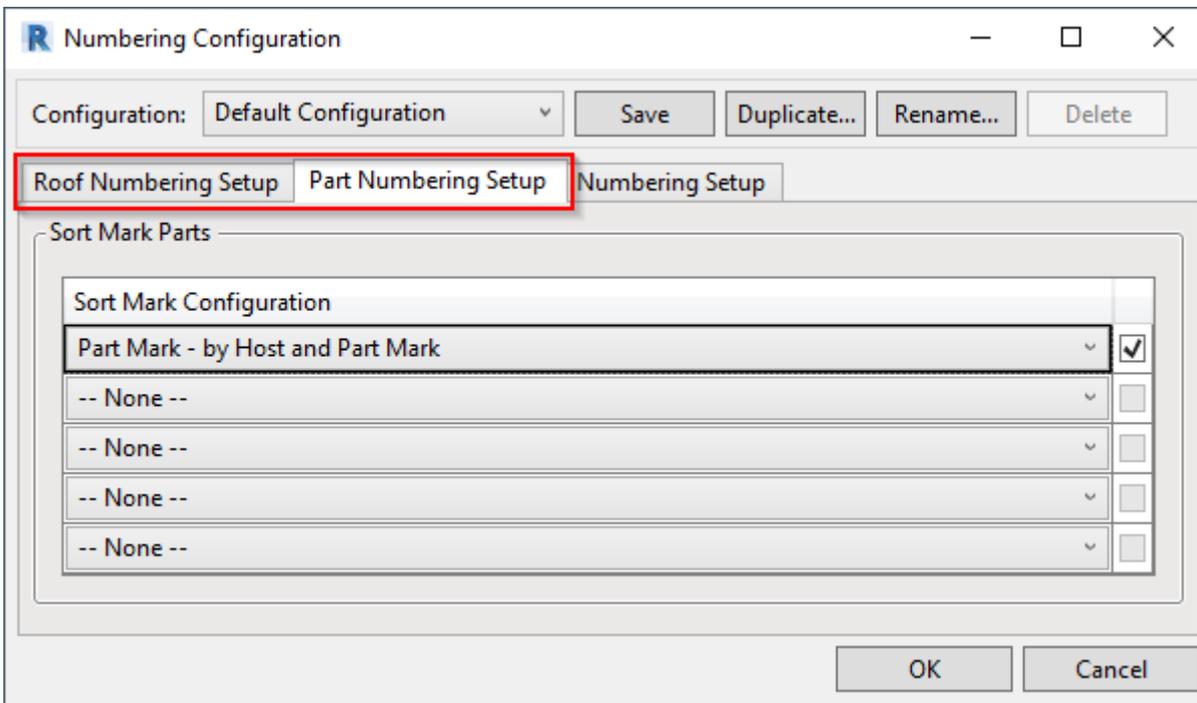

**Roof Numbering Setup** – configuration for numbering all roofs. The list of configurations comes from **Sort Mark Configuration Files' Location**.


**Part Numbering Setup** – configuration for numbering all sheathing/paneling (under Part category). The list of configurations comes from **Sort Mark Configuration Files' Location**.

## Sort & Number Structural Framing and Connections

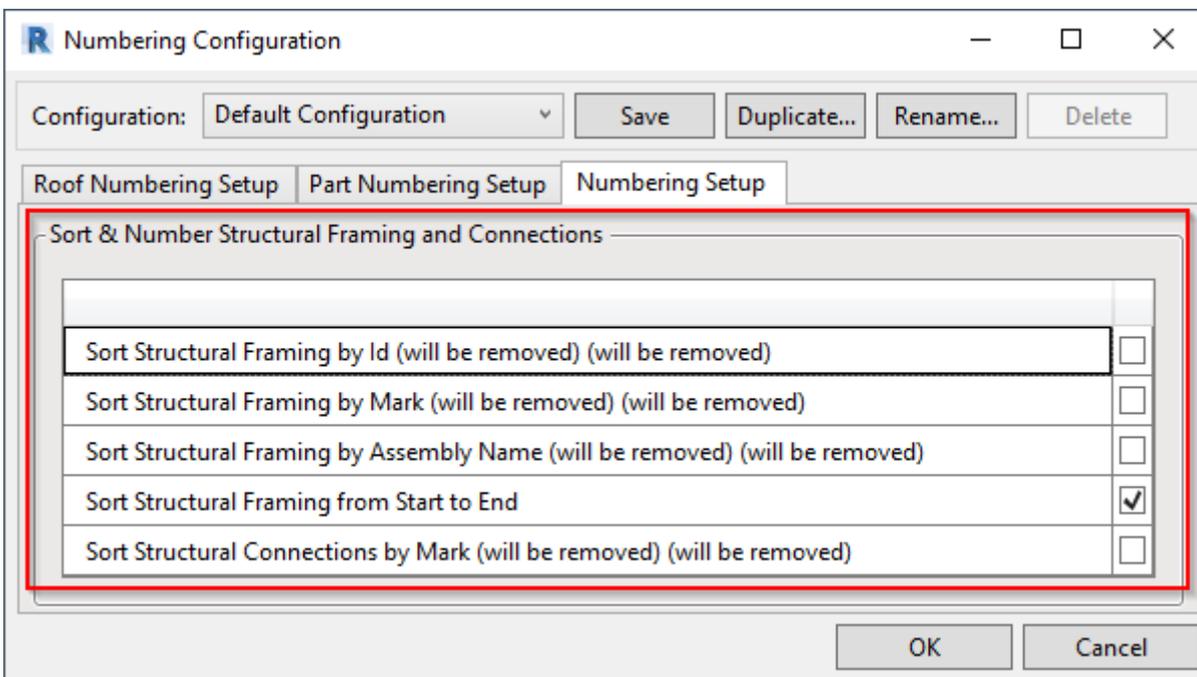

**Sort & Number Structural Framing and Connections** – different automatic numbering rules for framing elements (under Structural Framing category) and details (under Structural Connections category).

*Make sure that the numbering rules are selected before saving configuration:*

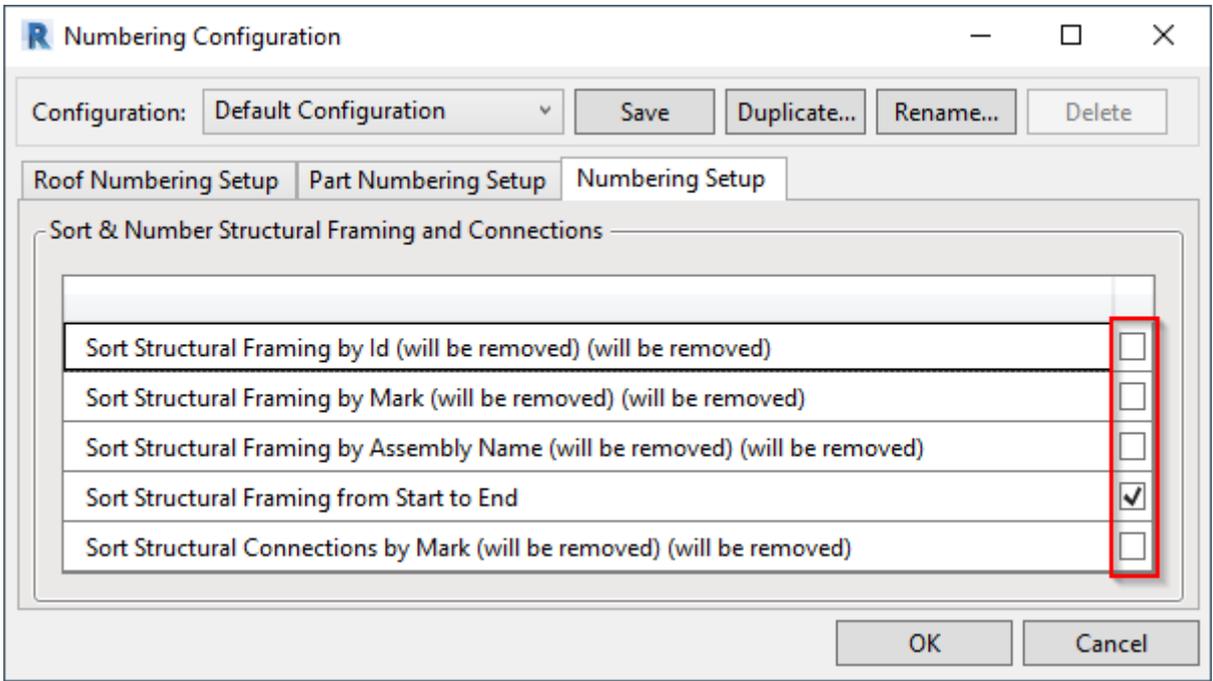

**FM SortMark** – parameter with the result. You can find it in **Element Properties** → **Identity Data**. It contains the **Framing Member Mark** value from **Framing Configuration** and a number that is sorted by selected value (ID, Mark, Assembly Name, from start to End).

