

Template Project Location

Modified on: Mon, 22 Jun, 2020 at 11:15 AM

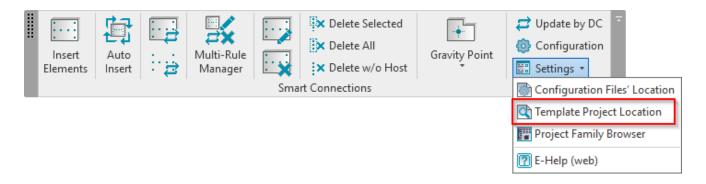


Template Project is used to automatically load families needed for your configurations from Template Project to your new project.

1. Define location of your Template Project.

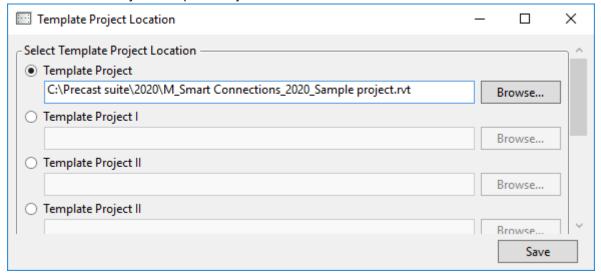

2. In new project, open Configuration. It will start loading all necessary Families for active configuration from Template project.

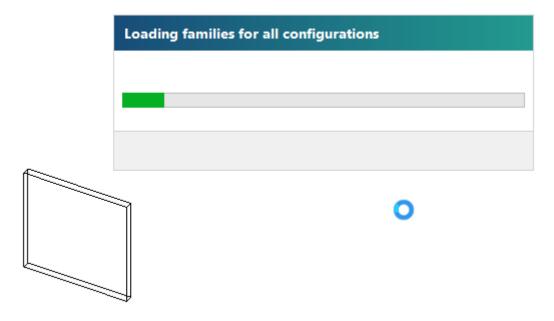

3. Configuration will be opened with all necessary Families, and you can start using it.

