



Manage Assemblies

Modified on: Fri, 12 Jun, 2020 at 10:47 AM


Manage Assemblies floating windows allow you to quickly find and isolate Primary and Secondary Assemblies.

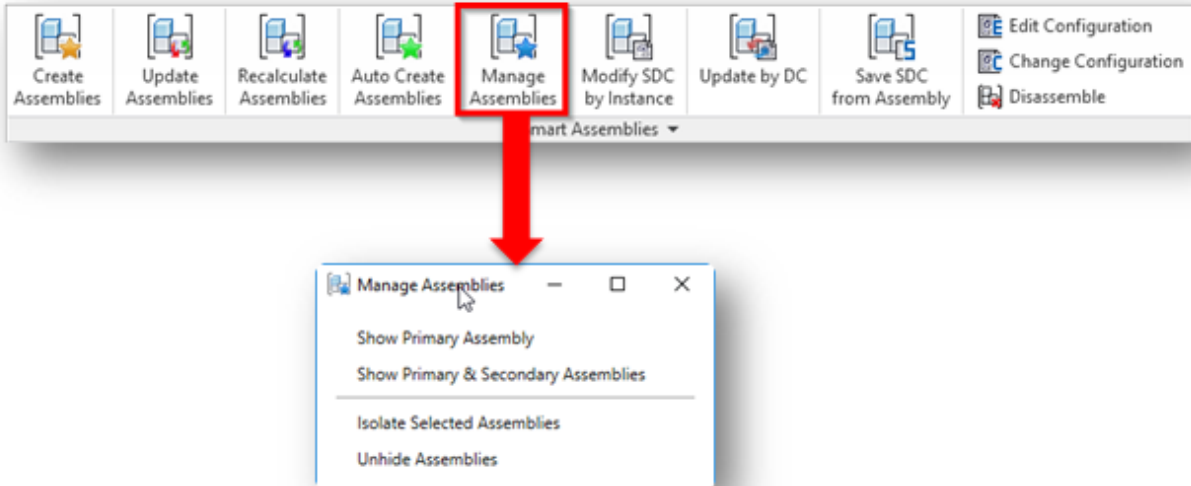


Difference of Primary and Secondary Assemblies: Primary Assembly has drawings, Secondary doesn't.

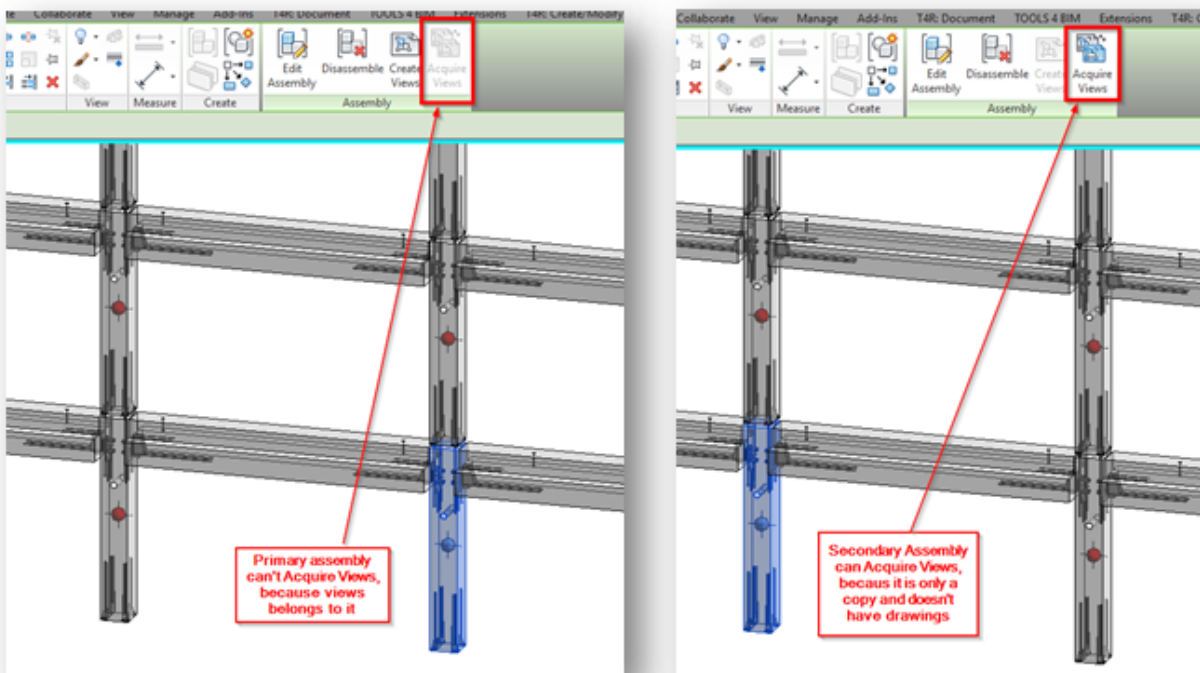


Select any assembly and execute **Show Primary Assembly** command. Primary Assembly will be found and its View will be zoomed in.

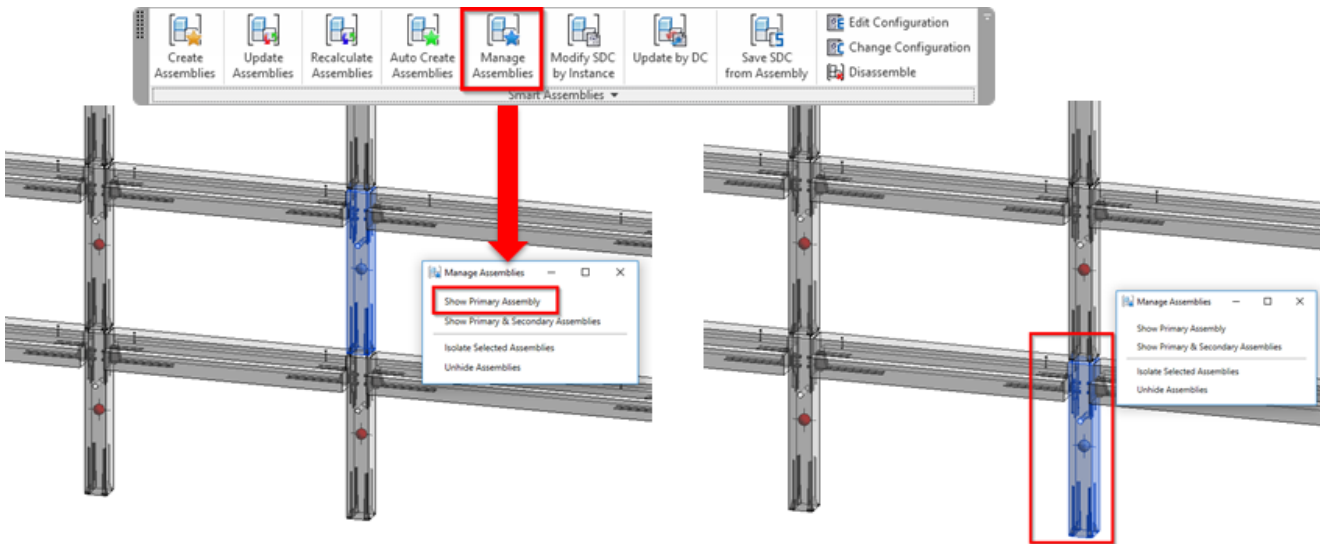

Select any assembly and execute **Show Primary & Secondary Assemblies** command. All assemblies of the same type will be selected and zoomed in the view.

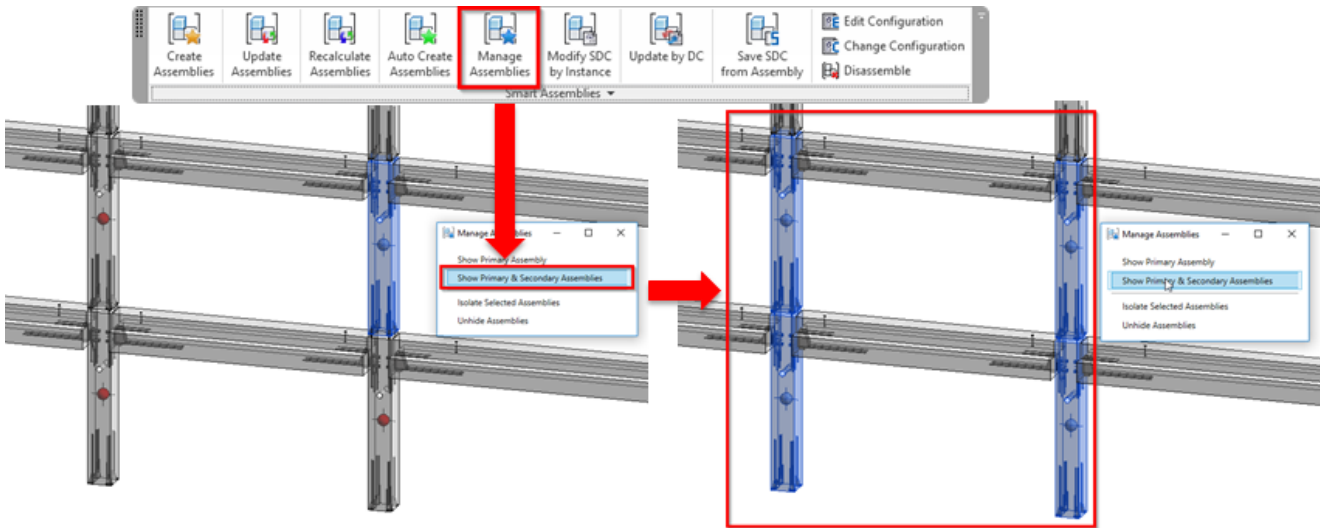

Select any Assembly and execute **Isolate Selected Assemblies** command. Everything except selected Assemblies will be hidden.

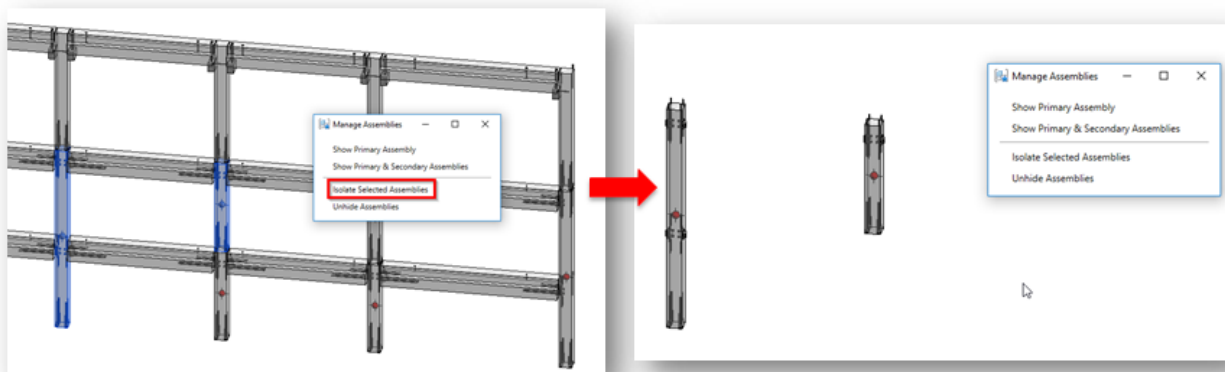

Unhide Assemblies will reveal all hidden elements in the view.

