


## Dimensioning Rules - Hosted Concrete Details

Modified on: Fri, 30 Apr, 2021 at 2:40 PM

**To dimension Structural Connections and other elements, consider using Smart Dimensions instead of these settings. [Read more about Smart Dimensions here.](#)**

<https://helpdesk.agacad.com/support/solutions/folders/44001221562>.

These dimensioning rules will work on point-based families if Family parameter Material for Model Behavior is set to Concrete or Precast Concrete.

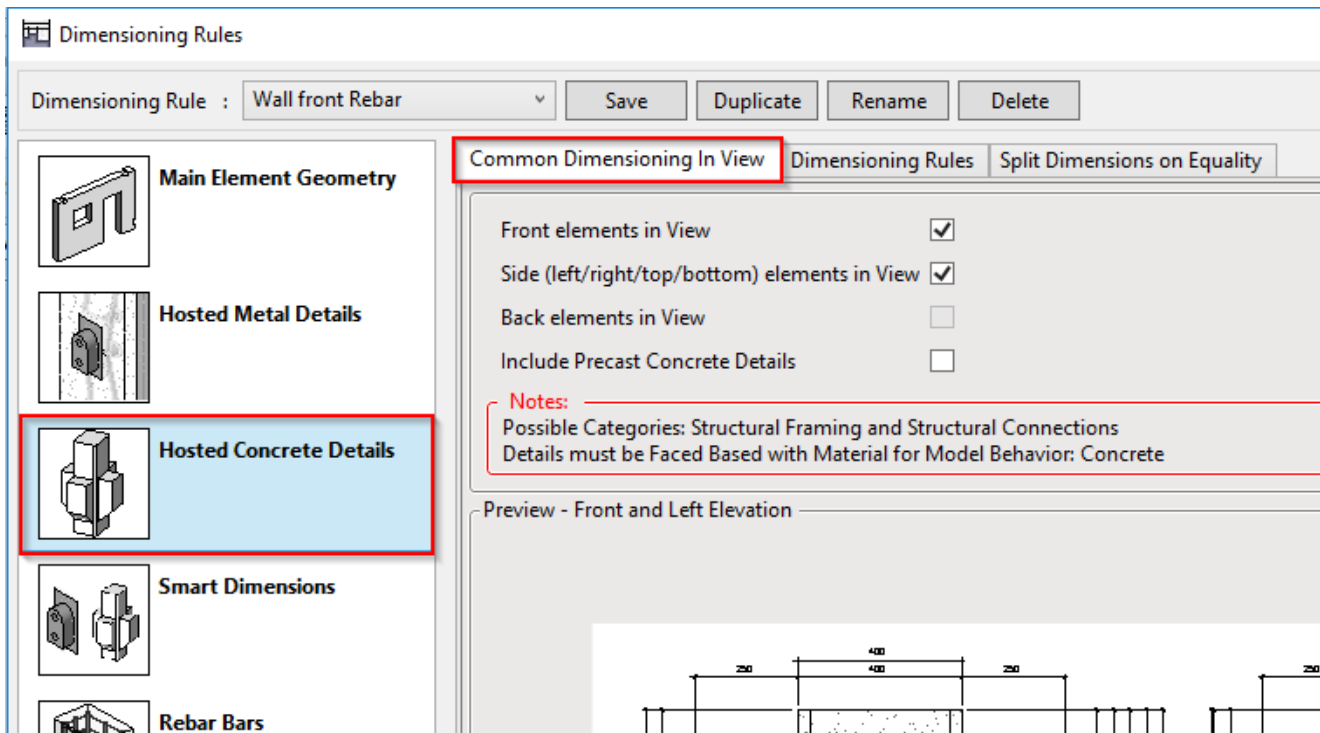


### Common Dimensioning in View

Ticked checkboxes indicate which elements should be dimensioned in View - Front, Side, or Back.

*Include Precast Concrete Details* - tick ON to accept Families whose Material for Model Behavior is set to Precast Concrete.

### Dimensioning Rules

Select how to dimension Hosted Concrete Details

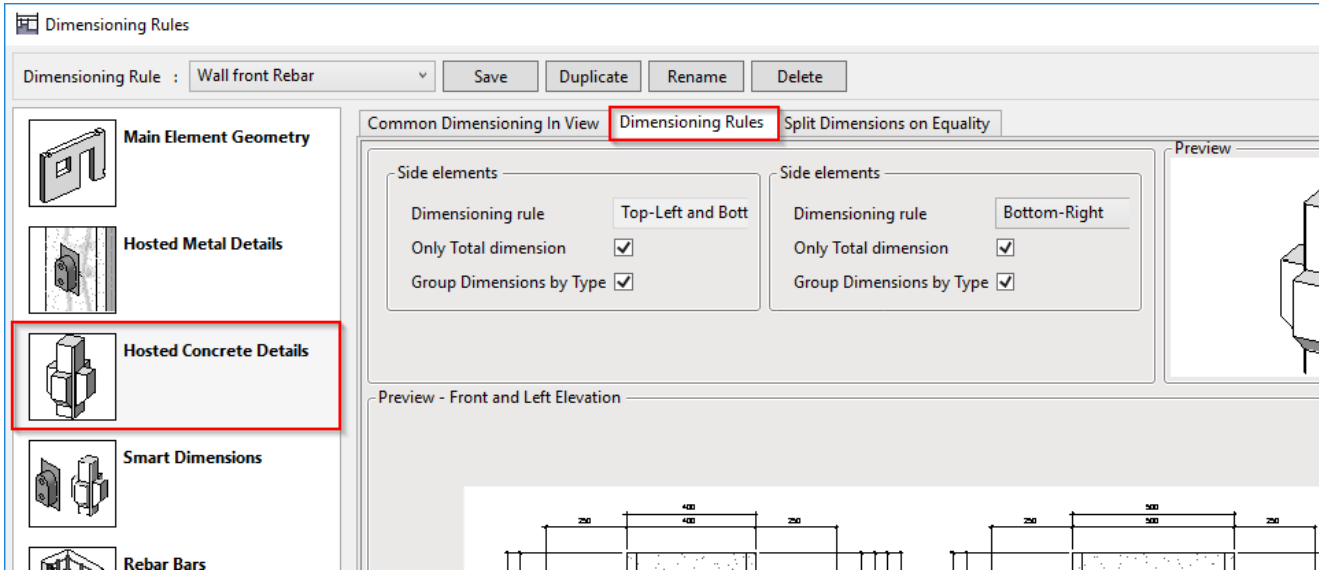

Dimensions will snap to every edge of solid in Concrete detail.

*Only Total dimension* - tick ON to only give total dimensions of Concrete detail.

*Group Dimensions by Type* - tick ON to separate dimensions according to hosted element Type.

**Split Dimensions on Equality** - group dimensions and use Equality formula if same distance is repeated several times.

