



FRAMING CONFIGURATION – Common Settings – Configuration Settings

Modified on: Sun, 1 Nov, 2020 at 7:51 PM


Framing Configuration may be found in two locations:

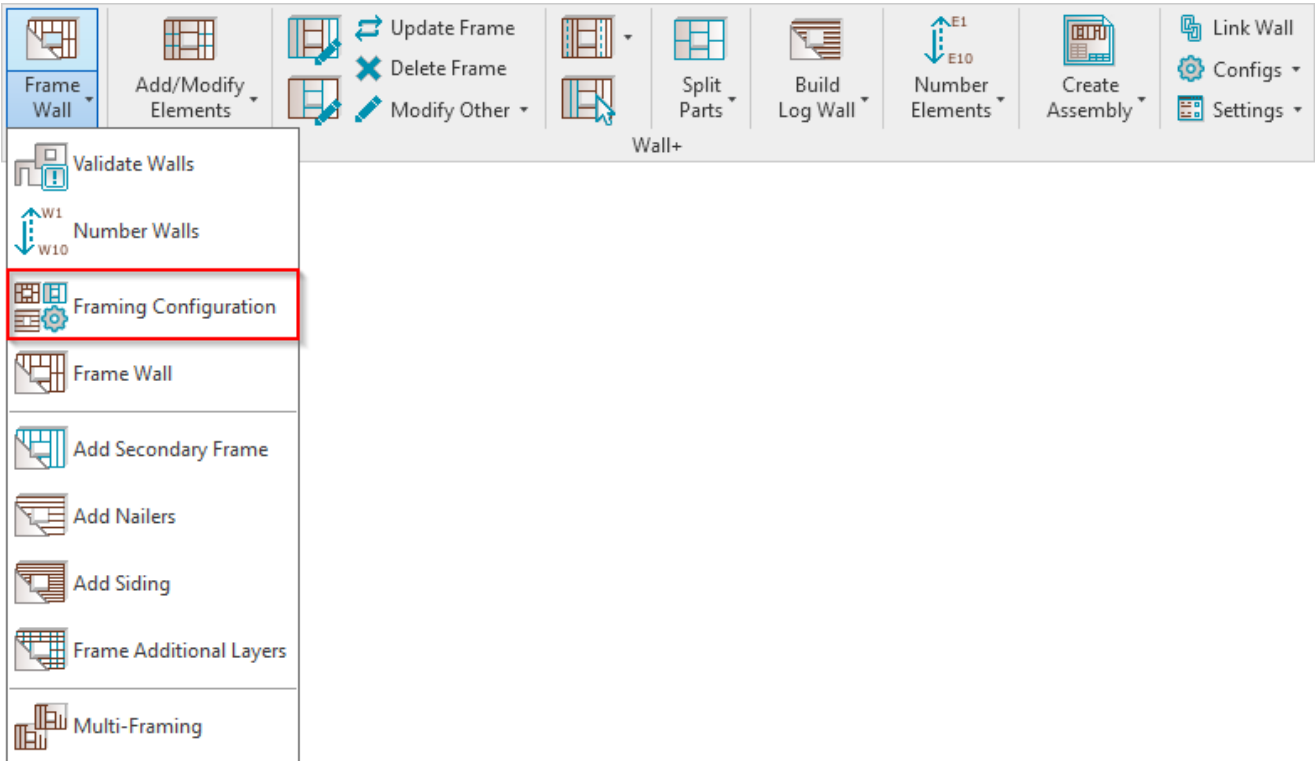

OR:

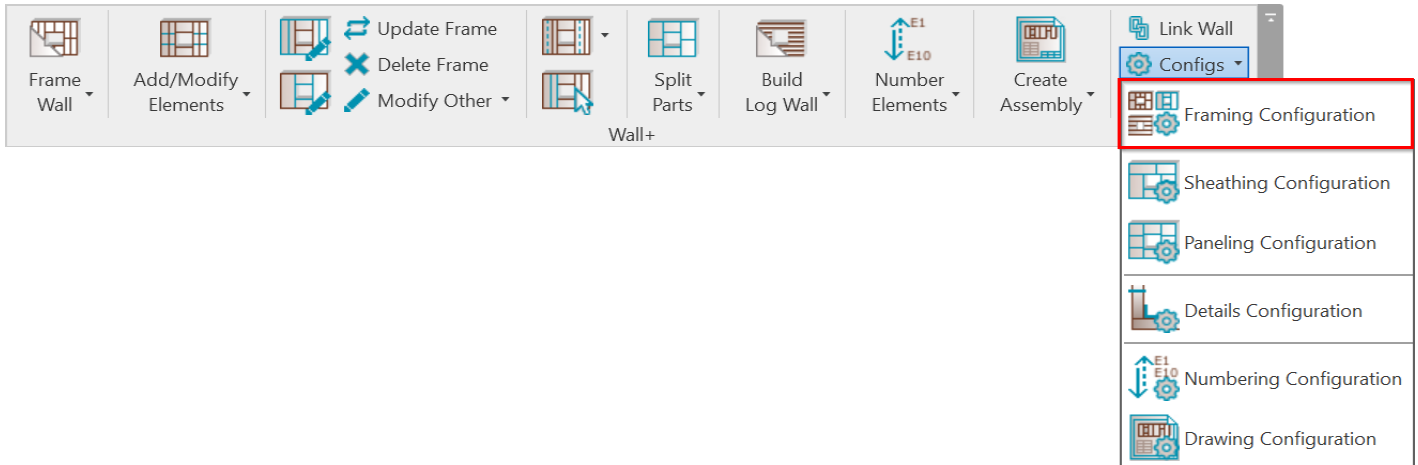

Configuration Settings

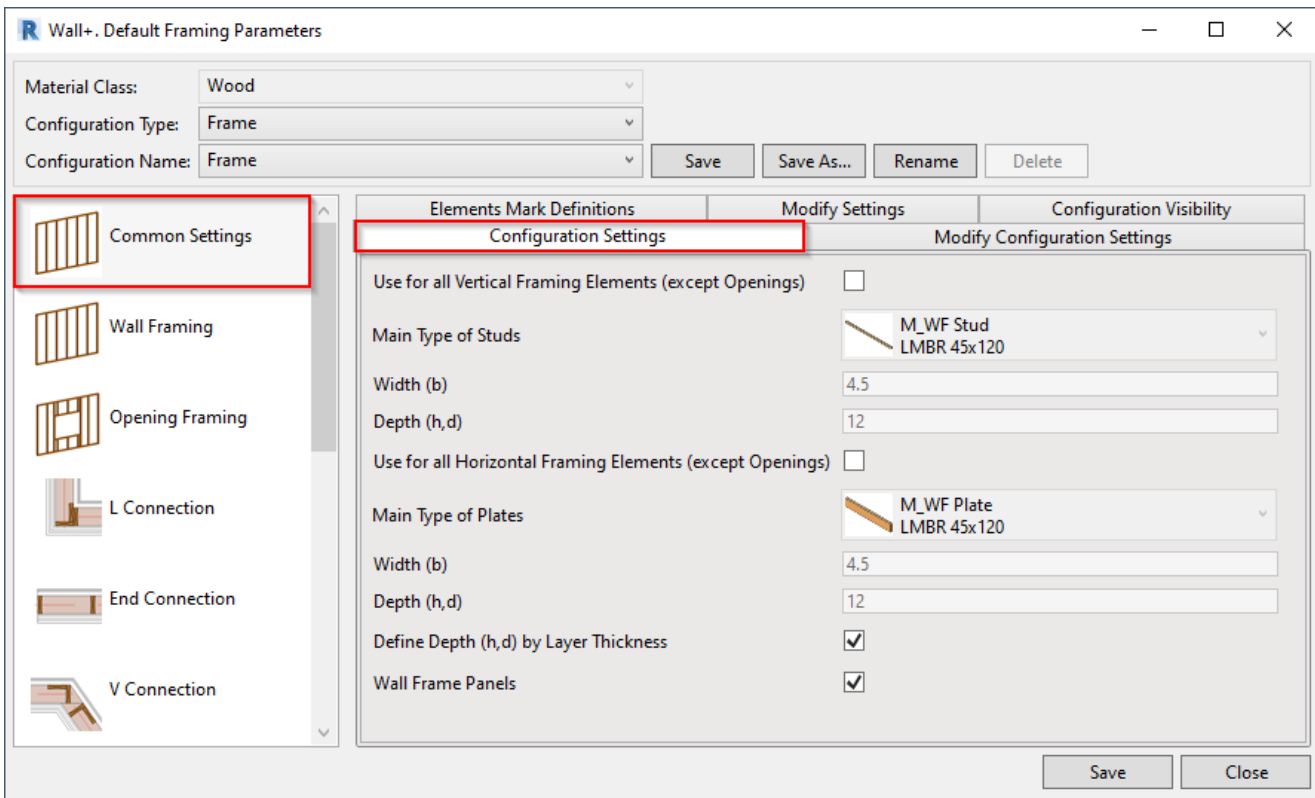

Use for all Vertical/Horizontal Framing Elements (except Openings) – if ON, then the selected Stud and Plate families will be used for other framing elements, like connections, bridgings, noggings, etc. without an option to change it to a custom family.

Main Type of Studs (or Plates) – pick a family and type for the Studs or Plates.

Sample stud and plate families that come with **Wall+**:

Metric Stud – [M_WF Stud.rfa](#)

Metric Plate – [M_WF Plate.rfa](#)

Imperial Stud – [I_WF Stud.rfa](#)

Imperial Plate – [I_WF Plate.rfa](#)

Do not use any other families!

You can use other families only in special cases. Contact us support@agacad.com

Width (b) – shows the width, b, parameter value of the selected family type.

Depth (h, d) – shows the depth, h or d, parameter value of the selected family type.

Define Depth (h, d) by Layer Thickness – the software will create a new type for the selected family and change the depth value to the wall layer thickness so that the frames will fit the layer in the wall.

Wall Frame Panels – if ON, then wall frames are assembled in factory; if OFF – assembled on-site.