


Wall Link


Modified on: Mon, 28 Oct, 2019 at 12:14 PM

Links Rebar Configuration with selected wall layer. Choose which configuration should be used on each wall layer.

1. Create Rebar Configuration.
2. Select wall and click Wall Link.

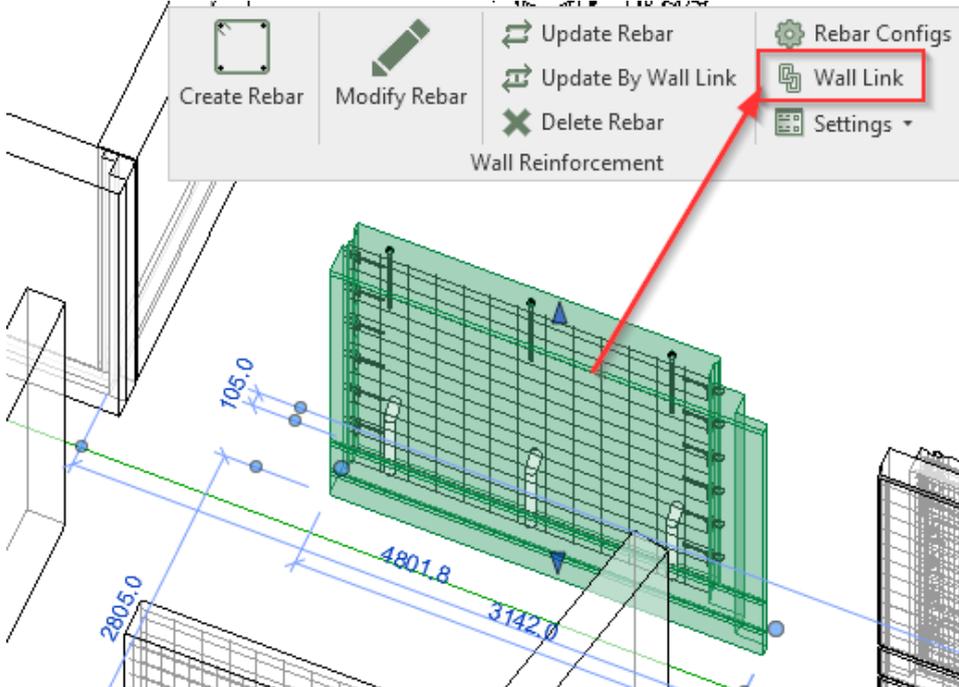

3. In the following dialog window assign configuration for each layer which should be reinforced.

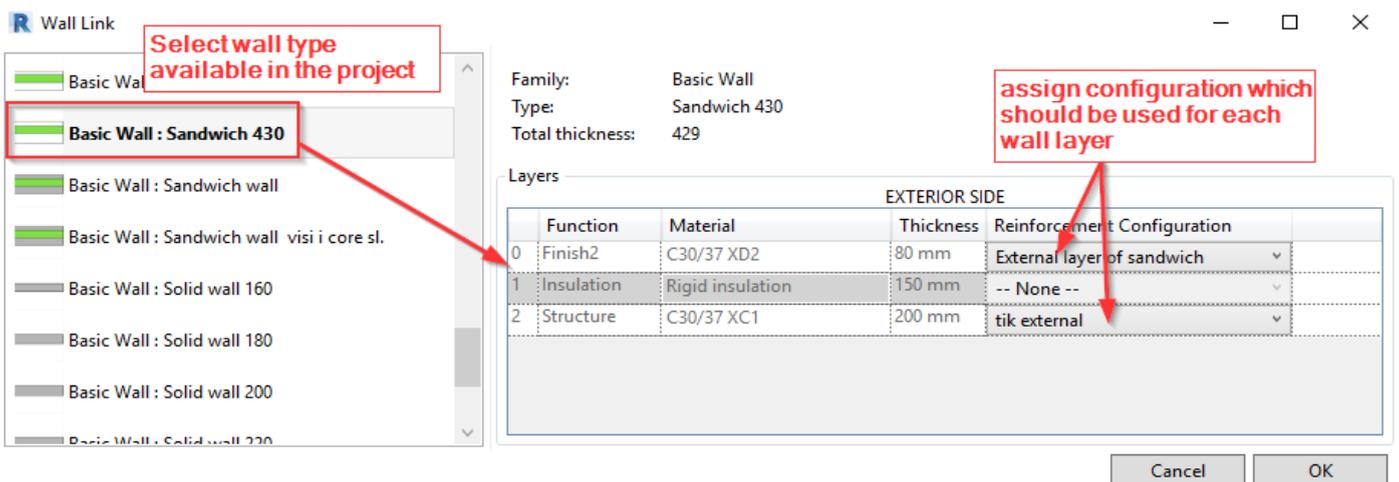

Now you can use the Create Rebar command for this wall type which already has configurations assigned through the Wall Link.