

# Update Rebar

Modified on: Mon, 28 Oct, 2019 at 12:15 PM

Update Rebar will delete reinforcement created with Wall Reinforcement tool and insert reinforcement by using the configurations used on this particular wall.

Manually inserted rebar will not be deleted.

