

Update by Wall Link

Modified on: Mon, 28 Oct, 2019 at 12:15 PM

This command will delete all reinforcement created with the Wall Reinforcement tool. Then it will read information in Wall Link and use the selected configurations to create new reinforcement.

Manually inserted rebar will not be deleted.

