



Modify Rebar

Modified on: Mon, 28 Oct, 2019 at 12:15 PM

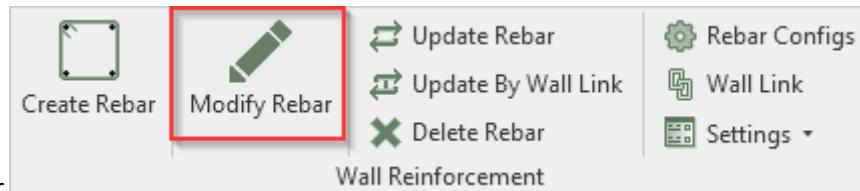

1. Select Modify Rebar.
2. Select rebar. Configuration window of this reinforcement will open. You can see name of the configuration at the upper-left side of Rebar Configuration:

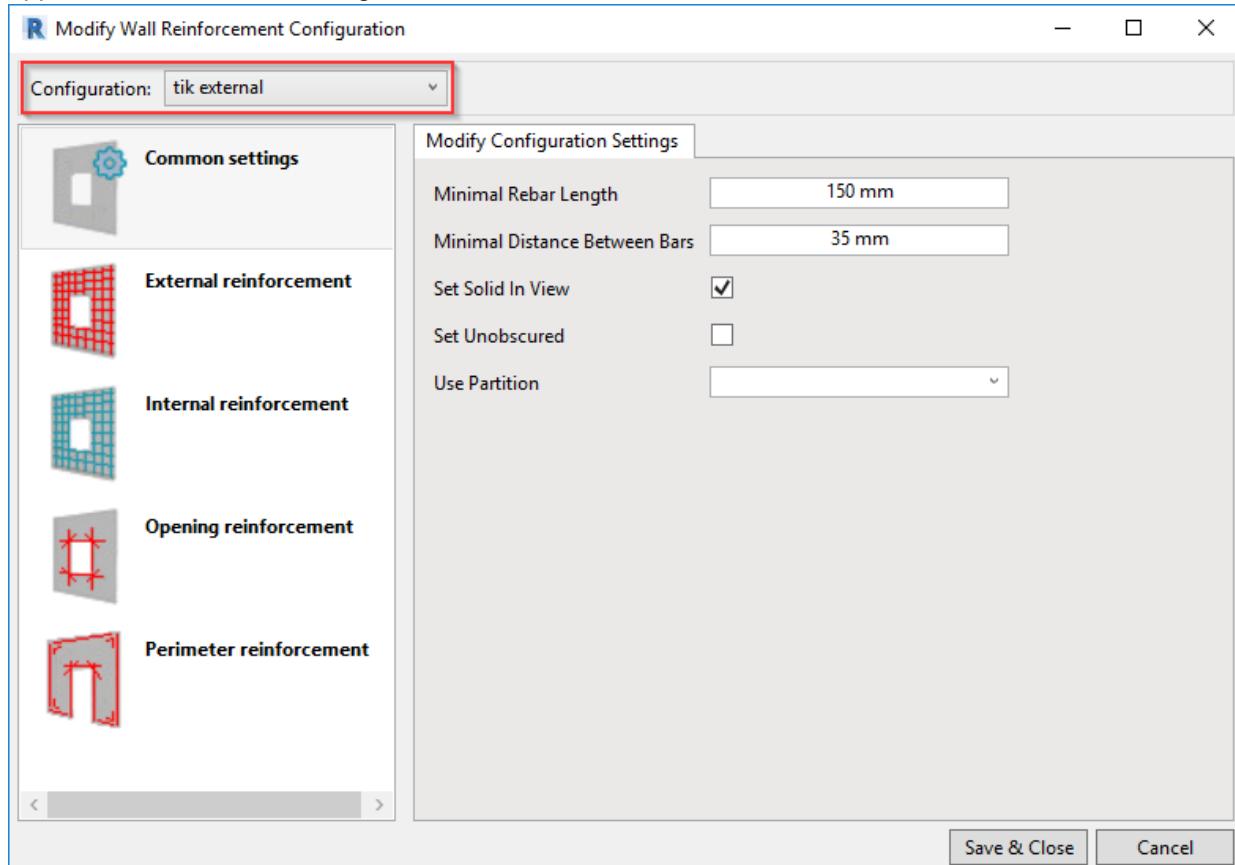

3. Make changes in configuration window – add other rebar, switch off selected rebar, change rebar type, step, hooks, or other settings – and finish with Save & Close.

Reinforcement of selected configuration instance will be updated for that wall. There will be no impact on configurations saved in Configuration File's Location.

or

1. Select Rebar.
2. Select Modify Rebars. Configuration window of this reinforcement will open.
3. Make changes in configuration window – add other rebar, switch off selected rebar, change rebar type, step, hooks, or other settings – and finish with Save & Close.