Configuration Files Location

Modified on: Mon, 28 Oct, 2019 at 12:15 PM

Path to configuration files. You may predefine personal or shared/company path for reinforcement configurations. Prepare your configurations, use them for future projects, or share them with your colleagues.

Create Rebar	Modify Rebar	 ➡ Update Rebar ➡ Update By Wall Link ★ Delete Rebar 	 Rebar Configs Wall Link Settings 	
	V	Vall Reinforcement	Configuration Files Location	
			🕐 E-Help	

R -	- 🗆	\times		
elect where to store configuration files				
C:\Users\valensas\AppData\Roaming\Tools 4 Revit\SmartReinforcement17	Browse			
Shared Company Configurations				
D:\Precast development\Rebars Wall\Rebars configuration	Browse			
Shared Company Project I				
D:\Precast development\Rebars Wall\Smart Reinforcement - Walls\10 1	Browse			
Shared Company Project II				
C:\Users\valensas\Desktop\Wall_R test\Configs	Browse			
O Shared Company Project III				
	Browse			
O Shared Company Project IV				
	Rrowse	<u> </u>		
	Save	:		