

# Rebar configurations – Cover settings

Modified on: Tue, 10 Mar, 2020 at 3:54 PM

Each beam section might have different settings for cover. The image will show what the settings are for. Here is an example of what you might see for a given section.

