

Update rebar

Modified on: Tue, 10 Mar, 2020 at 12:43 PM

Update Rebar will delete reinforcement that was created with the Beam Reinforcement tool and insert reinforcement by using the configurations used on this instance Structural Framing element.

Rebar inserted manually will not be deleted.

