

Update by Beam Link

Modified on: Tue, 10 Mar, 2020 at 12:43 PM

This command will delete all reinforcement created with the Beam Reinforcement tool. Then it will read information in Beam Link and use the selected configuration to create new reinforcement.

Rebar inserted manually will not be deleted.

