

Delete Rebar

Modified on: Tue, 10 Mar, 2020 at 12:44 PM

Deletes all reinforcement hosted in the Structural Framing element.

