


Beam Link


Modified on: Thu, 13 Aug, 2020 at 9:14 AM

This command links Rebar Configuration with selected Structural Framing Type. Choose which configuration should be used on each Type.

1. Create Rebar Configuration.
2. Select Structural Framing element in the model and click **Beam Link**.

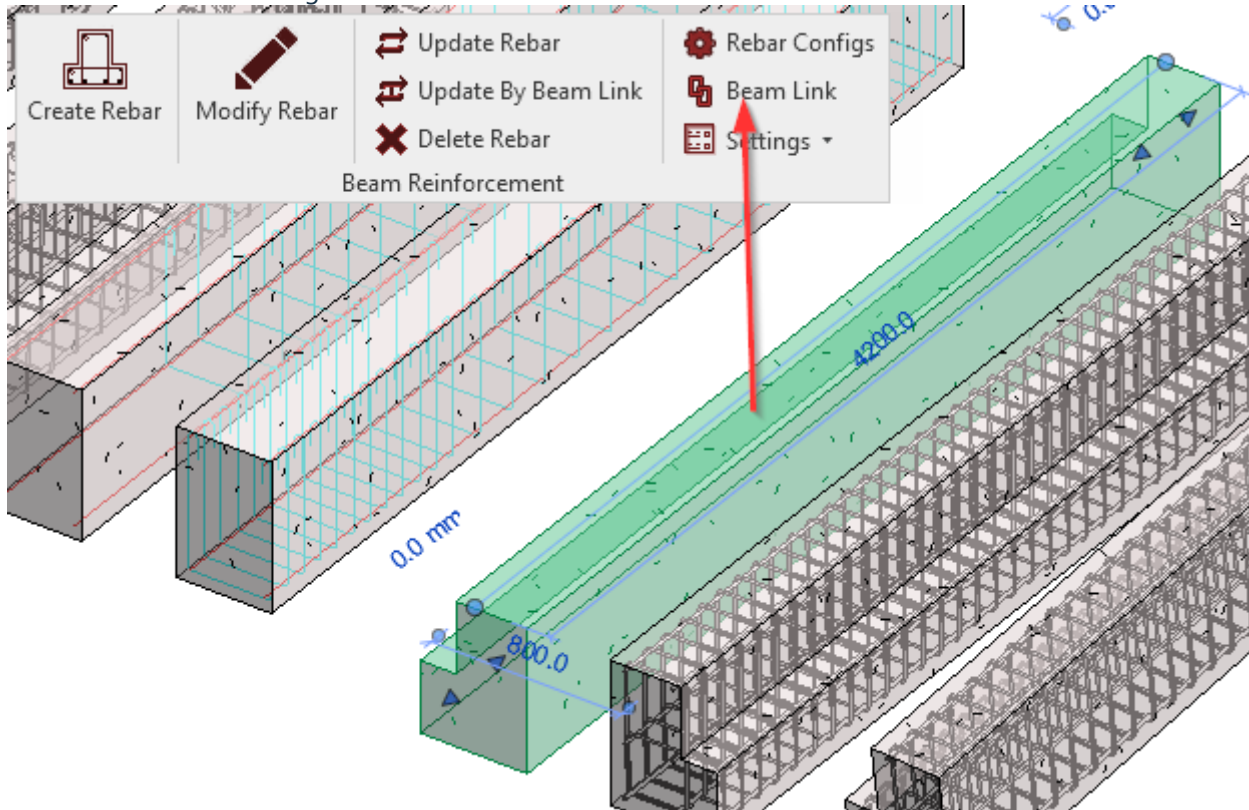

3. In the following dialog window, assign configuration for each Type which should be reinforced.

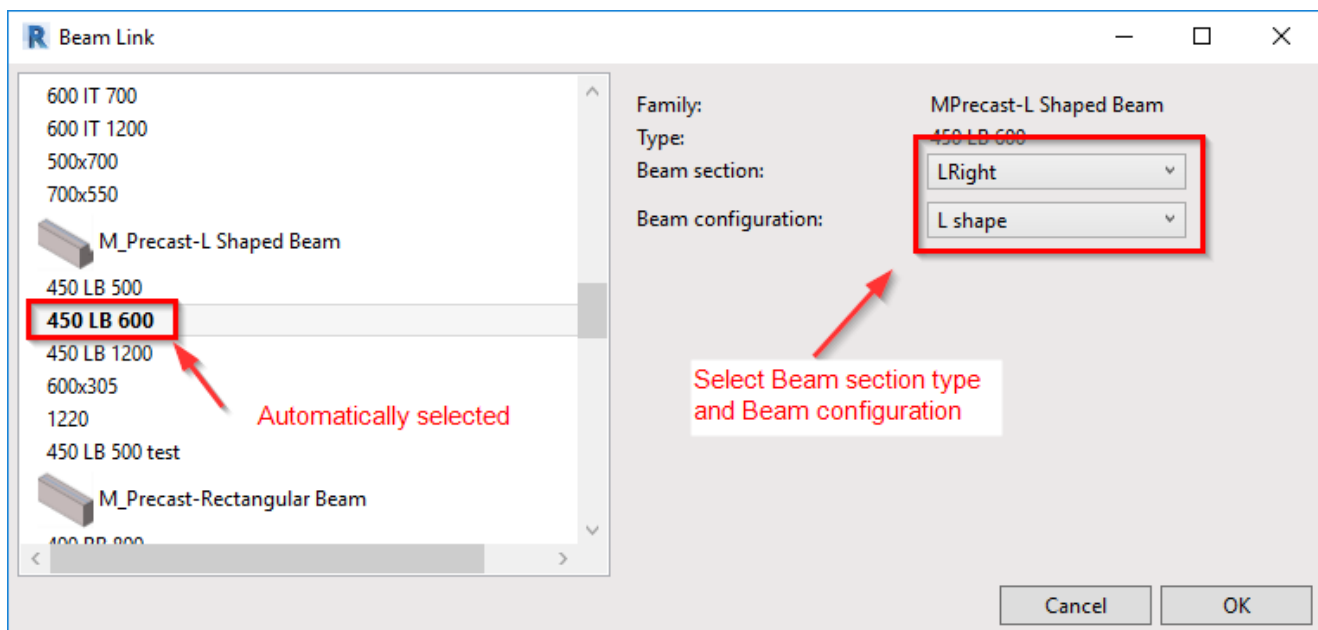

Now you can use the **Create Rebar** command for this Structural Framing Type, which already has configurations assigned through the Beam Link.