

# Rebar Configurations - Main Rebar Ends

Modified on: Mon, 26 Apr, 2021 at 11:18 AM

Options for adding different end shapes of Main rebar:

Beam Reinforcement Configurations

Available sections  
 Rectangular  
 L Shape  
 IT Shape

Configuration : test supports video [Save] [Save As] [Rename] [Delete]

Layout **Bar ends** Settings

Row position	Rebar bar type	End type	Side	L1	C1	L2	C2
1	Bot1	Type1	StartEnd	200 mm	0 mm	0 mm	
2	Bot1	Type2	StartEnd	200 mm	0 mm	600 mm	25 mm
3	Top1	Straight					

Cover settings  
Main rebar  
Stirrups  
Support

These options can be used only after Main rebar layout has been defined.

**Row position** and **Rebar bar type** - these columns come from the Layout tab and show all rebar defined there.

Then for selected rebar you can define the ending option:

**End Type**

**Straight** - simple start/end offsets of main bars will be used as they are defined in the Layout tab.

**Type 1** and **Type 2** - see pictures and parameters in next columns to define their shape.

**Side** - define at which end of the beam selected rebar shape should be applied

Examples:



