


# Rebar Configurations


Modified on: Fri, 18 Sep, 2020 at 10:03 AM

First you need to select the type of column section you want to work with. Currently only rectangular section is available.

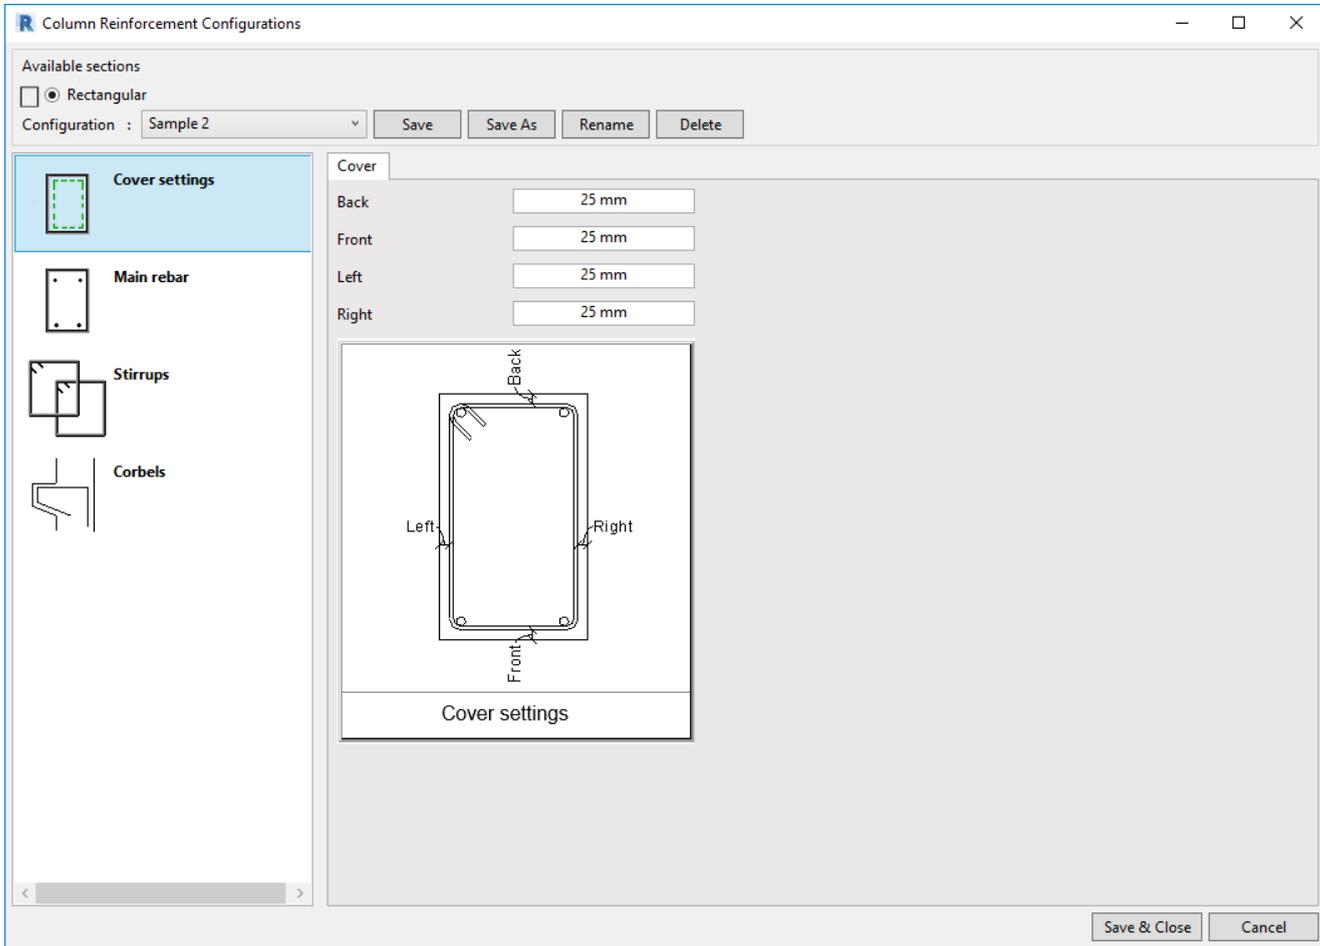

Then Create configuration by using **Save As** from existing configuration. After installation you only have the Default configuration, which has empty settings, or you can download the sample project and configurations from the e-help page.

Column Reinforcement Configurations

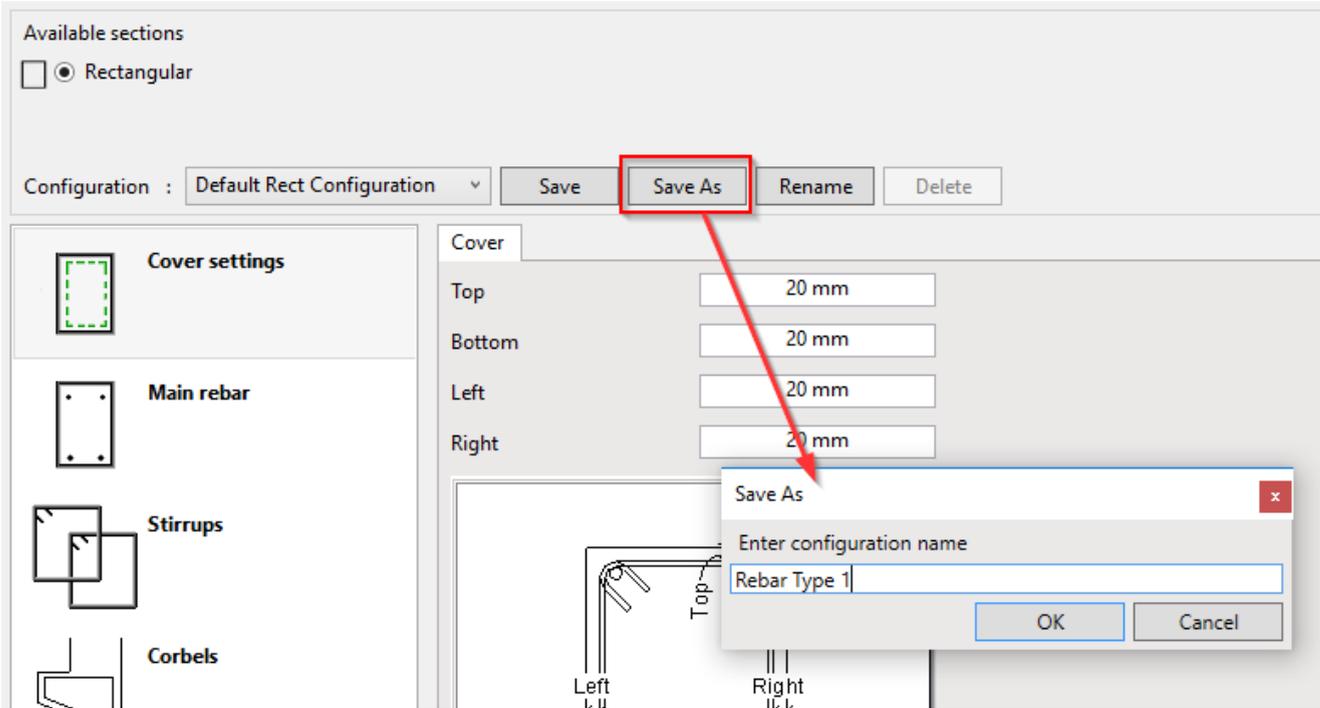

Then, set configurations for Cover, Main reinforcement, Stirrup, and Corbel reinforcement.

