

## Rebar Configurations – Cover settings

Modified on: Fri, 18 Sep, 2020 at 10:03 AM

Each column section can have different settings for cover. The image will show what each setting is for. Here is an example of what you might see for a given section:

