

# Update Rebar

Modified on: Fri, 4 Sep, 2020 at 11:40 AM

**Update Rebar** will delete reinforcement that was created with the Column Reinforcement tool and insert reinforcement by using the configurations used on this instance of a Structural Column element.

Rebar inserted manually will not be deleted.

