

Update by Column Link

Modified on: Fri, 4 Sep, 2020 at 11:40 AM

This command will delete all reinforcement created with the Column Reinforcement tool. Then it will read information in Column Link and use the selected configuration to create new reinforcement.

Rebar inserted manually will not be deleted.

