

Delete Rebar

Modified on: Fri, 4 Sep, 2020 at 11:43 AM

Deletes all reinforcement hosted in the Structural Column element.
Reinforcement created manually will be also deleted.

