



Link Floor

Modified on: Tue, 30 Jun, 2020 at 11:26 AM

You can assign selected configuration for selected Floor layer.
Select Floor and Link Floor command:

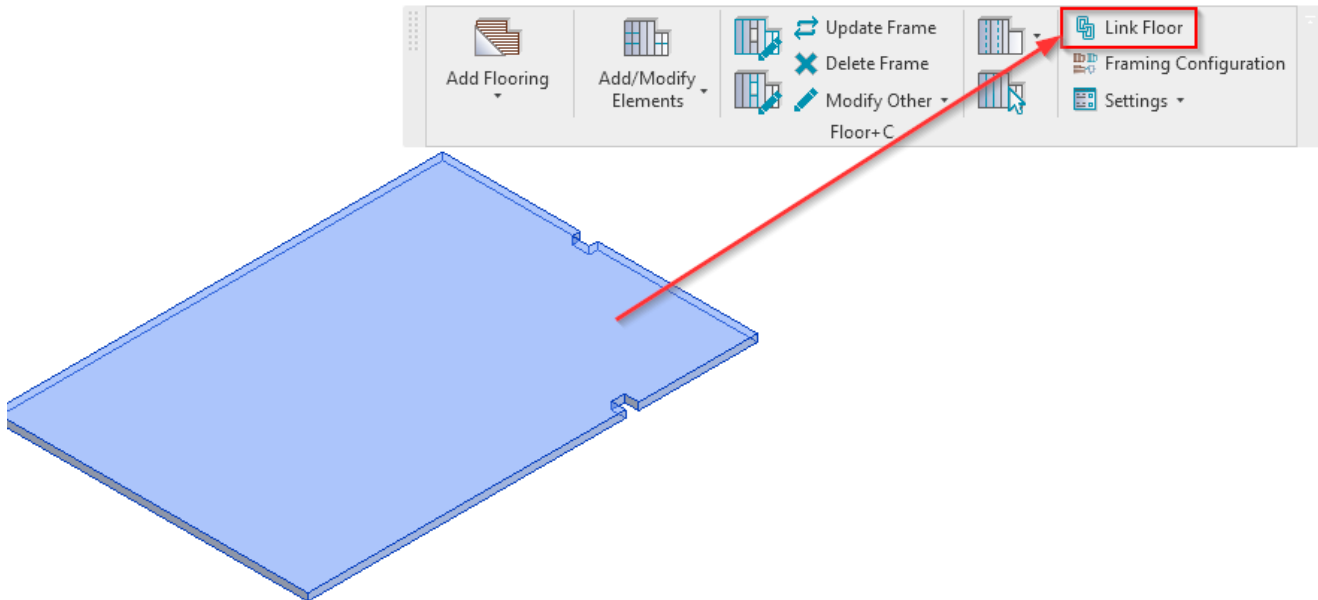

In Link Floor configuration window, that Floor Type will be selected on the Left side of the screen. On the right screen select Flooring for Framing Type and configuration in Framing Configuration column.

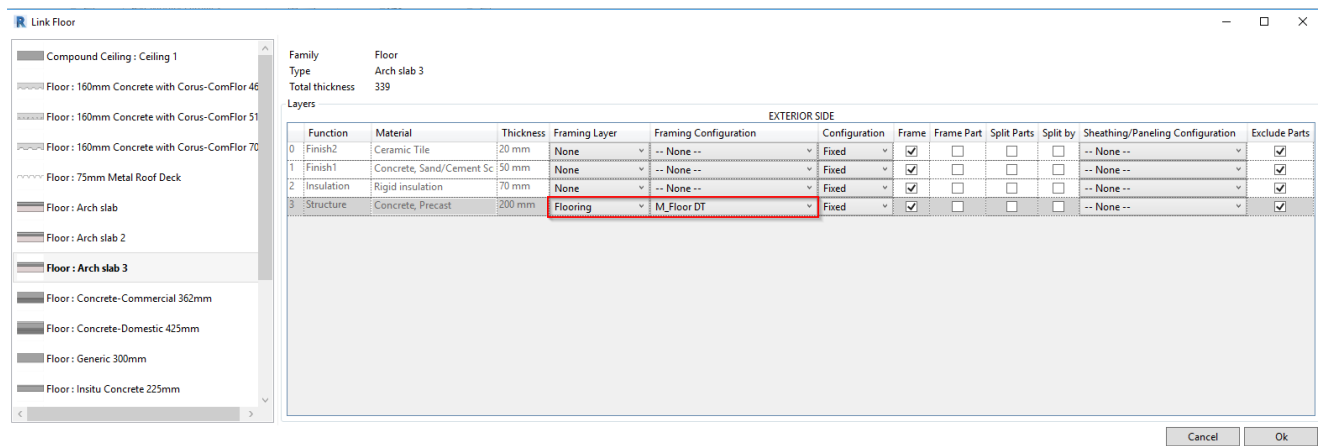

Click Ok and you are ready for the next step - Add Flooring.