


# Configuration File Location


Modified on: Thu, 3 Jun, 2021 at 2:19 PM

Smart Views has two locations where configurations are kept.

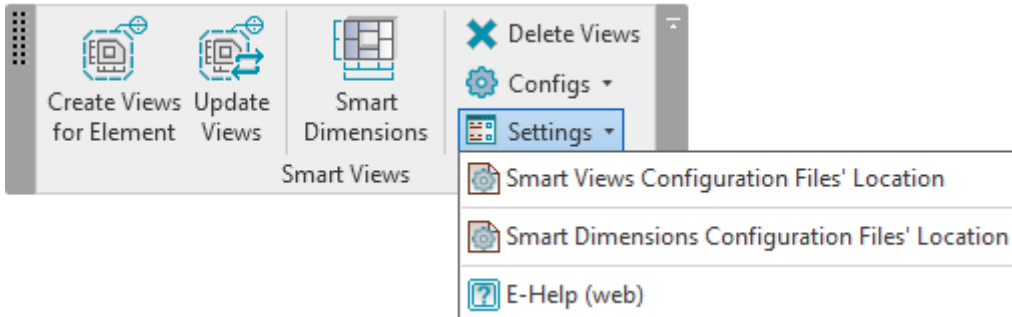

The first one is for configuring Views; the second is for configuring Dimensions.

You can change the location of configurations by defining a new path:

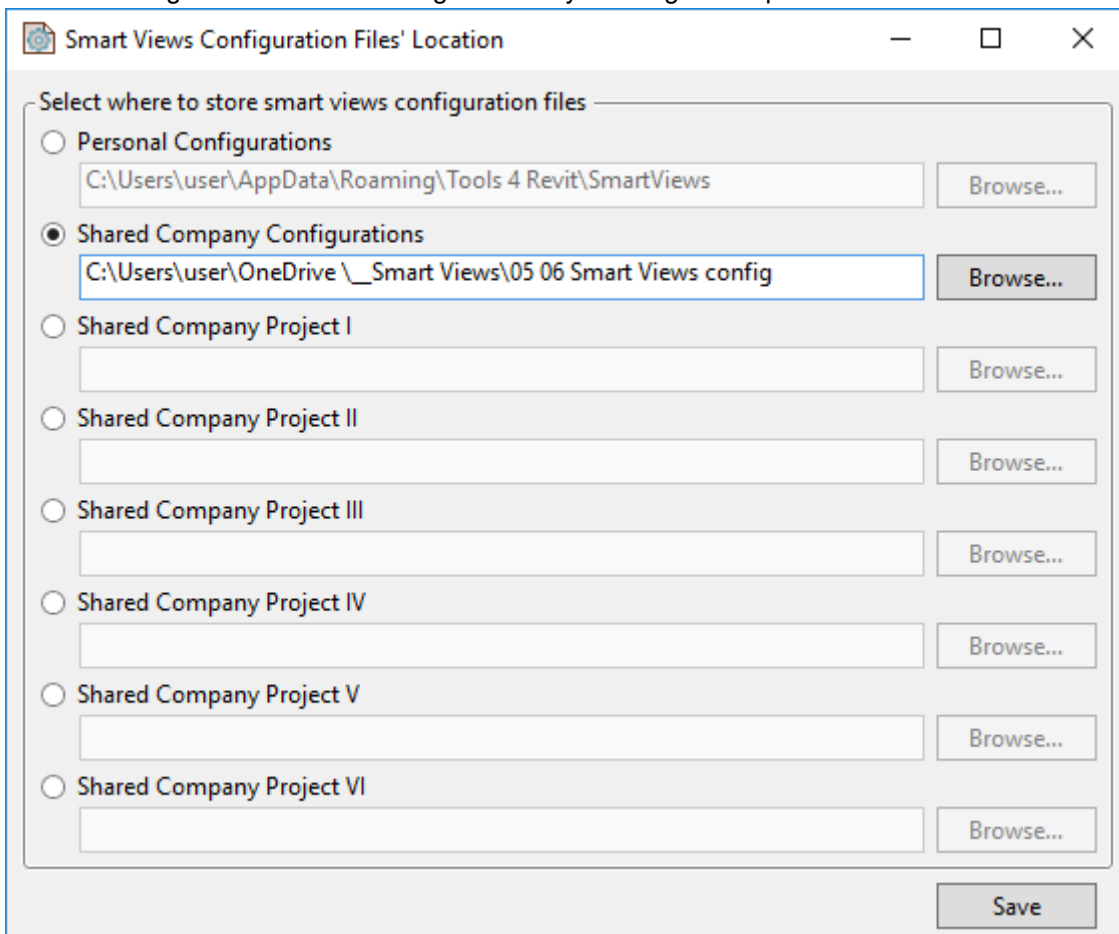

Configurations may easily be shared within the company or copied to a different location, if needed.