ADD/MODIFY BRACING - Main Features

Modified on: Sun, 15 Nov, 2020 at 6:36 PM

Add/Modify Bracing



Add/Modify Bracing – features for adding/modifying braces between studs or plates, corner braces and brace groups.

Add Brace between Studs/Plates (external/internal side)

7/9/2021

🔛 Wall+. Add/Modify Bracing X
Add Brace between Studs/Plates (external side)
Add Brace between Studs/Plates (internal side)
Add Corner Brace (external side)
Add Corner Brace (internal side)
Add Corner Brace
Add Corner Brace to Adjacent Frame
Automatically Add Top Corner Braces
Modify Brace
Delete Brace
Add Brace Group
Add Partial Brace Group
Modify Brace Group
Delete Brace Group

Add Brace between Studs/Plates (external/internal side) – adds a brace between two selected studs/plates on external or internal side of framing. To modify brace settings go to Wall+ \rightarrow Add/Modify Elements \rightarrow Add/Modify Bracing \rightarrow Modify Brace.

Default families for bracing are I_WF Plate.rvt (in Imperial projects) and M_WF Plate.rvt (in Metric projects).

Example: Select a bottom plate and a top plate to show where bracing should end. Points selected should be as close as possible to where you want the bracing ends to actually be. (I.e. If you generically select a bottom plate and top plate, bracing might not be placed where you actually want it, so select the points precisely where you want the bracing to be placed.)



Add Corner Brace (external/internal side)

🔛 Wall+. Add/Modify Bracing X
Add Brace between Studs/Plates (external side)
Add Brace between Studs/Plates (internal side)
Add Corner Brace (external side)
Add Corner Brace (internal side)
Add Corner Brace
Add Corner Brace to Adjacent Frame
Automatically Add Top Corner Braces
Modify Brace
Delete Brace
Add Brace Group
Add Partial Brace Group
Modify Brace Group
Delete Brace Group

Add Corner Brace (external/internal side) – adds a corner brace between a selected plate and stud on external or internal side of framing. To modify brace settings go to Wall+ \rightarrow Add/Modify Elements \rightarrow Add/Modify Bracing \rightarrow Modify Brace.

Example: Select a bottom plate and then a stud to show where corner bracing ends should be. Points selected should be as close as possible to where you want the bracing ends to actually be. (I.e. If you generically select the bottom plate and stud, bracing might not be placed where you actually want it, so select the points precisely where you want the bracing to be placed.)



Add Corner Brace

🔛 Wall+. Add/Modify Bracing	×
Add Brace between Studs/Plates (external side)	
Add Brace between Studs/Plates (internal side)	
Add Corner Brace (external side)	
Add Corner Brace (internal side)	
Add Corner Brace	
Add Corner Brace to Adjacent Frame	
Automatically Add Top Corner Braces	
Modify Brace	
Delete Brace	
Add Brace Group	
Add Partial Brace Group	
Modify Brace Group	
Delete Brace Group	

Add Corner Brace – adds a corner brace between a plate and a stud. To modify brace settings go to Wall+ \rightarrow Add/Modify Elements \rightarrow Add/Modify Bracing \rightarrow Modify Brace.

Example: Select a plate and then a stud to show where corner bracing ends should be. Points selected should be as close as possible to where you want the bracing ends to actually be. (I.e. If you generically select a plate and stud, bracing might not be placed where you actually want it, so select the points precisely where you want the bracing to be placed.)



Add Corner Brace to Adjacent Frame

🔛 Wall+. Add/Modify Bracing	×
Add Brace between Studs/Plates (external side)	
Add Brace between Studs/Plates (internal side)	
Add Corner Brace (external side)	
Add Corner Brace (internal side)	
Add Corner Brace	
Add Corner Brace to Adjacent Frame	
Automatically Add Top Corner Braces	
Modify Brace	
Delete Brace	
Add Brace Group	
Add Partial Brace Group	
Modify Brace Group	
Delete Brace Group	

Add Corner Brace to Adjacent Frame – adds a corner brace between a support element and a stud or a plate from the frame. To modify brace settings go to Wall+ \rightarrow Add Elements/Modify \rightarrow Add/Modify Bracing \rightarrow Modify Brace.



Example: Select a supporting element and then a stud to show corner bracing ends.

Automatically Add Top Corner Braces

🔛 Wall+. Add/Modify Bracing	×
Add Brace between Studs/Plates (external side)	
Add Brace between Studs/Plates (internal side)	
Add Corner Brace (external side)	
Add Corner Brace (internal side)	
Add Corner Brace	
Add Corner Brace to Adjacent Frame	
Automatically Add Top Corner Braces	
Modify Brace	
Delete Brace	
Add Brace Group	
Add Brace Group Add Partial Brace Group	
Add Brace Group Add Partial Brace Group Modify Brace Group	

Automatically Add Top Corner Braces – adds corner braces automatically, which connect to selected element and the intersecting elements from the list. To modify brace settings go to Wall+ \rightarrow Add/Modify Elements \rightarrow Add/Modify Bracing \rightarrow Modify Brace.

The list of intersecting elements where braces could be connected:

R Automatically Add Frame Supports —	
Intersect with	Intersect
End Connection Stud	V
Vertical Stud	✓
King Stud	✓
Trimmer	✓
Top Cripple Trimmer	✓
Bottom Cripple Trimmer	✓
Top Cripple	✓
Bottom Cripple	✓
ОК	Cancel

Example: Braces are added automatically according to selected top plate and connected end studs and king studs.

ADD/MODIFY BRACING - Main Features : AGACAD



Modify Brace

🔛 Wall+. Add/Modify Bracing	×
Add Brace between Studs/Plates (external side)	
Add Brace between Studs/Plates (internal side)	
Add Corner Brace (external side)	
Add Corner Brace (internal side)	
Add Corner Brace	
Add Corner Brace to Adjacent Frame	
Automatically Add Top Corner Braces	
Modify Brace	
Delete Brace	
Add Brace Group	
Add Partial Brace Group	
Modify Brace Group	
Delete Brace Group	

Modify Brace – modifies selected brace in the frame.

Read more >> (https://agacad.freshdesk.com/a/solutions/articles/44001609019-add-modify-bracing-modify-brace)

Delete Brace

🔛 Wall+. Add/Modify Bracing	×
Add Brace between Studs/Plates (external side)	
Add Brace between Studs/Plates (internal side)	
Add Corner Brace (external side)	
Add Corner Brace (internal side)	
Add Corner Brace	
Add Corner Brace to Adjacent Frame	
Automatically Add Top Corner Braces	
Modify Brace	
Delete Brace	
Add Brace Group	
Add Partial Brace Group	
Modify Brace Group	
Delete Brace Group	

Delete Brace – deletes selected brace(s) from the frame.

You can choose **Delete Brace** and then select braces one-by-one or select all braces from the frame and then click **Delete Brace**.



Add Brace Group

🖽 Wall+. Add/Modify Bracing	×
Add Brace between Studs/Plates (external side)	
Add Brace between Studs/Plates (internal side)	
Add Corner Brace (external side)	
Add Corner Brace (internal side)	
Add Corner Brace	
Add Corner Brace to Adjacent Frame	
Automatically Add Top Corner Braces	
Modify Brace	
Delete Brace	
Add Brace Group	
Add Partial Brace Group	
Modify Brace Group	
Delete Brace Group	

Add Brace Group - places short braces automatically between two studs with predefined rules.

Example: Braces are added automatically between two selected studs.



Add Partial Brace Group

🔛 Wall+. Add/Modify Bracing	×
Add Brace between Studs/Plates (external side)	
Add Brace between Studs/Plates (internal side)	
Add Corner Brace (external side)	
Add Corner Brace (internal side)	
Add Corner Brace	
Add Corner Brace to Adjacent Frame	
Automatically Add Top Corner Braces	
Modify Brace	
Delete Brace	
Add Brace Group	
Add Partial Brace Group	
Modify Brace Group	
Delete Brace Group	

Add Partial Brace Group – places short braces automatically in the area between two selected studs and horizontal elements with predefined rules.

Example: Braces are added automatically between two selected studs and horizontal plates:



Modify Brace Group

🔛 Wall+. Add/Modify Bracing	×
Add Brace between Studs/Plates (external side)	
Add Brace between Studs/Plates (internal side)	
Add Corner Brace (external side)	
Add Corner Brace (internal side)	
Add Corner Brace	
Add Corner Brace to Adjacent Frame	
Automatically Add Top Corner Braces	
Modify Brace	
Delete Brace	
Add Brace Group	
Add Partial Brace Group	
Modify Brace Group	
Delete Brace Group	

Modify Brace Group – modifies selected brace group in the frame. <u>Read more >> (https://agacad.freshdesk.com/a/solutions/articles/44001622742-add-modify-bracing-modify-brace-group)</u>

Delete Brace Group



Delete Brace Group – deletes selected brace group from the frame.

Example: You just need to select any element from the group and all elements will be deleted.

