
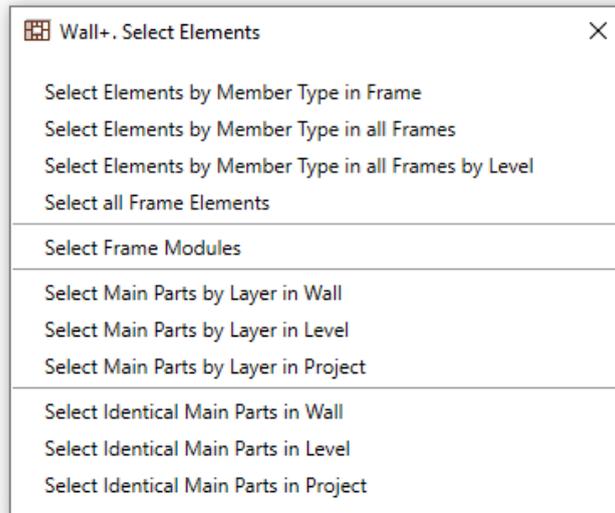


# SELECT ELEMENTS


Modified on: Wed, 14 Aug, 2019 at 2:22 PM

## Select Elements

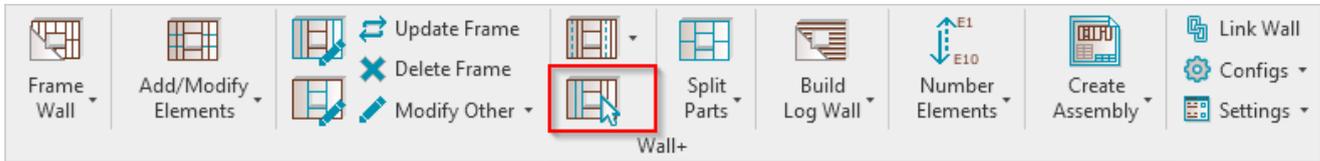


**Select Elements** – features for quickly selecting elements by different rules.

### Select Elements by Member Type in Frame

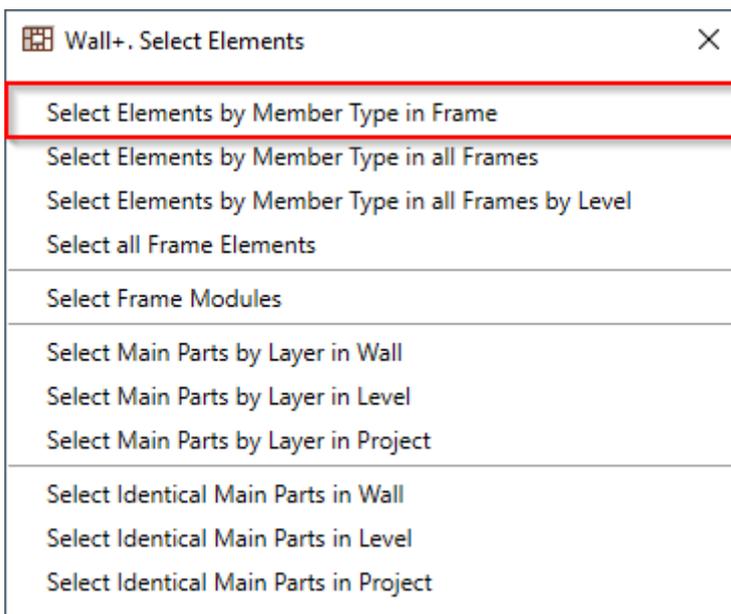


**Select Element by Member Type in Frame** – selects all framing members of the same type from the frame.


Example: Select any stud → **Select Element by Member Type in Frame** → All studs from the frame will be selected:

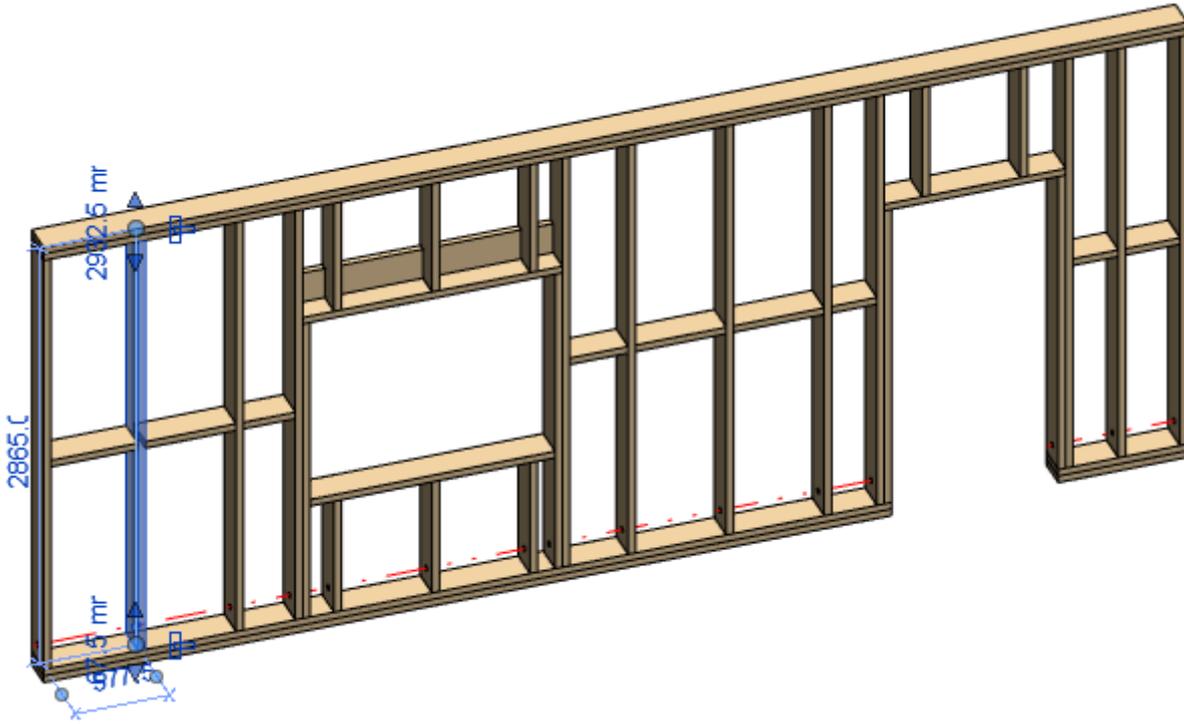

Result:

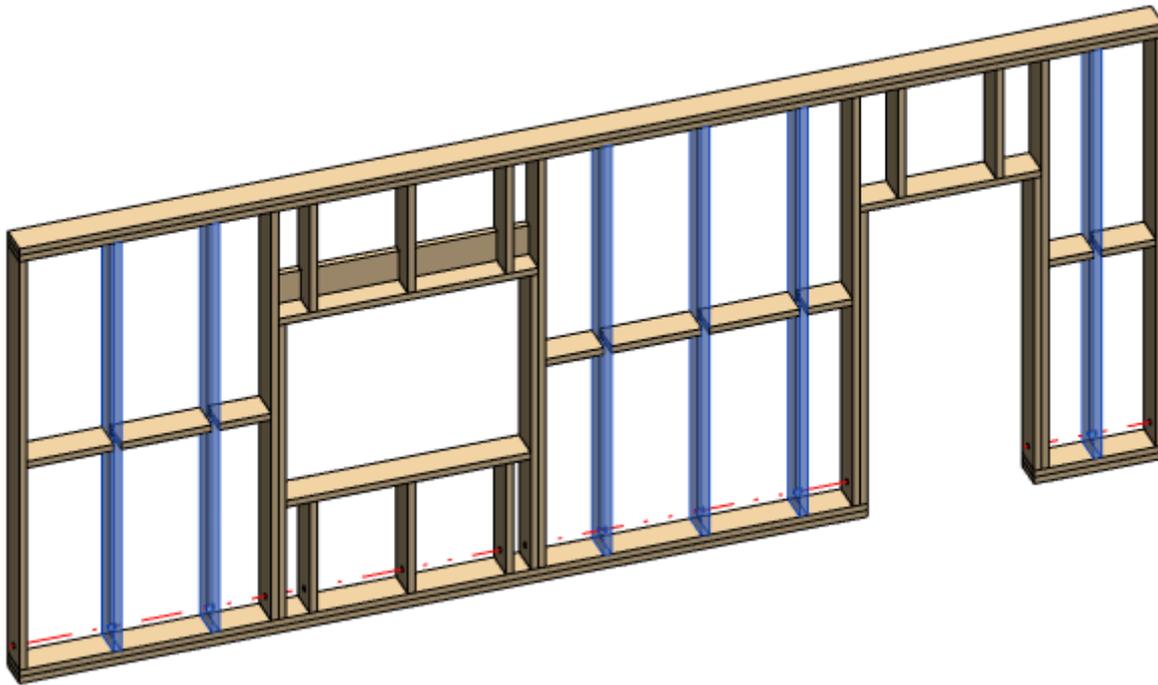


### Select Elements by Member Type in all Frames

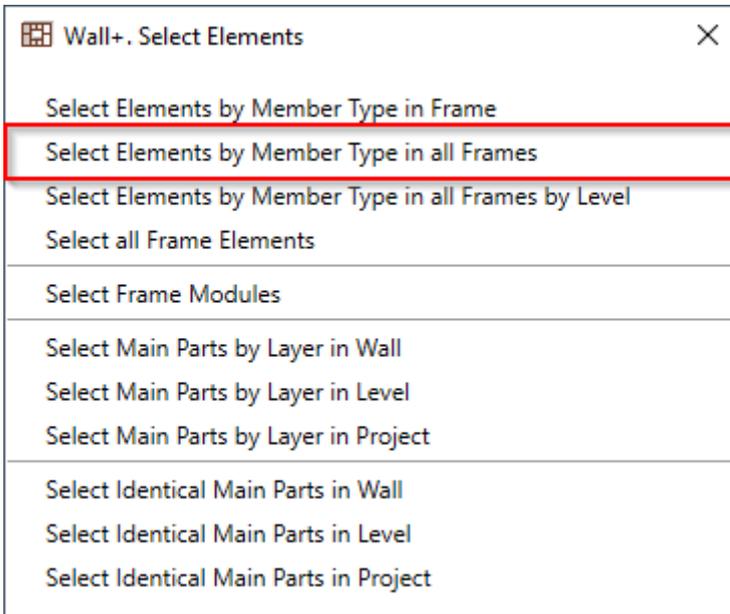


**Select Element by Member Type in all Frames** – selects all framing members of the same type from all frames in the project.


*Example: Select any stud → **Select Element by Member Type in all Frames** → All studs from all frames in the project will be selected:*

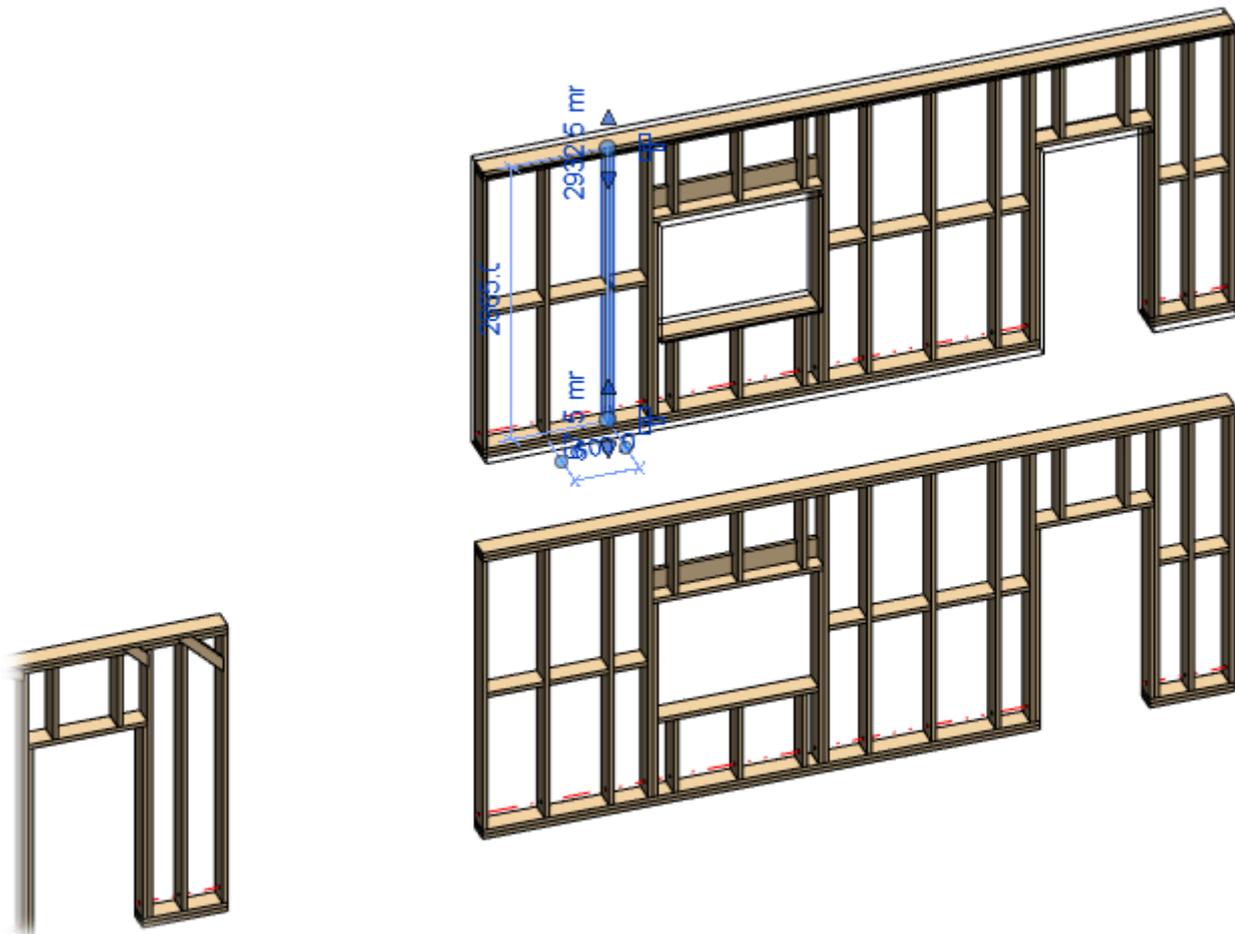

*Result:*

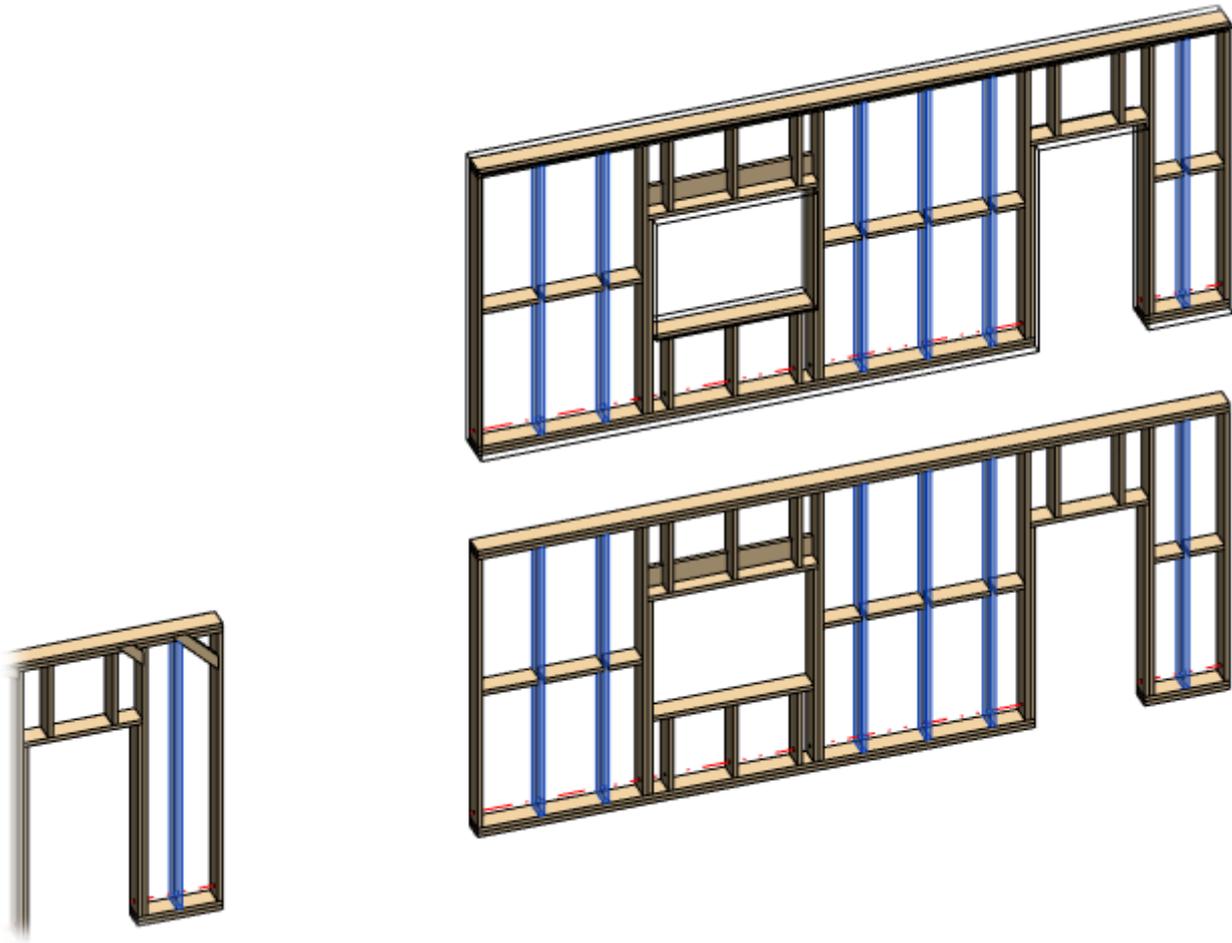

### Select Elements by Member Type in all Frames by Level

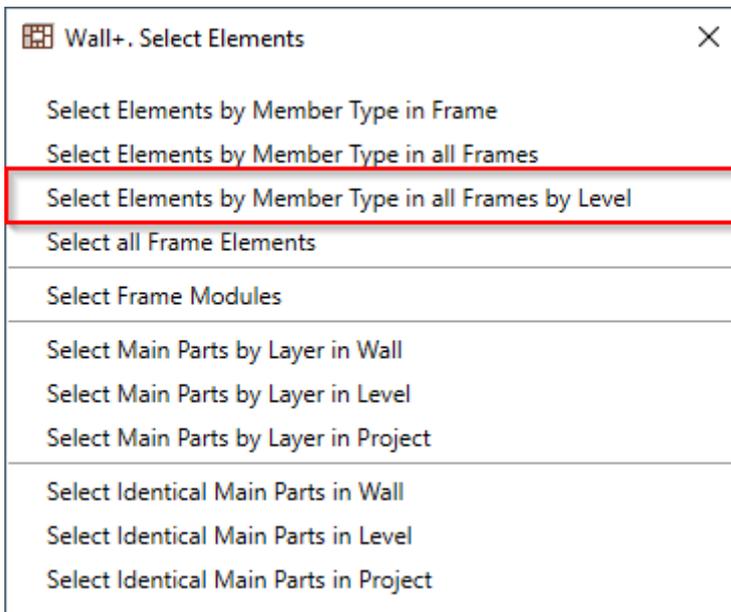

**Select Element by Member Type in all Frames by Level** – selects all framing members of the same type from all frames in the same level.


*Example: Select any stud → **Select Element by Member Type in all Frames by Level** → All studs from all frames in the same level will be selected:*



*Result:*




**Select all Frame Elements**

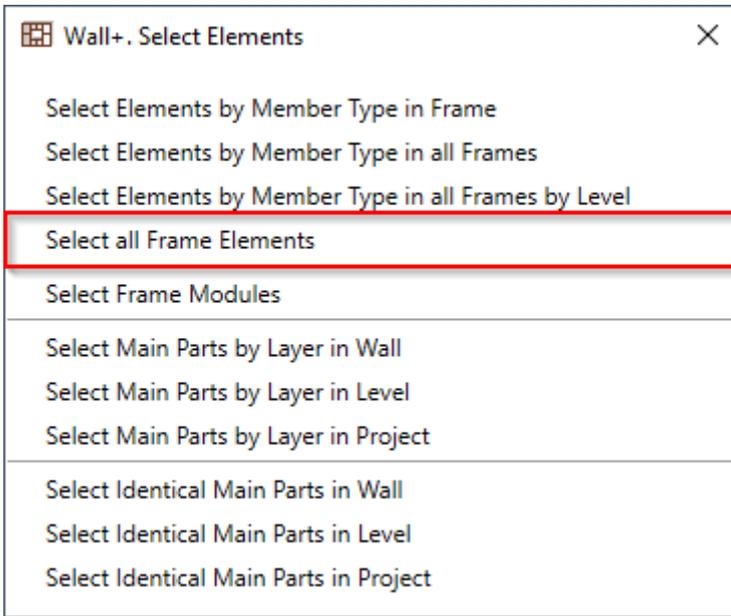


**Select all Frame Elements** – selects all framing members from the wall.


*Example: Select any stud → **Select all Frame Elements** → All elements, including studs, plates, trimmers, etc. will be selected:*

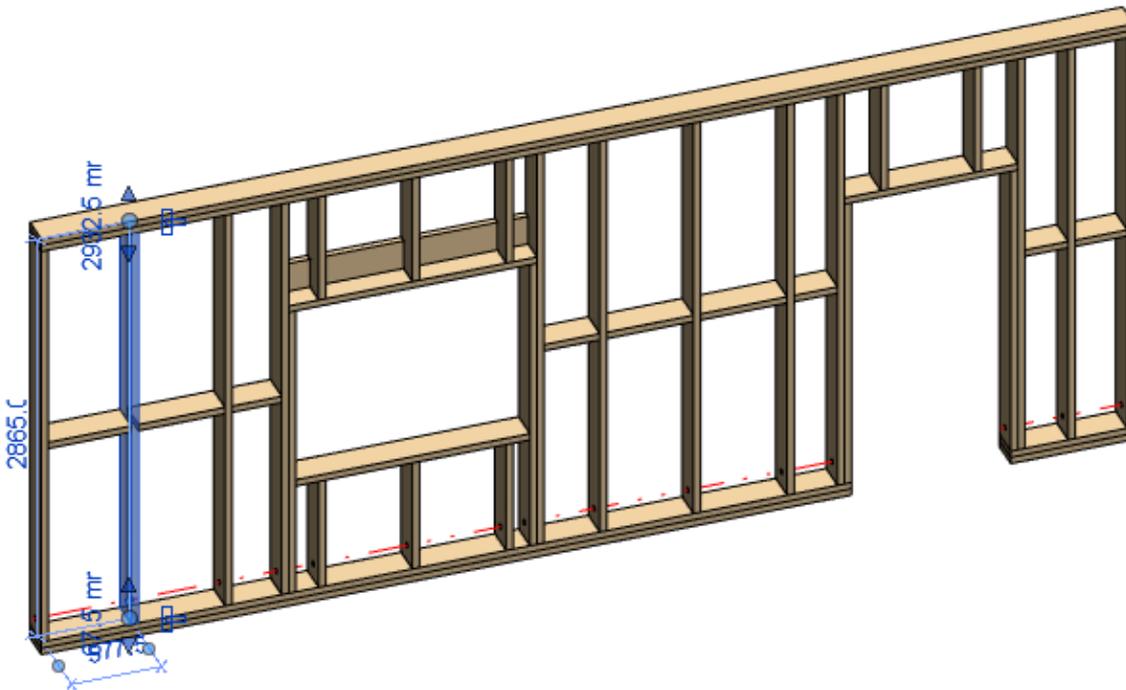

*Result:*

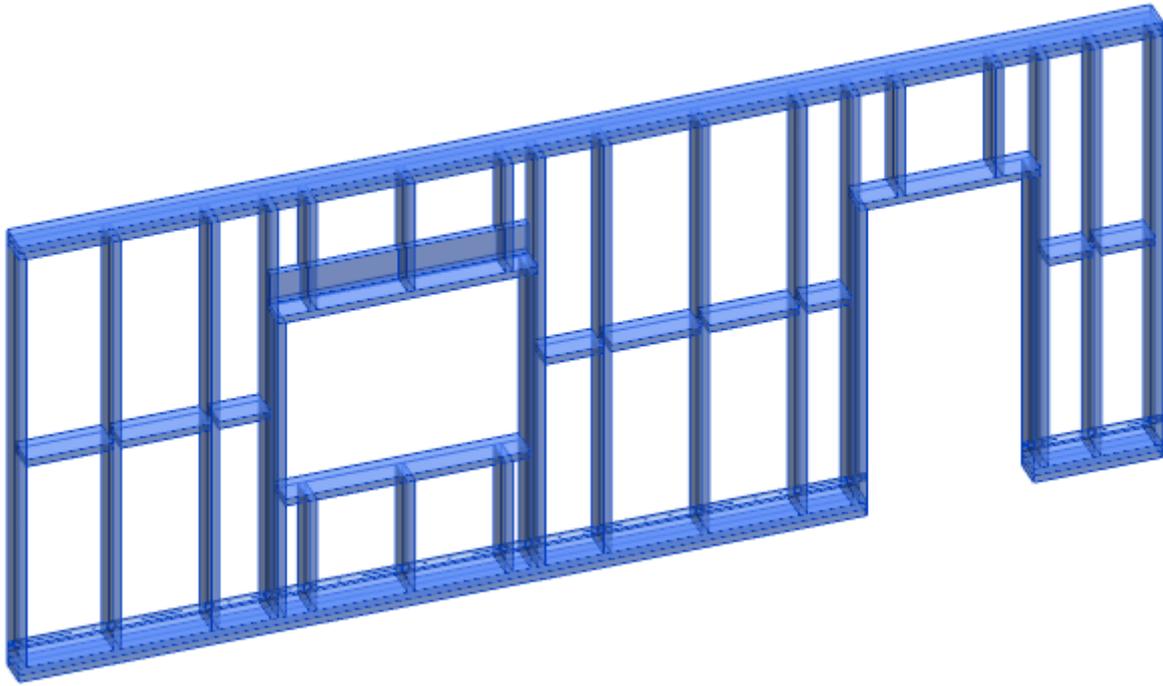


## Select Frame Modules

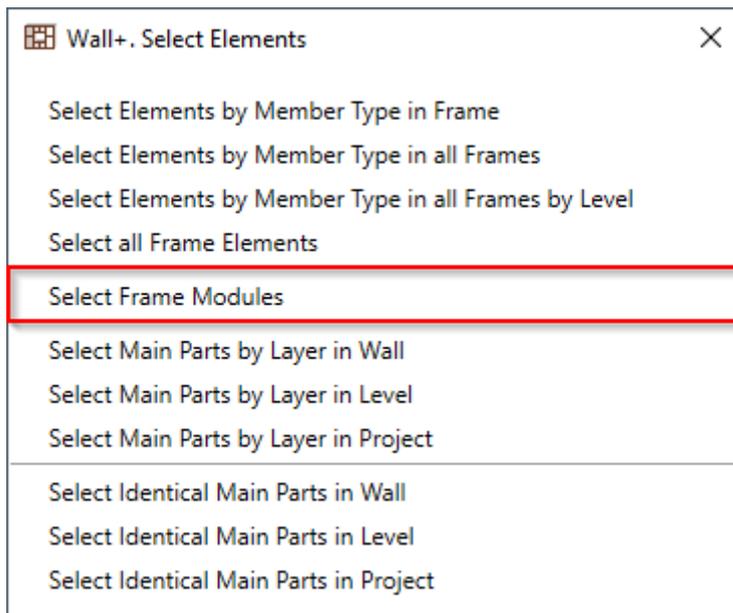


**Select Frame Modules** – selects preassembled elements.

*Example: Select any stud → **Select Frame Modules** → All elements set as preassembled are selected, like opening kings, trimmers, cripples, etc.:*

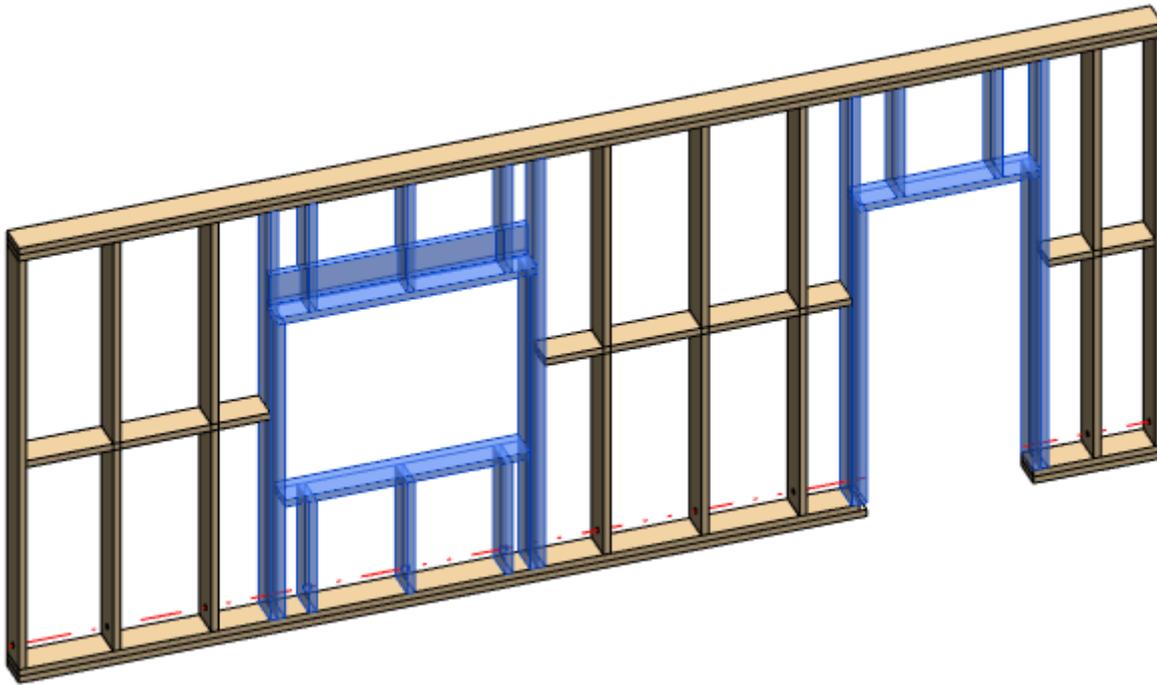


### Select Main Parts by Layer in Wall

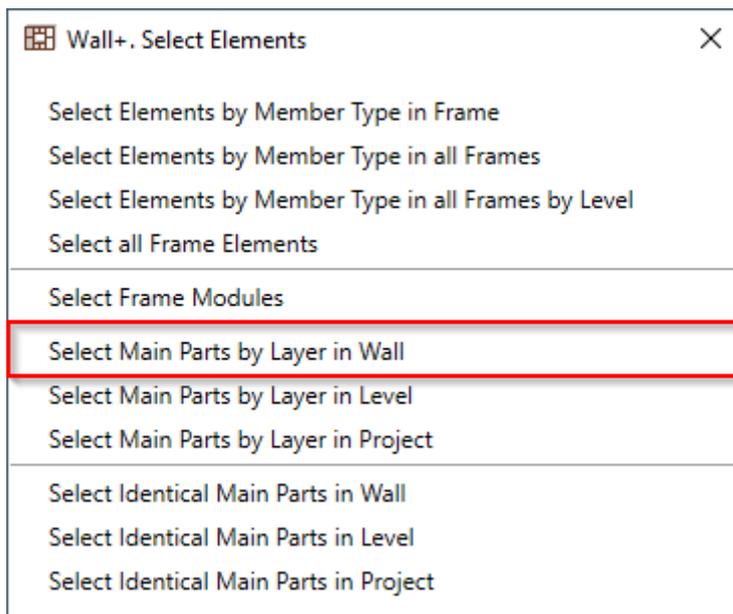


**Select Main Parts by Layer in Wall** – selects main parts in the framed wall.


Please make sure **Show Parts** or **Show Both** is selected in **View Properties** → **Parts Visibility**:

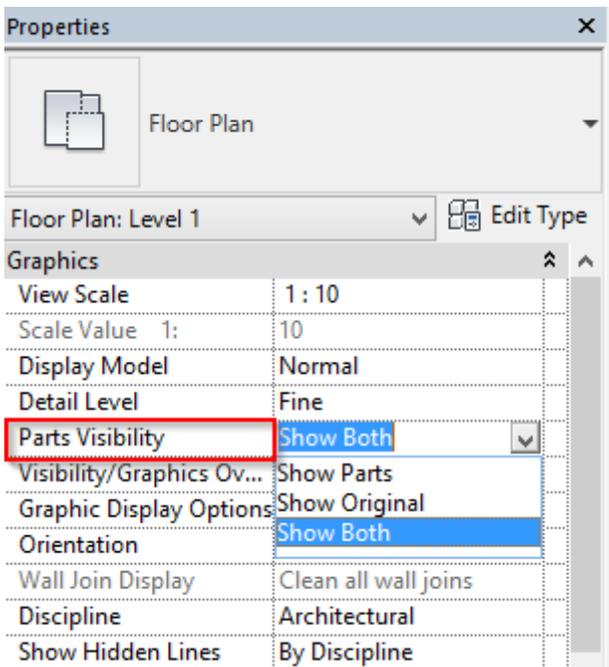

Example: Click **Select Main Parts by Layer in Wall** and you will be able to select only main parts from the framed wall:

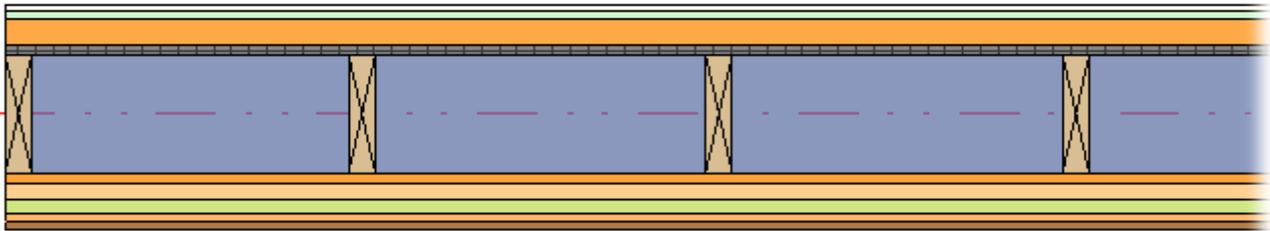


## Select Main Parts by Layer in Level

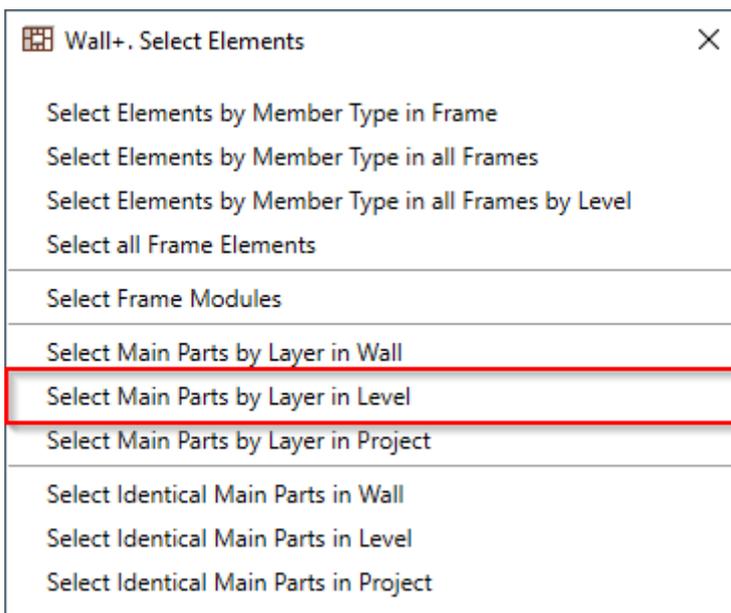


**Select Main Parts by Layer in Level** – selects main parts in the same type of framed walls in the same level.


Please make sure **Show Parts** or **Show Both** is selected in **View Properties** → **Parts Visibility**:

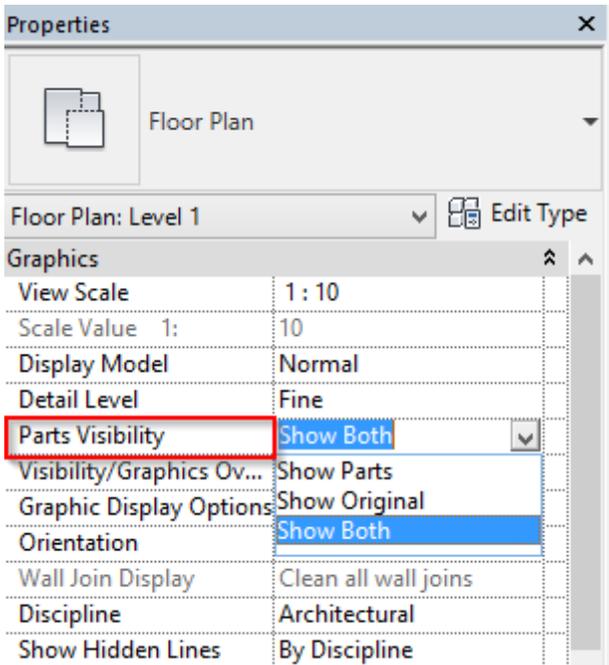

*Example: Click **Select Main Parts by Layer in Level** → Select one main part in the framed wall → All main parts of the same type in the same level will be selected. In this example, the main parts of external walls in the same level are selected:*

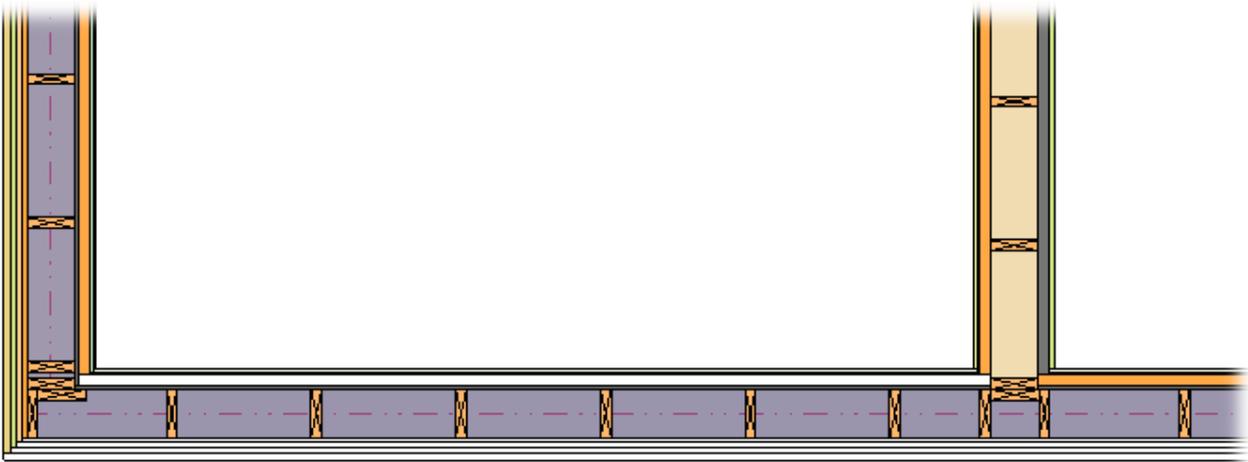


## Select Main Parts by Layer in Project

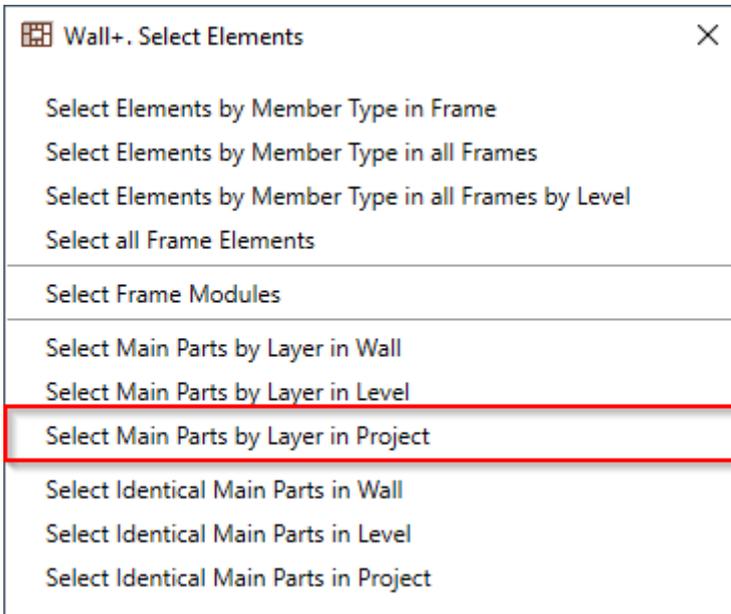


**Select Main Parts by Layer in Project** – selects main parts in the same type of framed walls in the whole project.


Please make sure **Show Parts** or **Show Both** is selected in **View Properties** → **Parts Visibility**:

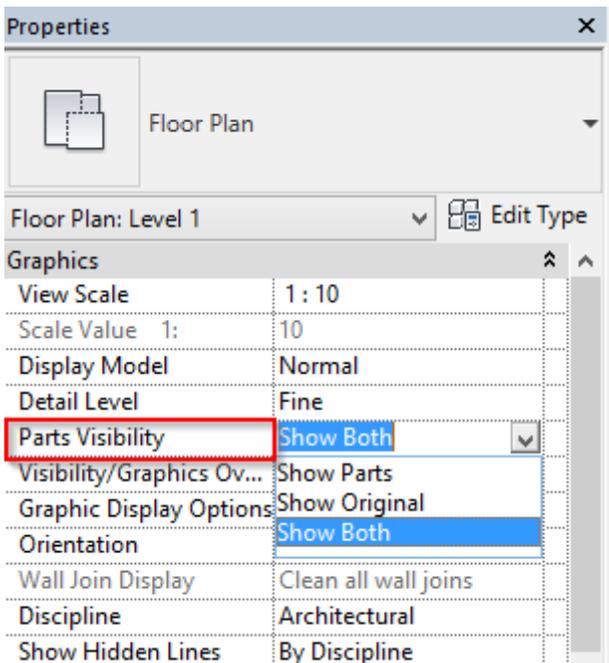

*Example: Click **Select Main Parts by Layer in Project** → Select one main part in the framed wall → All main parts of the same type in the whole project will be selected. In this example, the main parts of external walls are selected from all levels:*

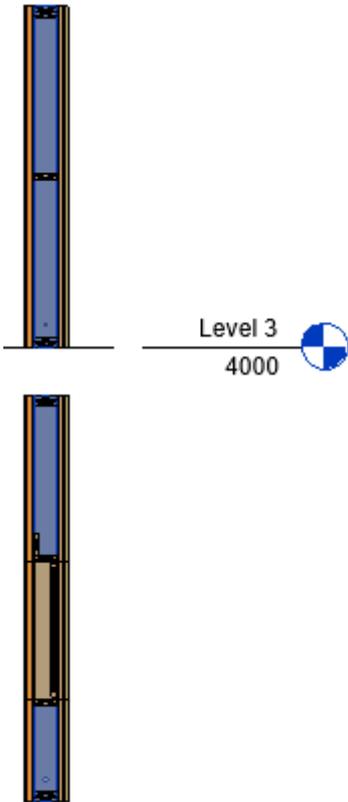


## Select Identical Main Parts in Wall

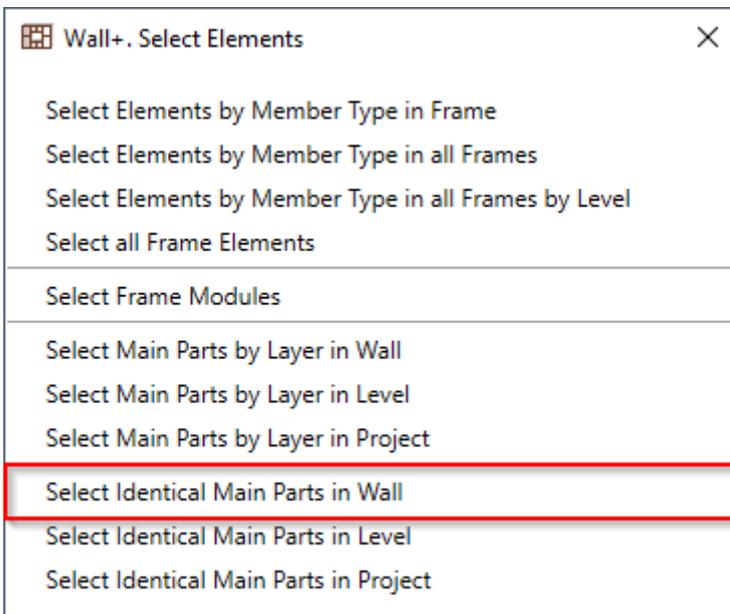


**Select Identical Main Parts in Wall** – selects identical main parts in the framed wall.

Please make sure **Show Parts** or **Show Both** is selected in **View Properties** → **Parts Visibility**:

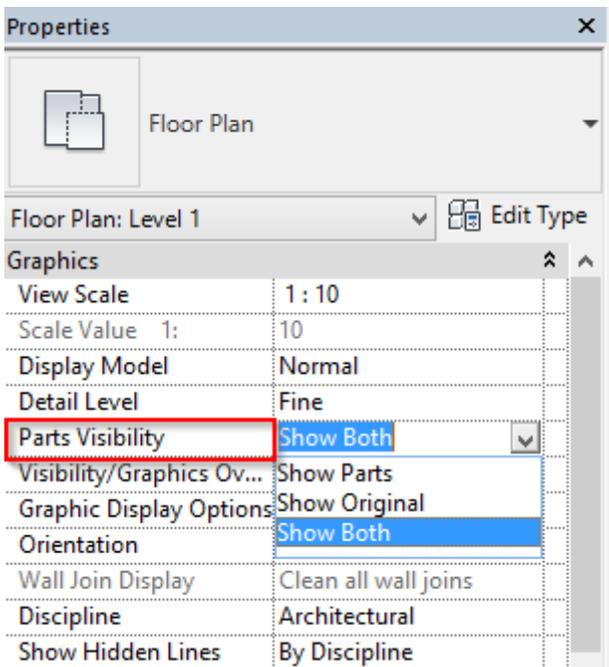


## Select Identical Main Parts in Level

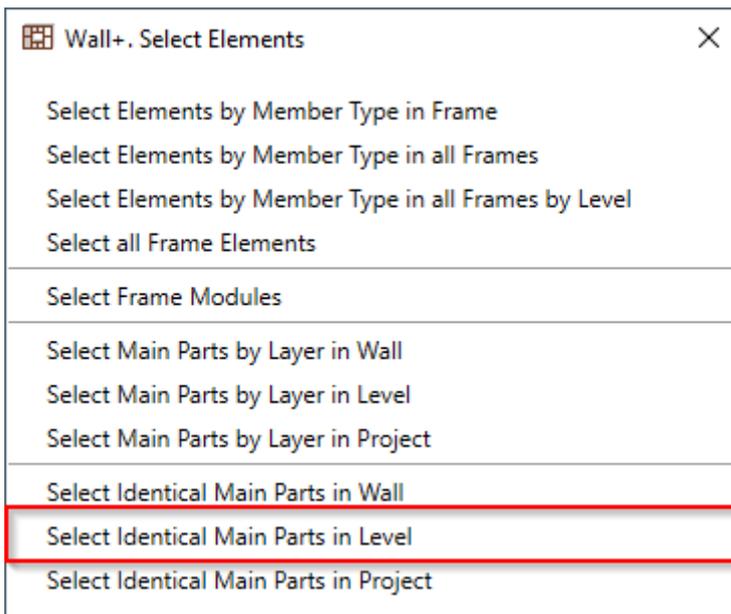


**Select Identical Main Parts in Level** – selects identical main parts of framed walls in the same level.


Please make sure **Show Parts** or **Show Both** is selected in **View Properties** → **Parts Visibility**:

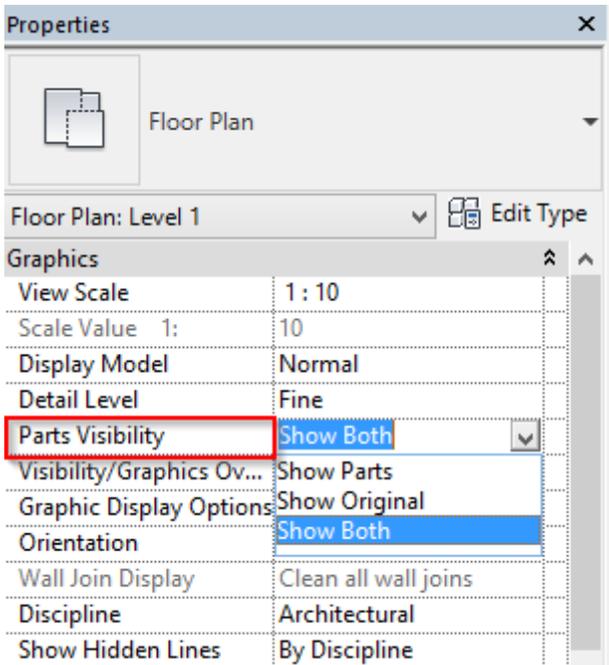

*Example: Click **Select Identical Main Parts in Level** → Select one main part in the framed wall → All identical main parts in the same level will be selected:*

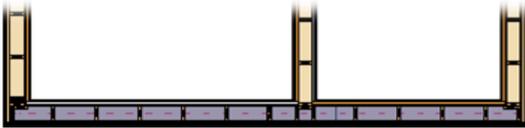


## Select Identical Main Parts in Project

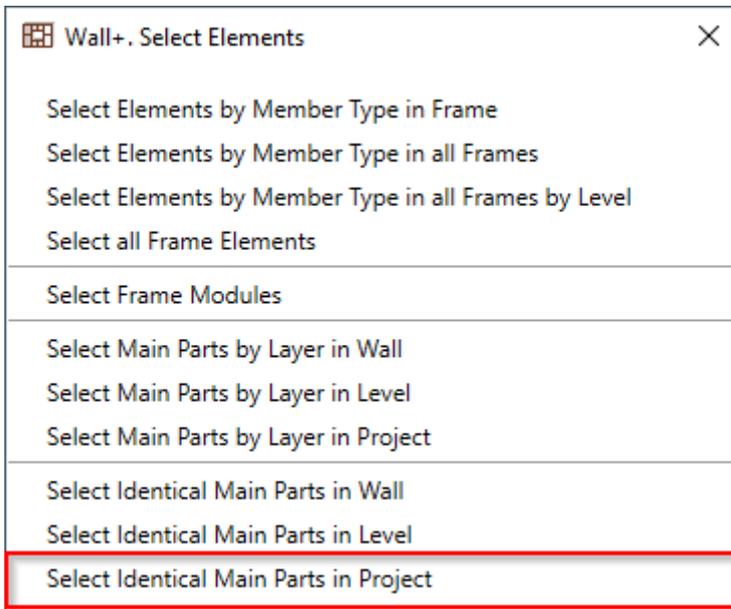

**Select Identical Main Parts in Project** – selects identical main parts of framed walls in the whole project.

Please make sure **Show Parts** or **Show Both** is selected in **View Properties** → **Parts Visibility**:

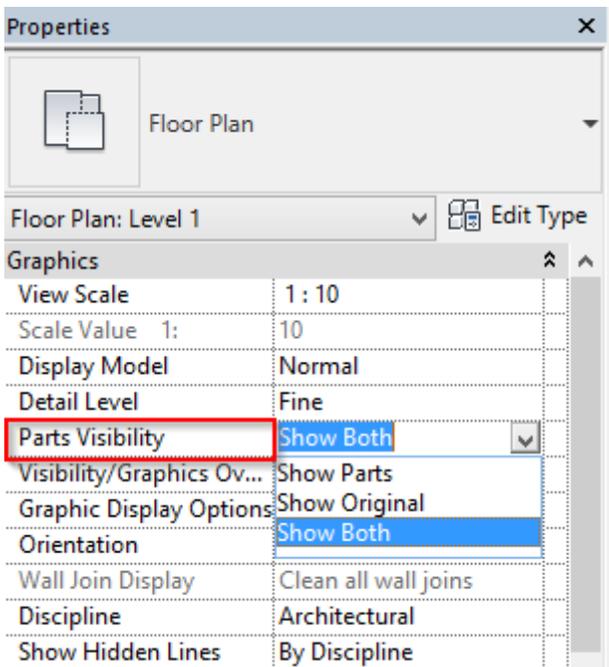

*Example: Click **Select Identical Main Parts in Project** → Select one main part in the framed wall → All identical main parts in the whole project will be selected. In this example, identical main parts are selected from all levels:*

