TOOLS 4 BIM DOCK
INSTALLATION & ACTIVATION GUIDE

Standalone License Activation Instruction
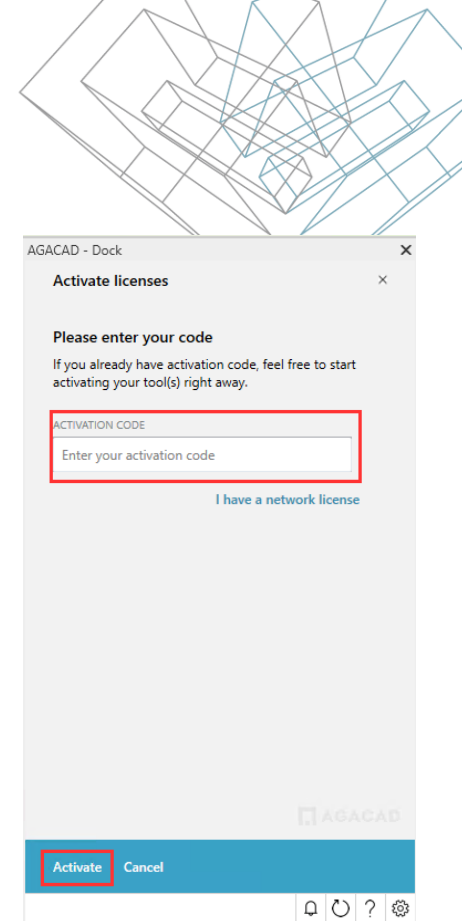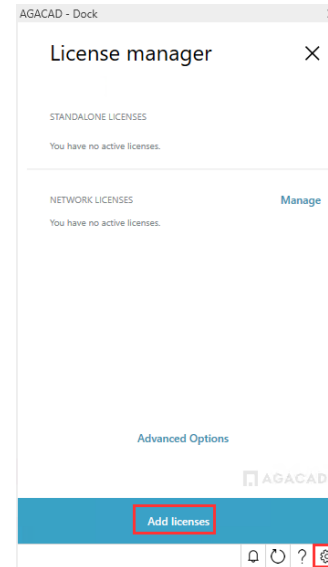
AGACAD
TOOLS 4 BIM
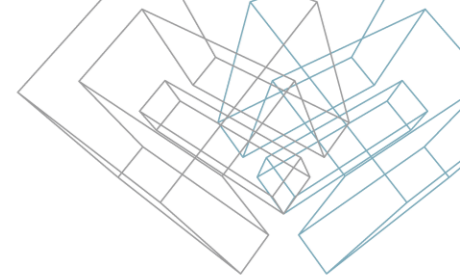
Before Activation

1. Make sure your computer has active Internet connection;

2. Make sure that your firewall is not blocking outgoing communication from Revit processes.

Activation Instructions

1. Click on "Activate licenses" or click on the gear icon on the bottom right corner and click on "Add licenses" to access License Manager

2. Copy the activation code from the PDF file that you receive after purchase.

3. Paste the activation code and click on Activate.

4. Activated tools will be installed automatically. They will be visible in My Tools tab.

Report on Trial or Permanent Licenses

You can find a detailed report with expiration dates by clicking on "Gear" button:
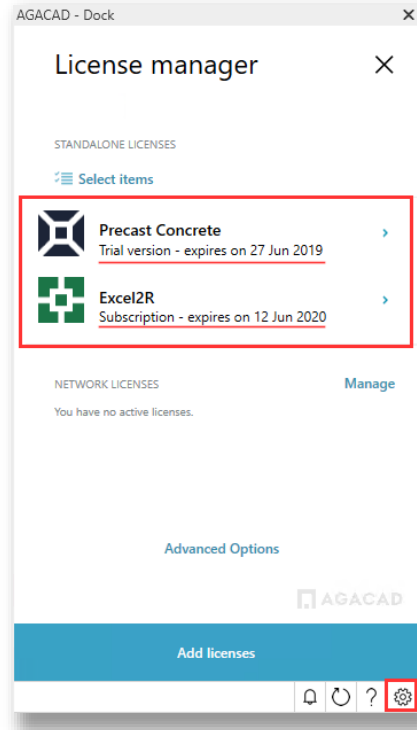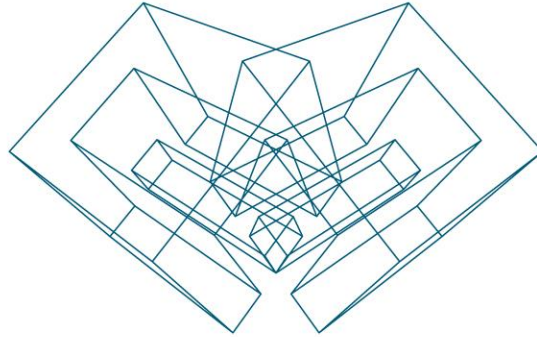
ENJOY WORKING WITH OUR PRODUCTS!

AGA CAD Ltd
T: +370 618 55671 | E: support@aga-cad.com | W: www.aga-cad.com