# Modify Elements

Modified on: Mon, 22 Jun, 2020 at 11:09 AM

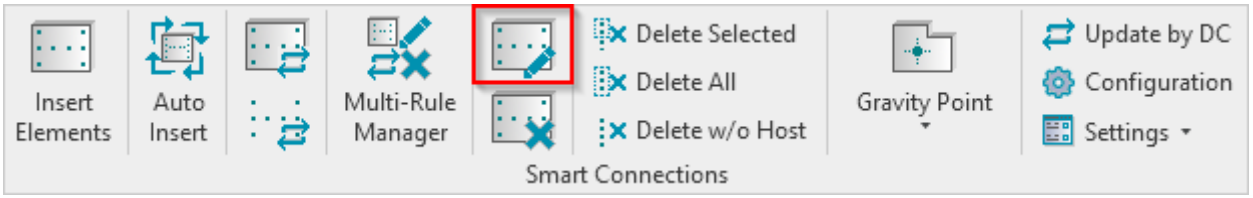


The **Modify Elements** allows you to do the following things:

1. Modify insert settings for one selected Host instance:

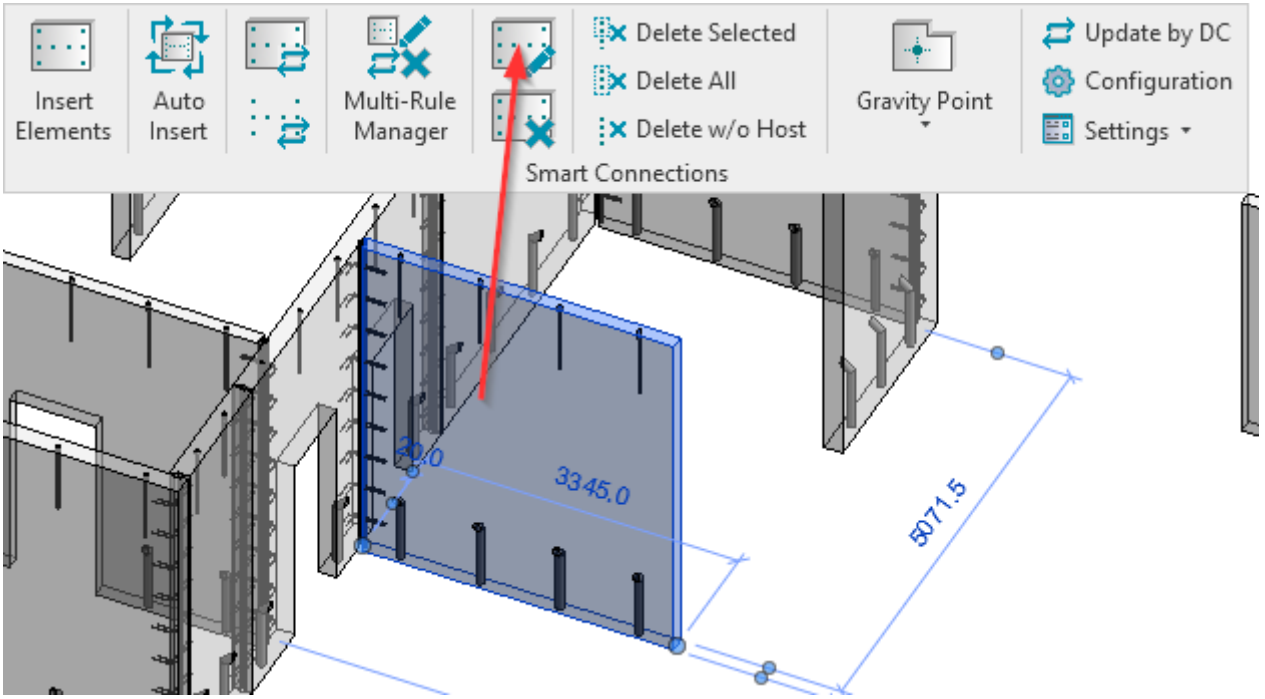

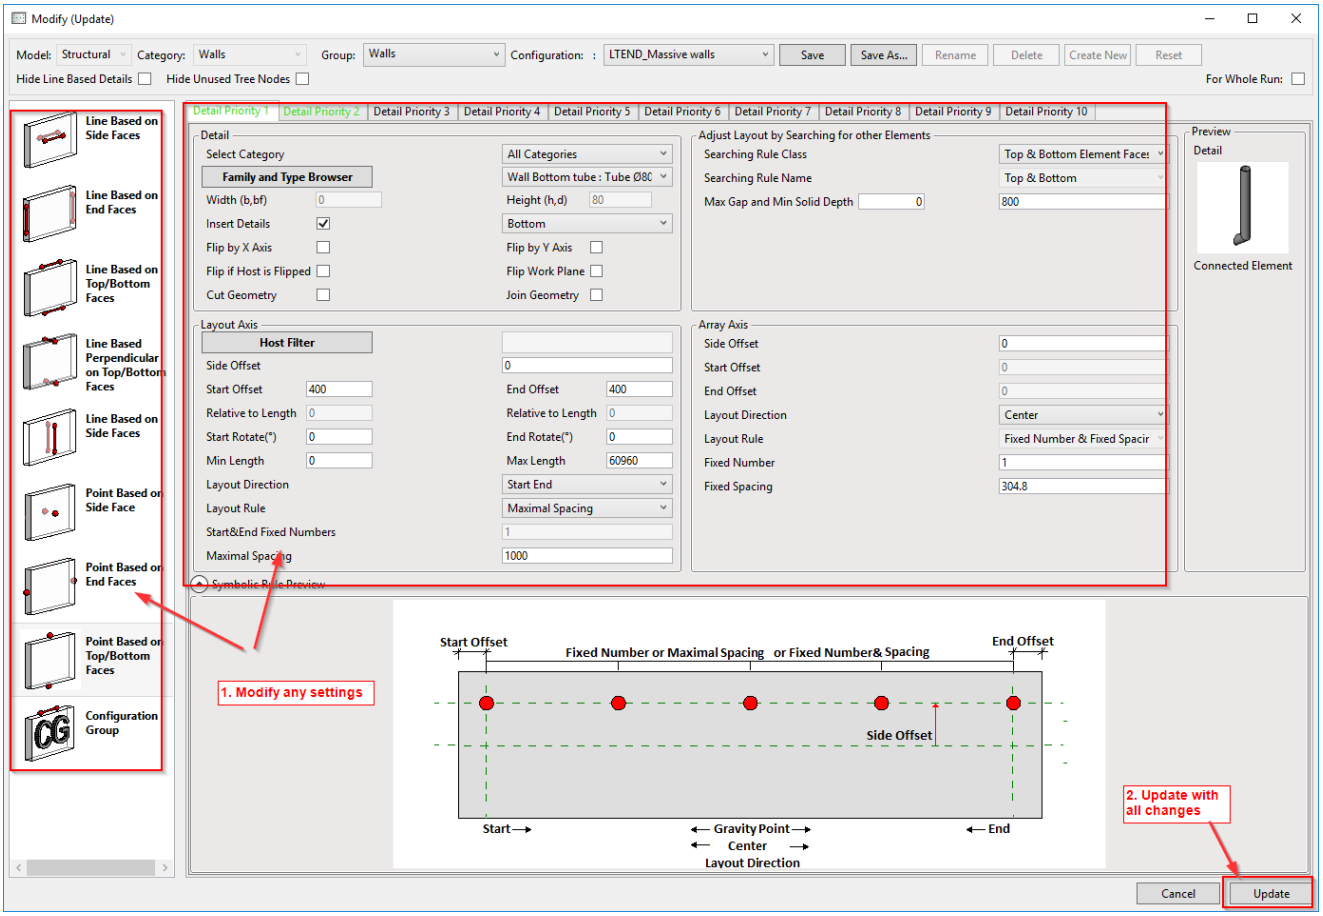


2. Save Configuration from element to computer with same or different name.

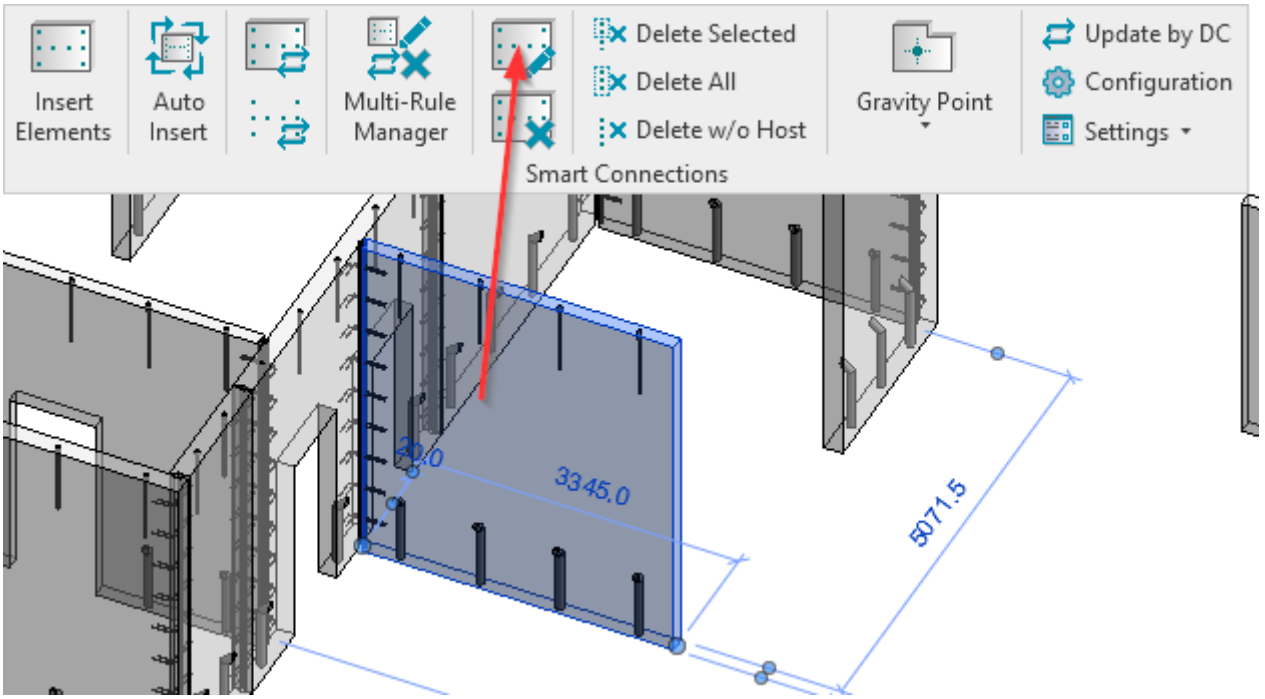

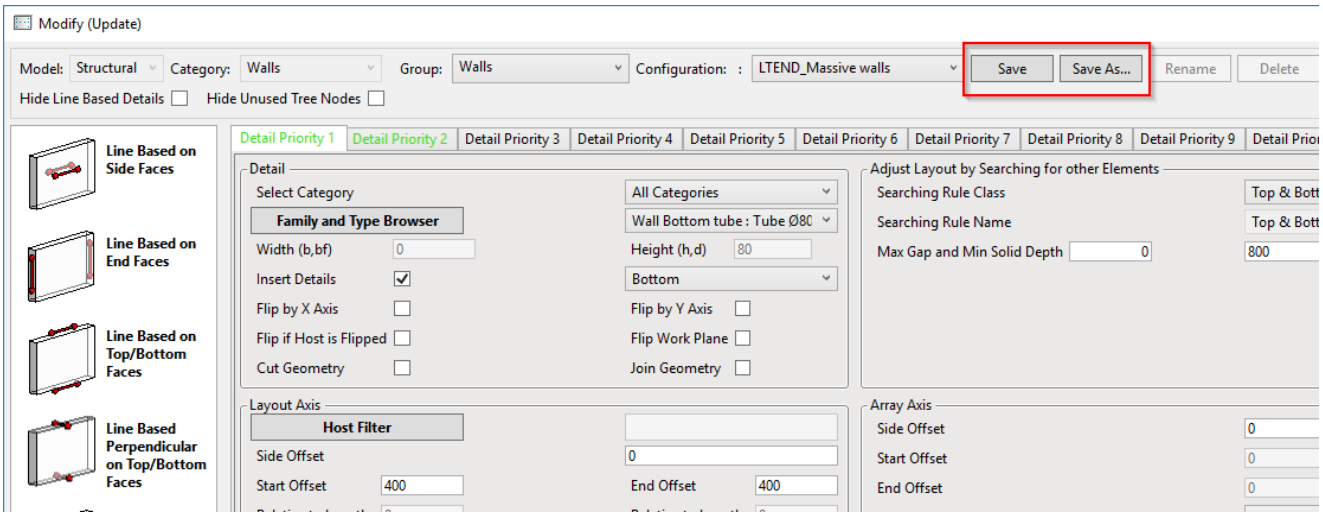
Modify (Update)
Model: Structural
Category: Walls
Group: Walls
Configuration: : LTEND_Massive walls
Save
Save As...
Rename
Delete
Hide Line Based Details
Hide Unused Tree Nodes
Line Based on Side Faces
Line Based on End Faces
Line Based on Top/Bottom Faces
Line Based Perpendicular on Top/Bottom Faces
Detail Priority 1
Detail Priority 2
Detail Priority 3
Detail Priority 4
Detail Priority 5
Detail Priority 6
Detail Priority 7
Detail Priority 8
Detail Priority 9
Detail
Select Category
All Categories
Family and Type Browser
Wall Bottom tube : Tube Ø80
Width (b,bf)
Height (h,d)
Insert Details
Bottom
Flip by X Axis
Flip by Y Axis
Flip if Host is Flipped
Flip Work Plane
Cut Geometry
Join Geometry
Adjust Layout by Searching for other Elements
Searching Rule Class
Searching Rule Name
Max Gap and Min Solid Depth
Layout Axis
Host Filter
Side Offset
Start Offset
End Offset
Array Axis
Side Offset
Start Offset
End Offset