

IDEA Connections

User guide

Content

1.1 Program requirements	4
1.1 Installation guidelines	4
2 User interface	5
2.1 3D view in the main window	5
2.1.1 Manipulating 3D view.....	6
3 Working with project	8
3.1 Starting new project	8
4 Joint input and design.....	10
4.1 Project data.....	10
4.2 Joint geometry	11
4.2.1 Ribbon group Member edit	12
4.3 Load effects	13
4.3.1 Ribbon group Loads edit.....	14
4.3.2 Ribbon group Advanced mode.....	14
4.4 Joint design and manufacturing operations	15
4.4.1 Cut	17
4.4.2 Stiffener.....	20
4.4.3 Widener	24
4.4.4 Rib	28
4.4.5 Opening	31
4.4.6 Plate to plate	33
4.4.7 End plate.....	37
4.4.8 Shifted end plate.....	42
4.4.9 Stub.....	45
4.4.10 Fin plate.....	48
4.4.11 Gusset plate	51
4.4.12 Base plate	60
4.4.13 Splice.....	64
4.4.14 Connecting plate (hollow sections).....	70
4.4.15 Cleat	79
4.4.16 General plate	83
4.4.17 Plate cut.....	91
4.4.18 Fastener grid.....	96
4.4.19 Weld	99
4.4.20 Welds properties.....	101

4.4.21 Input of bolts by layers.....	101
4.4.22 Input of bolt assembly	102
4.4.23 User defined templates of manufacturing operations.....	103
4.4.24 Ribbon group Operations	107
4.4.25 Ribbon group CBFEM	107
4.5 Plate editor.....	109
4.5.1 Ribbon group Operations	109
5 Joint check.....	113
5.1 Analysis status.....	114
5.2 Plates check	115
5.3 Bolts check	116
5.4 Concrete block check	118
5.5 Shear in contact plane check	119
5.6 Welds check	120
5.7 Evaluation of joint stiffness.....	122
5.8 Evaluation of local buckling analysis.....	123
5.9 Ribbon group CBFEM	124
5.10 Ribbon group FEM analysis.....	124
5.11 Report of current joint check.....	125
5.12 Bill of material of current joint	126
5.13 National code and calculation settings	127
5.14 Advanced FEM analysis settings	129
6 Joints in project	131
6.1 Ribbon group New item	132
6.2 Adding a new joint	132
6.3 Calculation report.....	133
6.4 One line report.....	133
6.4.1 One page report	133
6.5 Detailed report.....	134
6.6 Ribbon group Report view	135
7 Materials, cross-sections and bolts in project.....	136
7.1 Cross-sections.....	136
7.2 Materials.....	138
7.3 Bolt assemblies.....	139

1.1 Program requirements

Application requires .NET Framework 4.5 to be installed on your computer. You can download it from web pages of Microsoft company.

(<http://www.microsoft.com/downloads/details.aspx?displaylang=en&FamilyID=0a391abd-25c1-4fc0-919f-b21f31ab88b7>). In case of a missing .NET Framework 4 the installation will not be launched.


1.1 Installation guidelines

IDEA Connections program is installed as a part of IDEA StatiCa package.

2 User interface

The items of user interface of the application are composed into following groups:


- Navigator – it contains main commands for the work with a project
- Ribbons – there are sets of controls. Ribbons are changed according to the current command on Navigator.
- Main window – it is used mainly for appropriate drawings
- Data window – properties of objects and results of analysis are displayed in this window according to current command of Navigator
- All other IDEA applications have the similar design.

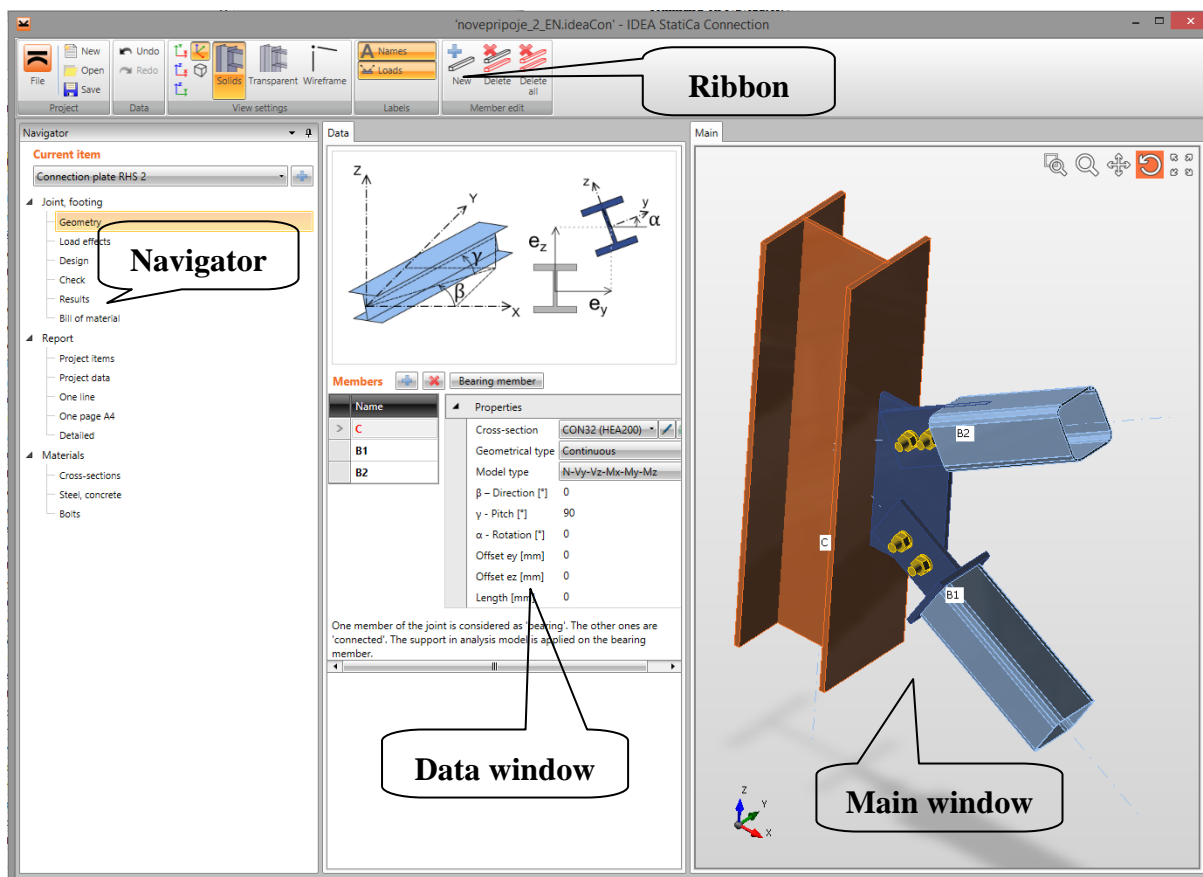






2.1 3D view in the main window

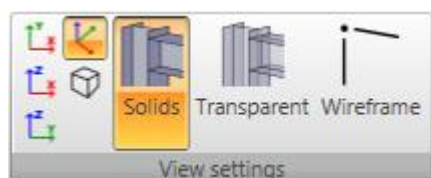
3D view of current joint is drawn in the Main window.

Ribbon group **View settings** is used to set the 3D view:



-  – switch to the top view (opposite the direction of positive Z-semi-axis of global coordinate system).
-  – switch to the front view (opposite the direction of positive Y-semi-axis of global coordinate system).
-  – switch to the front view (opposite the direction of positive X-semi-axis of global coordinate system).

-  – switch to the default 3D view and zooms the structure to fit into the main window.
-  – switch on/off the perspective view mode.
- **Solids** – switch to draw all joint items as solids respecting the edges visibility.
- **Transparent** – switch to draw all joint items as transparent solids.
- **Wireframe** – switch to draw only the axial scheme of joint members.

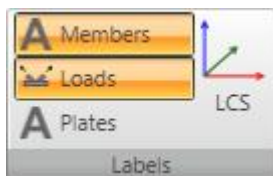

Ribbon group **Labels** is used to draw load effects and labels:

- **Names** – switch on/off drawing of names of joint members.
- **Loads** – switch on/off drawing of defined load effects in the current load case.
- **Plates** – switch on/off drawing of names of plates.
- **LCS** – switch on/off drawing of local coordinate systems of members.

2.1.1 Manipulating 3D view

To set the required view point in 3D window use commands in right top corner of 3D window or keyboard shortcuts with mouse keys.

Commands in 3D window:



- zoom window. Click this button and drag mouse with holding left mouse button to draw window to zoom.



- increase/decrease view. Click this button and drag mouse with holding left mouse button to increase/decrease the view.



- pan the view. Click this button and drag mouse with holding left mouse button to pan the view.




- rotate the view. Click this button and drag mouse with holding left mouse button to rotate the view.



- zoom all. Click this button to fit the whole structure to the 3D window.

To set the required view using keyboard and mouse following combinations can be used:

- Click and hold mid mouse button – moving the mouse pans the view.
 - push CTRL and hold mid mouse button – moving the mouse rotates the view
 - push SHIFT and hold mid mouse button – moving the mouse increases/decreases the view

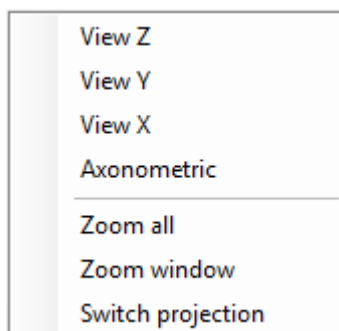


Right mouse button click into the 3D window displays following context menu:

- **View Z** – switch the view opposite the global Z-axis.
- **View Y** – switch the view opposite the global Y-axis.
- **View X** – switch the view opposite the global X-axis.

- **Zoom all** – zoom the view to fit the whole structure.
- **Zoom window** – zoom the defined rectangular area.
- **Switch projection** – switch between the axonometric and perspective view.

3 Working with project


Use commands in ribbon group **Project** to work with project file:

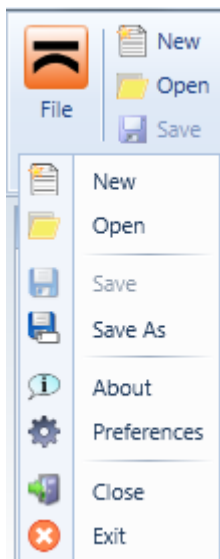


- **New** – create a new project.
- **Open** – open an existing project (files with extension *.idea Connection or *.wsConnection).
- **Save** – save the current project into the data file.
- **Save as** – save the current project into the data file using a new file name.
- **About** – open the About application dialog.
- **Preferences** – open a dialog to set the application language or the logo for printed reports.
- **Close** – close the current project.
- **Exit** – close the application.

3.1 Starting new project

Click **New** in ribbon group **Project** to create a new project. Dialog **New joint wizard** appears.

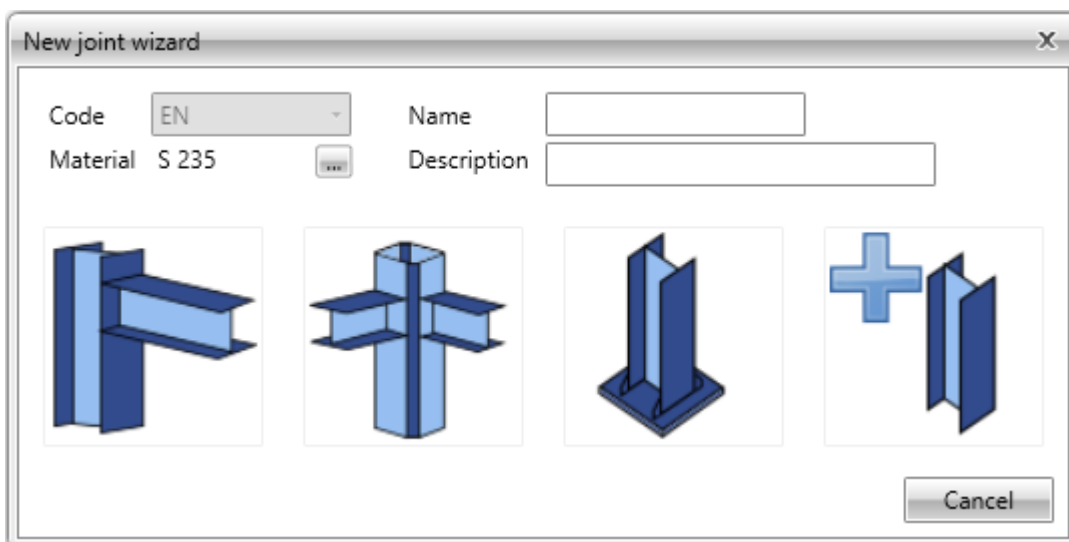


Dialog **New joint wizard** options:

- **Material** – set the default joint material. Click  to select the material from the system database.
- **Name** – input the joint name.
- **Description** – input the joint description.
- **Frame 2D** – start input of new 2D frame joint using one of predefined topologies. Members of joint are generated according to the chosen topology.
- **Frame 3D** – start input of new 3D frame joint using one of predefined topologies. Members of joint are generated according to the chosen topology.

- **Anchor** - start input of new anchor joint using one of predefined topologies. Members of joint are generated according to the chosen topology.
- **General** – start input of new general joint. Individual members of joint must be defined manually.

4 Joint input and design

Current item

Connecting plate RHS 1 

Joint, footing

- Geometry
- Load effects
- Design
- Check
- Results
- Bill of material

Individual joint data are defined using corresponding navigator commands.

The joint is defined by:

- Geometry – 1D members connected in the joint.
- Load effects – internal forces at ends of joint members.
- Manufacturing operations and additional items – cuts, stiffeners, end plates, bolts, anchors etc.

4.1 Project data

Click navigator command **Report > Project items** to display the table of basic and identification project data.

Project parameters	
Code	EN
Identification	
Name	
Number	
Author	
Description	
Date	1. 10. 2014

- **Code** – the national code is displayed.
- **Name** – input of the project name.
- **Number** – input of the project identification number.
- **Author** – input name of the project author name.
- **Description** – input of additional information about the structure.
- **Date** – date of calculation.


4.2 Joint geometry

Click navigator command **Joint, footing > Geometry** to define the geometry of joint. Individual 1D members with cross-sections and spatial positions are defined.

3D view of the current joint is drawn in the main window.

Table of current member properties is displayed in the data window.

Ribbon group **Member edit** is displayed.

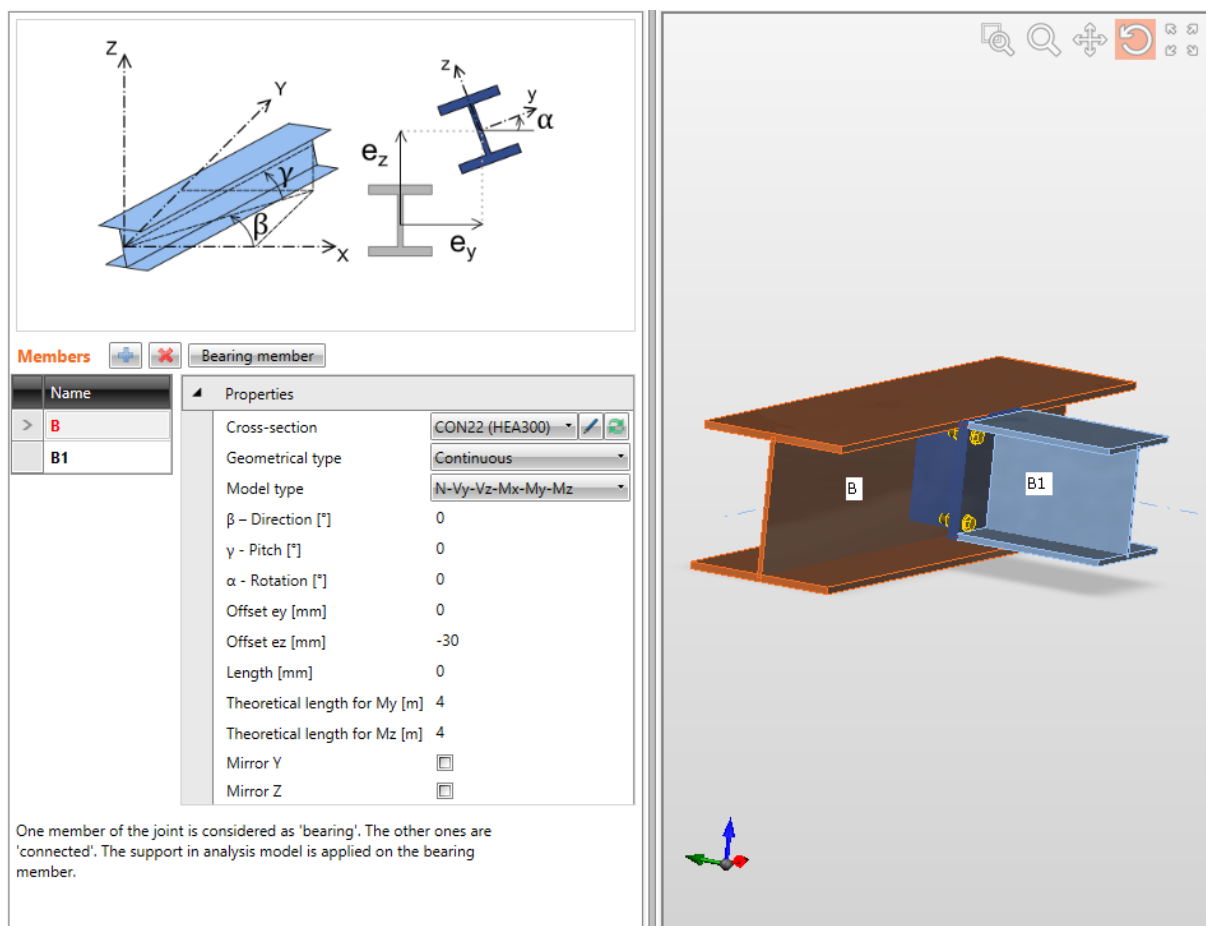



More members can be connected in one joint.

For stress and strain analysis one of the members must be set as the **Bearing member** – support is applied to this member in the analysis model.

For stiffness analysis one of the members must be set as the **Analysed member** – stiffness of this member is analysed, in the analysis model supports are applied to all other members.



Commands above the **Members** table:

-  - add a new member into the joint.
-  - delete the current member from joint.
- **Bearing member** – set the current joint member as a bearing member for Stress/Strain joint analysis type.
- **Analysed member** – set the current joint member as an analysed member for Stiffness joint analysis type.

List of joint members is displayed in the **Members** table:

- **Name** – input the name of the current member. The name of bearing (analysed) member is highlighted.

The table of member properties is displayed for the current member:

- **Cross-section** - assign the selected cross-section to the member. Cross-section can be selected from the list of all available cross-sections. Click  to change cross-section parameters. Click  to add a new cross-section and assign it to the appropriate member.
- **Type of geometry** – select the geometrical model of member:
 - **Continuous** – the member is continuous – it means that the mid of the member is placed into the theoretical centre of joint.
 - **Ended** – the end of the member is placed into the theoretical centre of joint.
- **Model type** – select the physical model of the member:
 - **N** – member can transfer forces only in the direction of local x-axis – normal force N.
 - **N-Vz-My** – member can transfer forces only in xz -plane of local axes – normal force N, shear force Vz, bending moment My.
 - **N-Vy-Mz** – member can transfer forces only in xy -plane of local axes – normal force N, shear force Vy, bending moment Mz.
 - **N-Vy-Vz-Mx-My-Mz** – member can transfer forces in all directions.
- **β – direction** – input the rotation of member about Z-axis of global coordinate system (the direction of member in global XY-plane).
- **γ – pitch** – input the angle between the member x-axis and the XY-plane of global coordinate system.
- **α – rotation** – input the rotation of the member about the local x-axis of the member.
- **Offset ey** – input of offset (eccentricity) of the current member in the direction of y-axis of local coordinate system of the member.
- **Offset ez** – input of offset (eccentricity) of the current member in the direction of z-axis of local coordinate system of the member.
- **Length** – input of the length of member. Value 0 means that the length is calculated automatically according to the height of cross-section.
- **Theoretical length My** – input of theoretical length for stiffness classification.
- **Theoretical length Mz** – input of theoretical length for stiffness classification.
- **Mirror Y** – if selected, the cross-section of member is mirrored according to plane XY of local coordinate system of member.
- **Mirror Z** – if selected, the cross-section of member is mirrored according to plane XZ of local coordinate system of member.

4.2.1 Ribbon group Member edit



- **New** – add a new member into the joint.
- **Delete** – delete the current member from the joint.
- **Delete all** – delete all members from the joint.

4.3 Load effects

Click navigator command **Joint, footing > Load effects** to input values of load effects (internal forces) in the joint.

The joint is loaded by load effects (internal forces) acting on individual members of joint. The load effects are assigned to groups – load cases. More load cases can be defined in one joint. The calculation and check is performed separately per each defined load case.

Load effects may be defined in one of following modes:


- Complete input of load effects on all members. Load effects equilibrium is checked.
- Limited input only on connected members. Load effect cannot be defined on bearing member. Bearing member is fully supported, continuous member is supported on ends.

The mode of load effects definition can be selected in ribbon group **Advanced mode**.

3D view of joint is displayed in the main window.

Table **Load effects** is displayed in the data window.

Ribbon groups **Loads edit** and **Advanced mode** are displayed.

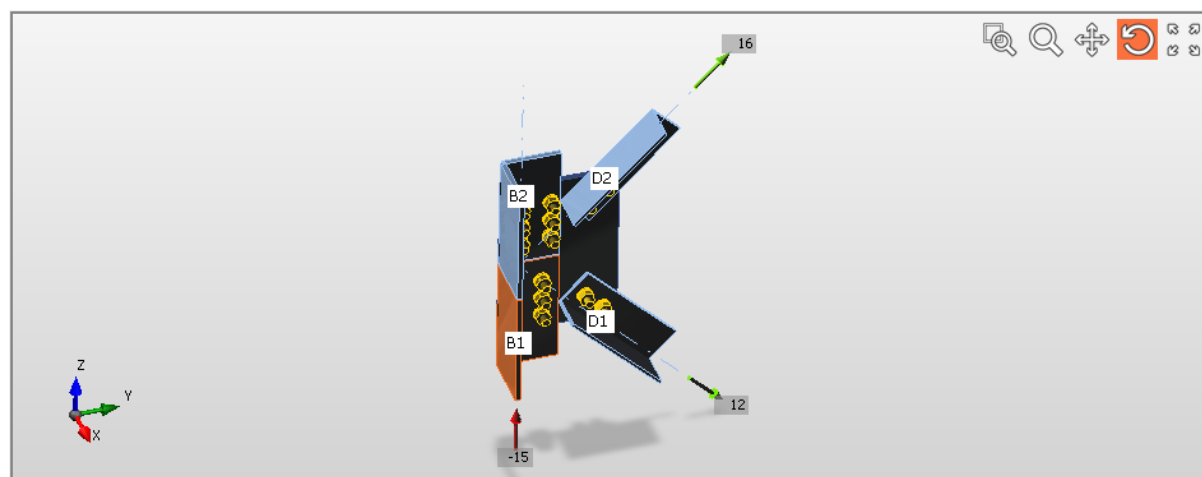


The screenshot shows the IDEA RS software interface. The top part displays a 3D model of a joint with members B1, B2, D1, and D2. A coordinate system (X, Y, Z) is shown in the bottom left. The bottom part of the interface shows the 'Data' window with the 'Load effects' ribbon group selected. The 'Internal forces' table is displayed, showing values for members B1, D1, B2, and D2. Below this table, a note states: 'Values in disabled cells are not taken into account in CBFEM analysis. According to its type the member cannot resist loading in corresponding direction.' The 'Unbalanced forces' table is also shown at the bottom.


Member	Position	X [m]	N [kN]	Vy [kN]	Vz [kN]	Mx [kNm]	My [kNm]	Mz [kNm]
B1	End	0	-15	0	0	0	0	0
D1	End	0	12	0	0	0	0	0
B2	End	0	0	0	0	0	0	0
D2	End	0	16	0	0	0	0	0

Values in disabled cells are not taken into account in CBFEM analysis.
According to its type the member cannot resist loading in corresponding direction.

X [kN]	Y [kN]	Z [kN]	Mx [kNm]	My [kNm]	Mz [kNm]
0,000	19,799	17,828	0,000	0,000	0,000

Commands above the **Load effects** table:

-  - add a new load effect into the joint.

-  - delete the current load effect from the joint.

Columns in the **Load effect** table:

- **Name** – input name of load effects group.
- **Description** – input description of load effects group.

Values of internal forces on ends of individual members are defined in the **Internal forces** table.

Columns in **Internal forces** table:

- **Member** – name of member is displayed.
- **Position** – position of load effect on individual member is displayed.
- **X** - input of distance of force from the beginning of joint.
- **N** – input of axial force in the direction of x-axis of the member local coordinate system.
- **Vy** – input of shear force in the direction of y-axis of the member local coordinate system.
- **Vz** – input of shear force in the direction of z-axis of the member local coordinate system.
- **Mx** – input of torsional moment about x-axis of the member local coordinate system.
- **My** – input of bending moment about y-axis of the member local coordinate system.
- **Mz** – input of bending moment about z-axis of the member local coordinate system.

4.3.1 Ribbon group Loads edit



- **New** – add new loads effect into the joint.
- **Delete** - delete the current load effect from the joint.
- **Delete all** – delete all load effects from the joint.

4.3.2 Ribbon group Advanced mode



- **Check equilibrium** – switch on/off the mode of check of equilibrium of defined load effects. If the option is selected, the load effects can be defined on all joint members and the equilibrium of effects is checked. Otherwise load effects cannot be defined on bearing member, but only on connected members.

4.4 Joint design and manufacturing operations



The joint design consists of several manufacturing operations, which modify the shape of members and create additional items required for proper joint check (cuts, end plates, stiffeners, bolts, anchors etc.). Click navigator command **Joint, footing > Design** to design the joint.


3D view of joint is displayed in the main window.

Table **Manufacturing operations** is displayed in the data window.


Ribbon groups **Operations** and **CBFEM** are displayed.

Commands above the table **Manufacturing operations**:

-  - add a new manufacturing operation into the joint.
-  - delete the current manufacturing operation from the joint.
- **Delete all** – delete all manufacturing operations from the joint.
- **Calculate** – start analysis of the joint.
- **Editor** – launch plates editor. This command is available only for operations, which create plates.

Click  above the table or click **New** in ribbon group **Operations** to add a new manufacturing operation into the joint.

Click picture of required operation in the **Select operation** dialog.

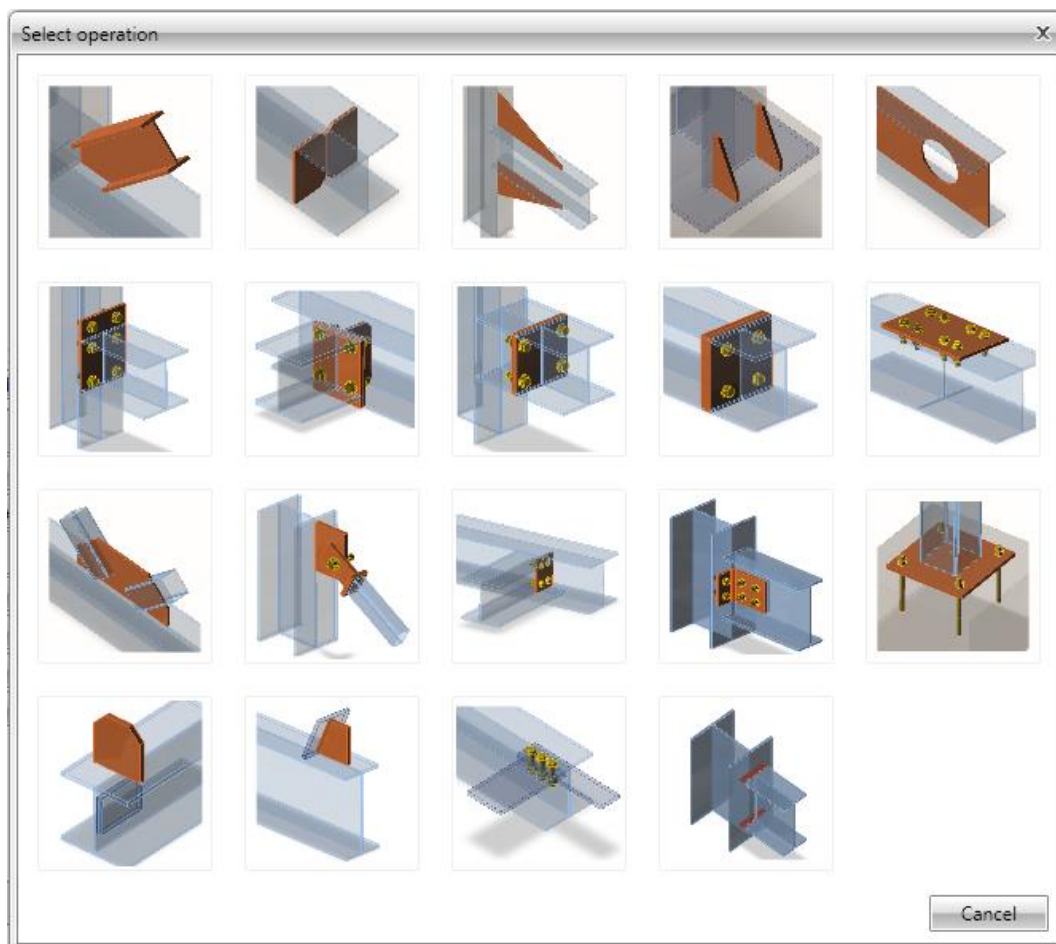


Following manufacturing operations are available:

- Cut – see **4.4.1 Cut**.
- Stiffener – **4.4.2 Stiffener**.
- Widener – see **4.4.3 Widener**.
- Rib - see **4.4.4 Rib**.
- Opening – see **4.4.5 Opening**.
- End plate – see **4.4.7 End plate**.
- Shifted end plate – see **4.4.8 Shifted end plate**.
- Stub – see **4.4.9 Stub**.
- Plate to plate – see **4.4.6 Plate to plate**.
- Splice – see **4.4.14 Splice**.
- Gusset plate – see **4.4.11 Gusset plate**.
- Connecting plate for hollow sections – see **4.4.16 Connecting plate (hollow sections)**. Fin plate – see **4.4.10 Fin plate**.
- Cleat – see **4.4.18 Cleat**.
- Base plate – see **4.4.13 Base plate**.
- General plate – see **4.4.20 General plate**.
- Plate cut – see **4.4.21 Plate cut**.
- Fasteners grid – see **4.4.22 Fastener grid**
- General weld – see **4.4.24 Weld**

4.4.1 Cut

Manufacturing operation **Cut** modifies ends of members.

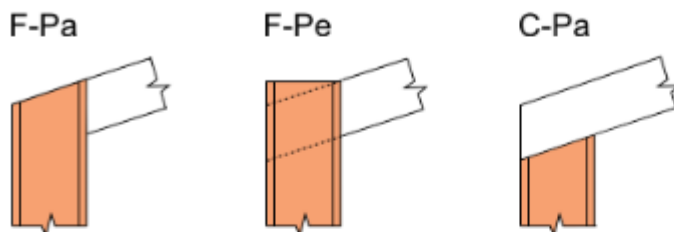

Manufacturing operations + × Delete all Calculate Editor

	Name
<input checked="" type="checkbox"/>	CUT1
> <input checked="" type="checkbox"/>	CUT2

Cut by member

Member: B

Cut by: C

Type: Member

Cutting plane: C - Closer

Direction: Pa - Parallel

Offset [mm]: 0

Welds

Flanges: 0 mm < default >

Webs: 0 mm < default >


Properties of manufacturing operation **Cut**:

- **Member** – select member to be modified by cut.
- **Cut by** – select member or plate, according to which the cut is performed.
- **Type** – select type of member, according to which the cut is performed:
 - **Member** – cut is performed according to selected member.
 - **Plate** – cut is performed according to selected existing plate (e.g. end plate).
- **Cutting plane** – select the plane, according to which the cut is performed. The plane position is referred to the beginning of modified member:
 - **C - Closer** – cut is performed using the plane closer to the beginning of the modified member.
 - **F - Farther** – cut is performed using the plane farther from the beginning of the modified member.
- **Direction** – select the direction of cut:
 - **Parallel** – cut is parallel to edges of cutting member (Cut by).

- **Perpendicular** – cut is parallel to the axis of the member, on which is the cut applied (Member).
- **Offset** – input the distance between the cut and the cutting plane.


Properties group **Welds** – input of welds properties – see **4.4.25 Welds properties**:

- **Flanges** – properties of welds on flanges of connected member.
- **Webs** – properties of welds on webs of connected member.

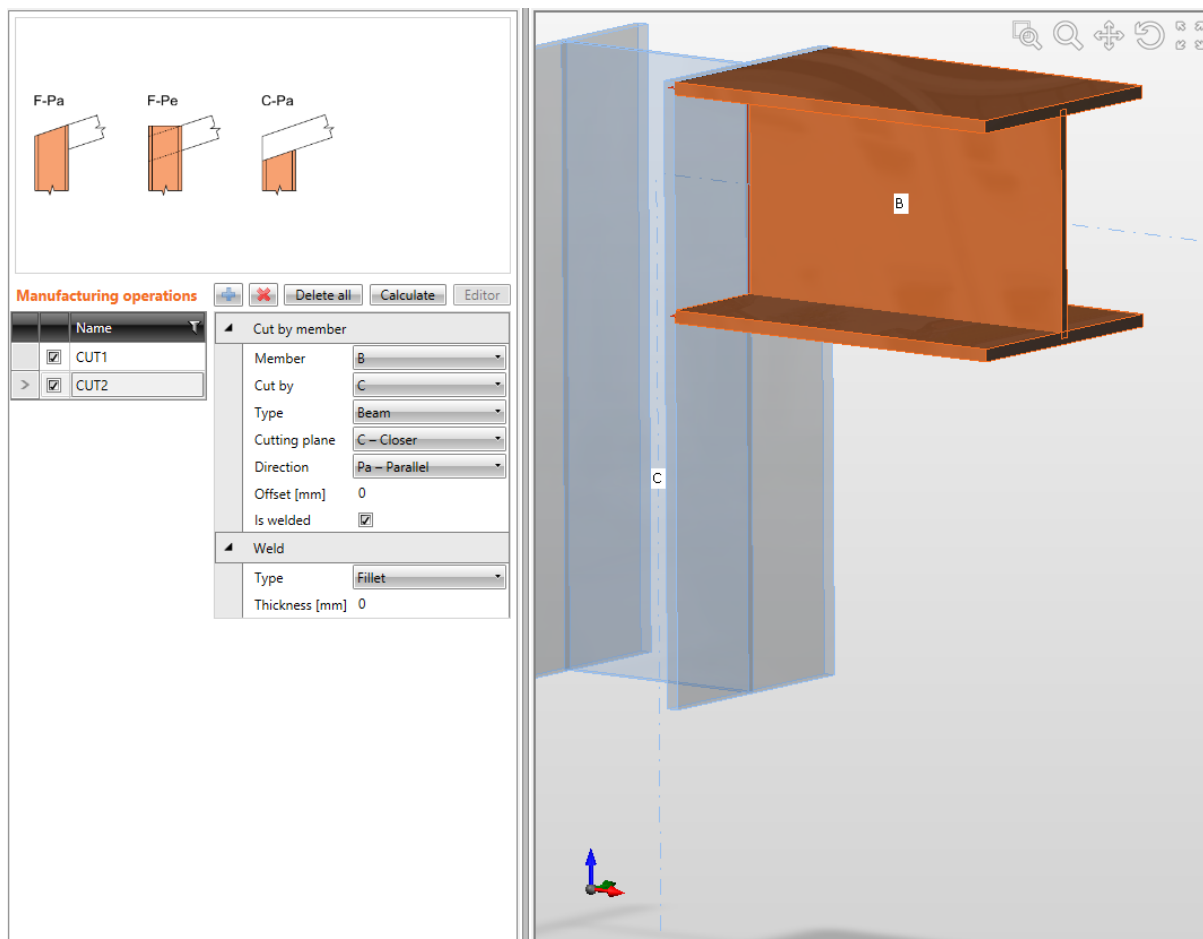

Knee connection cut.

First Cut operation is applied on column C and cuts the column according to farther edge of beam B. Second Cut operation is applied on beam B and is cuts the beam according to closer edge of column C.

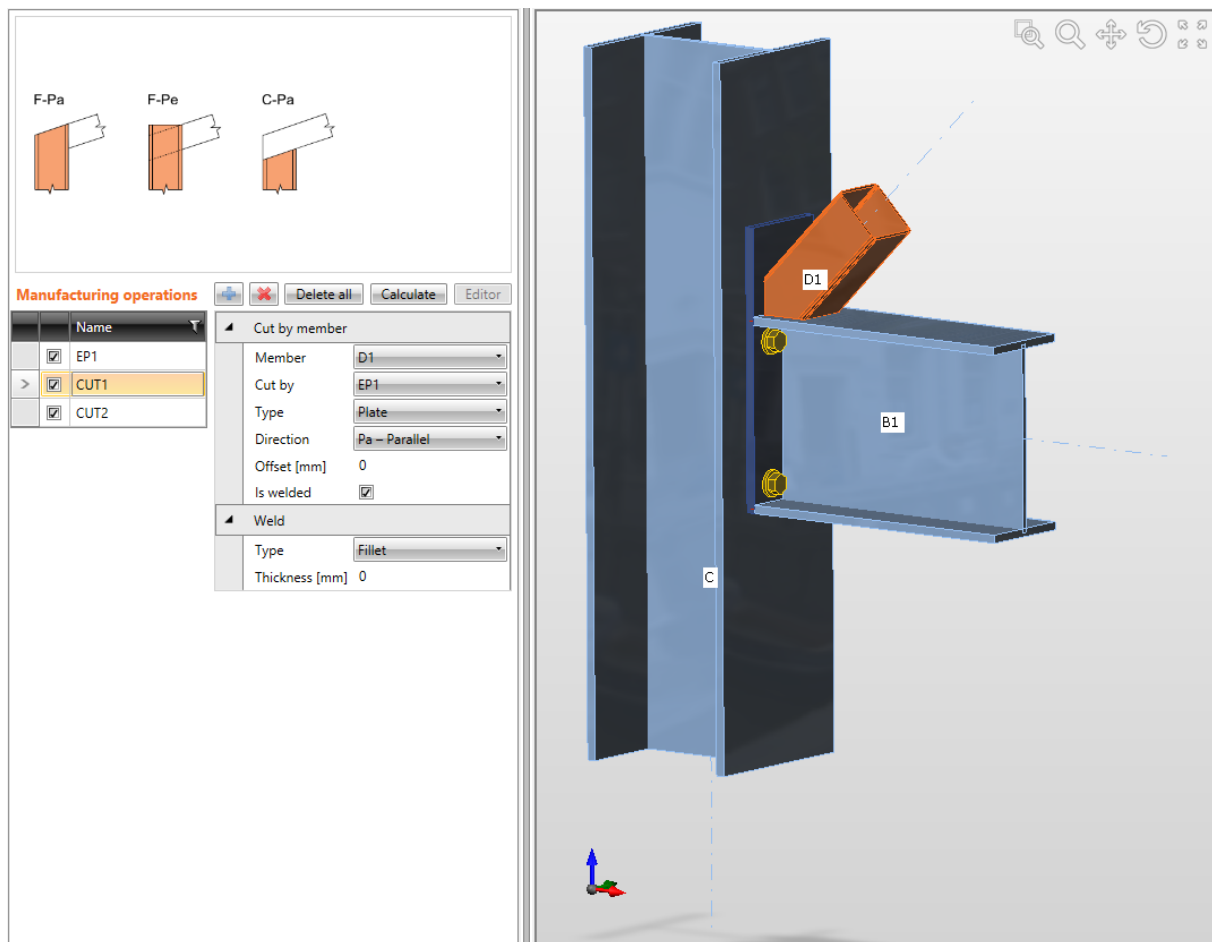

Cut of bracing.


Operation End plate is applied on beam B1. The operation connects beam B1 to column C using a bolted end plate.

First Cut operation is applied on the diagonal D1 and the diagonal is cut by end plate EP1.

Second Cut operation is also applied on diagonal D1 and the diagonal is cut by beam B1.

4.4.2 Stiffener

Manufacturing operation **Stiffener** adds “vertical” stiffeners into the beam or stiffeners into the knee connections.

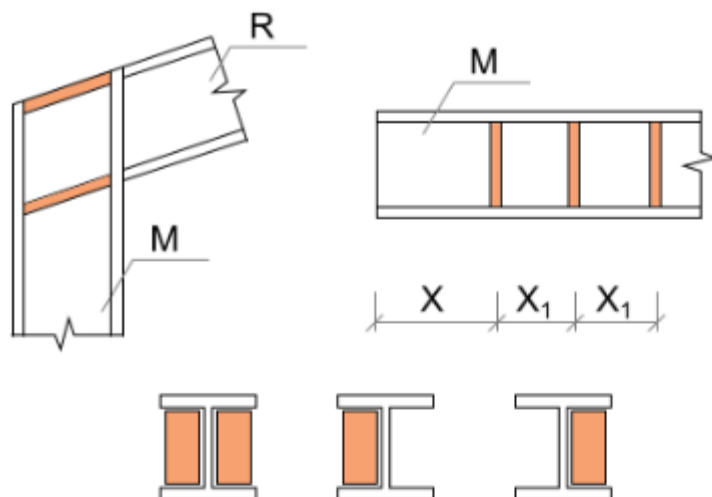

Manufacturing operations		Delete all Calculate Editor	
	Name		
<input checked="" type="checkbox"/>	CUT1		
<input checked="" type="checkbox"/>	CUT2		
>	<input checked="" type="checkbox"/> STIFF1		

Stiffeners	
M – on member	C
R – related to	B
Position	Both
Material	< default >
Thickness [mm]	0
Location	Both
X - position [mm]	0
α - Inclination [°]	0,0
B – width [mm]	0
Offset top [mm]	0
Offset bottom [mm]	0
Repeat count	1
Gap [mm]	0
Chamfered corners	<input checked="" type="checkbox"/>
Chamfer cut size [mm]	0

Welds	
All welds	0 mm < default >


Properties of manufacturing operation **Stiffener**:

- **M – on member** – select member to apply the stiffener on.

- **R – related to** – select member, to which the stiffener is also related. The “Related to” member is required to define the direction of stiffener in frame knee.
- **Position** – select position of stiffener in knee connection:
 - **Upper** – stiffener is positioned to the upper edge of cross-section of “Related to” member.
 - **Lower** – stiffener is positioned to the lower edge of cross-section of “Related to” member.
 - **Both** – stiffeners are positioned to both edges of cross-section of “Related to” member.
 - **Centre** – stiffener is positioned to the centre of height of cross-section of “Related to” member.
- **Material** – select material of stiffener. Member material is taken as default.
- **Thickness** – input thickness of stiffener. Value 0 means, that the plate thickness is determined according to the cross-section.
- **Location** – select side location of stiffener:
 - **Both** – stiffener is located on both sides of modified member.
 - **Front** – stiffener is located on one side of modified member.
 - **Rear** – stiffener is located on the other side of modified member.
- **X – position** – input of plate position related to the beginning of modified member or to origin according to defined position of stiffener to the “Related to” member.
- **α – inclination** – input of stiffener inclination related to the axis of modified member.
- **B – width** – input of stiffener width. Value 0 means, that the width is determined automatically according to the cross-section of modified member.
- **Offset top** – input of offset of top edge of stiffener from the flange of member. The stiffener edge with nonzero offset is not welded to cross-section flange.
- **Offset bottom** – input of offset of bottom edge of stiffener from the flange of member. The stiffener edge with nonzero offset is not welded to cross-section flange.
- **Repeat count** – input of count of repeated stiffeners.
- **Xd – delta x** – input of distance between repeated stiffeners.
- **Gap** – input of distance between stiffener edges and edges of cross-section of modified member. The stiffener is welded to cross-section in the gap area.
- **Chamfered corners** – switch on/off chamfers of stiffener corners (between flange and web of modified member).
- **Chamfer cut size** – input the length of cut along edges (from the corner). Value 0 means, that the length of cut is determined automatically according to the cross-section (only for rolled sections).


Properties group **Welds** – input of welds properties – see **4.4.25 Welds properties**:

- **All welds** – properties of all stiffener welds.

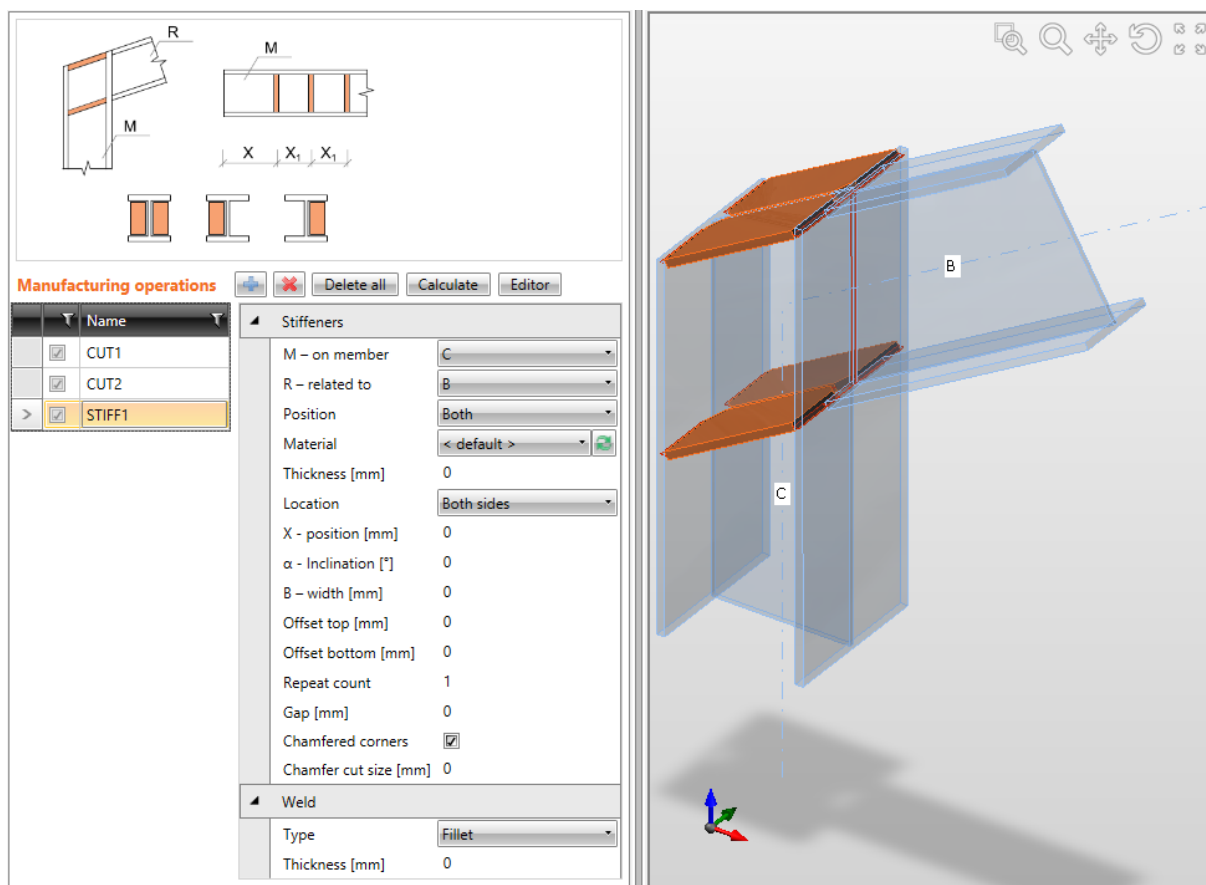

Stiffener in the knee connection.

First manufacturing operation Cut is defined on member C, to cut the column according to the farther edge of beam B. Second manufacturing operation Cut is defined on beam B, to cut the beam B according to the closer edge of column C. Manufacturing operation Stiffener is defined on column C. The stiffener is related also to the beam B – to respect the inclination of beam B.

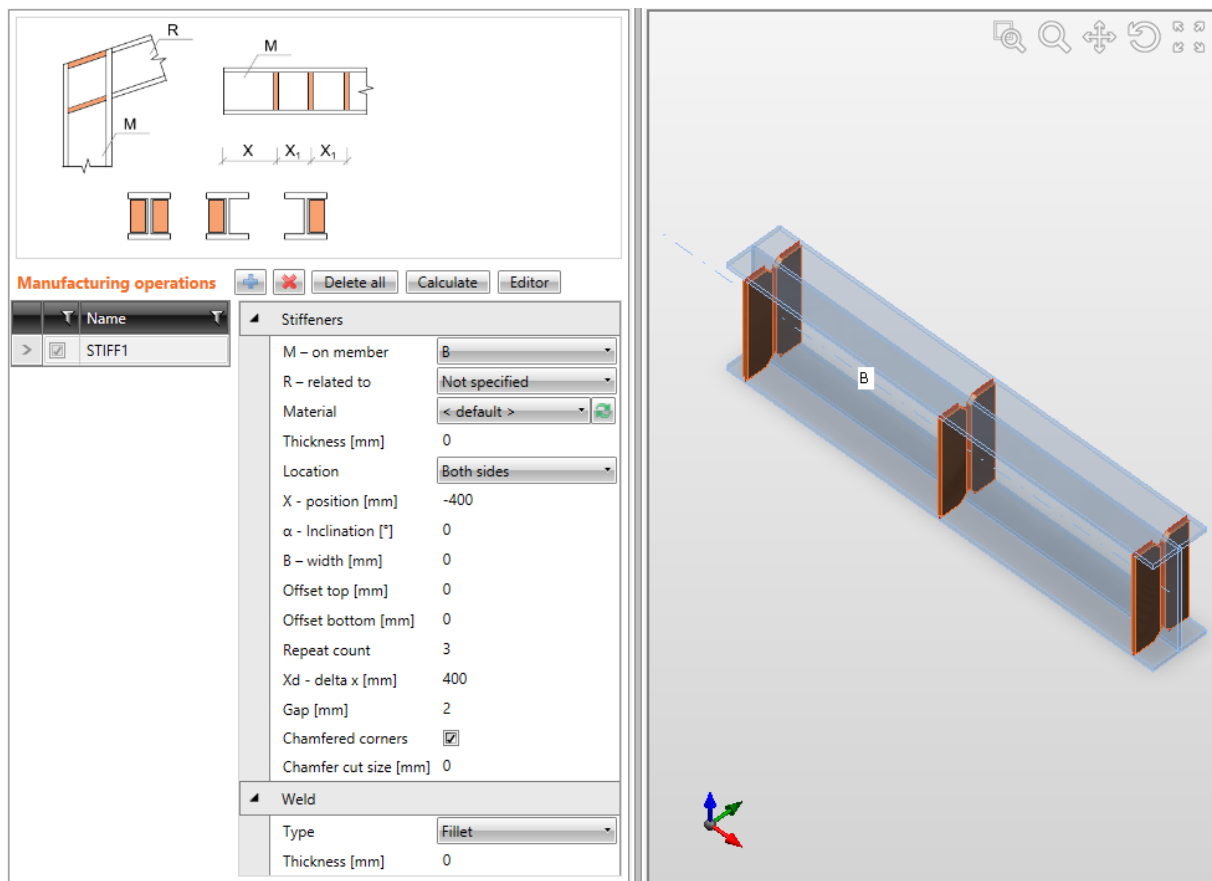


Stiffeners on beam.

Manufacturing operation Stiffener is defined on beam B. The stiffener is both-sided and repeated along the beam.

4.4.3 Widener

Manufacturing operation **Widener** adds plates to widen flanges or webs of member.

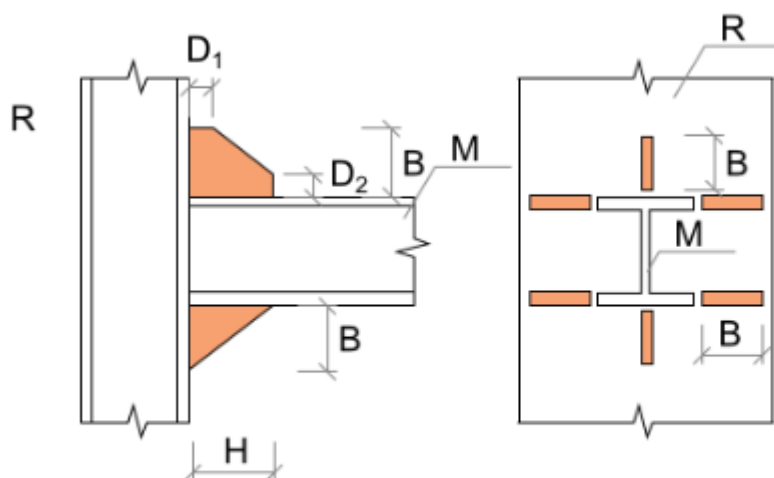

Manufacturing operations + × Delete all Calculate Editor

	Name
<input checked="" type="checkbox"/>	BP1
<input checked="" type="checkbox"/>	WID1

Wideners

M – on member: COL

R – related to: BP1

Type: Plate

Material: < default >

Thickness [mm]: 0

Cross-section parts: Flanges

Location: Both

B – width [mm]: 80

H – depth [mm]: 120

Shape: Triangular

Welds

All welds: 0 mm < default >


Properties of manufacturing operation **Widener**:

- **M – on member** – select member to apply the widener on.
- **R – related to** – select member, to which the widener is also related. Widener can be related to member or plate.
- **Type** – select type of connection part, to which is the widener also related:
 - **Member** – the widener is related to other existing member.
 - **Plate** – the widener is related to existing plate.
- **Material** – select material of widener. Member material is taken as default.
- **Thickness** – input thickness of widener. Value 0 means, that the plate thickness is determined according to the cross-section.

- **Cross-section parts** – select the cross-section part, on which the widener is applied:
 - **All parts** – widener is applied on all flanges and webs of cross-section of modified member.
 - **Flanges** – widener is applied on all flanges of cross-section of modified member.
 - **Bottom flange** – widener is applied on bottom flange of cross-section of modified member.
 - **Top flange** – widener is applied on top flange of cross-section of modified member.
 - **Webs** – widener is applied on webs of cross-section of modified member.
- **Location** – side location of widener:
 - **Front** – widener is applied on one side of selected cross-section part.
 - **Rear** – widener is applied on the other side of selected cross-section part.
 - **Both** – widener is applied on both sides of selected cross-section part.
- **B – width** – input width of widener (length on “Related to” member).
- **H – height** – input height of widener (length on modified member).
- **Shape** – select shape of widener:
 - **Rectangular** – the widener is rectangular.
 - **Triangular** – the widener is triangular.
 - **Chamfered** – the widener is rectangular with chamfered corners. The chamfer dimensions are defined by:
 - **D1** – input chamfer length along “Related to” member.
 - **D2** – input chamfer length along modified member.
 - **Triangular with flange** – the widener is rectangular with welded flange. The widener flange is defined by:
 - **TF – flange thickness** – input thickness of widener flange.
 - **BF – flange width** – input width of widener flange.

Properties group **Welds** – input of welds properties – see **4.4.25 Welds properties**:


- **All welds** – properties of all welds of widener.

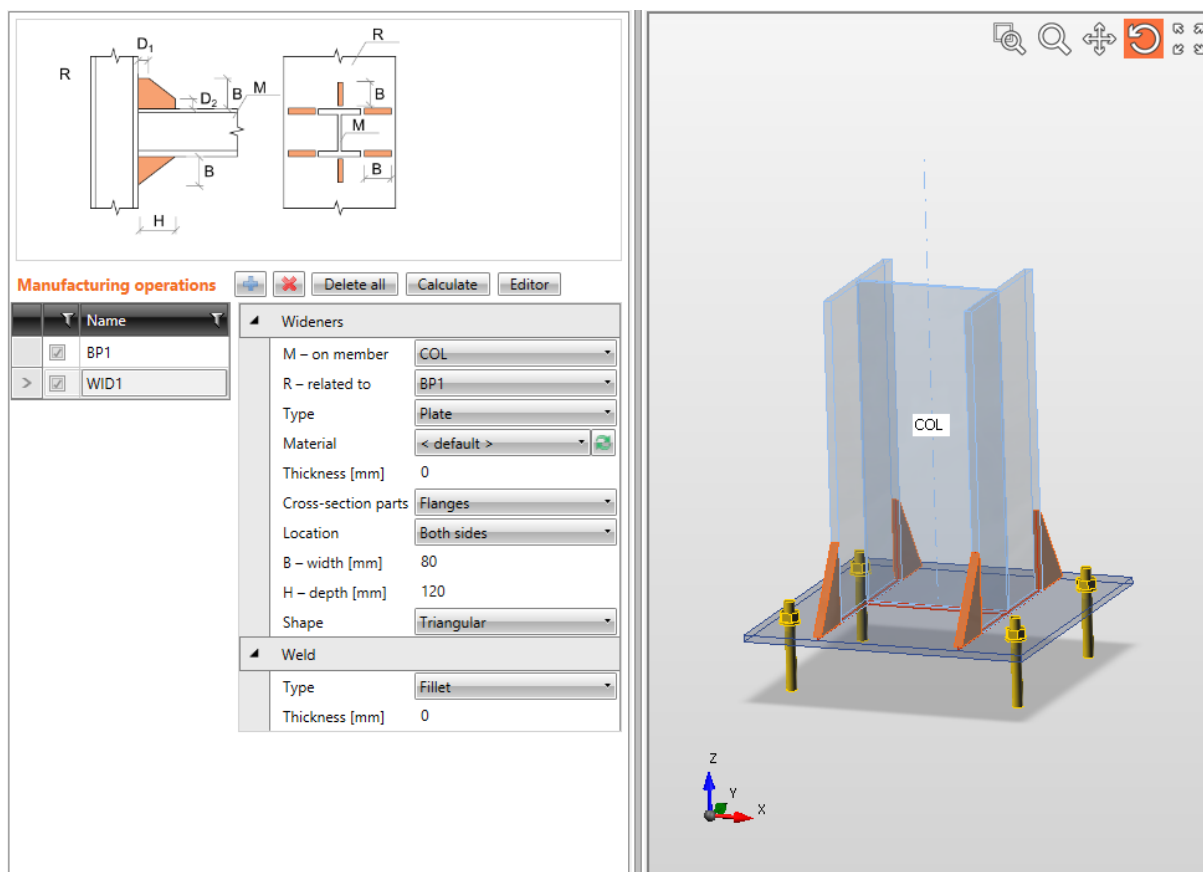

Column flanges wideners.

Manufacturing operation Base plate is applied on column COL to create base plate, concrete block and anchors..

Manufacturing operation Widener is applied on column COL. The operation creates widening plates, which are welded to column COL. The widener is also related to the connection item of Plate type – base plate BP1. Widener plate is cut according to and welded to the selected “Related to” member.

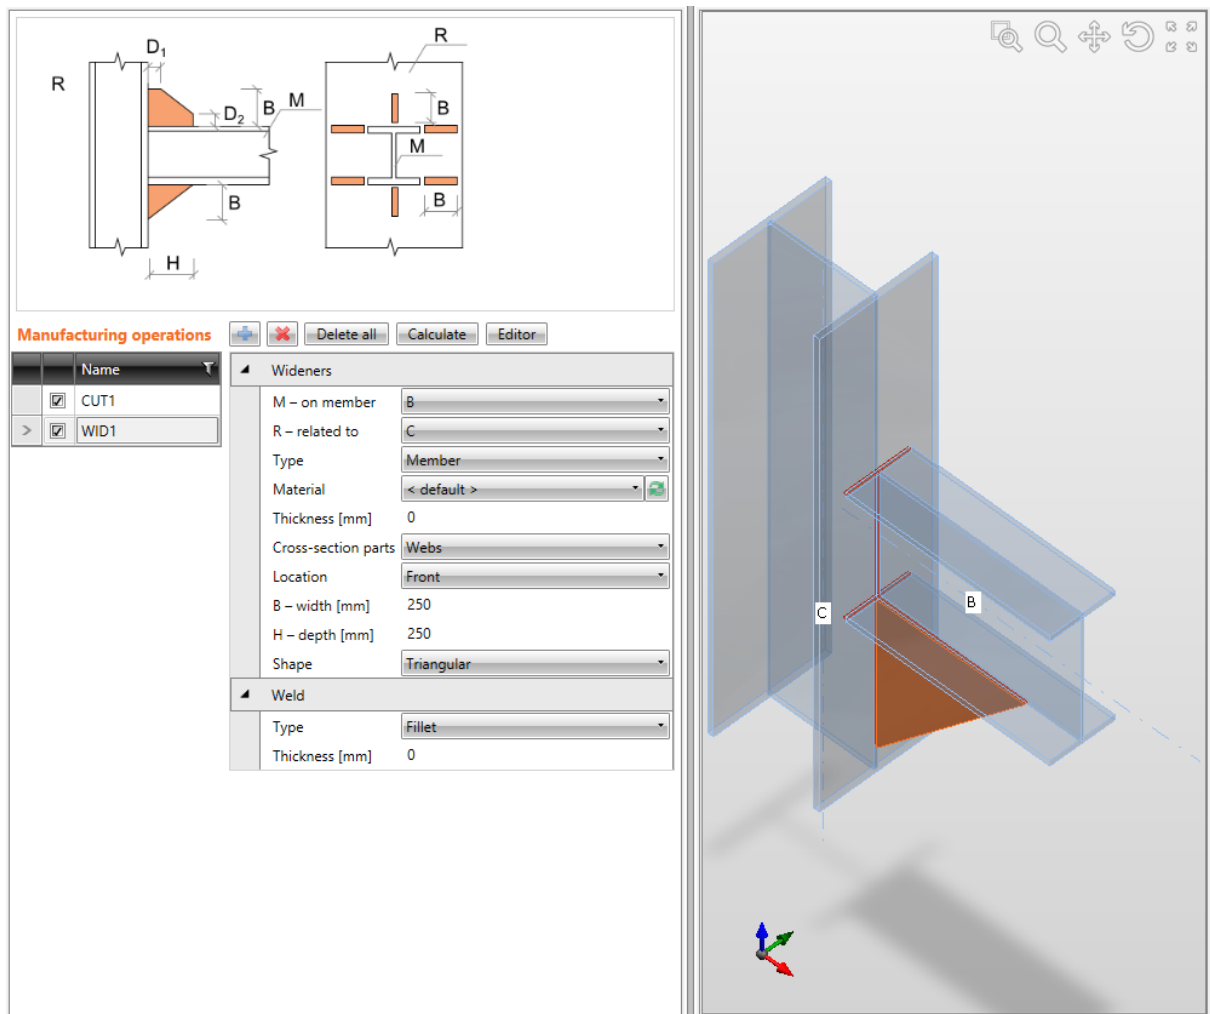


Web widener in knee connection.

Manufacturing operation Widener is applied on the beam B. The operation creates plate welded to beam B. Widener is also related to the connection item of type Beam – column C. The widener plate is cut according to column C and is welded to the column.

4.4.4 Rib

Manufacturing operation **Rib** adds plates perpendicular to flanges or webs of member.

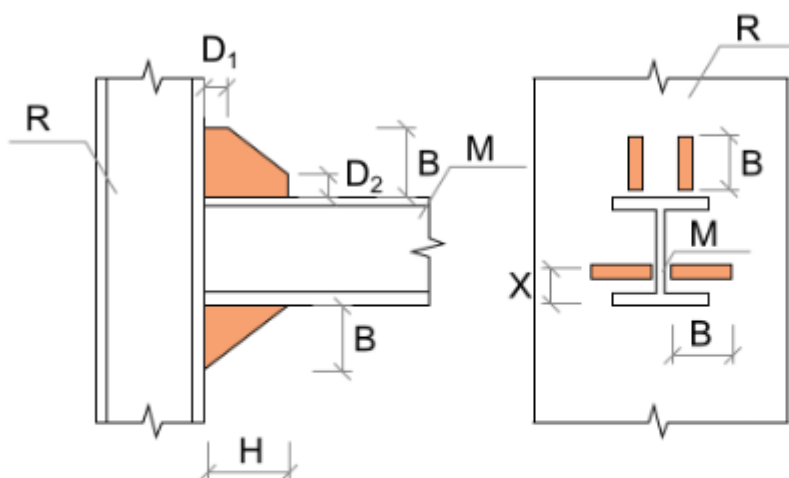

Manufacturing operations + × Delete all Calculate Editor

	Name
<input checked="" type="checkbox"/>	CUT1
<input checked="" type="checkbox"/>	RIB1

Ribs

M – on member: B

R – related to: C

Type: Member

Material: < default >

Thickness [mm]: 0

B – width [mm]: 80

H – depth [mm]: 80

Shape: Triangular

Cross-section parts: Bottom flange 1

Surface: Lower

Location: Both

X – position [mm]: 10

Repeat count: 1

Add first: ☒

Welds

All welds: 0 mm < default >


Properties of manufacturing operation **Rib**:

- **M – on member** – select member to apply the rib on.
- **R – related to** – select member, to which the rib is also related. Rib can be related to member or plate.
- **Type** – select type of connection part, to which the rib is also related:

- **Member** – the rib is related to other existing member.
 - **Plate** – the rib is related to existing plate.
- **Material** – select material of rib. Member material is taken as default.
- **Thickness** – input thickness of rib. Value 0 means, that the plate thickness is determined according to the cross-section.
- **B – width** – input width of rib (length on “Related to” member).
- **H – depth** – input depth of rib (length on modified member).
- **Shape** – select shape of rib:
 - **Rectangular** – the rib is rectangular.
 - **Triangular** – the rib is triangular.
 - **Chamfered** – the rib is rectangular with chamfered corners. The chamfer dimensions are defined by:
 - **D1** – input chamfer length along “Related to” member.
 - **D2** – input chamfer length along modified member.
- **Cross-section parts** – select the cross-section part, on which the rib is applied:
 - **Bottom flange** – rib is applied on bottom flange of cross-section of modified member.
 - **Top flange** – rib is applied on top flange of cross-section of modified member.
 - **Webs** – rib is applied on webs of cross-section of modified member.
- **Surface** – select the surface, on which the rib is applied:
 - **Upper** – rib is applied on the upper surface of selected cross-section part.
 - **Lower** – rib is applied on the lower surface of selected cross-section part.
 - **Both** – rib is applied on both surfaces of selected cross-section part.
- **Location** – select side, on which the rib is applied:
 - **Both** – rib is applied on both sides of selected cross-section part.
 - **Front** – rib is applied on one side of selected cross-section part.
 - **Rear** – rib is applied on the other side of selected cross-section part.
 - **Centre** – rib is applied to the centre of selected cross-section part.
- **X – position** – input the rib position related to the selected side.
- **Repeat count** – input total number of ribs (for input on individual sides of selected cross-section part) or number of intermediate ribs (for input on both sides of selected cross-section part).
- **Xd – delta** – input spacing between ribs (for input on individual sides of selected cross-section part). The spacing is determined automatically for input on both sides of selected cross-section part.
- **Add first** – switch on/off applying of the first and the last rib in row when applying rib on both sides of selected cross-section part.

Properties group **Welds** – input of welds properties – see **4.4.25 Welds properties**:

- **All welds** – properties of all welds of rib.

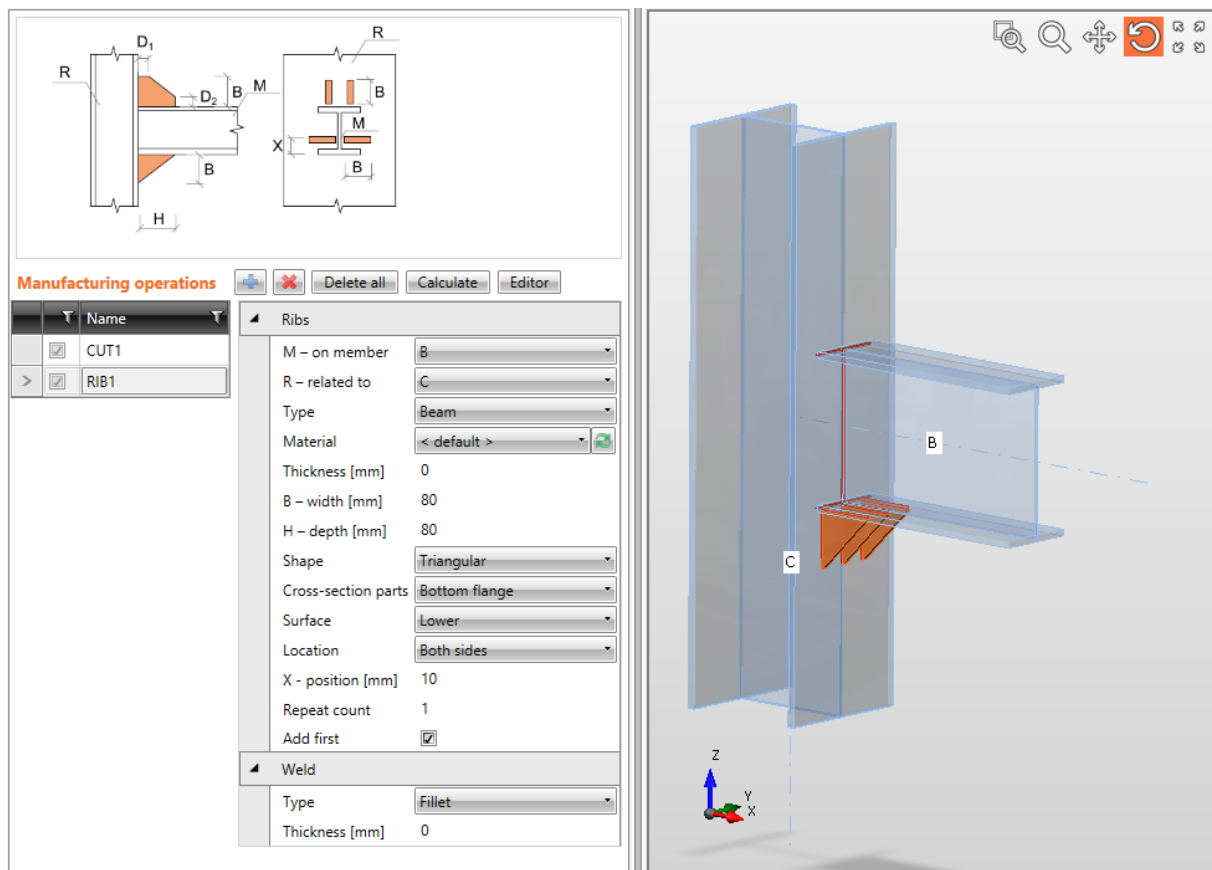


Ribs on beam flange.

Manufacturing operation Cut is applied on beam B to cut beam B according to the closer edge of column C.

Manufacturing operation Rib is applied on beam B. The operation creates plates welded on all sides of lower part of bottom flange of column B. The rib is also related to the connection item of type Beam - column C. Rib plates are cut according to the column C and are welded to the column.

4.4.5 Opening

Manufacturing operation **Opening** creates an opening into selected part of cross-section.

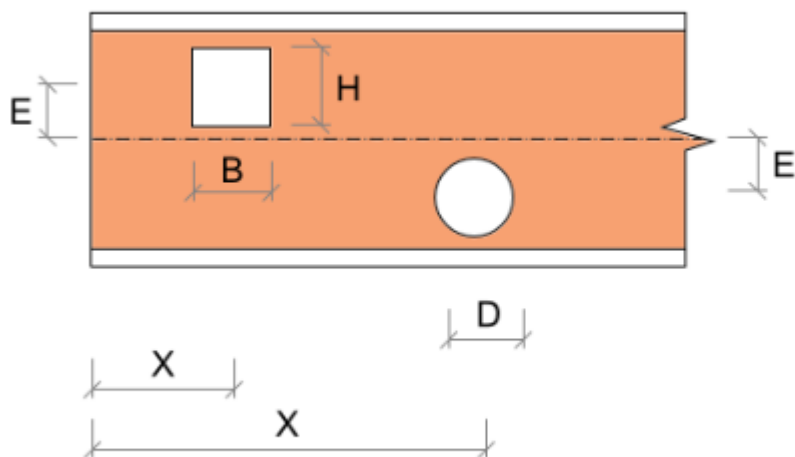

Manufacturing operations		Delete all Calculate Editor	
<input checked="" type="checkbox"/>	CUT1		
>	<input checked="" type="checkbox"/> OP1		

Opening	
M – on member	B
Cross-section part	Web 1
Shape	Circle
D – diameter [mm]	100
X – position [mm]	260
E – eccentricity [mm]	0
Stiffener	<input checked="" type="checkbox"/>
Thickness [mm]	0
Width [mm]	50

Welds	
All welds	0 mm < default >


Properties of manufacturing operation **Opening**:

- **M – on member** – select member to apply the opening on.
- **Cross-section part** – select the cross-section part, on which the opening is applied:
 - **Bottom flange** – opening is applied on bottom flange of cross-section of member.
 - **Top flange** – opening is applied on top flange of cross-section of member.
 - **Web** – opening is applied on web of cross-section of member.
- **Shape** – select shape of opening:
 - **Circular** – the opening is circular.
 - **Rectangular** – the opening is rectangular.
- **B – width** – input width of rectangular opening.

- **H – height** – input height of rectangular opening.
- **D – diameter** – input diameter of circular opening.
- **Rounding radius** – input radius of rounding of rectangular opening corners.
- **X – position** – input distance between centre of opening and edge of selected part of cross-section (respecting cuts) or the common point of connection for continuous members.
- **E – eccentricity** – input distance between centre of opening and member axis.
- **Stiffener** – switch on/off stiffener (flange) around the opening edges.
 - **Thickness** – input thickness of opening stiffener. Value 0 means, that the thickness is determined automatically.
 - **Width** – input width of opening stiffener.

Properties group **Welds** – input of welds properties – see **4.4.25 Welds properties**:

- **All welds** – properties of all welds of opening stiffener.

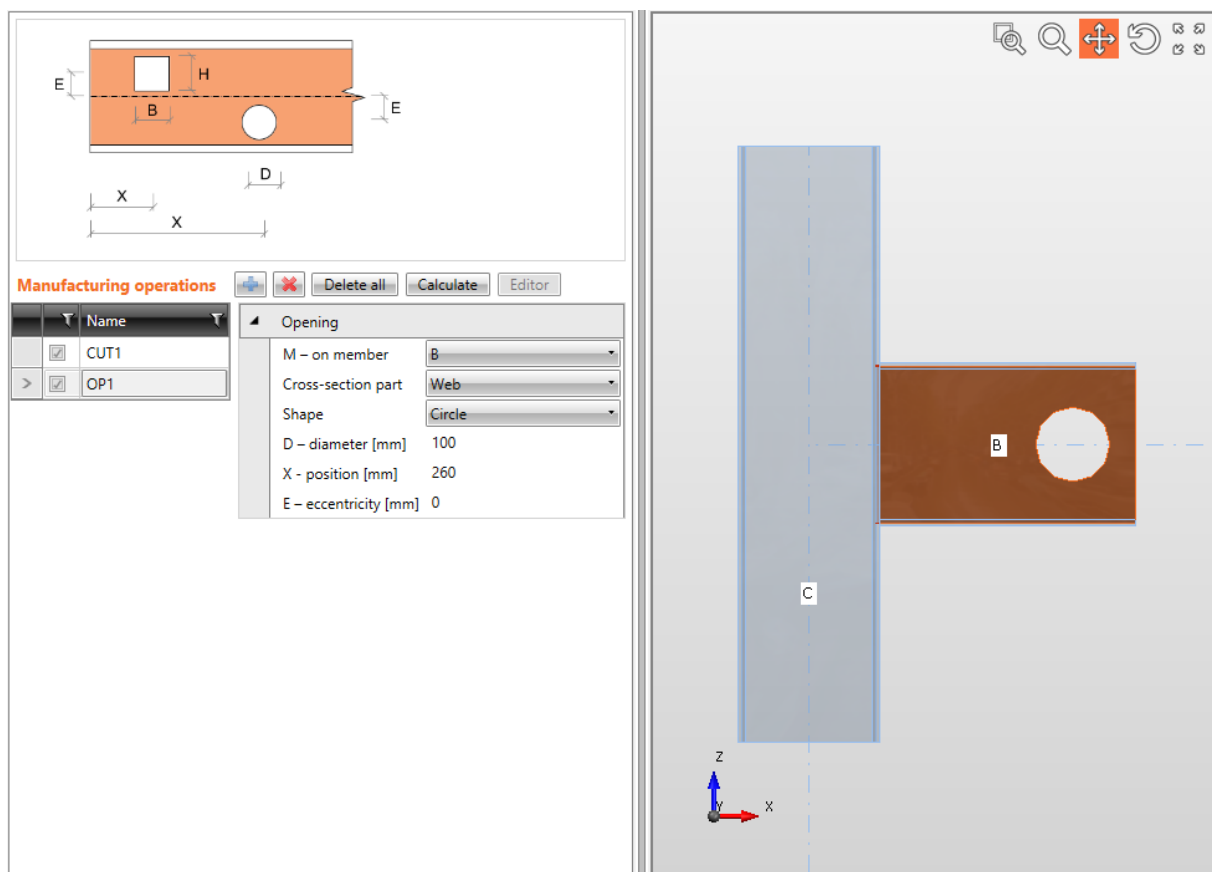


Opening in web.

Manufacturing operation Cut is applied on beam B to cut beam B according to the closer edge of column C.

Manufacturing operation Opening is applied on beam B to create circular opening in web of beam B.

4.4.6 Plate to plate

Manufacturing operation **Plate to plate** connects two consequent members using end plates.

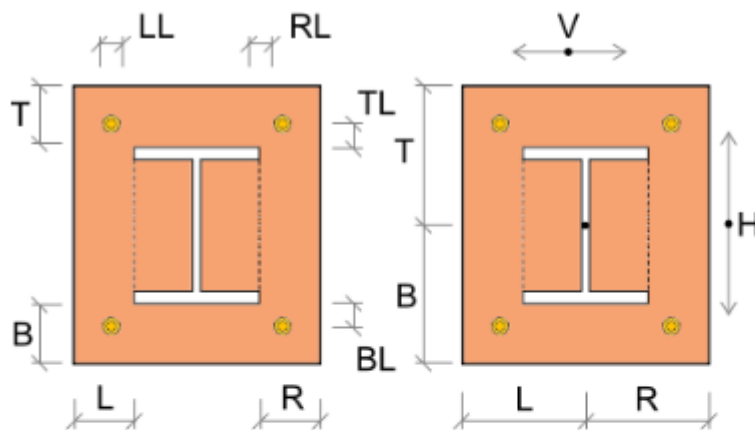

Manufacturing operations + ✖ Delete all Calculate Editor

Name
PP1

Plate to plate

Member 1: B1

Member 2: B2

X - position [mm]: 0

Material: < default >

Thickness [mm]: 10

Connection type: Bolted

Dimensions: To profile

T - Top [mm]: 0

L - Left [mm]: 0

B - Bottom [mm]: 80

R - Right [mm]: 0

Bolts

Type: M16 - 10.9

TL - Top layers [mm]: -30

LL - Left layers [mm]: -30

BL - Bottom layers [mm]: -30 40

RL - Right layers [mm]: -30

Shear plane in thread: ☒

Welds

Flanges: 0 mm < default >

Webs: 0 mm < default >

Properties of manufacturing operation **Plate to plate**:


- **Member 1** – select first member to be connected.

- **Member 2** – select second member to be connected.
- **X – position** – input position of plate-to-plate connection from the beginning of connected member.
- **Material** – select material of plates. Member material is taken as default.
- **Thickness** – input thickness of end plates.
- **Connection type** – select the type of connection between Member 1 and Member2:
 - **Bolted** – the connection is bolted using two end plates.
 - **Welded** – the connection is welded, both beams are connected using one common end plate.
- **Dimensions** – select mode to determine the end plate dimensions:
 - **To profile** – plate dimensions are defined by offset to top, bottom, left and right most outer edge of cross-section.
 - **To profile symmetrical** – plate dimensions are defined by offset to top and left most outer edge of cross-section.
 - **Rectangle** – plate dimensions are defined by distances of top, bottom, left and right plate edge from the centroid of member cross-section.
 - **Rectangle symmetrical** – plate dimensions are defined by distances of top and left plate edge from the centroid of member cross-section.
 - **Circle** – circular plate dimension is defined by outer radius and radius of opening.
- **T – Top** – input offset of top plate edge from most outer top cross-section edge or centroid of cross-section.
- **L – Left** – input offset of left plate edge from most outer left cross-section edge or centroid of cross-section.
- **B – Bottom** – input offset of bottom plate edge from most outer bottom cross-section edge or centroid of cross-section.
- **R – Right** – input offset of right plate edge from most outer right cross-section edge or centroid of cross-section.
- **Radius** – input outer radius of circular end plate.
- **Inner radius** – input radius of opening in circular end plate.

Property group **Bolts** – definition of bolts in connection – see **4.4.26 Input of bolts by layers**.


Properties group **Welds** – input of welds properties – see **4.4.25 Welds properties**:

- **Flanges** – properties of welds on flanges of connected member.
- **Webs** – properties of welds on webs of connected member.

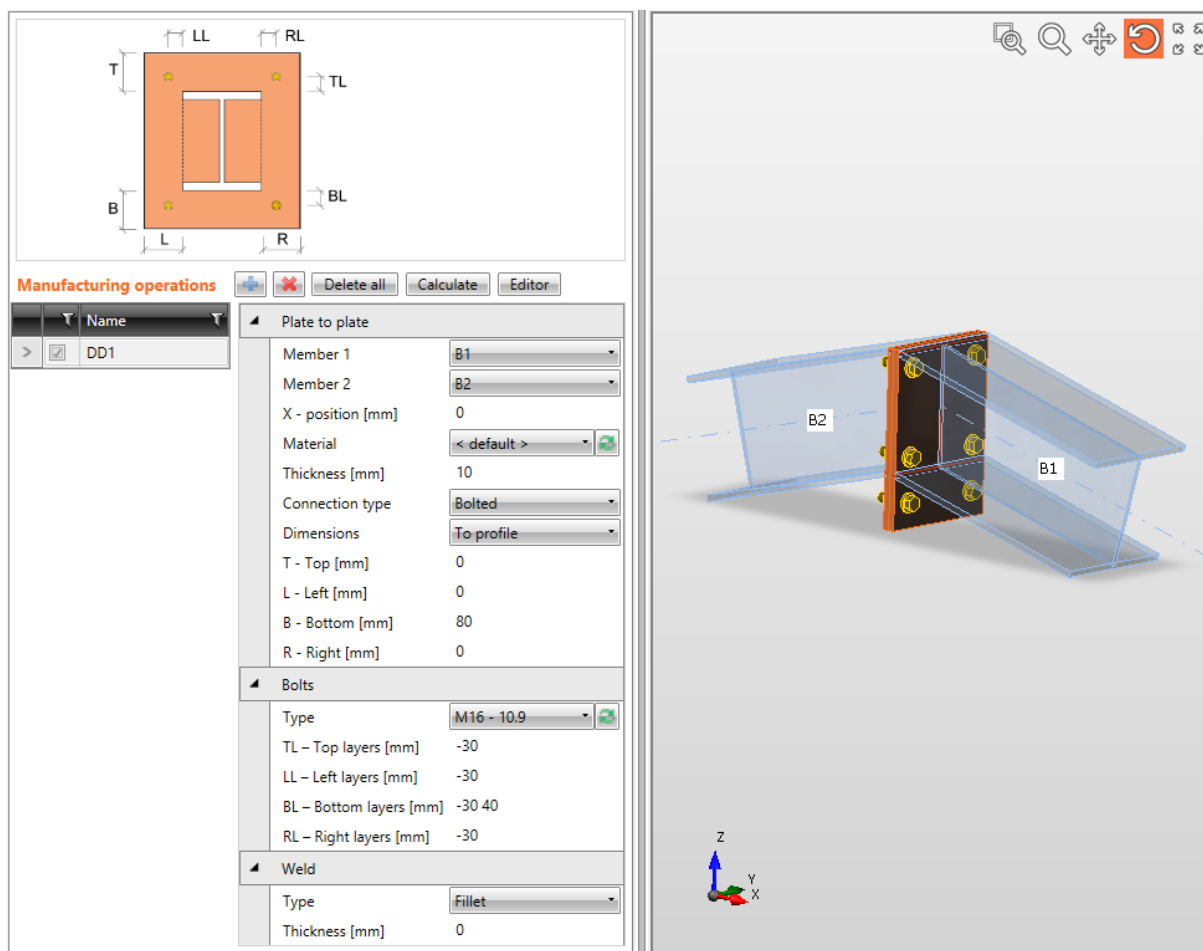

Bolted plate to plate connection.

Manufacturing operation Plate to plate is applied on beam B1. The operation creates end plate welded to beam B1. The second member processed by this operation is beam B2 – operation creates end plate welded to beam B2. End plates are bolted together by bolts assembly.

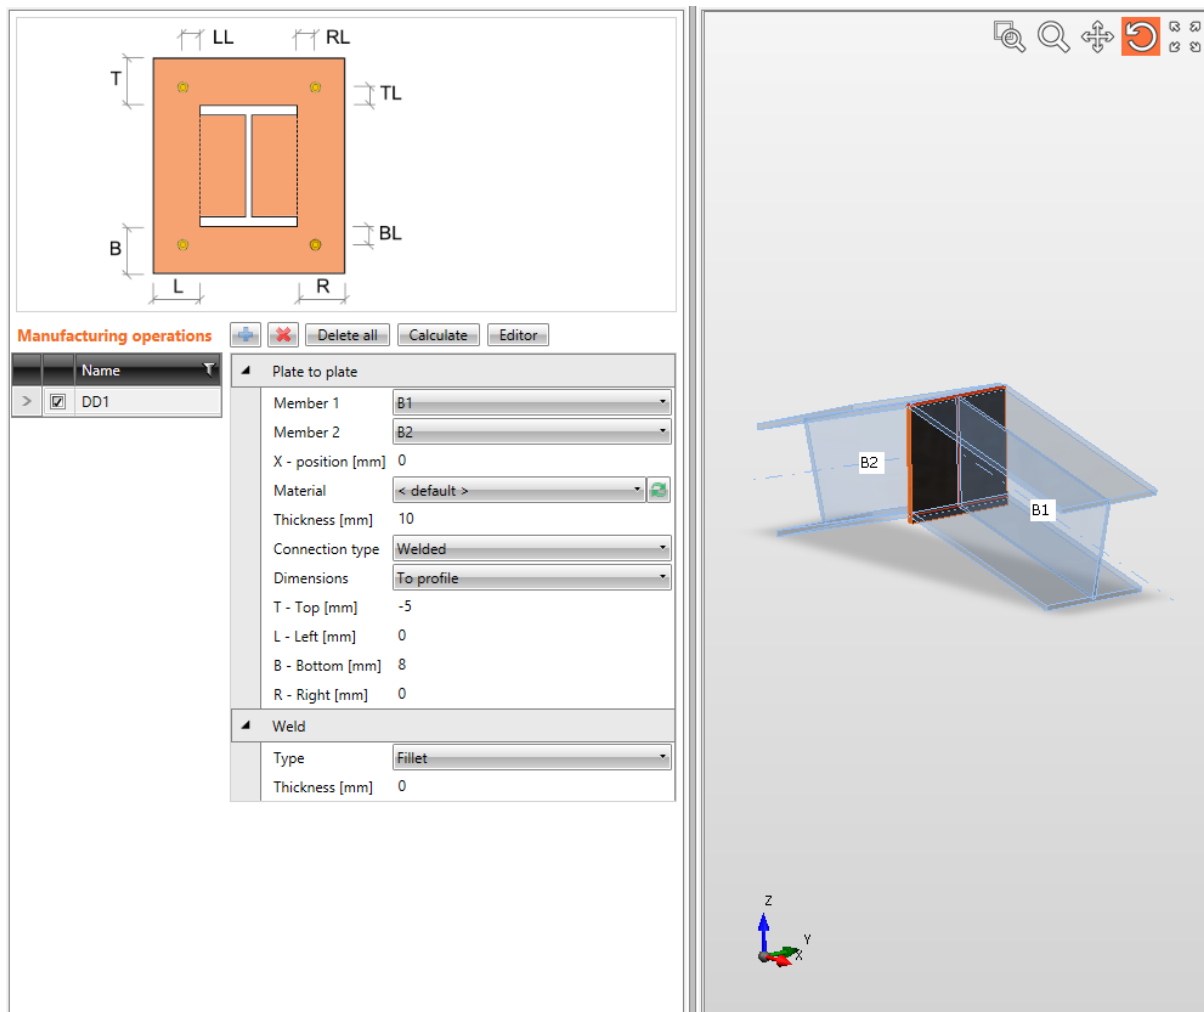


Welded plate to plate connection.

Manufacturing operation Plate to plate is applied on beam B1. The operation creates end plate welded to beam B1. The second member processed by this operation is beam B2. Because the connection is welded, beam B2 is welded to the end plate on beam B1.

4.4.7 End plate

Manufacturing operation **End plate** connects member using end plate to the flange or web of another member.

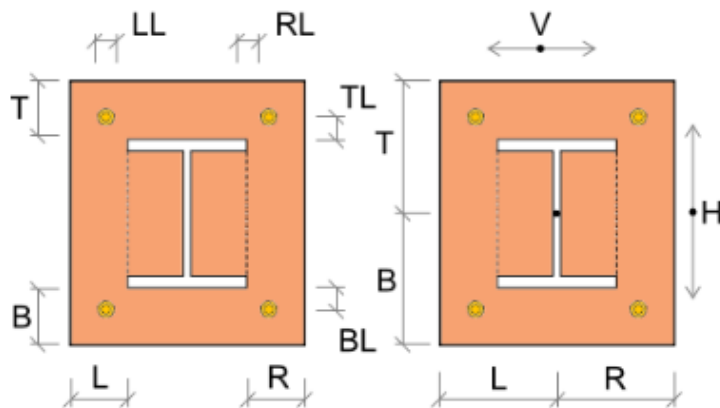

Manufacturing operations		Delete all Calculate Editor	
Name			
>	<input checked="" type="checkbox"/> EP1		

End plate

Member 1	B1
Member 2	B2
Type of 'Connected to'	Member
Connected to	C
Material	< default >
Thickness [mm]	10
Connection type	Bolted
Dimensions	To profile
T - Top [mm]	60
L - Left [mm]	0
B - Bottom [mm]	60
R - Right [mm]	0
Notch	<input type="checkbox"/>

Bolts

Type	M16 - 10.9
TL - Top layers [mm]	-30 30
LL - Left layers [mm]	-30
BL - Bottom layers [mm]	-30 30
RL - Right layers [mm]	-30
Shear plane in thread	<input checked="" type="checkbox"/>

Welds

Flanges	0 mm	< default >				
Webs	0 mm	< default >				


Properties of manufacturing operation **End plate**:

- **Member 1** – select first member to be connected by end plate to the “Connected to” member.
- **Member 2** – select second member (opposite to Member 1) to be connected by end plate to the “Connected to” member using the same bolt assembly as for Member 1.
- **Type of ,Connected to‘** – select type of connection part, to which Member 1 or Member 2 are connected using the end plate(s):
 - **Member** – members are connected to another member.
 - **Plate** – members are connected to plate.
- **Connected to** – select member, to which Member 1 and Member 2 are connected by end plate.
- **Material** – select material of end plate. Member material is taken as default.
- **Thickness** – input thickness of end plate.
- **Connection type** – select the type of connection between end plate and “Connected to” member:
 - **Bolted** – end plate is bolted to the “Connected to” member.
 - **Welded** – end plate is welded to the “Connected to” member.
- **Dimensions** – select mode to determine the end plate dimensions:
 - **To profile** – plate dimensions are defined by offset to top, bottom, left and right most outer edge of cross-section.
 - **To profile symmetrical** – plate dimensions are defined by offset to top and left most outer edge of cross-section.
 - **Rectangle** – plate dimensions are defined by distances of top, bottom, left and right plate edge from the centroid of member cross-section.
 - **Rectangle symmetrical** – plate dimensions are defined by distances of top and left plate edge from the centroid of member cross-section.
 - **Circle** – circular plate dimension is defined by outer radius and radius of opening.
- **T – Top** – input offset of top plate edge from most outer top cross-section edge or centroid of cross-section.
- **L – Left** – input offset of left plate edge from most outer left cross-section edge or centroid of cross-section.
- **B – Bottom** – input offset of bottom plate edge from most outer bottom cross-section edge or centroid of cross-section.
- **R – Right** – input offset of right plate edge from most outer right cross-section edge or centroid of cross-section.
- **Radius** – input outer radius of circular end plate.
- **Inner radius** – input radius of opening in circular end plate.
- **Notch** – switch on/off generation of flange (and web) notch in case the flanges of connected member are aligned to flanges of “Connected to” member and the flanges are in collision.
- **Notch offset** – input distance between edges of plates in notched area.

Property group **Bolts** – see **4.4.26 Input of bolts by layers**.


Properties group **Welds** – input of welds properties – see **4.4.25 Welds properties**:

- **Flanges** – properties of welds on flanges of connected member.
- **Webs** – properties of welds on webs of connected member.

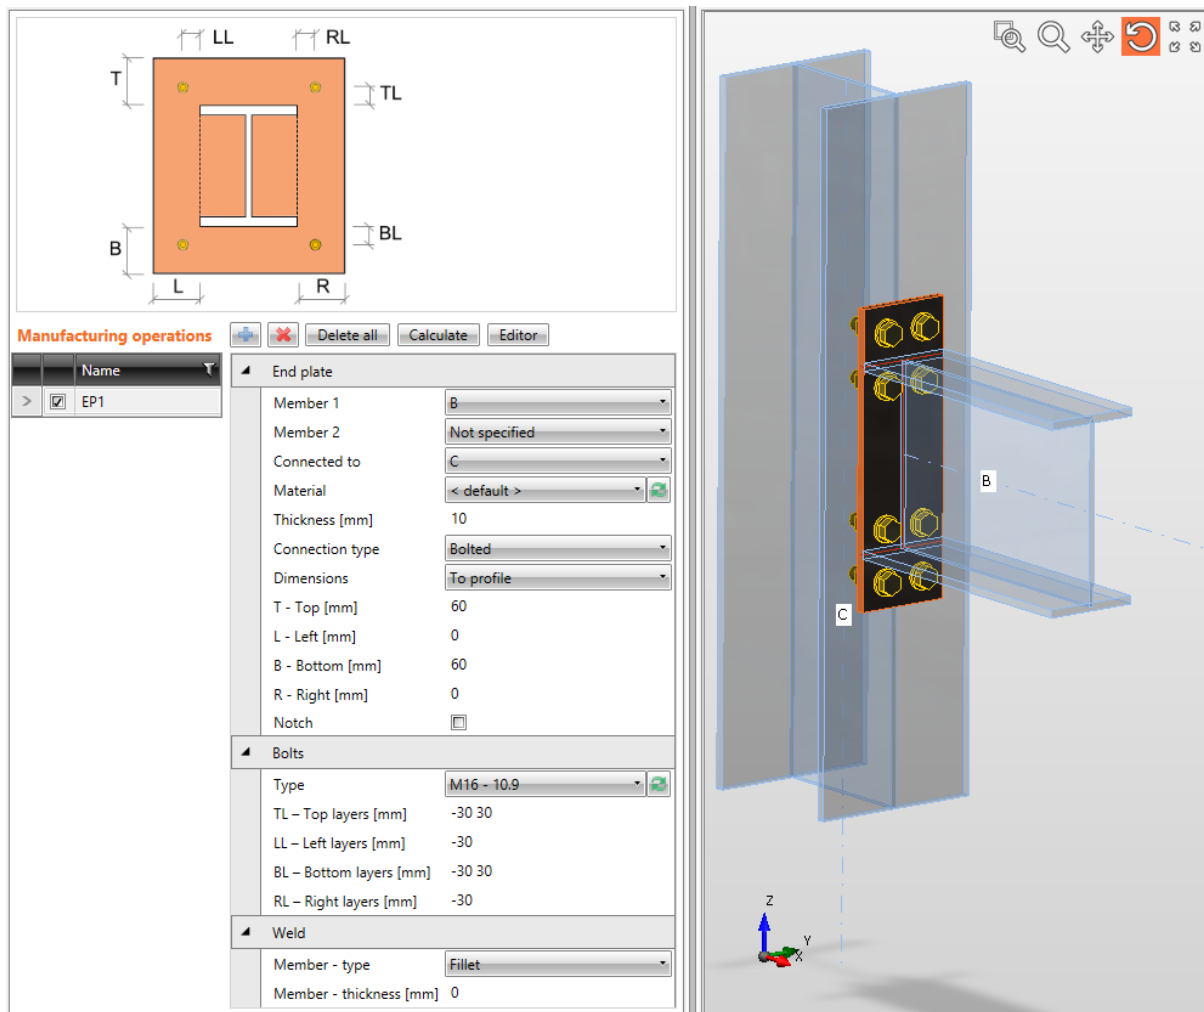


End plate on the column flange.

Manufacturing operation End plate is applied on the beam B. The operation creates end plate welded to the beam B. The operation is also related to the column C – end plate is bolted to the flange of column C by bolts assembly.

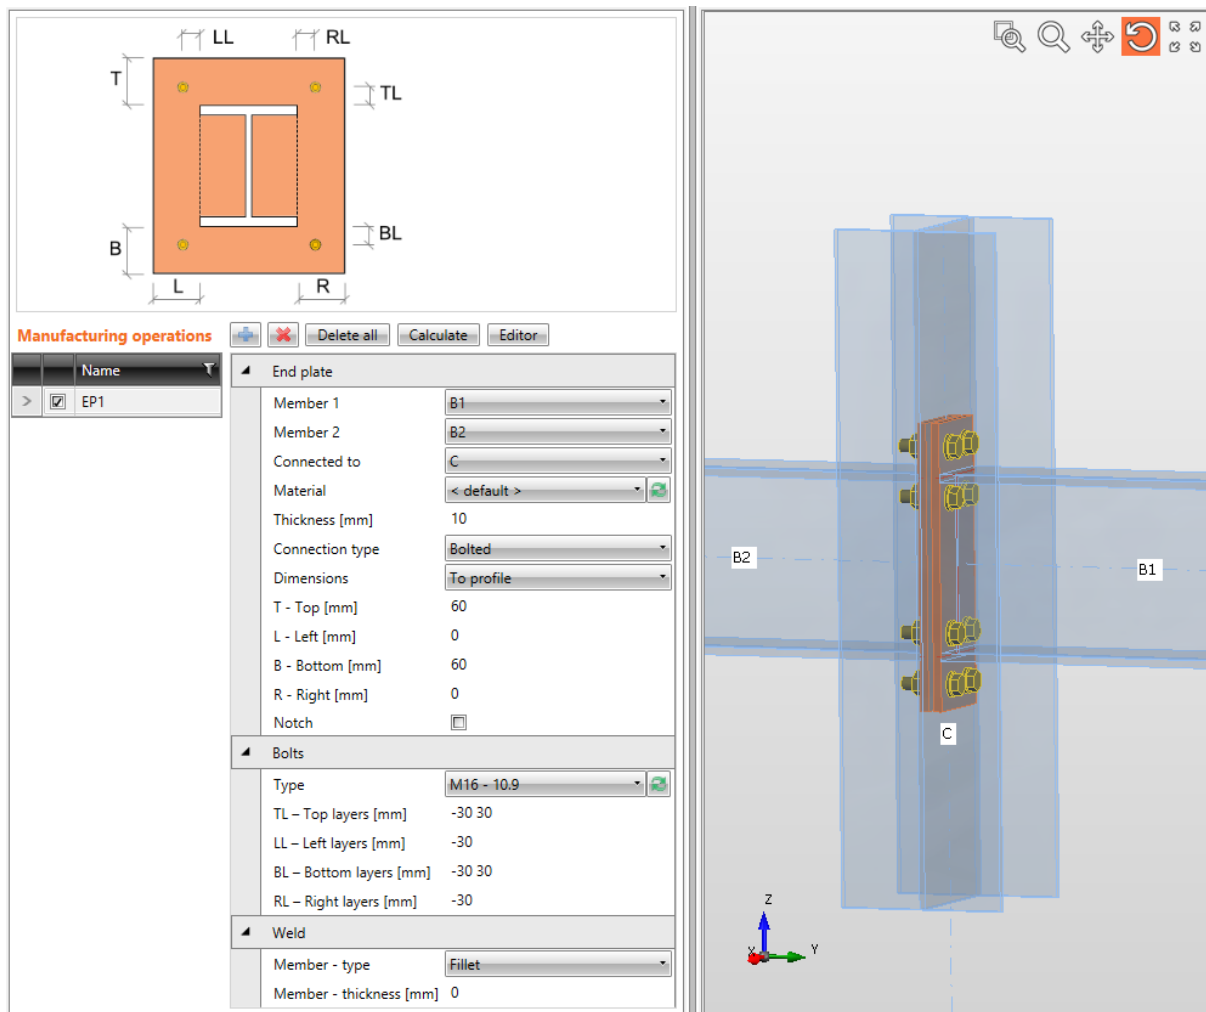

End plates on the column web.

Manufacturing operation End plate is applied on the beam B1. The operation creates end plate welded to the beam B1. The second member processed by the operation is beam B2 – the operation creates end plate welded to the beam B2. The operation is also related to the column C – both end plates are bolted to the web of column C by the same bolts assembly.

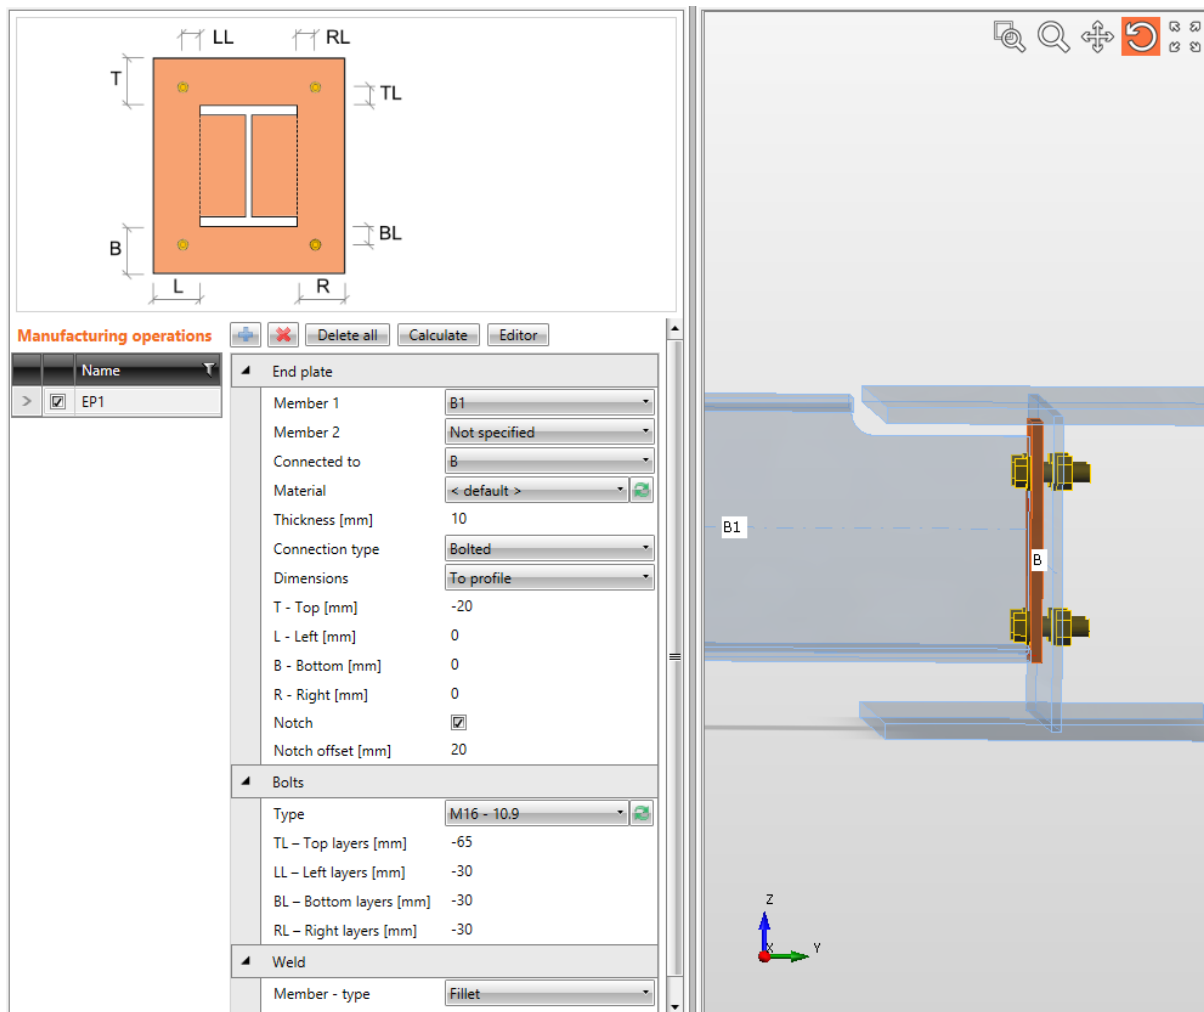


End plate on beam web.

Manufacturing operation End plate is applied on the beam B1. The operation creates end plate welded to the beam B1. Because upper flanges of beams are aligned to each other, beam B1 is modified by notch. The operation is also related to the beam B – end plate is bolted to the web of beam B by bolts assembly.

4.4.8 Shifted end plate

Manufacturing operation **Shifted end plate** connects member using end plate across the flanges of another member.

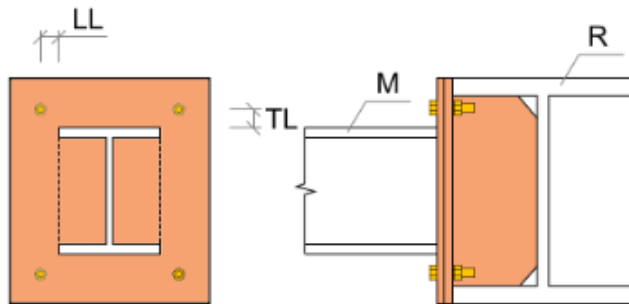

Manufacturing operations + ✖ Delete all Calculate Editor ▼

Name
<input checked="" type="checkbox"/> SEP1

End plate

Member: B1

Connected to: B

Material: < default >

Thickness [mm]: 10

Connection type: Bolted

Dimensions: To profile symmetrical

Height automatically: ☐

T - Top [mm]: 0

L - Left [mm]: 0

Stiffener

Type: Partial

Material: < default >

Thickness [mm]: 0

Chamfered corners: ☒

Chamfer cut size [mm]: 0

Bolts

Type: M16 - 10.9

TL - Top layers [mm]: -30

LL - Left layers [mm]: -30

Shear plane in thread: ☒

Welds

Flanges	0 mm	< default >				
Webs	0 mm	< default >				
Plate	0 mm	< default >				
Stiffener	0 mm	< default >				

Properties of manufacturing operation **Shifted end plate**:

- **Member** – select member to be connected by shifted end plate to the “Connected to” member.
- **Connected to** – select member, to which the Member is connected by shifted end plate.
- **Material** – select material of shifted end plate. Member material is taken as default.
- **Thickness** – input thickness of shifted end plate.
- **Connection type** – select the connection type:
 - **Bolted** – the connection contains two end plates – one is welded to flanges of “Connected to” member, second is welded to the end of connected member. Both end plates are connected by bolts assembly.
 - **Welded** – connection contains only one end plate, which is welded both to flanges of “Connected to” member and to the end of connected member.
- **Dimensions** – select mode to determine the end plate dimensions:
 - **To profile** – plate dimensions are defined by offset to top, bottom, left and right most outer edge of cross-section.
 - **To profile symmetrical** – plate dimensions are defined by offset to top and left most outer edge of cross-section.
 - **Rectangle** – plate dimensions are defined by distances of top, bottom, left and right plate edge from the centroid of member cross-section.
 - **Rectangle symmetrical** – plate dimensions are defined by distances of top and left plate edge from the centroid of member cross-section.
- **Height automatically** – if the option is selected, the height of end plates is calculated automatically according to the height of “Connected to” member and only width of plates can be defined. If the option is not selected, the both height and width of end plate can be defined.
- **T – Top** – input offset of top plate edge from most outer top cross-section edge or centroid of cross-section.
- **L – Left** – input offset of left plate edge from most outer left cross-section edge or centroid of cross-section.
- **B – Bottom** – input offset of bottom plate edge from most outer bottom cross-section edge or centroid of cross-section.
- **R – Right** – input offset of right plate edge from most outer right cross-section edge or centroid of cross-section.


Properties group **Stiffener** – parameters of vertical stiffener under end plate:

- **Type** – select type of stiffener:
 - **None** – no stiffener under end plate is applied.
 - **Full** – the height of stiffener under the end plate is equal to inner distance between flanges of “Connected to” member.
 - **Partial** – the height of stiffener under the end plate is equal to the height of the end plate.
- **Material** – select material of stiffener. Member material is taken as default.
- **Thickness** – input thickness of stiffener.
- **Chamfered corners** – switch on/off chamfers of stiffener corners (between flange and web of modified member).
- **Chamfer cut size** – input the length of cut along edges (from the corner). Value 0 means, that the length of cut is determined automatically according to the cross-section (only for rolled sections).

Property group **Bolts** – see **4.4.26 Input of bolts by layers**.

Properties group **Welds** – input of welds properties – see **4.4.25 Welds properties**:

- **Flanges** – properties of welds on flanges of connected member.
- **Webs** – properties of welds on webs of connected member.
- **Plate** – properties of weld between end plate and ‘Connected to’ member.
- **Stiffener** – properties of weld between stiffener and ‘Connected to’ member.

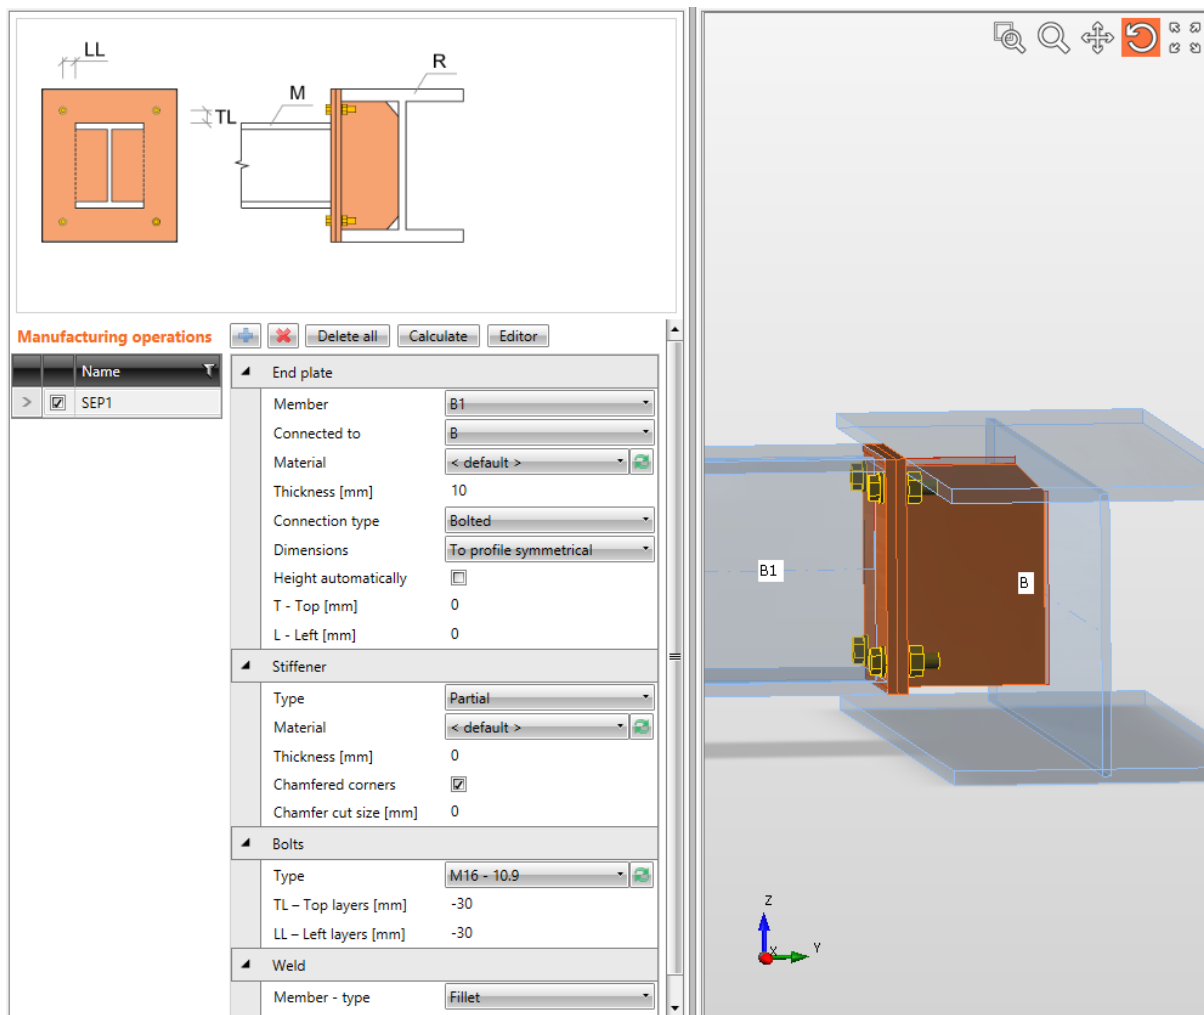


Shifted end plate.

The manufacturing operation **Shifted end plate** is defined on beam B1. The operation creates end plate welded to the beam B1. The operation is also related to beam B – second end plate is welded on flanges of beam B (including the stiffener). Both end plates are bolted together by bolts assembly.

4.4.9 Stub

Manufacturing operation **Stub** creates a plate-to-plate connection on member and a part to be connected to another member (stub). To connect (weld) such member to another member manufacturing operation **Cut** must be applied on the member with stub.

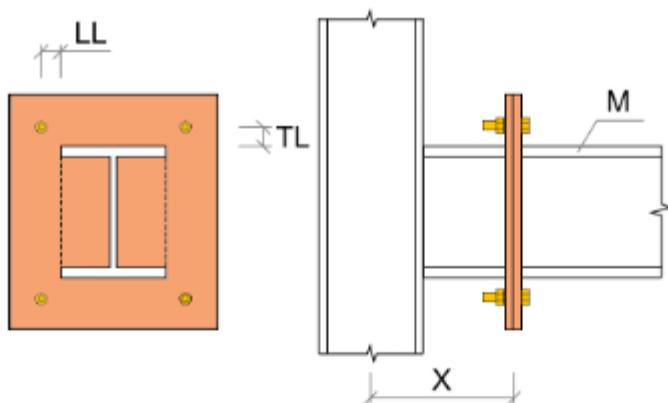

Manufacturing operations + ✖ Delete all Calculate Editor

	Name
<input checked="" type="checkbox"/>	STUB1
<input checked="" type="checkbox"/>	CUT1

Plate to plate

Member: B

X - position [mm]: 300

Material: < default >

Thickness [mm]: 10

Connection type: Bolted

Dimensions: To profile symmetrical

T - Top [mm]: 0

L - Left [mm]: 0

Bolts

Type: M16 - 10.9

TL - Top layers [mm]: -30

LL - Left layers [mm]: -30

Shear plane in thread: ☒

Welds

Flanges: 0 mm < default >

Webs: 0 mm < default >

Stub

Explode: ☒

Thickness: 0

Is symmetrical: ☒

Inclination bottom [°]: 10,0

Inclination right [°]: 10,0

Properties of manufacturing operation **Stub**:

- **Member** – select member to apply the stub on.
- **X – position** – input position of plate-to-plate connection from the beginning of modified member.
- **Material** – select material of plates. Member material is taken as default.
- **Thickness** – input thickness of end plates.
- **Connection type** – select the connection type:
 - **Bolted** – the connection is bolted using two end plates – one end plate is welded to the stub, second on the end of modified member. Plates are connected by bolts assembly.
 - **Welded** – the connection is welded. End plate is welded to the stub and to the end of modified member.
- **Dimensions** – select mode to determine the end plate dimensions:
 - **To profile** – plate dimensions are defined by offset to top, bottom, left and right most outer edge of cross-section.
 - **To profile symmetrical** – plate dimensions are defined by offset to top and left most outer edge of cross-section.
 - **Rectangle** – plate dimensions are defined by distances of top, bottom, left and right plate edge from the centroid of member cross-section.
 - **Rectangle symmetrical** – plate dimensions are defined by distances of top and left plate edge from the centroid of member cross-section.
 - **Circle** – circular plate dimension is defined by outer radius and radius of opening.
- **T – Top** – input offset of top plate edge from most outer top cross-section edge or centroid of cross-section.
- **L – Left** – input offset of left plate edge from most outer left cross-section edge or centroid of cross-section.
- **B – Bottom** – input offset of bottom plate edge from most outer bottom cross-section edge or centroid of cross-section.
- **R – Right** – input offset of right plate edge from most outer right cross-section edge or centroid of cross-section.
- **Radius** – input outer radius of circular end plate.
- **Inner radius** – input radius of opening in circular end plate.

Property group **Bolts** – see **4.4.26 Input of bolts by layers**:

Properties group **Welds** – input of welds properties:

Welds – input of welds properties – see **4.4.25 Welds properties**:


- **Flanges** – properties of welds on flanges of connected member.
- **Webs** – properties of welds on webs of connected member.

Properties group **Stub** – definition of stub:

- **Explode** – if the option is selected, the cross-section of stub is exploded to individual plates. If the option is not selected, the cross-section of stub is prismatic and the same

as the cross-section of modified member. If the stub is exploded, inclination of individual plates can be defined.

- **Is symmetrical** – if the option is selected, the exploded stub is considered to be symmetrical around vertical and horizontal axis and thus two inclinations can be defined. If the option is not selected, inclinations can be defined on all sides of stub..
- **Inclination bottom** – input inclination of bottom plate of stub.
- **Inclination right** – input inclination of right plate of stub.
- **Inclination top** – input inclination of top plate of stub.
- **Inclination left** – input inclination of left plate of stub.

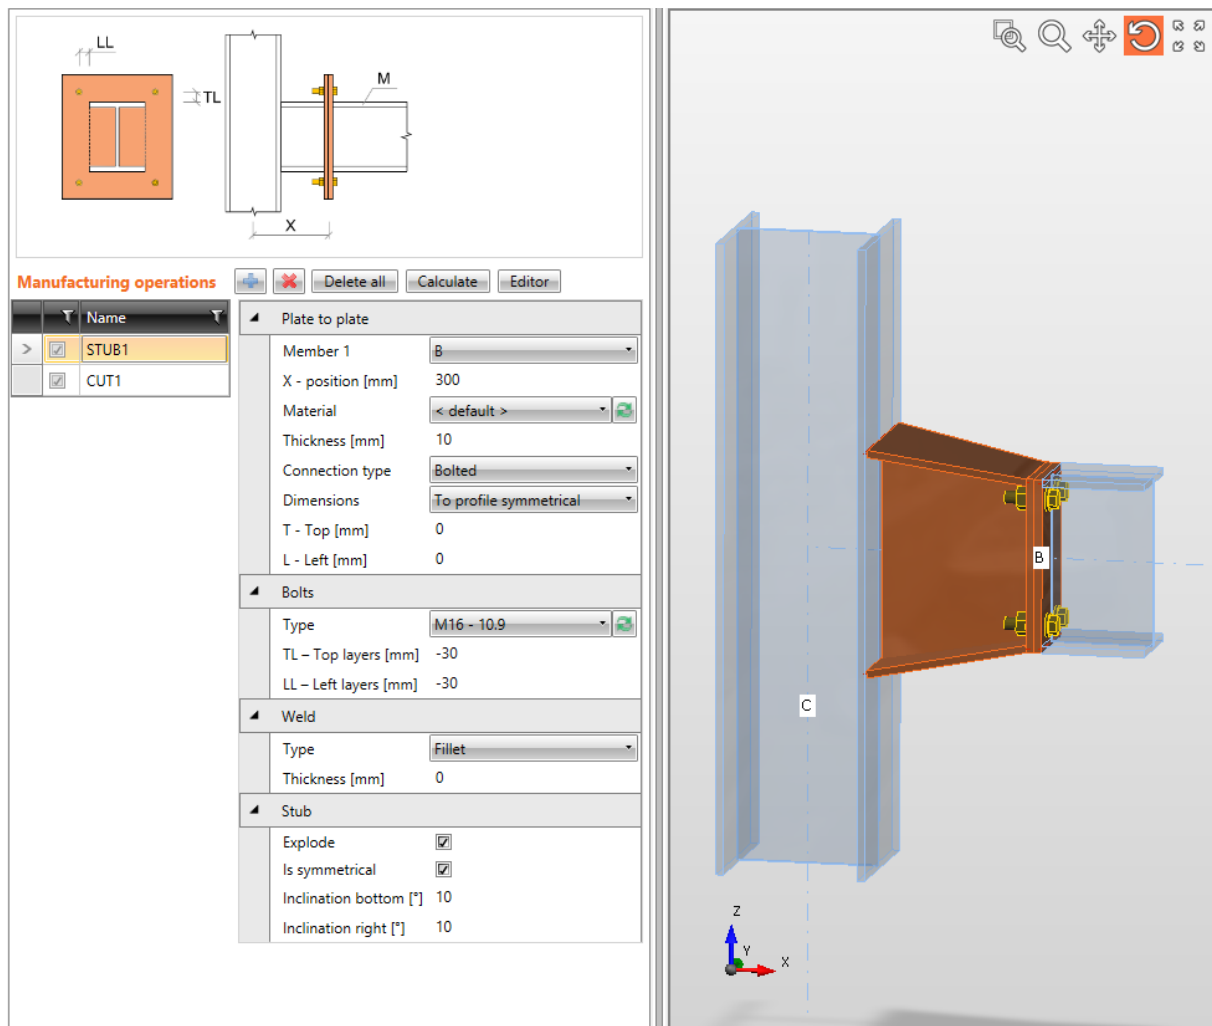


Stub bolted on beam and welded on column.

Manufacturing operation Stub is applied on beam B. The operation divides the beam to two parts and creates two end plates. One end plate is welded to the beam, second is welded to the stub. End plates are bolted together by bolts assembly. The stub is exploded to individual plates and the plates are inclined to create taper.

Manufacturing operation Cut is applied on beam B to cut the beam B according the closer edge of column C – the stub is welded to the flange of column C.

4.4.10 Fin plate

Manufacturing operation **Fin plate** connects member using a connecting plate (transferring mostly shear loads) to flange or web of another member.

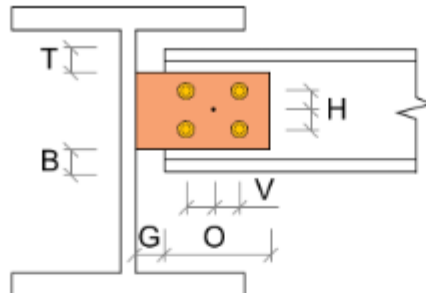

Manufacturing operations		Delete all Calculate Editor	
	Name		
>	<input checked="" type="checkbox"/> FP1		

Fin plate	
Member	B1
Connected to	B
Material	< default >
Thickness [mm]	10
Connection type	Bolted
G - gap [mm]	10
O - Overlap [mm]	140
T - Top [mm]	-30
B - Bottom [mm]	-40
Location	Front
Notch	<input checked="" type="checkbox"/>
Notch offset [mm]	10

Bolts	
Type	M16 - 10.9
H - Horizontal layers [mm]	40
V - Vertical layers [mm]	40
Shear plane in thread	<input checked="" type="checkbox"/>


Welds	
Plate	0 mm < default >

Properties of manufacturing operation **Fin plate**:

- **Member** – select member to be connected using fin plate to the “Connected to” member.
- **Connected to** – select member, to which is “Member” connected using the fin plate.


- **Material** – select material of fin plate. Member material is taken as default.
- **Thickness** – input thickness of fin plate.
- **Connection type** – select the type of connection between fin plate and “Member”:
 - **Bolted** – selected “Member” is bolted to the fin plate.
 - **Welded** – selected “Member” is welded to the fin plate.
- **G – Gap** – input distance between “Member” and “Connected to” member.
- **O – Overlap** – input overlap of fin plate and the web of “Member”, from the web edge of “Member”.
- **T – Top** – input offset of top edge of fin plate from the top edge of cross-section of “Member”.
- **B – Bottom** – input offset of bottom edge of fin plate from the bottom edge of cross-section of “Member”.
- **Location** – select side, on which the fin plate is applied:
 - **Front** – fin plate is applied on one side of the web of selected member.
 - **Rear** – fin plate is applied on the other side of the web of selected member.
- **Notch** - switch on/off generation of flange (and web) notch in case the flanges of connected member are aligned to flanges of “Connected to” member and the flanges are in collision.
- **Notch offset** – input distance between edges of plates in notched area.

Property group **Bolts** – definition of bolts in connection:

- **Type** – select bolts assembly. Click  to add new bolts assembly.
- **H – Horizontal layers** – input distances of horizontal bolt layers (separated by spaces) from the centroid of overlap of fin plate and web of selected “Member”.
- **V – Vertical layers** – input distances of vertical bolt layers (separated by spaces) from the centroid of overlap of fin plate and web of selected “Member”.
- **Shear plane in thread** – if selected, the gross area of bolt (reduced by thread) is taken into account in the bolts check.

Properties group **Welds** – input of welds properties – see **4.4.25 Welds properties**:

- **Plate** – properties of weld between fin plate and ‘Connected to’ member.
- **Member** – properties of weld between connected member and fin plate (for welded connection).

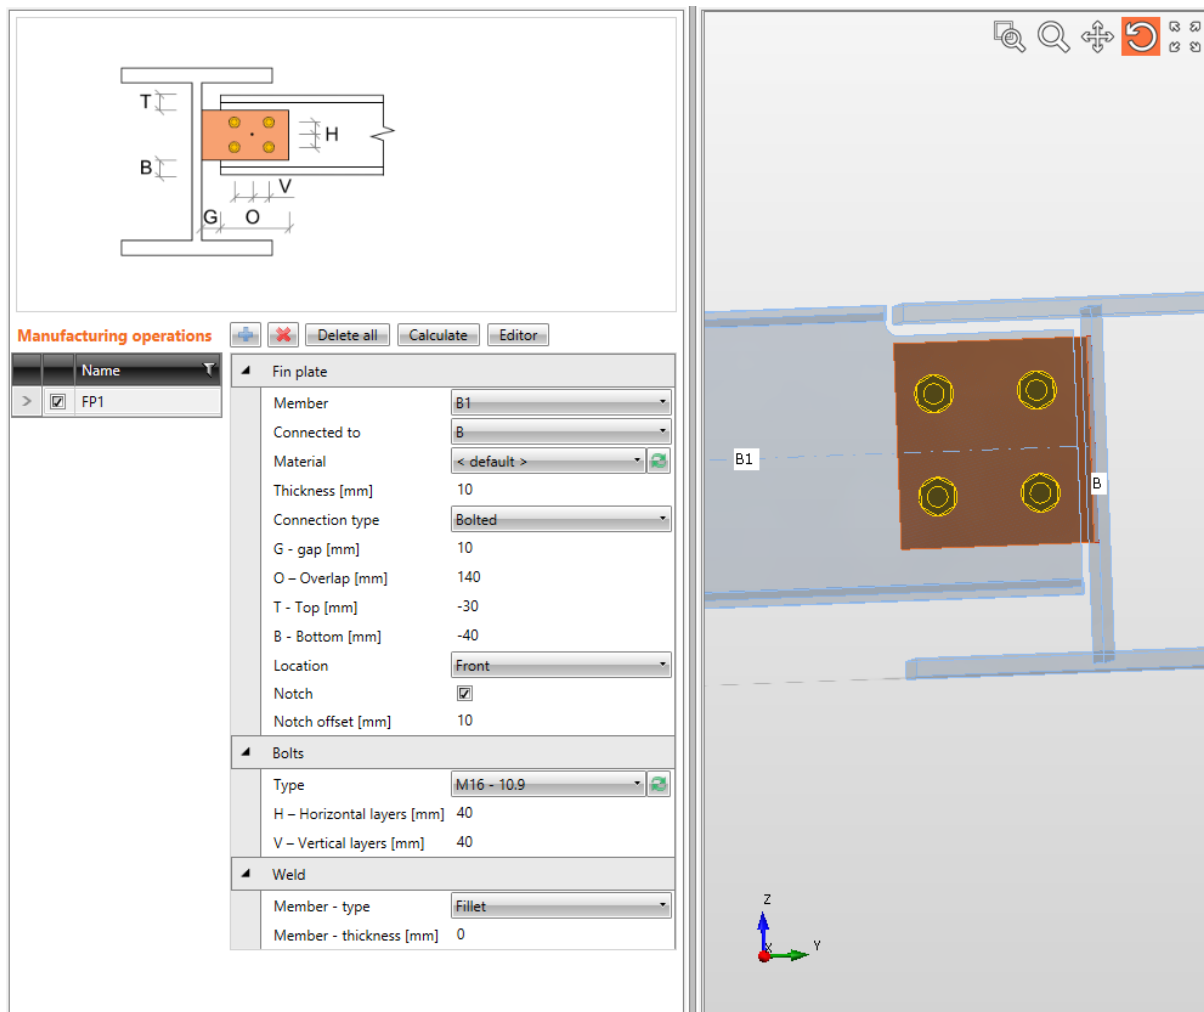


Fin plate.

Manufacturing operation **Fin plate** is applied on beam B1. The operation creates new connecting plate bolted to beam B1 by a bolts assembly. The operation is also related to beam B – connecting plate is welded to web of beam B. Because upper flanges of beams are aligned to each other, beam B1 is modified by notch.

4.4.11 Gusset plate

Manufacturing operation **Gusset plate** connects bracing member to another member or to the corner of two members or to the corner of column and base plate using a new gusset plate or connects the bracing member to the existing gusset plate. The bracing member can also be connected directly to the flange of member.

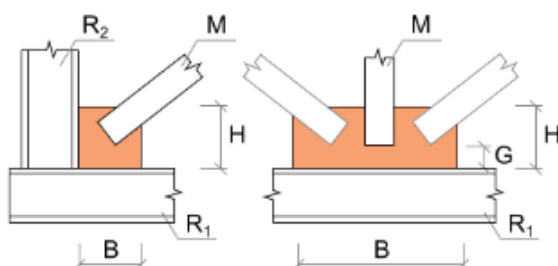

Manufacturing operations		Delete all Calculate Editor	
	Name		
>	<input checked="" type="checkbox"/> GUSS1		
	<input checked="" type="checkbox"/> GUSS2		

Gusset plate

Member: D1
Connected to: New plate

New plate

R1 Type: Member
R1 - related to: CH
R2 Type: None
Material: < default >
Thickness [mm]: 0
B - width [mm]: 400
H - depth [mm]: 150
X - position [mm]: -50

Connection

G - gap [mm]: 20
Alignment: Front
Connection type: Bolted

Welds

Plate: 0 mm < default >

Bolts

Type: M16 - 10.9
Reference line: Member x-axis
Rows [mm]: 20
Positions [mm]: 30 50
Grid: Regular
Shear plane in thread: ☒

Properties of manufacturing operation **Gusset plate**:

- **Member** – select member to be connected using the gusset plate.
- **Connected to** – select gusset plate to connect the “Member” to the “Related to” member:
 - **New plate** – member is connected using newly created gusset plate.
 - **Existing plate** – member is connected using existing plate:
 - **Plate** –select the existing gusset plate to connect the member to.
 - **Member plate** – member is connected directly to flange (part) of another member:
 - **Member** –.select another member to connect the member to its flange (part).
 - **Part of member** – select part of another member to be considered as gusset plate. The connected member is connected to the selected part.

Properties group **New plate** – definition of newly created gusset plate:


- **R1 type** – select type of connection part, to which is the gusset plate related:
 - **Member** – gusset plate is related to member.
 - **Plate** – gusset plate is related to another plate.
- **R1 – related to** – select the “Related to” member, to which the gusset plate is connected.
- **R2 type** – select type of second connection part, to which is the gusset plate also related:
 - **None** – gusset plate is not related to any other connection part.
 - **Member** – gusset plate is related to another member.
 - **Plate** – gusset plate is related to another plate.
- **R2 – related also to** – select the second member, to which the gusset plate is also related.
- **Material** – select material of gusset plate. Member material is taken as default.
- **Thickness** – input thickness of gusset plate. Value 0 means, that the thickness is determined automatically according to the cross-section of member.
- **B – width** – input width of gusset plate (length on “Related to” member).
- **H – depth** – input height of gusset plate.
- **X - position** – input shift of gusset plate along the axis of “Related to” member (distance between plate edge centre and intersection of x-axis of connected member and edge of “Related to ” member).
- **Shape** – select shape of gusset plate (for gusset plate between two “Related to” members):
 - **Rectangular** – the gusset plate is rectangular.
 - **Triangular** – the gusset plate is triangular.
 - **Chamfered** – the gusset plate is rectangular with chamfered corners. The chamfer dimensions are defined by:
 - **D1** – input chamfer length along “Related to” member.
 - **D2** – input chamfer length along second “Related to” member.

Properties group **Connection**

- **G – gap** – input distance between edge of “Related to” member and edge of connected member.
- **Alignment** – select alignment of connected member to the gusset plate:

- **Centre** – axis of connected member is aligned to the centre plane of gusset plate.
- **Front** – one side of connected member is aligned to the face of gusset plate.
- **Rear** – the other side of connected member is aligned to the face of gusset plate.
- **Notched** – select type of notch in gusset plate. Notch is available only if the alignment is set to centre.
 - **None** – notch for gusset plate is created into the connected member.
 - **Rectangular** – a rectangular opening around edges of the connected member is created into the gusset plate.
 - **Rounding A** – a rectangular opening around edges of the connected member with internal rounding of corners is created into the gusset plate.
 - **Rounding B** – a rectangular opening around edges of the connected member with external rounding of corners is created into the gusset plate.
- **Notch clearance** – input extension of notch depth.
- **Connection type** – select type of connection between gusset plate and connected member:
 - **Bolted** – connected member is bolted to the gusset plate.
 - **Welded** – connected member is welded to the gusset plate.

Properties group **Bolts** – see **4.4.25 Welds properties**

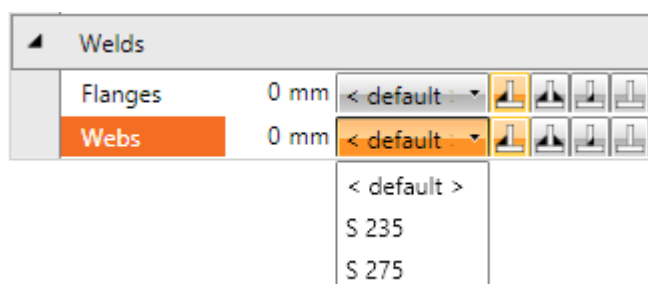

Each modifiable weld (group of welds) in the manufacturing operation is represented by one row in welds table. Following properties can be set for individual weld:

- Input of throat thickness. Value **0** means that the weld thickness is determined automatically according to the thickness of plate.
- Select material of weld. Material **<default>** means that material is determined automatically according to the material of corresponding plate.
- - switch the weld type to fillet weld.
- - switch the weld type to double fillet weld.
- - switch the weld type to butt weld.
- - switch the off – plates are not connected in the appropriate area of weld.

4.4.12 Input of bolts by layers

Following properties are available to define bolts or anchors positions related to plate edge or cross-section centroid:

- **Type** – select bolts assembly. Click to add new bolts assembly.

For plate dimensions defined to profile edges the bolts are defined by:

- **TL – Top layers** – input distances of bolt layers (separated by spaces) from the most outer left edge of cross-section.
- **LL – Left layers** – input distances of bolt layers (separated by spaces) from the most outer top edge of cross-section.
- **BL – Bottom layers** – input distances of bolt layers (separated by spaces) from the most outer bottom edge of cross-section.
- **RL – Right layers** – input distances of bolt layers (separated by spaces) from the most outer right edge of cross-section.

For plate dimensions defined by rectangle the bolts are defined by:

- **H – Horizontal layers** – input distances of horizontal bolt layers (separated by spaces) from the centroid of plate.
- **V – Vertical layers** – input distances of vertical bolt layers (separated by spaces) from the centroid of plate.


Bolts for circular plate are defined by:

- **Radius** – input radius of bolts pitch circle.
- **Number** – input number of bolts on the pitch circle.
- **Shear plane in thread** – if selected, the gross area of bolt (reduced by thread) is taken into account in the bolts check.

Input of bolt assembly.


Properties group **Welds** – input of welds properties – see **4.4.25 Welds properties**:

- **Plate** – properties of weld between gusset plate and ‘**Related to**’ member.
- **Member** – properties of weld between connected member and fin plate (for welded connection).

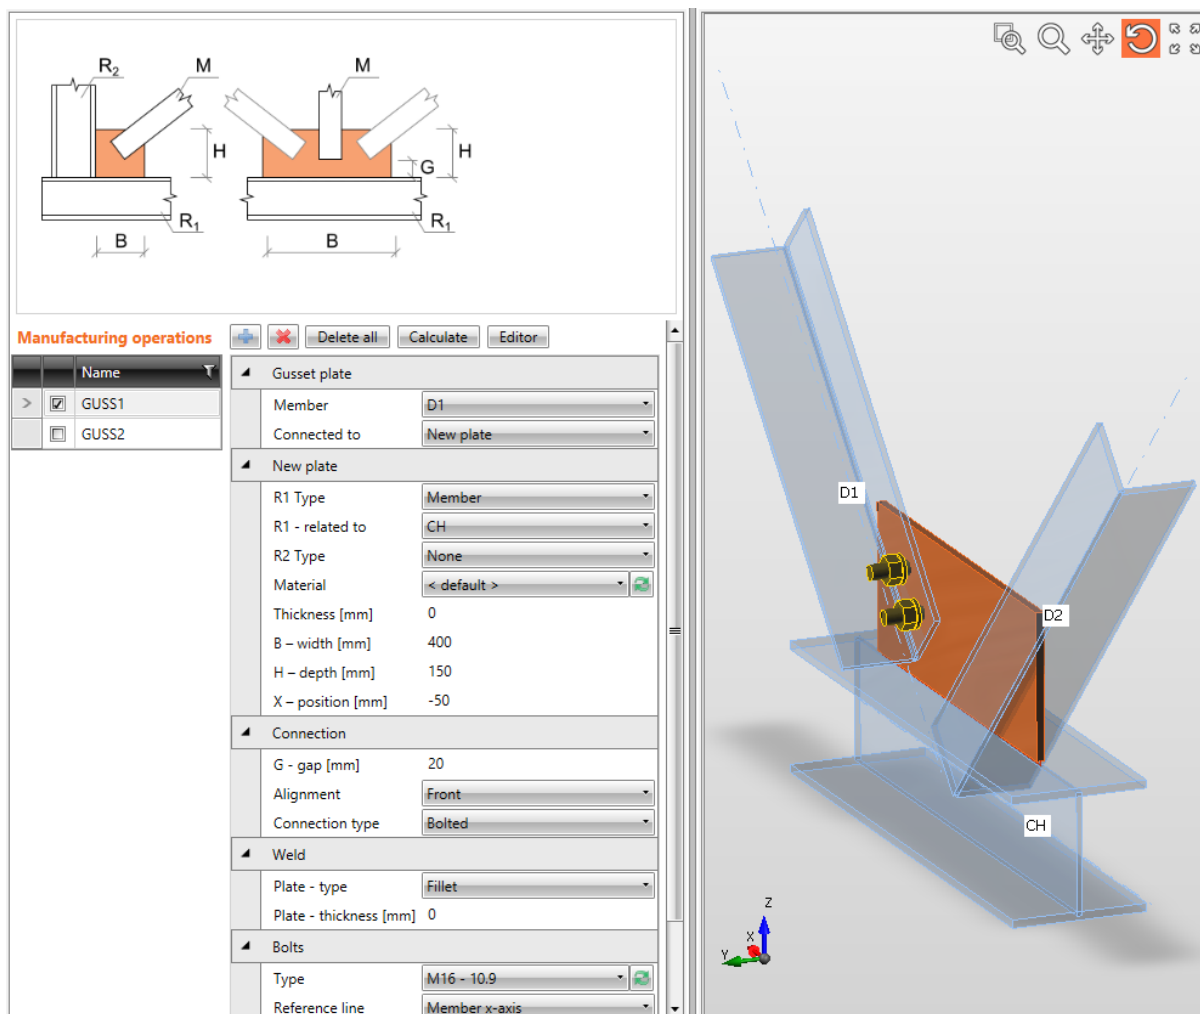


Bolted connection of bracing diagonal to a new gusset plate.

Manufacturing operation Gusset plate to connect using new gusset plate is applied on bracing diagonal D1. The operation creates new gusset plate. The newly created gusset plate is also related to the connection part of beam type – to the beam CH. Gusset plate is cut according beam CH and is welded to it. Diagonal D1 is bolted to the gusset plate by a bolts assembly. Diagonal D2 has not been connected yet.

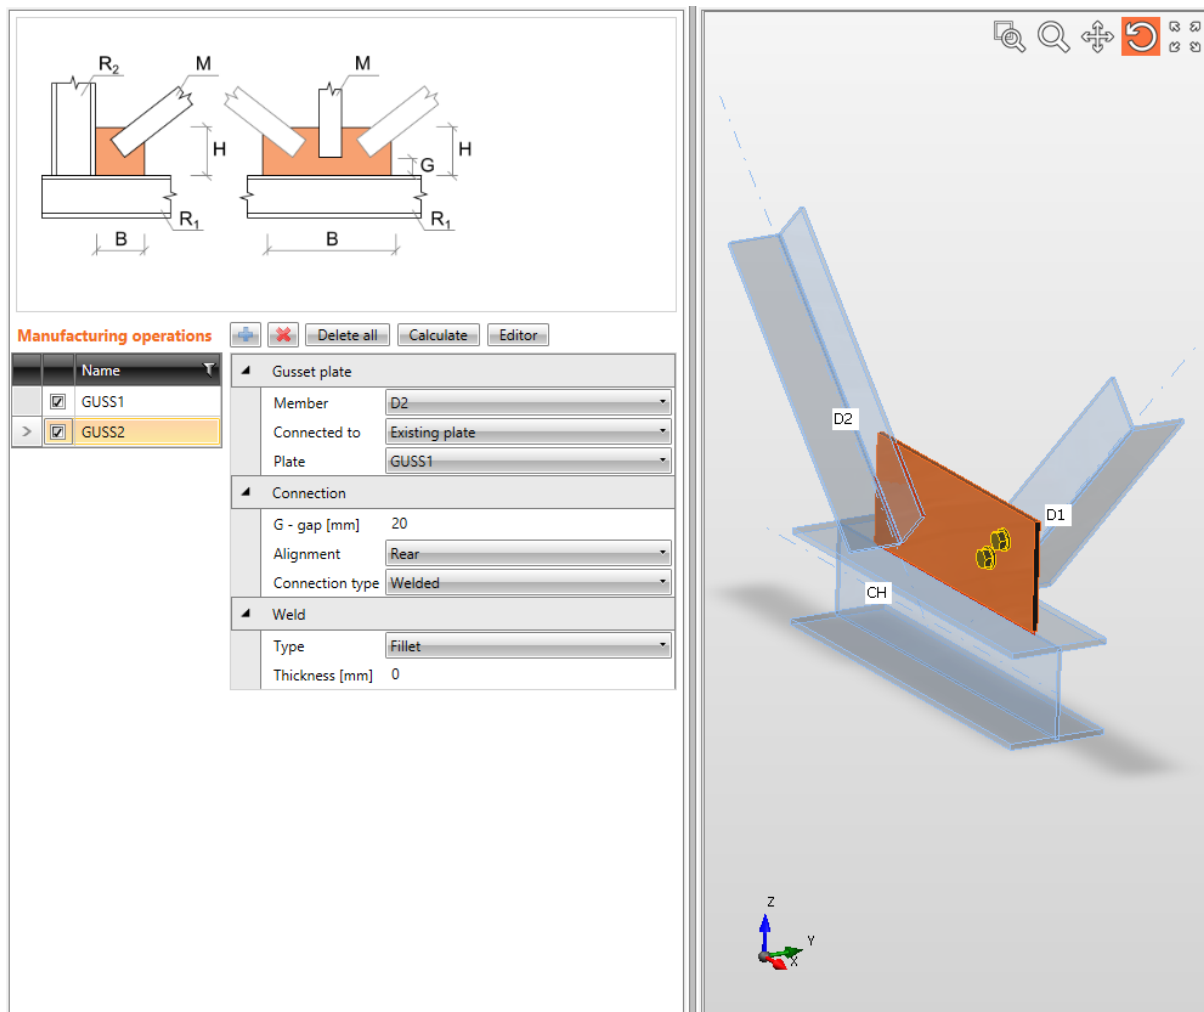


Welded connection of bracing diagonal to an existing gusset plate.

Manufacturing operation Gusset plate to connect to the existing plate (created in previous picture) is applied on diagonal D2. Diagonal D2 is welded to the gusset plate.

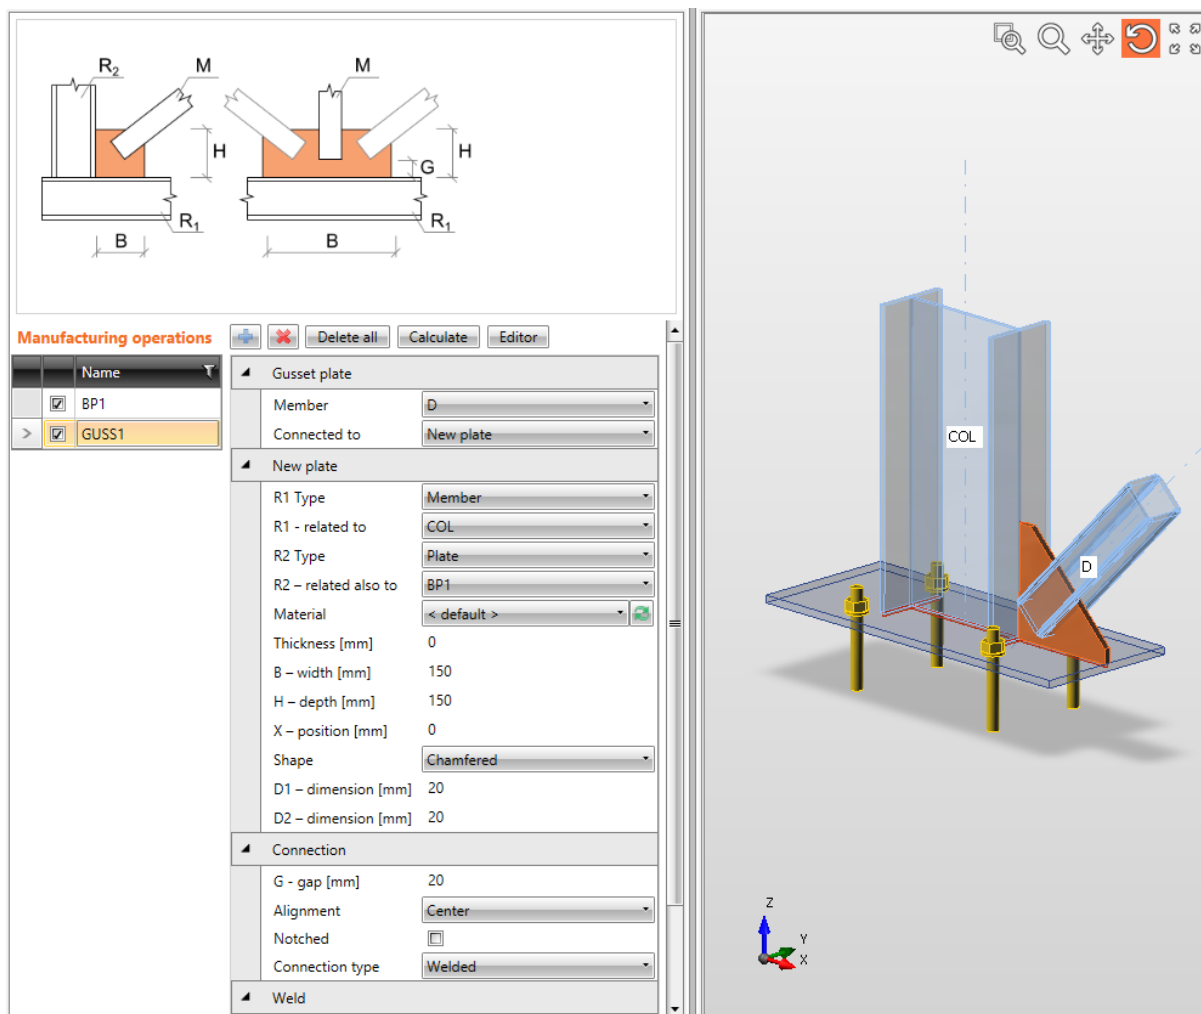

Bolted connection of bracing diagonal to the base plate using gusset plate.

Manufacturing operation Gusset plate to create new gusset plate is applied on diagonal D. The operation creates new gusset plate. The new gusset plate is also related to the connection part of type Beam – to the column COL and is also related to the connection part of type Plate – to the base plate. New gusset plate is cut according those parts and is welded to them. Diagonal D is welded to the gusset plate.

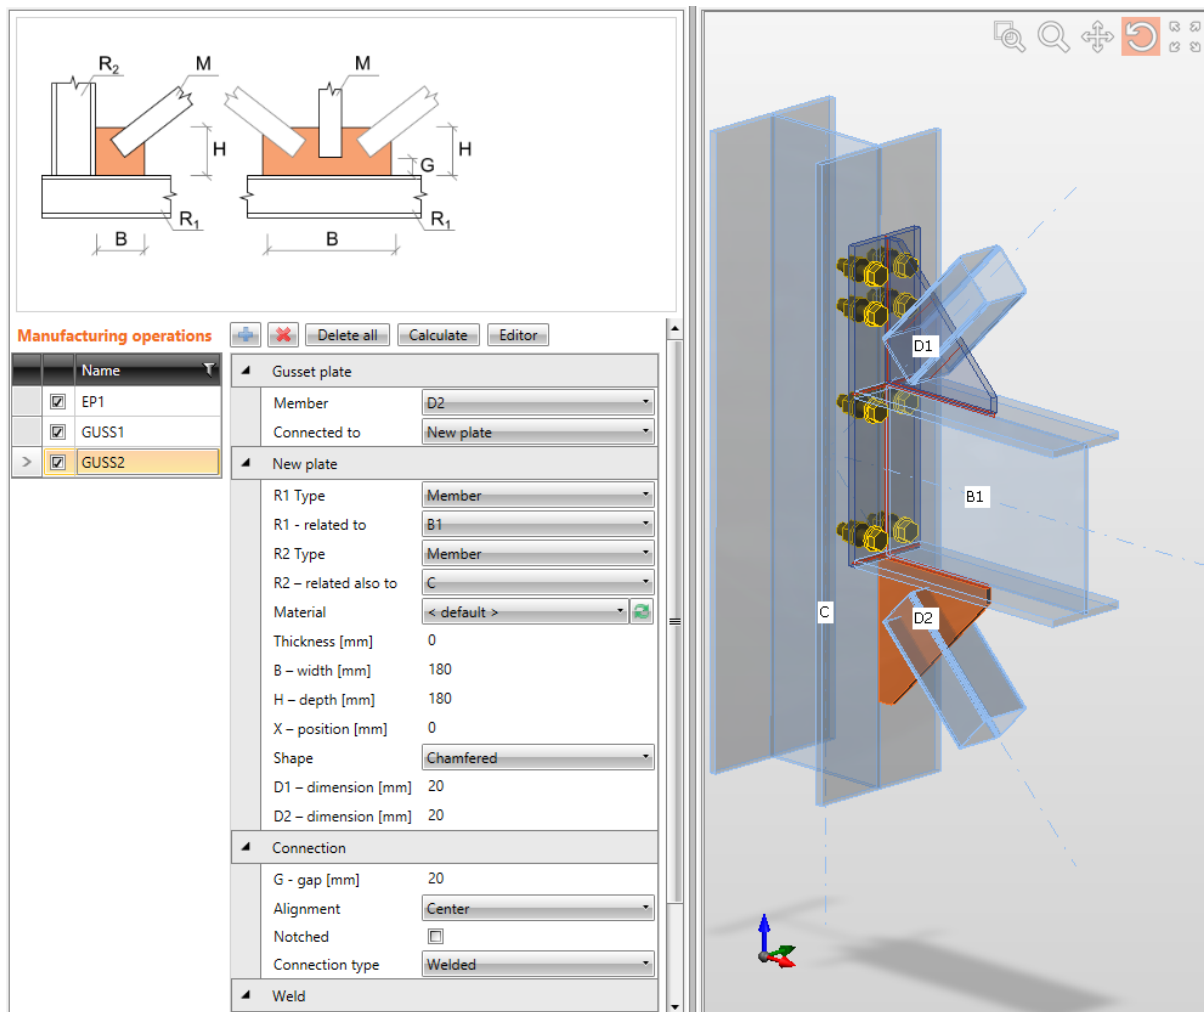


Welded connections of diagonals.

Manufacturing operation End plate is applied on beam B1 to connect the beam B1 by bolted end plate to the flange of column C.

Manufacturing operation Gusset plate to create new gusset plate is applied on diagonal D1. New gusset plate is also related to the connection part of type Beam – to beam B1 and also to connection part of type Plate – end plate. New gusset plate is cut according those parts and is welded to them. Diagonal D1 is welded to the new gusset plate.

Manufacturing operation Gusset plate to create new gusset plate is applied also on diagonal D2. New gusset plate is also related to the connection part of type Beam – to beam B1 and also to second connection part of type Beam – column C. New gusset plate is cut according those parts and is welded to them. Diagonal D2 is welded to the new gusset plate.

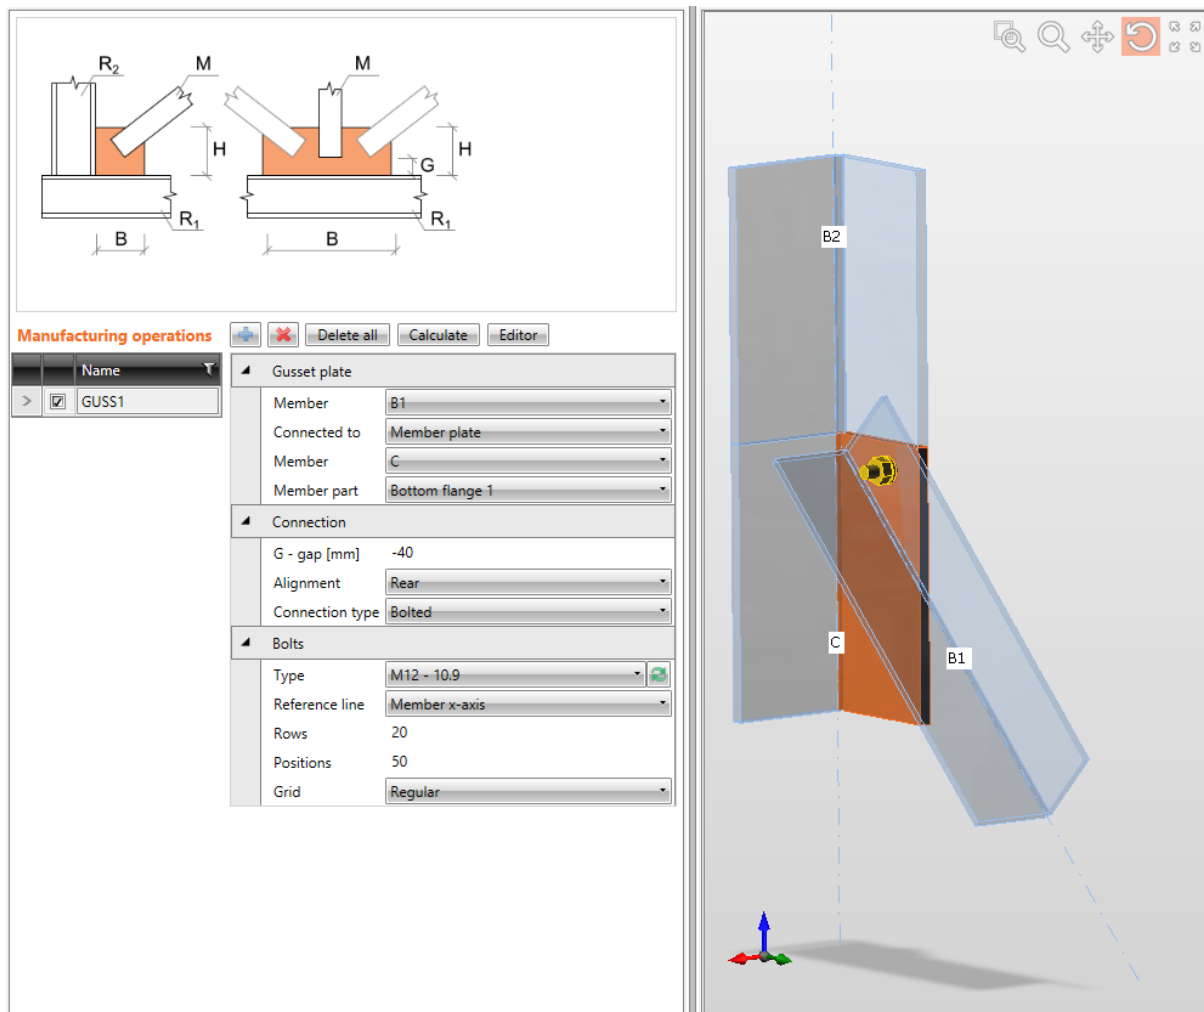


Bolted connection of diagonal to the cross-section part.

Manufacturing operation Gusset plate to connect to the part of cross-section is applied on diagonal B1. Diagonal B1 is bolted to the bottom flange of beam C by bolts assembly.

4.4.13 Base plate

Manufacturing operation **Base plate** creates base plate with concrete block on the beginning of member.

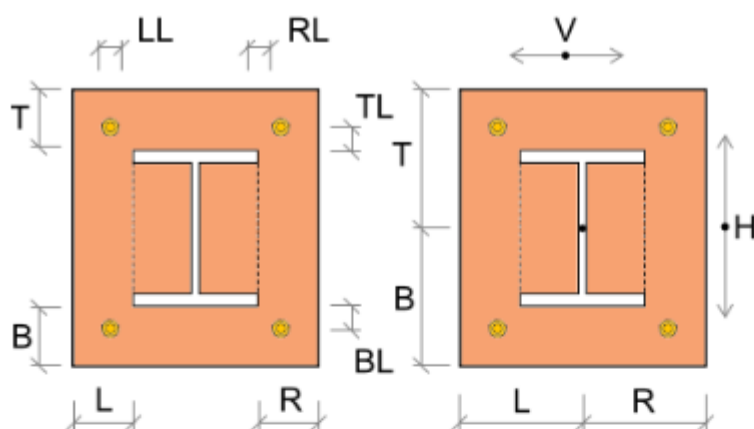

Manufacturing operations		Delete all Calculate Editor	
Name			
>	<input checked="" type="checkbox"/> BP1		
Base plate			
Member	COL		
Material	< default >		
Thickness [mm]	20		
Dimensions	To profile symmetrical		
Offsets			
T - Top [mm]	100		
L - Left [mm]	50		
Coordinate system	From member		
Orientation	Horizontal		
Rotation [°]	0,0		
Anchors			
Type	M16 - 10.9		
Length [mm]	100		
TL - Top layers [mm]	20		
LL - Left layers [mm]	20		
Shear plane in thread	<input checked="" type="checkbox"/>		
Welds			
Flanges	0 mm	< default >	
Webs	0 mm	< default >	

Foundation block	
Concrete grade	C25/30
Offset [mm]	50
Depth [mm]	300
Shear force tranfer	Shear iron
Cross-section of shear iron	CON1 (HEA140)
Length of shear iron [mm]	100
Mortar joint	<input type="checkbox"/>
Thickness [mm]	0

Properties of manufacturing operation **Base plate**:

- **Member** – select member to apply the base plate on.
- **Material** – select material of base plate. Member material is taken as default.
- **Thickness** – input thickness of base plate.
- **Dimensions** – select mode to determine the end plate dimensions:
 - **To profile** – plate dimensions are defined by offset to top, bottom, left and right most outer edge of cross-section.
 - **To profile symmetrical** – plate dimensions are defined by offset to top and left most outer edge of cross-section.
 - **Rectangle** – plate dimensions are defined by distances of top, bottom, left and right plate edge from the centroid of member cross-section.
 - **Rectangle symmetrical** – plate dimensions are defined by distances of top and left plate edge from the centroid of member cross-section.
 - **Circle** – circular plate dimension is defined by outer radius and radius of opening.

Properties group **Offsets** – definition of base plate dimensions

- **T – Top** – input offset of top plate edge from most outer top cross-section edge or centroid of cross-section.
- **L – Left** – input offset of left plate edge from most outer left cross-section edge or centroid of cross-section.
- **B – Bottom** – input offset of bottom plate edge from most outer bottom cross-section edge or centroid of cross-section.
- **R – Right** – input offset of right plate edge from most outer right cross-section edge or centroid of cross-section.
- **Orientation** – select orientation of base plate (for inclined columns):
 - **Perpendicular** – base plate is perpendicular to the member axis.
 - **Horizontal** – base plate is horizontal – parallel to XY plane of global coordinate system.
- **Radius** – input outer radius of circular end plate.
- **Rotation** – input base plate rotation about local x-axis of connected member.



Properties group **Anchors** – definition of anchor bolts – see **4.4.26 Input of bolts by layers**.


Properties group **Welds** – input of welds properties – see **4.4.25 Welds properties**:

- **Flanges** – properties of welds on flanges of connected member.

- **Webs** – properties of welds on webs of connected member.

Properties group **Foundation block** – definition of concrete block:

- **Concrete grade** – select concrete grade of foundation block. Click  to add new concrete grade.
- **Offset** – input offset of foundation block from the base plate edges.
- **Height** – input overall height of foundation block.
- **Shear force transfer** – select mode of transfer of shear force to concrete block:
 - **Friction** – shear force is transferred by friction between base plate and concrete only.
 - **Shear iron** – shear force is transferred by shear iron.
 - **Anchors** – shear force is transferred by anchors only.
- **Cross-section of shear iron** – select cross-section of shear iron. Click  to add a new cross-section.
- **Length of shear iron** – input length of shear iron from the bottom side of base plate.
- **Mortar joint** – if selected, the influence of base plate grouting is taken into account.
- **Thickness** – input thickness of mortar joint.

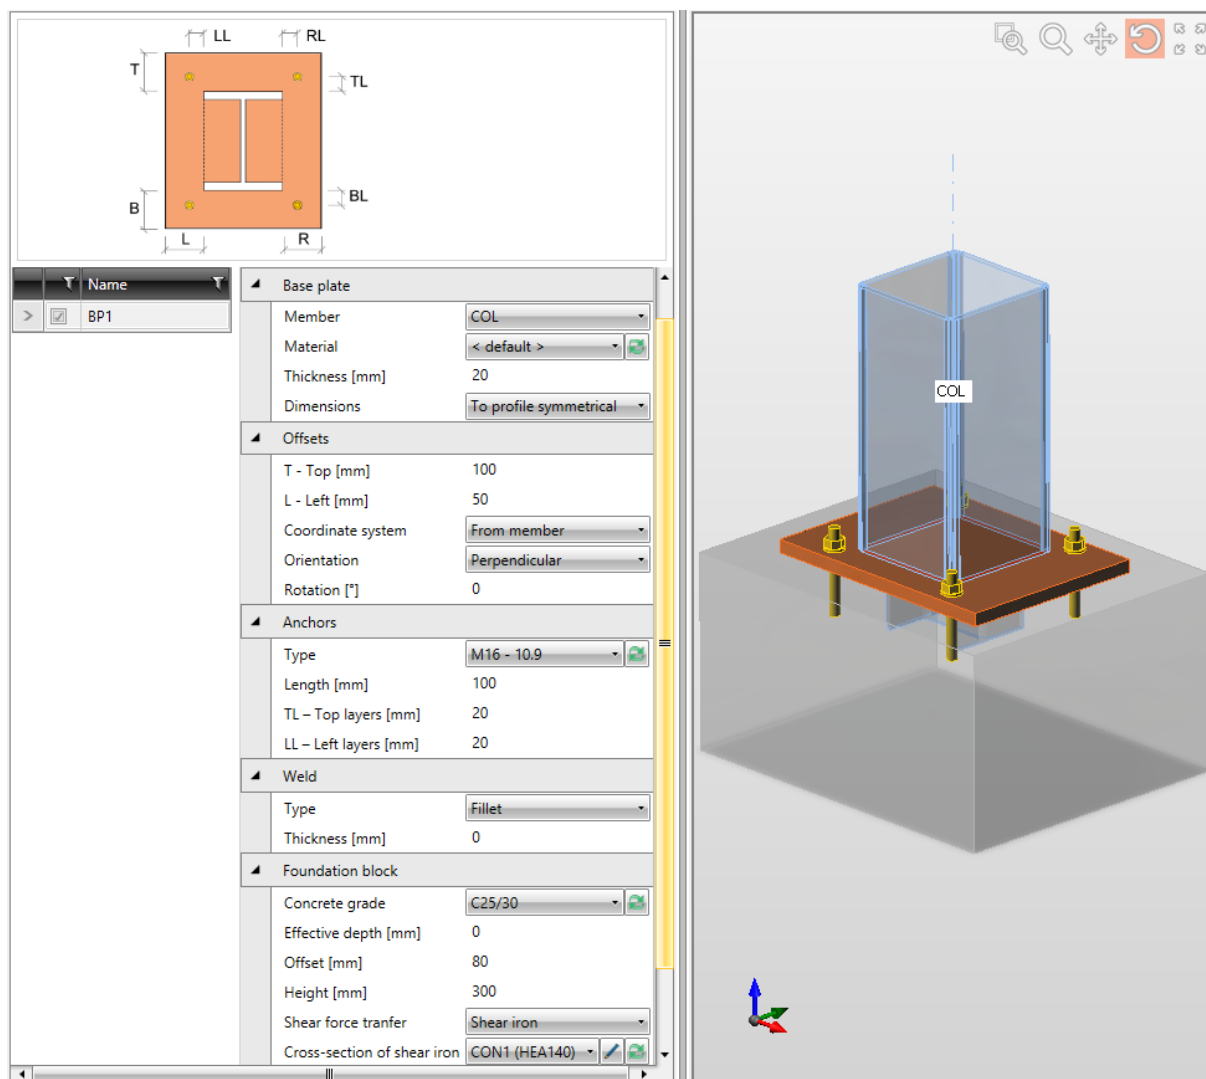


Base plate.

Manufacturing operation Base plate is applied on column COL. The operation creates new base plate, which is welded to column COL. The concrete block is defined under the base plate. Shear force is transferred by the shear iron under the base plate. The base plate is connected to the concrete block by anchors assembly.

4.4.14 Splice


Manufacturing operation Splice adds a new splice on member or connects member to existing splice. Splices can be welded or bolted. Two members can be connected by splice.

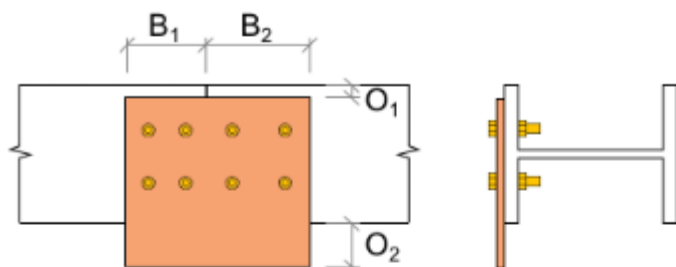

Manufacturing operations		<input type="button" value="+"/> <input type="button" value="X"/> <input type="button" value="Delete all"/> <input type="button" value="Calculate"/> <input type="button" value="Editor"/>	
	Name		
>	<input checked="" type="checkbox"/> SPL1		
	<input checked="" type="checkbox"/> SPL2		

Splice plate	
Member	B1
Member part	Top flange 1
Connected to	New plate
Positions	+
Material	< default > <input type="button" value="Refresh"/>
Thickness [mm]	0
B1 [mm]	150
B2 [mm]	150
Offset 1 [mm]	0
Offset 2 [mm]	0
Connection type	Bolted


Bolts	
Type	M16 - 10.9 <input type="button" value="Refresh"/>
Reference line	Member x-axis
Rows [mm]	80 ; 40 ; -40 ; -80
Positions [mm]	50 40*2
Grid	Regular
Shear plane in thread	<input checked="" type="checkbox"/>

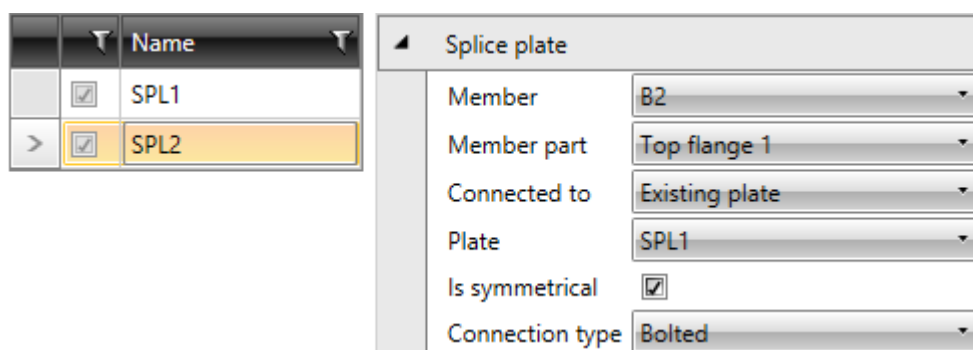

Properties of manufacturing operation **Splice**:



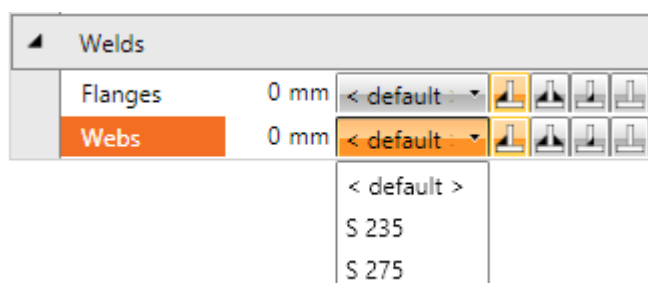

- **Member** – select member to apply splice on.
- **Member part** – select part of member, to which the splice plate is connected.
- **Connected to** – select splice plate to connect to the modified member:
 - **New plate** – new splice plate is created to be connected to the modified member.
 - **Existing plate** – existing splice plate is connected to modified member.
 - **Plate** – select existing splice plate.
 - **Is symmetrical** – if the option is selected, bolts assembly is created as a mirror copy of bolts assembly on the second member connected to the current splice plate.
- **Material** – select material of splice plate. Member material is taken as default.
- **Thickness** – input thickness of splice plate. Value 0 means, that the thickness is determined automatically according to the cross-section of member.
- **B1** – input length of splice plate in direction into the connected member.
- **B2** – input length of splice plate in direction out of the connected member.
- **Offset 1** – input offset of splice plate from one edge of selected cross-section part.
- **Offset 2** – input offset of splice plate from second edge of selected cross-section part.
- **Type of connection** - select type of connection between splice plate and modified member:
 - **Bolted** – splice plate is bolted to the modified member.
 - **Welded** – splice plate is welded to the modified member.

Properties group **Bolts** – see **4.4.25 Welds properties**



Each modifiable weld (group of welds) in the manufacturing operation is represented by one row in welds table. Following properties can be set for individual weld:

- Input of throat thickness. Value **0** means that the weld thickness is determined automatically according to the thickness of plate.

- Select material of weld. Material **<default>** means that material is determined automatically according to the material of corresponding plate.
-  - switch the weld type to fillet weld.
-  - switch the weld type to double fillet weld.
-  - switch the weld type to butt weld.
-  - switch the off – plates are not connected in the appropriate area of weld.

4.4.15 Input of bolts by layers

Following properties are available to define bolts or anchors positions related to plate edge or cross-section centroid:

- **Type** – select bolts assembly. Click  to add new bolts assembly.

For plate dimensions defined to profile edges the bolts are defined by:

- **TL – Top layers** – input distances of bolt layers (separated by spaces) from the most outer left edge of cross-section.
- **LL – Left layers** – input distances of bolt layers (separated by spaces) from the most outer top edge of cross-section.
- **BL – Bottom layers** – input distances of bolt layers (separated by spaces) from the most outer bottom edge of cross-section.
- **RL – Right layers** – input distances of bolt layers (separated by spaces) from the most outer right edge of cross-section.

For plate dimensions defined by rectangle the bolts are defined by:

- **H – Horizontal layers** – input distances of horizontal bolt layers (separated by spaces) from the centroid of plate.
- **V – Vertical layers** – input distances of vertical bolt layers (separated by spaces) from the centroid of plate.


Bolts for circular plate are defined by:

- **Radius** – input radius of bolts pitch circle.
- **Number** – input number of bolts on the pitch circle.
- **Shear plane in thread** – if selected, the gross area of bolt (reduced by thread) is taken into account in the bolts check.

Input of bolt assembly.


Properties group **Welds** – input of welds properties – see **4.4.25 Welds properties**:

- **Longitudinal** – properties of welds in direction of x-axis of member.
- **Transversal** – properties of welds in direction perpendicular to x-axis of member.

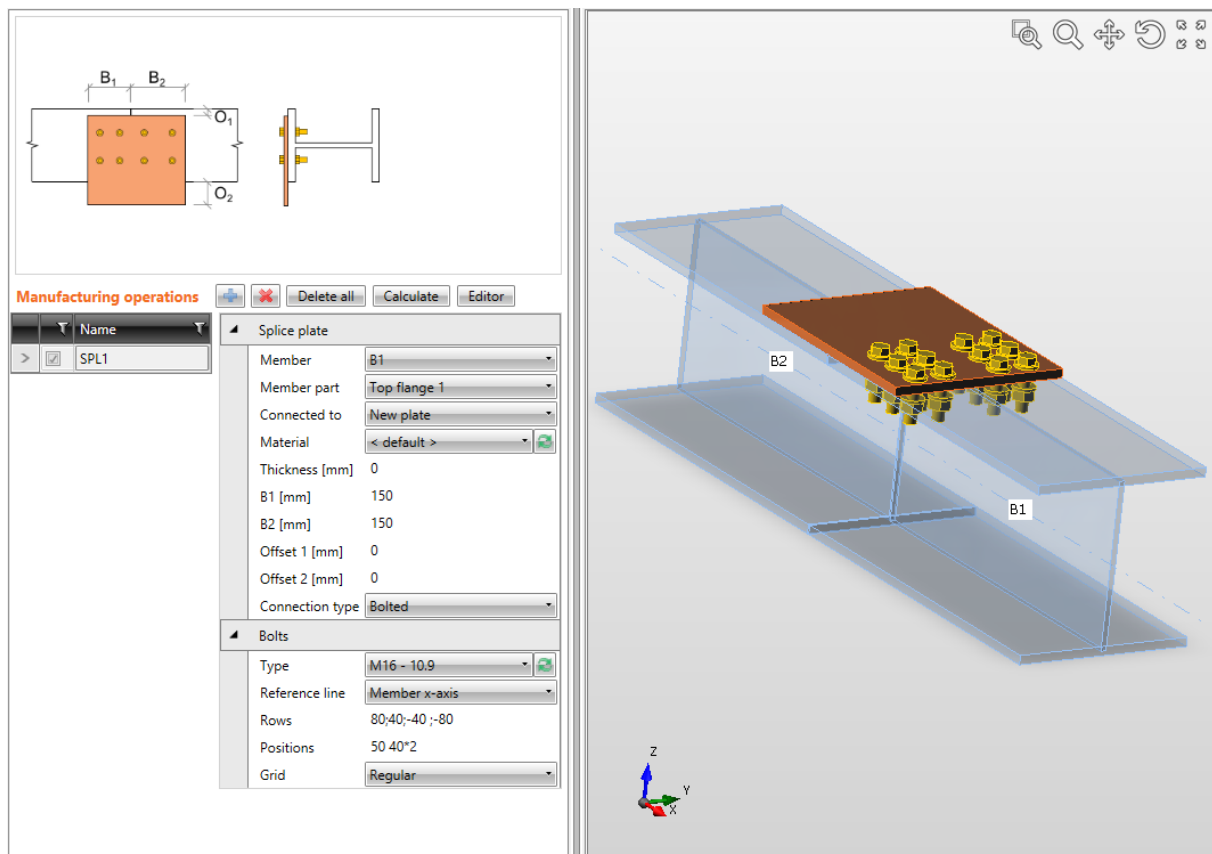


Splice on beam flange

Manufacturing operation Splice is applied on beam B1. The operation creates new plate, which is bolted to the upper flange of beam B1 by bolts assembly. Beam B2 has not been connected yet.

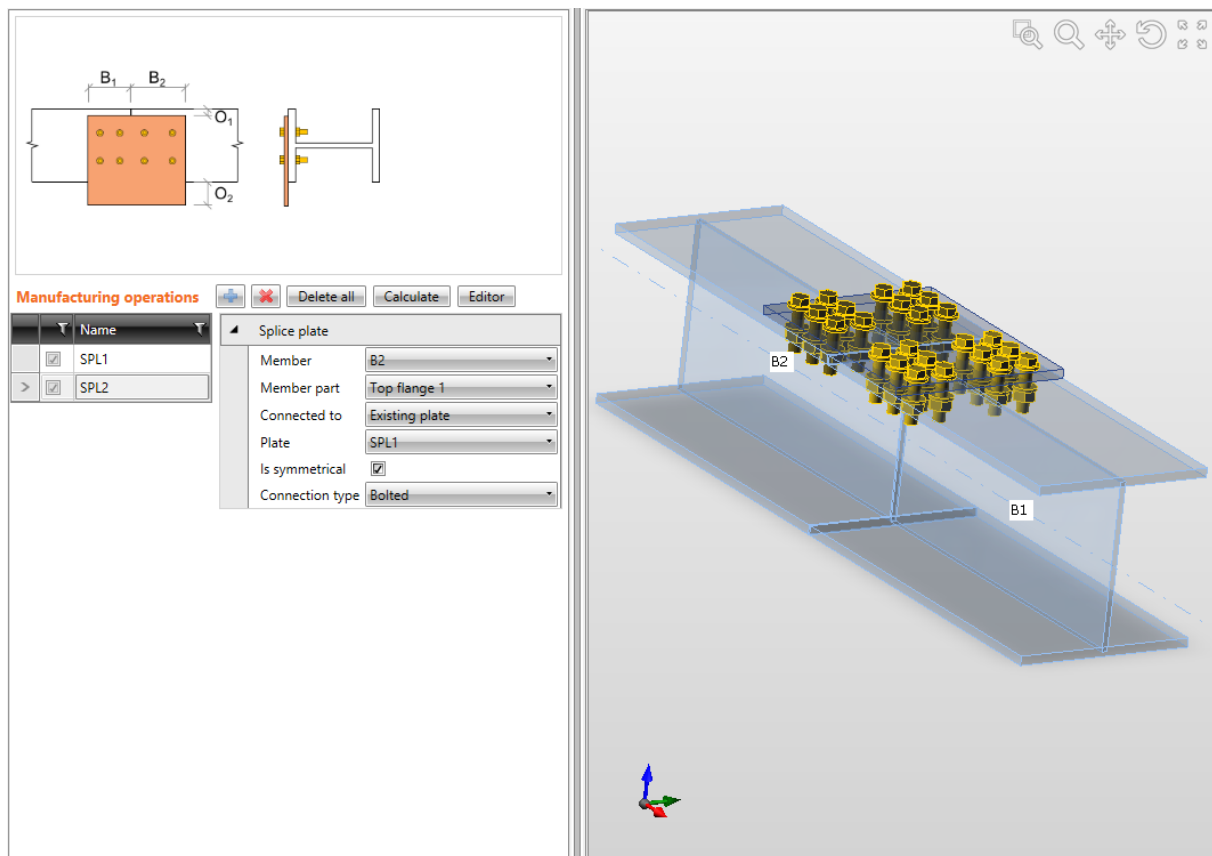

Connecting beam flange to existing splice.

Manufacturing operation Splice is applied on beam B2. The operation connects upper flange of beam to an existing splice plate (created in previous picture on beam B1). Positions of bolts is taken as mirror copy from the splice side on beam B1.

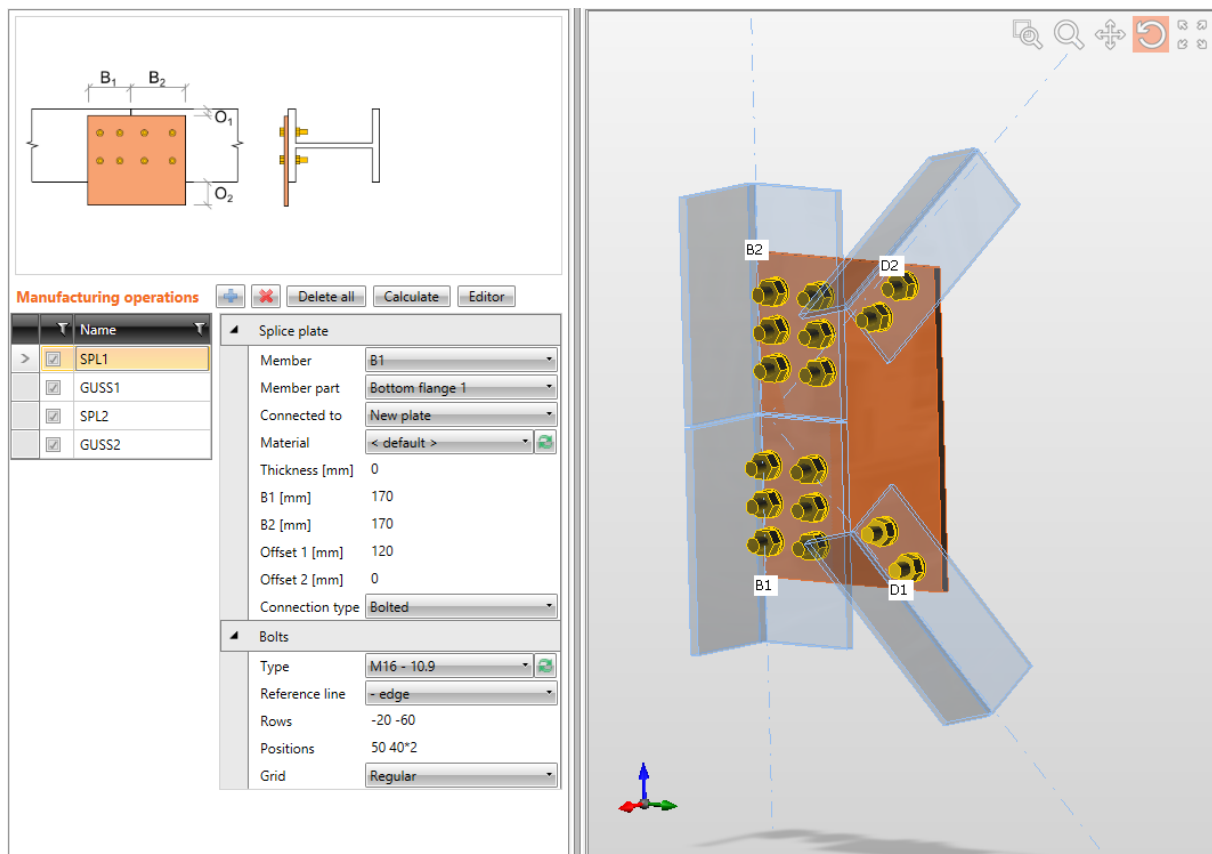

Combined operations Splice and Gusset plate to connect two beams (angle sections) and to connect diagonals (also angle sections).

First manufacturing operation Splice is applied on beam B1 to create a new splice plate. The splice is bolted to the bottom flange of beam B1 by a bolts assembly. The splice is widened to enable connection of diagonals.

Second manufacturing operation Splice is applied on beam B2 and it connects the beam to an existing splice plate (created in previous Splice operation). Bolts assembly is taken as symmetrical from the splice side on beam B1.

Manufacturing operation Gusset plate is applied on diagonal D1. It connects beam D1 to an existing splice plate.


Manufacturing operation Gusset plate is also applied on diagonal D2. It connects beam D2 to the same existing splice plate.

4.4.16 Connecting plate (hollow sections)

Manufacturing operation **Connecting plate** connects bracing diagonal of hollow cross-section to another member or to the corner of two members or to the corner of column and base plate.

Either a lid is created on the connected member, to which a connected plate is welded or the connected plate is welded into the notch cut into the connected diagonal member.

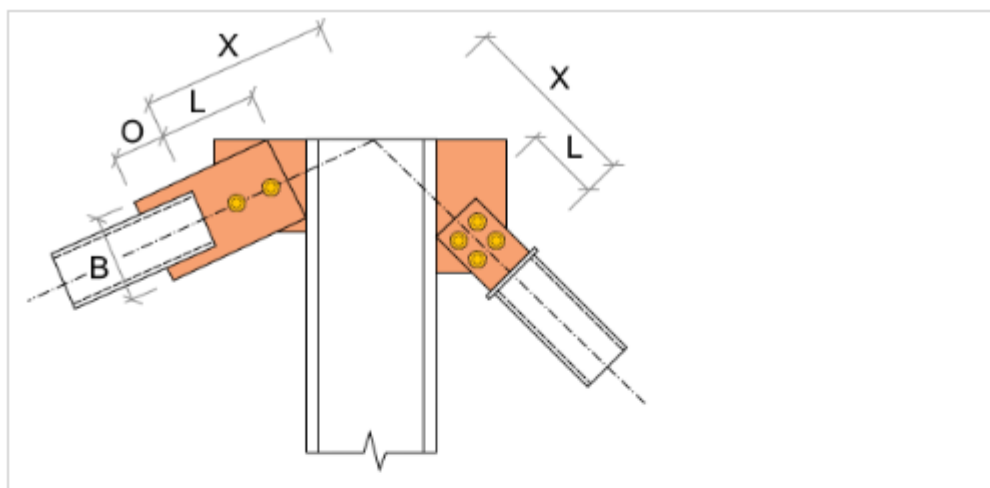

The modified diagonal is connected either to a new connecting plate (welded to the “Related to” member or to the existing connecting plate or directly to the cross-section part (flange) of “Related to” member.



Manufacturing operations

Name
<input checked="" type="checkbox"/> CPL1

Connecting plate	
Member	B
Connected to	New plate
New gusset plate	
R1 Type	Member
R1 - related to	C
R2 Type	None
Material	< default > <input type="button" value="R"/>
Thickness [mm]	0
B - width [mm]	200
H - depth [mm]	150
X - position [mm]	0
Connection	

Connection	
X - position [mm]	300
Material	< default > 
Thickness [mm]	0
Alignment	Rear
Type	Lid
L - plate length [mm]	150
B - plate width [mm]	0
E - plate excentricity [mm]	0
Thickness of lid [mm]	0
Lid offset (LL RR TT BB)	10
Lid shape	Rectangular
Connection type	Bolted
Weld	
Type	Fillet
Thickness [mm]	0
Lid plate - type	Fillet
Thickness [mm]	0
Gusset plate - type	Fillet
Thickness [mm]	0
Bolts	
Type	M16 - 10.9 
Reference line	Member x-axis
Rows	0
Positions	50 50
Grid	Regular

Properties of manufacturing operation **Connecting plate**:

- **Member** – select member to be connected using the connecting plate.
- **Connected to** – select connecting plate to connect “Member” to “Connected to” member:
 - **New plate** – member is connected using newly created connecting plate.
 - **New plate 2x** – member is connected using pair of newly created connecting plates - connected plate is between two connected (gusset) plates.
 - **Existing plate** – member is connected using existing plate:
 - **Plate** – select the existing plate to connect the member to.
 - **Member plate** – member is connected directly to flange (part) of another member:
 - **Member** – select another member to connect the member to its flange (part).

- **Part of member** – select part of another member to be considered as connecting plate. The connected member is connected to the selected part.

Properties group **New plate** – definition of newly created connecting plate, welded to “Related to” member:


- **R1 type** – select type of connection part, to which is the connecting plate related:
 - **Member** – connecting plate is related to member.
 - **Plate** – connecting plate is related to another plate.
- **R1 – related to** – select member, to which the connecting plate is connected.
- **R2 type** – select type of second connection part, to which is the connecting plate also related:
 - **None** – connecting plate is not related to any other connection part.
 - **Member** – connecting plate is related to another member.
 - **Plate** – connecting plate is related to another plate.
- **R2 – related also to** – select the second member, to which the connecting plate is also related.
- **Material** – select material of connecting plate. Member material is taken as default.
- **Thickness** – input thickness of connecting plate. Value 0 means, that the thickness is determined automatically according to the cross-section of member.
- **B – width** – input width of connecting plate (length on “Related to” member).
- **H – depth** – input height of connecting plate.
- **X - position** – input shift of gusset plate along the axis of “Related to” member (distance between plate edge centre and intersection of x-axis of connected member and edge of “Related to ” member).
- **Shape** – select shape of connecting plate (for connecting plate between two “Related to” members):
 - **Rectangular** – the connecting plate is rectangular.
 - **Triangular** – the connecting plate is triangular.
 - **Chamfered** – the connecting plate is rectangular with chamfered corners. The chamfer dimensions are defined by:
 - **D1** – input chamfer length along “Related to” member.
 - **D2** – input chamfer length along second “Related to” member.

Properties group **Connection**:

- **X – position** – distance between axis of “Related to” member and edge of “Member” or edge of lid (in the axis of “Member”).
- **Material** – select material of connecting plate.
- **Thickness** – input thickness of connecting plate. Value 0 means, that the thickness is determined automatically according to the cross-section of member.
- **Alignment** – select alignment of connected plate to connecting plate:
 - **Front** – connected plate is aligned to one side of connecting plate.
 - **Rear** – connected plate is aligned to the other side of connecting plate.
- **Type** – select type of connection between connected member and connecting plate:
 - **Lid** – end of connected member is closed by a lid, the connected plate is welded to the lid.



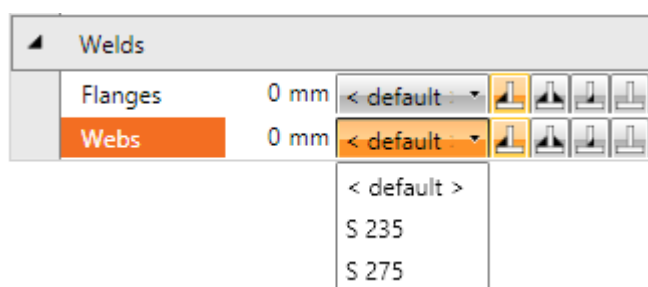

- **Lid 2x** – end of connected member is closed by a lid, two connected plates are welded to the lid (connecting plate is between two connected plates).
- **Notched plate - walls** – notches for webs/flanges of connected members are created in connected plate. Member is welded to the notches – inner welds inside the connected member are possible.
- **Notched plate - rectangle** – a rectangular notch rounding the outer edges of connected member is created in connected plate. Connected member is welded into the notch.
- **Notched member** – connected plate is welded into the notch, which is cut into the connected member.
- **L – plate length** – input length of connected plate from the edge of lid or edge of connected member.
- **B – plate width** – input width of connected plate. Value 0 means, that the width of connected plate is calculated automatically according to the cross-section of connected member or according to the lid.
- **O – overlap** – input of connected plate overlap into the connected member (length of notch in connected member. Only for connection type Notched member.
- **E - Plate eccentricity** – input eccentricity between connected plate and axis of connected member (shift of connected member from the axis of connected plate).
- **Thickness of lid** – input the thickness of lid plate. Value 0 means, that the thickness is determined automatically. Only for connection type **Lid**.
- **Lid offset (LL RR TT BB)** – input offsets of lid dimensions in format Left Right Top Bottom – all offsets are different or Left Top – left and right offsets are identical, top and bottom offsets are identical or Left = all offsets are identical. Only one offset value is defined for circular lid.
- **Lid shape** – select shape of lid:
 - **Rectangular** – connected member is closed by rectangular lid.
 - **Circular** – connected member is closed by circular lid.
- **Connection type** – select type of connection between connected plate and connecting plate:
 - **Welded** – connecting plate is welded to connected plate.
 - **Bolted** – connecting plate is bolted to connected plate by bolts assembly.

Properties group **Bolts** – see **4.4.25 Welds properties**



Each modifiable weld (group of welds) in the manufacturing operation is represented by one row in welds table. Following properties can be set for individual weld:

- Input of throat thickness. Value **0** means that the weld thickness is determined automatically according to the thickness of plate.
- Select material of weld. Material **<default>** means that material is determined automatically according to the material of corresponding plate.

-  - switch the weld type to fillet weld.
-  - switch the weld type to double fillet weld.
-  - switch the weld type to butt weld.
-  - switch the off – plates are not connected in the appropriate area of weld.

4.4.17 Input of bolts by layers

Following properties are available to define bolts or anchors positions related to plate edge or cross-section centroid:

- **Type** – select bolts assembly. Click  to add new bolts assembly.

For plate dimensions defined to profile edges the bolts are defined by:

- **TL – Top layers** – input distances of bolt layers (separated by spaces) from the most outer left edge of cross-section.
- **LL – Left layers** – input distances of bolt layers (separated by spaces) from the most outer top edge of cross-section.
- **BL – Bottom layers** – input distances of bolt layers (separated by spaces) from the most outer bottom edge of cross-section.
- **RL – Right layers** – input distances of bolt layers (separated by spaces) from the most outer right edge of cross-section.

For plate dimensions defined by rectangle the bolts are defined by:

- **H – Horizontal layers** – input distances of horizontal bolt layers (separated by spaces) from the centroid of plate.
- **V – Vertical layers** – input distances of vertical bolt layers (separated by spaces) from the centroid of plate.


Bolts for circular plate are defined by:

- **Radius** – input radius of bolts pitch circle.
- **Number** – input number of bolts on the pitch circle.
- **Shear plane in thread** – if selected, the gross area of bolt (reduced by thread) is taken into account in the bolts check.

Input of bolt assembly.


Properties group **Welds** – input properties of welds between connecting plate and “Related to” members and between connected plate and connected member – see **4.4.25 Welds properties**:

- **Plate** – properties of weld between connecting/gusset plate and „Related to“ member.
- **Lid** – properties of weld between lid and connected member.
- **Tongue** – properties of weld between connected plate (tongue) and lid, or between connected plate (tongue) and connected member.
- **Tongue to plate** – properties of weld between connecting (gusset) and connected (tongue) plates.
- **Length of inside weld** – input length of weld inside the connected member for connecting plate with notches for walls/flanges.

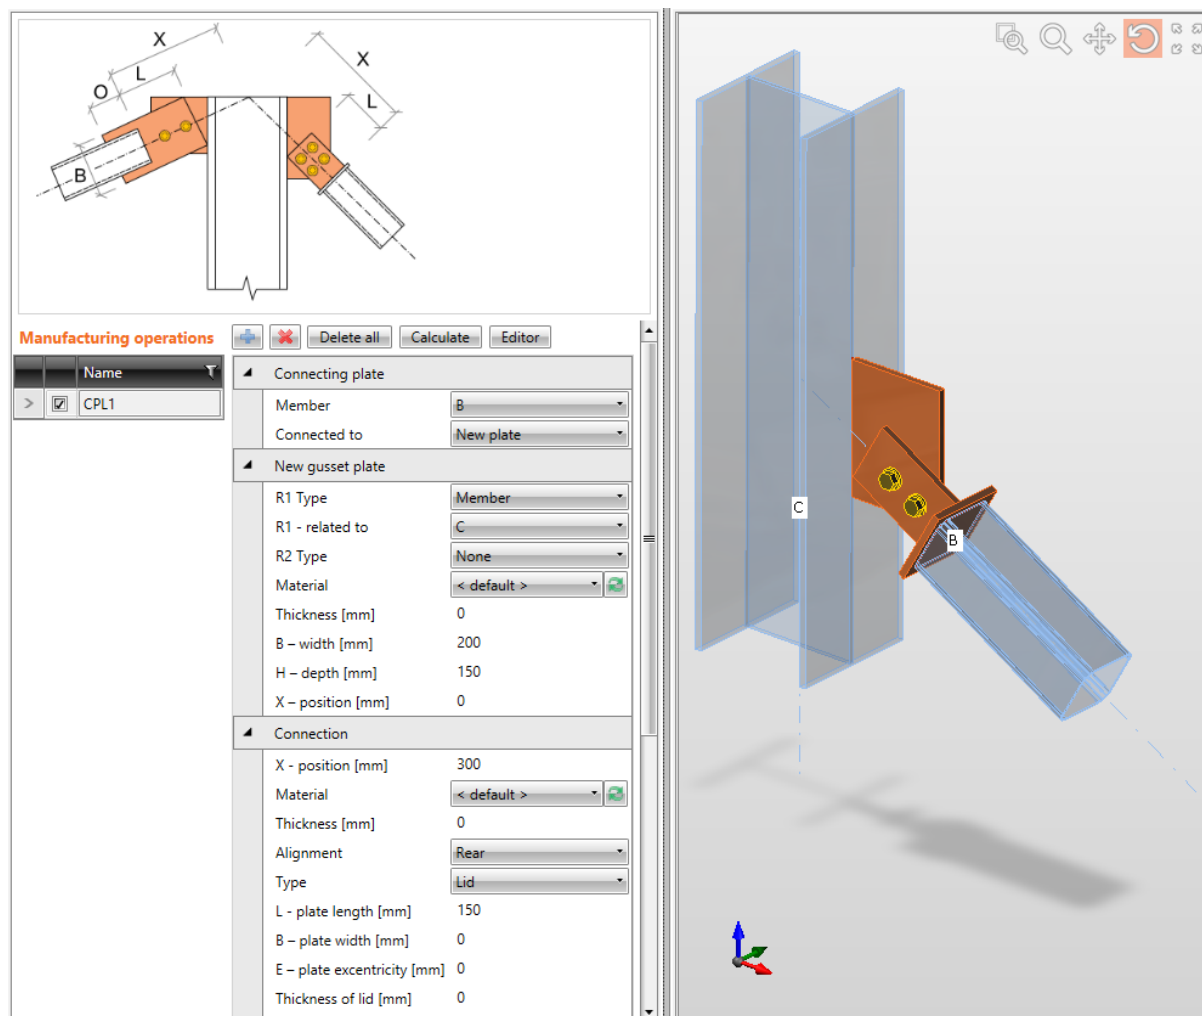


Connection of bracing diagonal B (rectangular hollow section) to a new connecting plate.

Manufacturing operation Connecting plate is applied on diagonal B. The operation is related to connection part of Beam type – column C. The operation creates new connecting plate, welded to column C. On the connected member, the operation creates a lid closing the diagonal and connected plate welded to the lid. Connected plate and connecting plate are bolted by bolts assembly.

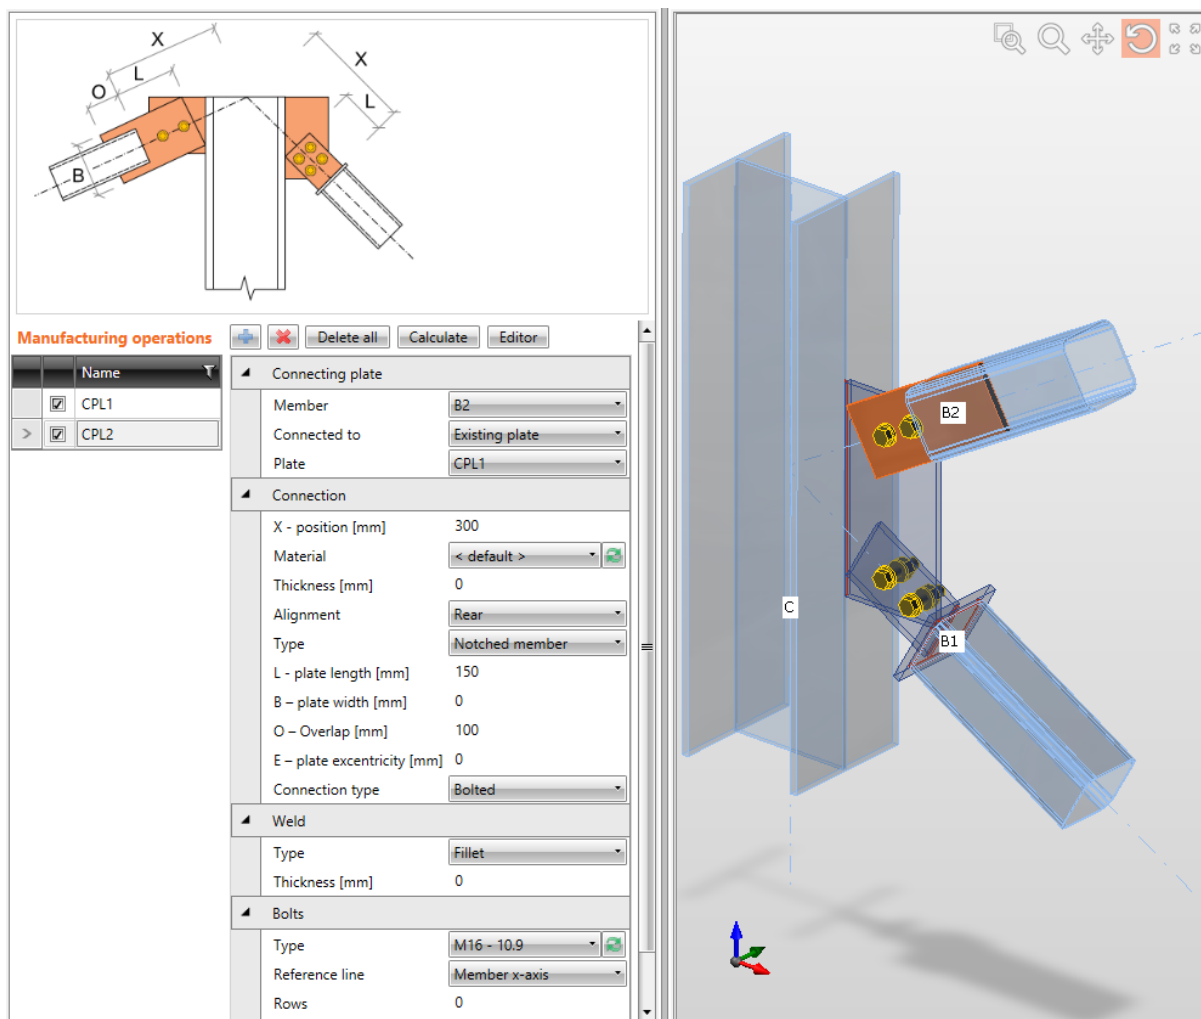

Connection of bracing diagonal B2 (rectangular hollow section) to an existing connecting plate. Manufacturing operation Connecting plate is applied on diagonal B2. The operation connects diagonal B2 to the existing connecting plate (created in previous picture). The operation creates a notch in connected member. The connected plate is welded into the notch. Connected plate and connecting plate are bolted by bolts assembly.

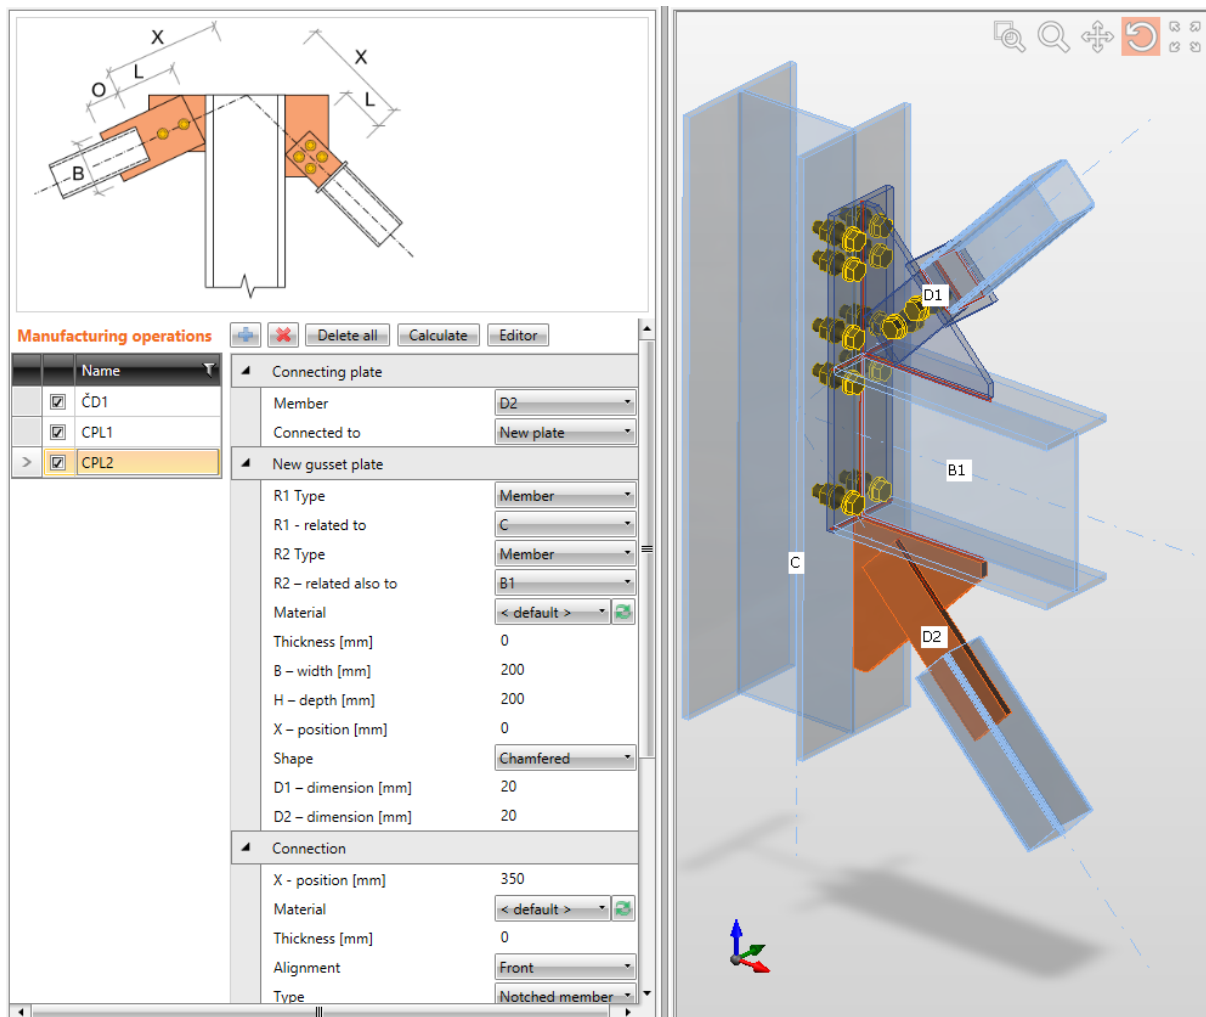


Connection of diagonals D1 and D2 (rectangular hollow sections) to the frame knee.

Manufacturing operation End plate is applied on beam B1 to connect the beam using an bolted end plate to the flange of column C.

Manufacturing operation Connecting plate is applied on diagonal D1 to create new connecting plate. The operation is also related to connection part of Beam type – beam B1 and is also related to connection part of Plate type – to the end plate, which connects beam B1 to the column C. The connecting plate is cut according those parts and it is welded to them. The operation creates lid on connected member. Connected plate is welded to the lid. Connected plate and connecting plate are bolted by bolts assembly.

Manufacturing operation Connecting plate is applied on diagonal D2 to create new connecting plate. The operation is also related to connection part of Beam type – beam B1 and is also related second connection part of Beam type – to the column C. The connecting plate is cut according those parts and it is welded to them. The operation creates notch into the connected member. Connected plate is welded into the notch. Connected plate and connecting plate are welded.

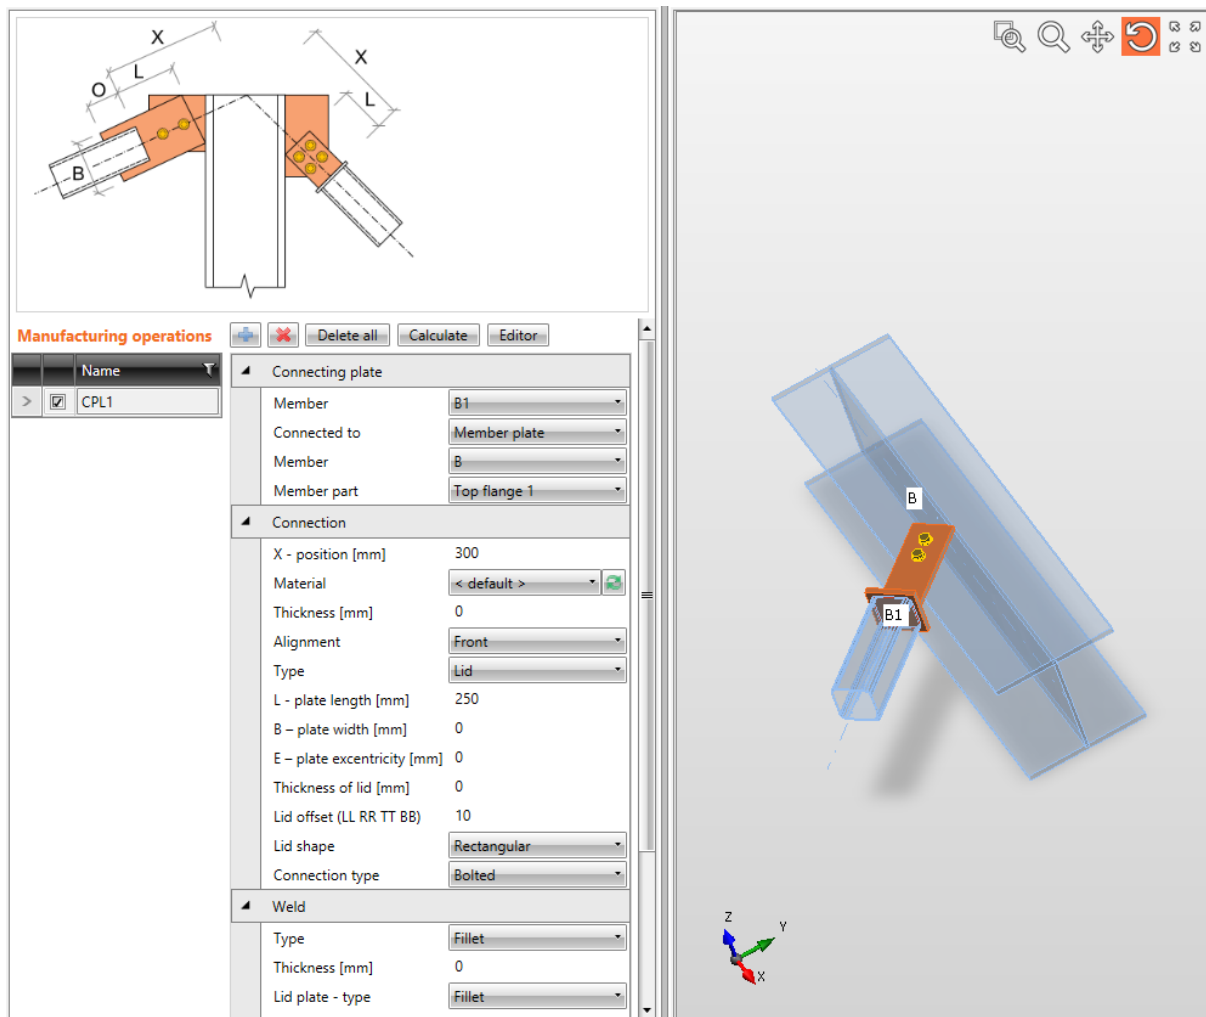


Connection of diagonal to a cross-section part.

Manufacturing operation Connecting plate is applied on diagonal B1. The operation connects diagonal B1 (rectangular hollow section) to the upper flange of cross-section of beam B. The operation creates a lid on diagonal B1. Connected plate is welded to the lid. Connected plate is bolted to upper flange by bolts assembly.

4.4.18 Cleat

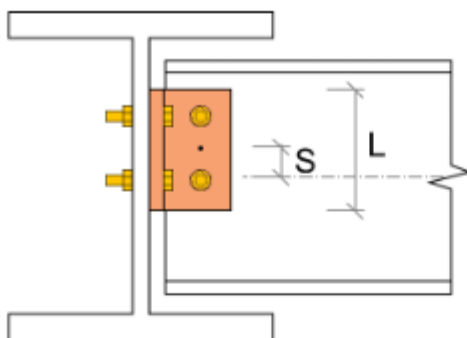

Manufacturing operation **Cleat** connects web or flange of member to other member using bolted or welded angle profile.




Manufacturing operations		Delete all Calculate Editor	
>	<input checked="" type="checkbox"/> Name CLEAT1	Cleat	
		Member	B1
		Member part	Web 1
		Type of 'Connected to'	Member
		Connected to	B
		Profile	L110X10
		Profile conversely	<input type="checkbox"/>
		L - Cleat length [mm]	0
		S - Cleat shift [mm]	0
		Location	Front
		Connection type	Bolted
		Notch	<input type="checkbox"/>
		Bolts	
		Type	M16 - 10.9
		Rows [mm]	0
		Positions [mm]	0
		Grid	Regular
		Shear plane in thread	<input checked="" type="checkbox"/>
		Same on both legs	<input checked="" type="checkbox"/>

Properties of manufacturing operation **Cleat**:

- **Member** – select member to be connected using the cleat.



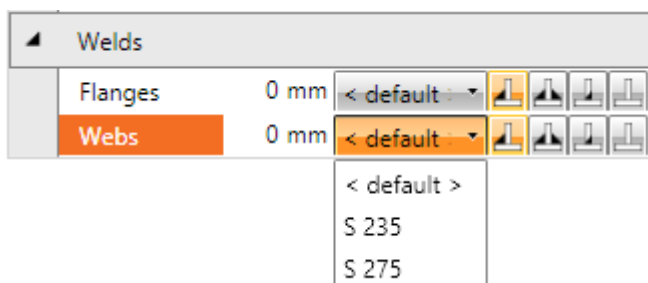

- **Part of member** – select part of cross-section, on which is the cleat applied.
- **Type of ,Connected to‘** – select type of connection part, to which the connected member is connected using the end plate(s):
 - **Member** – member is connected to another member.
 - **Plate** – member is connected to plate.
- **Connected to** – select member, to which ‘Member’ is connected by cleat.
- **Cross-section** – select cross-section of cleat – rolled or cold formed L-profile. Click  to change cross-section parameters. Click  to add a new cross-section and assign it to the cleat.
- **Profile conversely** – if the option is selected, the cross-section of cleat is mirrored. It is used for cleats with different width of flanges.
- **L – Cleat length** – input length of cleat. Value 0 means that the length is determined automatically according to the cross-sections of connected members.
- **S – Cleat shift** – input longitudinal shift of cleat in direction of the local x-axis of the cleat.
- **Location** – select cleat location:
 - **Front** – cleat is placed on one side of selected cross-section part of connected member.
 - **Rear** – cleat is placed on the other side of selected cross-section part of connected member.
 - **Both** – cleat is placed on both sides of selected cross-section part of connected member
- **Connection type** – select the manner of connection:
 - **Bolted** – cleat is bolted to both members using bolts assembly.
 - **Welded** – cleat is welded to both members.
 - **Welded to ,Member‘** – cleat is welded to the ‘Member’ and is bolted by bolts assembly to “Connected to” member.
 - **Welded to “Connected to“** – cleat is bolted by bolts assembly to the ‘Member’ and welded to “Connected to” member.
- **Notch** - switch on/off generation of flange (and web) notch in case the flanges of ‘Member’ member are aligned to flanges of “Connected to” member and the flanges are in collision.
- **Notch offset** – input distance between edges of plates in notched area.

Properties group **Bolts** – see **4.4.25 Welds properties**



Each modifiable weld (group of welds) in the manufacturing operation is represented by one row in welds table. Following properties can be set for individual weld:

- Input of throat thickness. Value **0** means that the weld thickness is determined automatically according to the thickness of plate.

- Select material of weld. Material **<default>** means that material is determined automatically according to the material of corresponding plate.
-  - switch the weld type to fillet weld.
-  - switch the weld type to double fillet weld.
-  - switch the weld type to butt weld.
-  - switch the off – plates are not connected in the appropriate area of weld.

4.4.19 Input of bolts by layers

Following properties are available to define bolts or anchors positions related to plate edge or cross-section centroid:

- **Type** – select bolts assembly. Click  to add new bolts assembly.

For plate dimensions defined to profile edges the bolts are defined by:

- **TL – Top layers** – input distances of bolt layers (separated by spaces) from the most outer left edge of cross-section.
- **LL – Left layers** – input distances of bolt layers (separated by spaces) from the most outer top edge of cross-section.
- **BL – Bottom layers** – input distances of bolt layers (separated by spaces) from the most outer bottom edge of cross-section.
- **RL – Right layers** – input distances of bolt layers (separated by spaces) from the most outer right edge of cross-section.

For plate dimensions defined by rectangle the bolts are defined by:

- **H – Horizontal layers** – input distances of horizontal bolt layers (separated by spaces) from the centroid of plate.
- **V – Vertical layers** – input distances of vertical bolt layers (separated by spaces) from the centroid of plate.

Bolts for circular plate are defined by:


- **Radius** – input radius of bolts pitch circle.
- **Number** – input number of bolts on the pitch circle.
- **Shear plane in thread** – if selected, the gross area of bolt (reduced by thread) is taken into account in the bolts check.

Input of bolt assembly. The change of reference line is not allowed, bolts are related to the centroid of individual cleat flanges.

- **Same on both legs** – if not selected, the different bolts assembly can be specified for each leg of cleat, otherwise the bolt assembly definition is common for both legs.

Properties group **Welds** – input of welds properties – see **4.4.25 Welds properties**:


- **Member** – properties of weld between cleat and connected member.
- **Connected to** – properties of weld between cleat and 'Connected to' member.

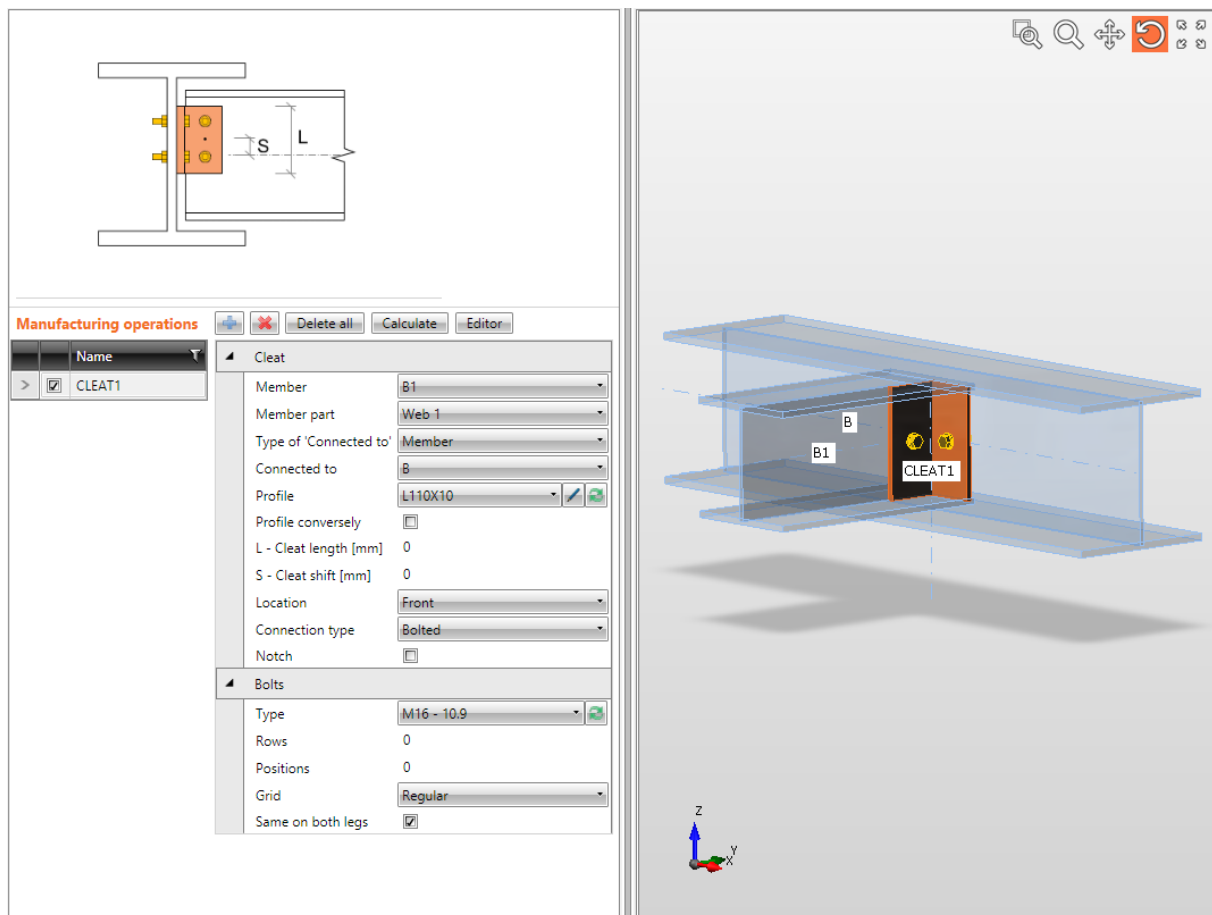

Manufacturing operation Cleat is applied on member B1. The cleat is applied on both sides of web of member B1 and it is connected to the web of beam B using bolts assembly.

4.4.20 General plate

Manufacturing operation General plate adds a new general plate into the connection. The plate can be positioned generally or can be referred to selected cross-section part or to other plate.

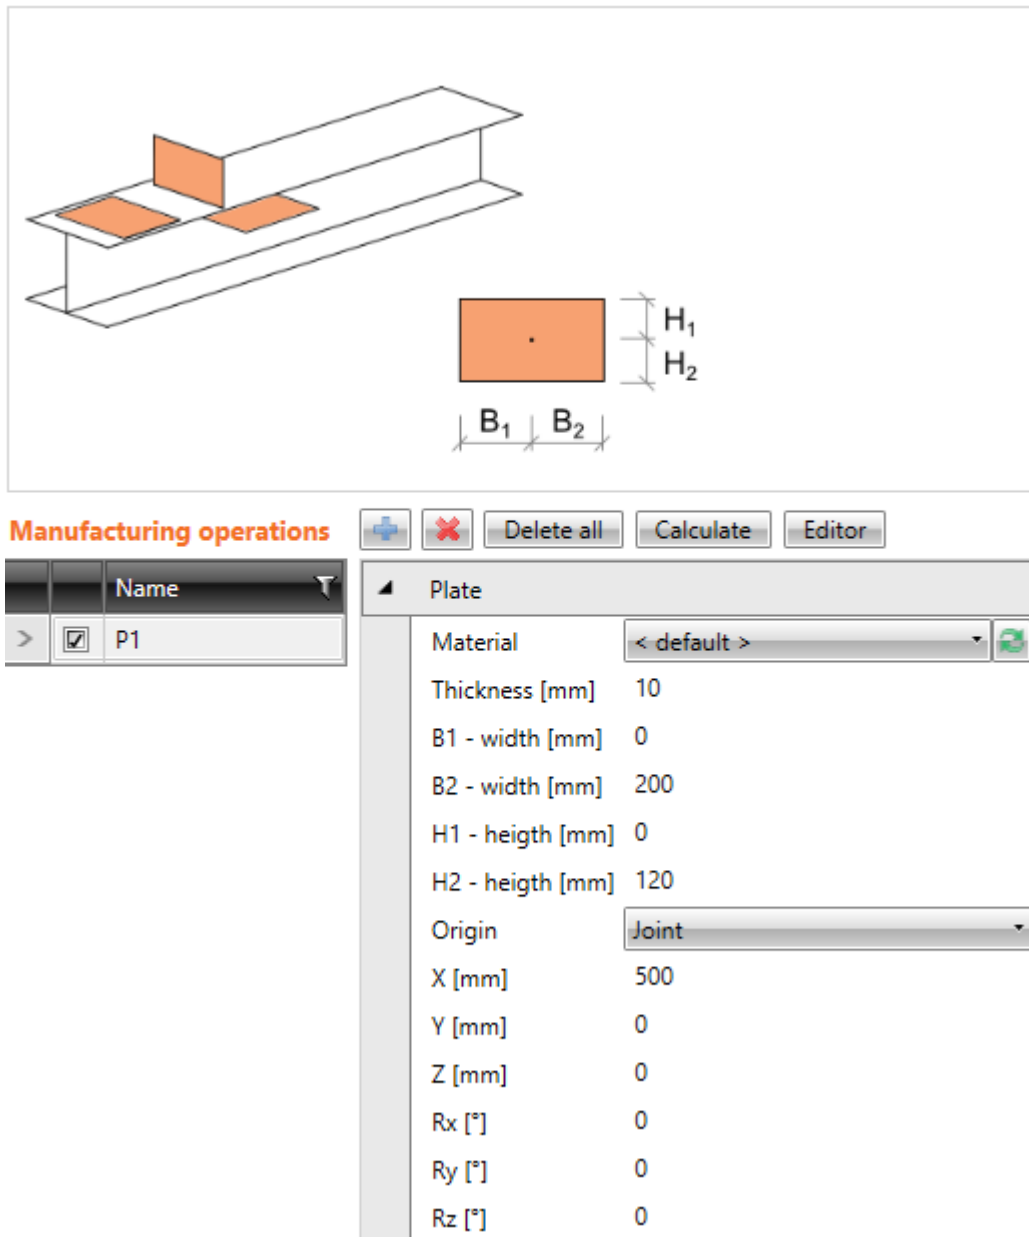

Properties of manufacturing operation **General plate**:

- **Material** – select material of plate. Member material is taken as default.
- **Thickness** – input thickness of plate.
- **B1 – width** – input first part of plate width (from the origin of plate against the direction of x-axis of local coordinate system of plate).
- **B2 – width** – input second part of plate width (from the origin of plate in the direction of x-axis of local coordinate system of plate).
- **H1 – height** – input first part of plate height (from the origin of plate in the direction of y-axis of local coordinate system of plate).

- **H2 – height** – input second part of plate height (from the origin of plate against the direction of y-axis of local coordinate system of plate).
- **Origin** – select origin to define the position of the plate:
 - **Joint** – position of plate origin is related to the theoretical origin of the whole joint. Plate related to joint origin is not connected to any connection part. It must be connected by other manufacturing operations (plate cut, bolts group...).
 - **Member** – position of plate origin is related to the selected cross-section part of selected member.
 - **Plate** – position of plate origin is related to another selected plate.

Following properties can be defined for the plate related to the joint origin:

- **X** – input distance of plate origin from joint origin in direction of global X-axis.
- **Y** – input distance of plate origin from joint origin in direction of global Y-axis .
- **Z** – input distance of plate origin from joint origin in direction of global Z-axis.
- **R_x** – input rotation about axis through the plate origin and parallel to the global X-axis.
- **R_y** – input rotation about axis through the plate origin and parallel to the global Y-axis.
- **R_z** – input rotation about axis through the plate origin and parallel to the global Z-axis.

Manufacturing operations

	Name
<input type="checkbox"/>	P1
<input checked="" type="checkbox"/>	P2
<input type="checkbox"/>	P3
<input type="checkbox"/>	P4

Plate

Material: < default >

Thickness [mm]: 10

B1 - width [mm]: 0

B2 - width [mm]: 101

H1 - height [mm]: 0

H2 - height [mm]: 60

Origin: Member

Member: B

Plate: Web 1

Type: Rib

Location: Rear

X - position [mm]: 300

Rotation [°]: 0,0

Pitch [°]: 0,0

Welds

Weld: 0 mm

Following properties can be defined for the plate related to member:

- **Member** – select member to relate the general plate to.
- **Plate** – select part of selected member to relate the general plate to.
- **Type** – select type of new general plate. The selected type affects the default position of plate to the selected part of member:
 - **Rib** – the neutral plane of new plate is perpendicular to the plane of selected part of member. Origin of new plate is placed to the origin of selected part of member with such that the plate origin is on the face of selected part of member.
 - **Widener** – the neutral plane of new plate is identical to the neutral plane of selected part of member. Origin of new plate is placed to the origin of selected part of member.
 - **Doubler** – the face of new plate is identical to the face of selected member part. Origin of new plate is placed to the origin of selected part of member with such offset that the faces are identical.
- **Location** – side location of general plate:
 - **Front** – plate is applied on one side of selected member part.
 - **Rear** – plate is applied on the other side of selected member part.
 - **Centre** – plate is applied to the mid of selected member part. This option is available only for **Widener type**.
- **X- position** – input shift of plate along the local x-axis of selected member.
- **Rotation** – for **Rib** plate type defines rotation of plate about the axis through plate origin and parallel to the direction of H-dimension of the plate. For **Doubler** plate type defines rotation about axis through plate origin and perpendicular to the plane of plate.

- **Pitch** – for **Rib** plate type defines inclination of plate plane from the normal of selected member part. For **Widener** plate type defines inclination of plate plane from the plane of selected member part.

Manufacturing operations

	Name
<input checked="" type="checkbox"/>	P1
> <input checked="" type="checkbox"/>	P2
<input type="checkbox"/>	P3
<input type="checkbox"/>	P4

Plate

Material: < default >

Thickness [mm]: 10

B1 - width [mm]: 0

B2 - width [mm]: 101

H1 - height [mm]: 0

H2 - height [mm]: 60

Origin: Plate

Plate: P1

Type: Rib

Location: Rear

X - position [mm]: 300

Y - position [mm]: 0

Rotation [°]: 0,0

Pitch [°]: 0,0


Welds

Weld: 0 mm

Following properties can be defined for the plate related to another plate:


- **Plate** – select plate to relate the new general plate to.
- **Type** – select type of new general plate. The selected type affects the default position of plate to the selected part of member:
 - **Rib** – the neutral plane of new plate is perpendicular to the plane of selected plate. Origin of new plate is placed to the origin of selected plate with such offset that the plate origin is on the face of selected plate.
 - **Doubler** – the face of new plate is identical to the face of selected plate. Origin of new plate is placed to the origin of selected plate with such offset that the faces are identical
- **Location** – side location of general plate:
 - **Front** – plate is applied on one side of selected member part.
 - **Rear** – plate is applied on the other side of selected member part.
- **X- position** – input shift of plate along the local x-axis of selected plate.
- **Y – position** – input shift of plate in direction of the local y-axis of selected plate.
- **Rotation** – for **Rib** plate type defines rotation of plate about the axis through plate origin and parallel to the direction of H-dimension of the plate. For **Doubler** plate type defines rotation about axis through plate origin and perpendicular to the plane of plate.
- **Pitch** – for **Rib** plate type defines inclination of plate plane from the normal of selected plate.

Properties group **Welds** – input of welds properties – see **4.4.25 Welds properties**.

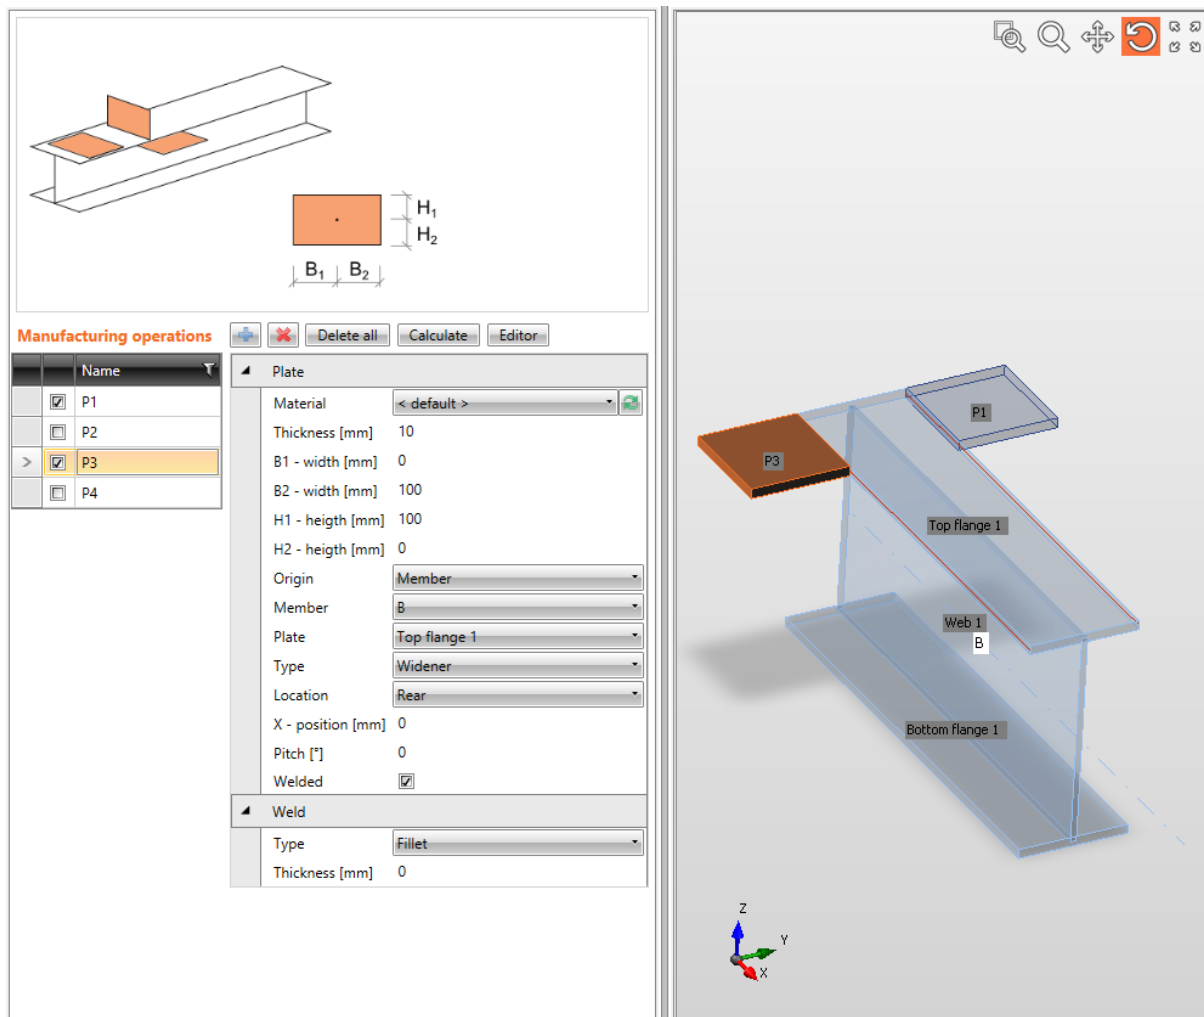


General plate.

Manufacturing operations General plate define plates P1 and P3 as wideners of top flange of beam B1.

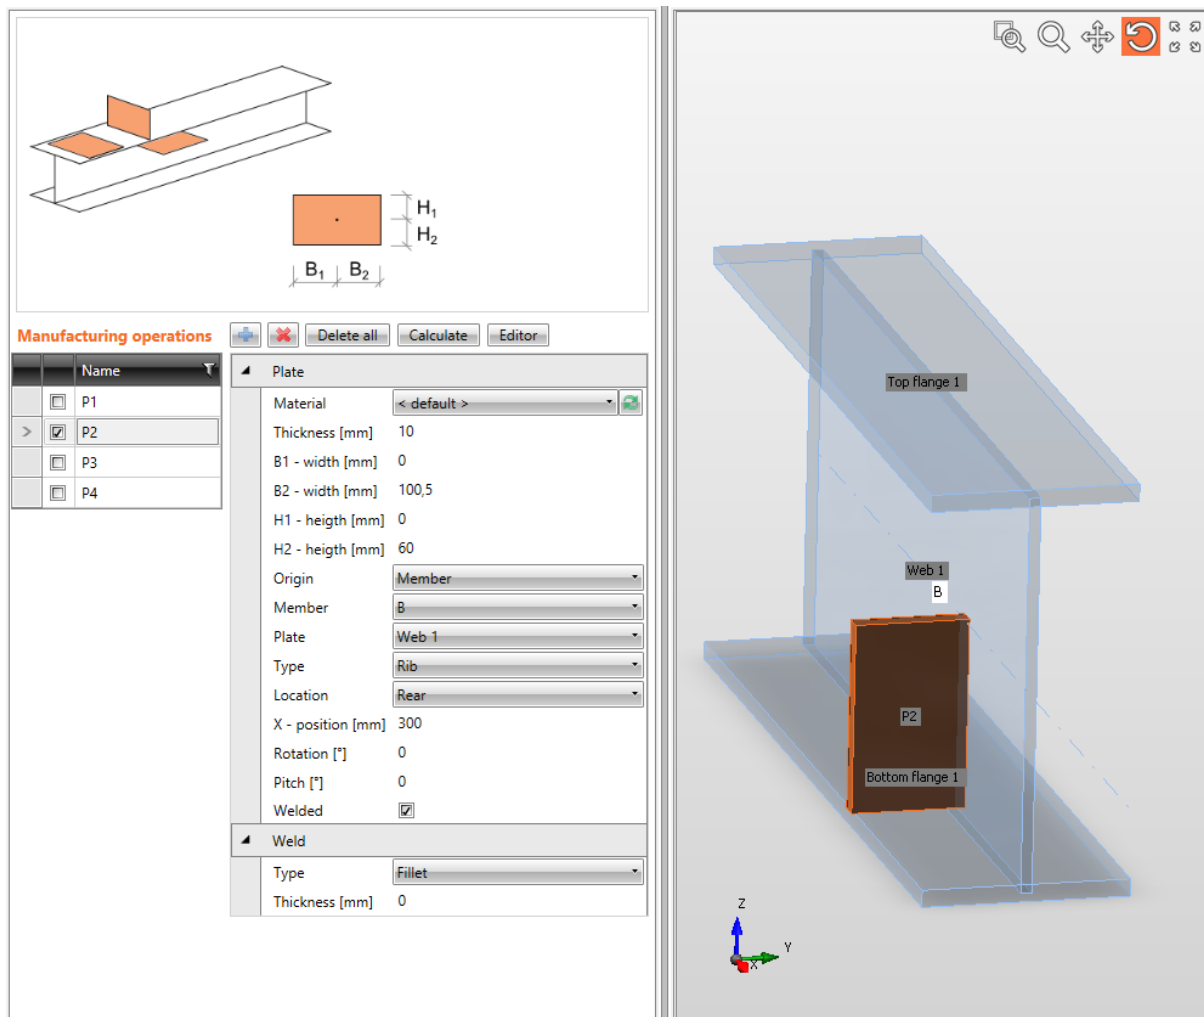

General plate.

Manufacturing operation General plate creates plate P2 defined as a rib on the web of member B. Plate P2 is welded to the web.

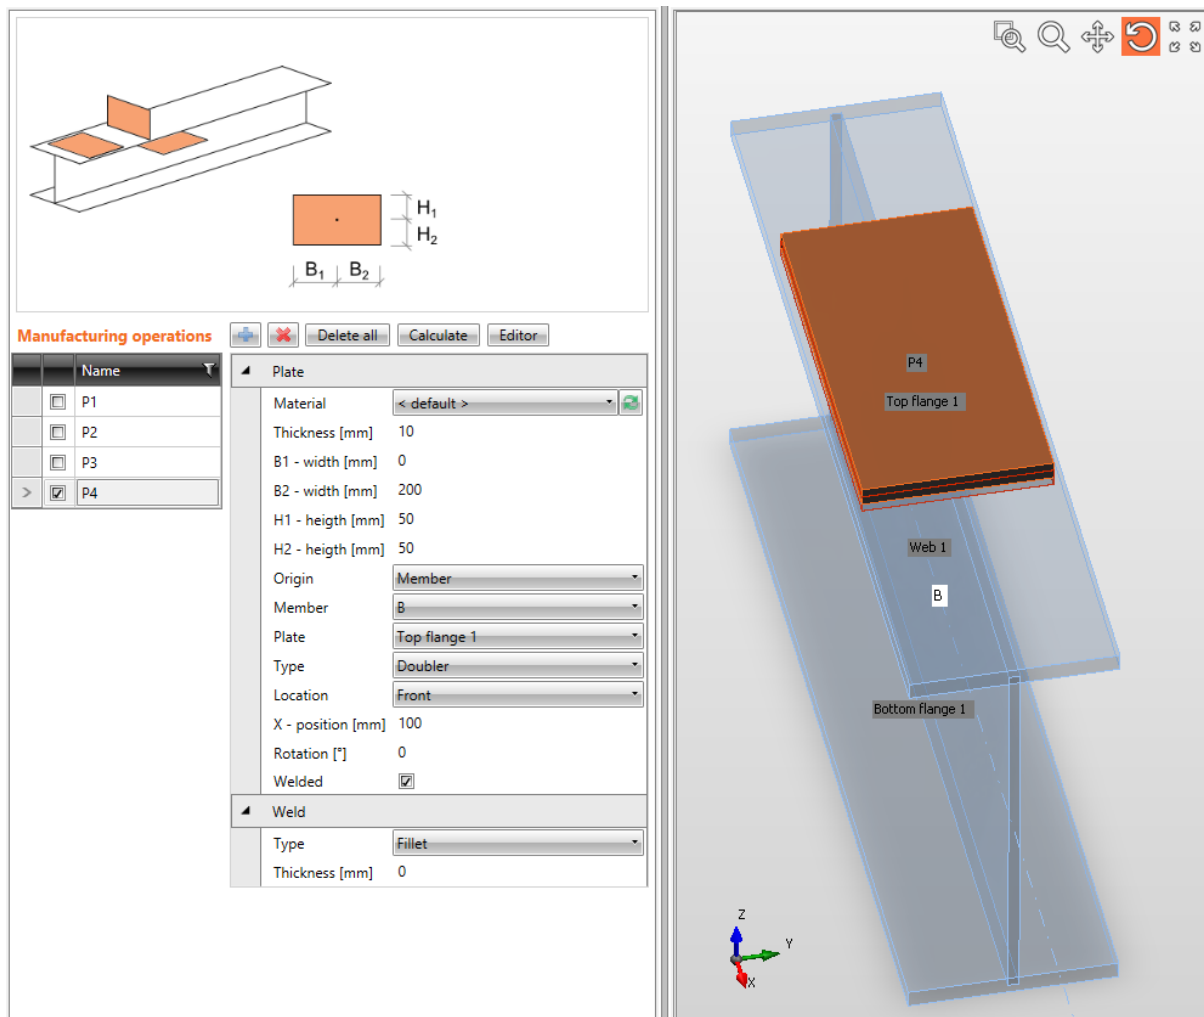


General plate.

Manufacturing operation General plate creates plate P4 as a doubler of top flange of member B. Plate P4 is welded to the flange.

4.4.21 Plate cut

Manufacturing operation **Plate cut** modifies shape of plates by cut according to another plate or member.

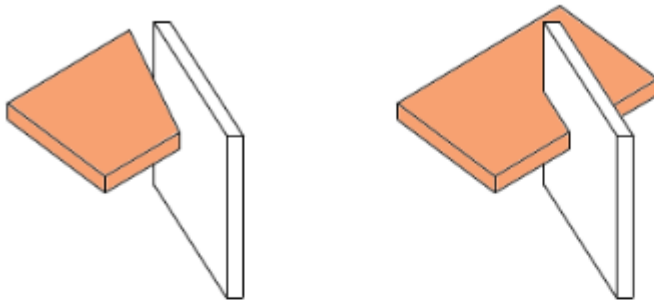

Manufacturing operations		<input type="button" value="+"/> <input type="button" value="X"/> <input type="button" value="Delete all"/> <input type="button" value="Calculate"/> <input type="button" value="Editor"/>	
	Name		
<input checked="" type="checkbox"/>	GUSS1	Cut of plate Type: Cut Offset [mm]: 0	
<input checked="" type="checkbox"/>	SPL1	Modified item Type: Plate Plate: GUSS1 Remaining part: +	
<input checked="" type="checkbox"/>	SPL2	Cut by Type: Plate Plate: SPL1 Surface: +	
<input checked="" type="checkbox"/>	PCUT1	Welds All welds: 0 mm < default >	
>	<input checked="" type="checkbox"/> PCUT2		
<input checked="" type="checkbox"/>	PCUT3		

Properties of manufacturing operation **Plate cut**:

- **Type** – select type of cut:
 - **Cut** – whole part of modified plate is cut by the determined plane cut.
 - **Notch** – notch is created into the modified plate according to the modifying plate.
 - **Weld** – only weld is generated between the edge of modified item and the nearest parallel edge of cutting item. The modified item is not cut, only welded.
- **Offset** – input distance of cut from the cutting plane.

Properties group **Modified item**:

- **Type** – select type of item, which is modified by cut:
 - **Member** – plate of cross-section part of member is modified by cut. Following properties are defined for this type:
 - **Member** – select member to modify its part.
 - **Member part** – select member part to be modified by plate cut.
 - **Plate** – existing plate of joint is modified by cut. Following properties are defined for this type:
 - **Plate** – select plate to be modified by cut.
- **Remaining part** – select part of modified plate, which should be kept after cutting. The other part is removed:
 - + - one part of plate is kept after cutting.
 - - - the other part of plate is kept after cutting.

Properties group **Cut by** – properties of modifying item:

- **Type** – select type of modifying member:
 - **Plate** – cut of modified plate is performed according to another plate. Following properties are defined for this type:
 - **Plate** – select exiting plate to cut the modified item by it.
 - **Member plate** – cut of modified plate is performed according to selected part of member. Following properties are defined for this type:
 - **Member** – select member to cut the modified item by its part.
 - **Member part** – select part of member to be used as modifying item.
 - **Member** – cut of modified plate is performed according to plane perpendicular to the x-axis of selected member in the end point of the member. Following properties are defined for this type:
 - **Member** – select member to perform the cut according to its end plane.
- **Surface** – select surface of modifying plate (member part) to be used as the cutting plane:
 - + - cutting plane is created by one surface of plate.
 - - - cutting plane is created by the other surface of plate.

Properties group **Welds** – input of welds properties – see **4.4.25 Welds properties**.

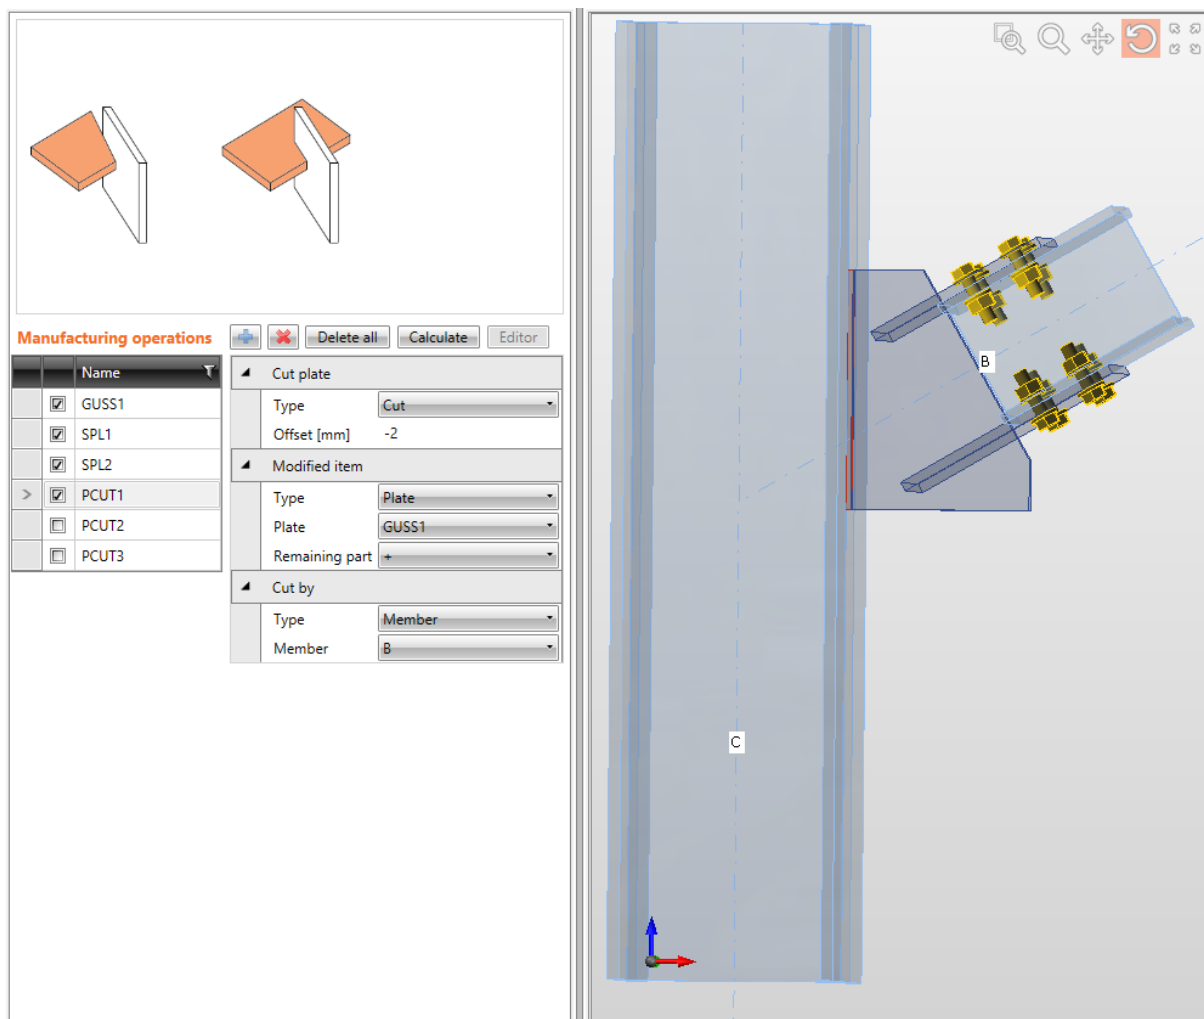


Plate cut.

Manufacturing operation Gusset plate is applied on column C, which creates new gusset plate. Beam B is connected to this gusset plate, but it is neither welded, nor bolted.

Manufacturing operations Splice are applied on both upper and bottom flange of beam B and are bolted to flanges by bolt assemblies.

Manufacturing operation Plate cut is applied on gusset plate GUSS1. The operation cuts corner of gusset plate according to the end of beam B (plane perpendicular to beam x-axis in the end point of beam).

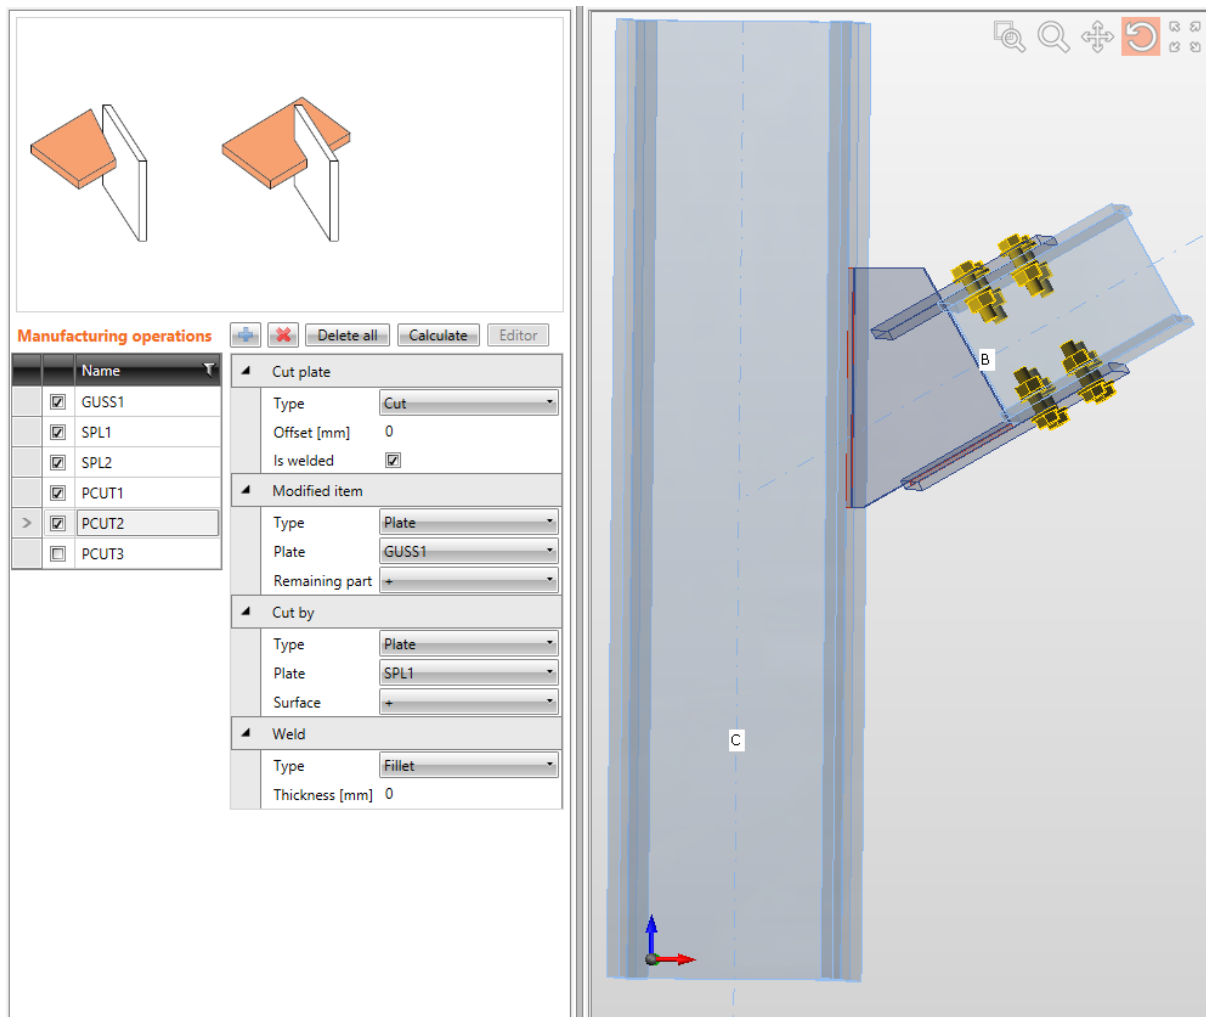


Plate cut.

Next manufacturing operation Plate cut is applied on gusset plate GUSS1. The operation cuts bottom part of gusset plate according to the surface of splice plate SPL1. Splice plate is welded to the gusset plate along the cut.


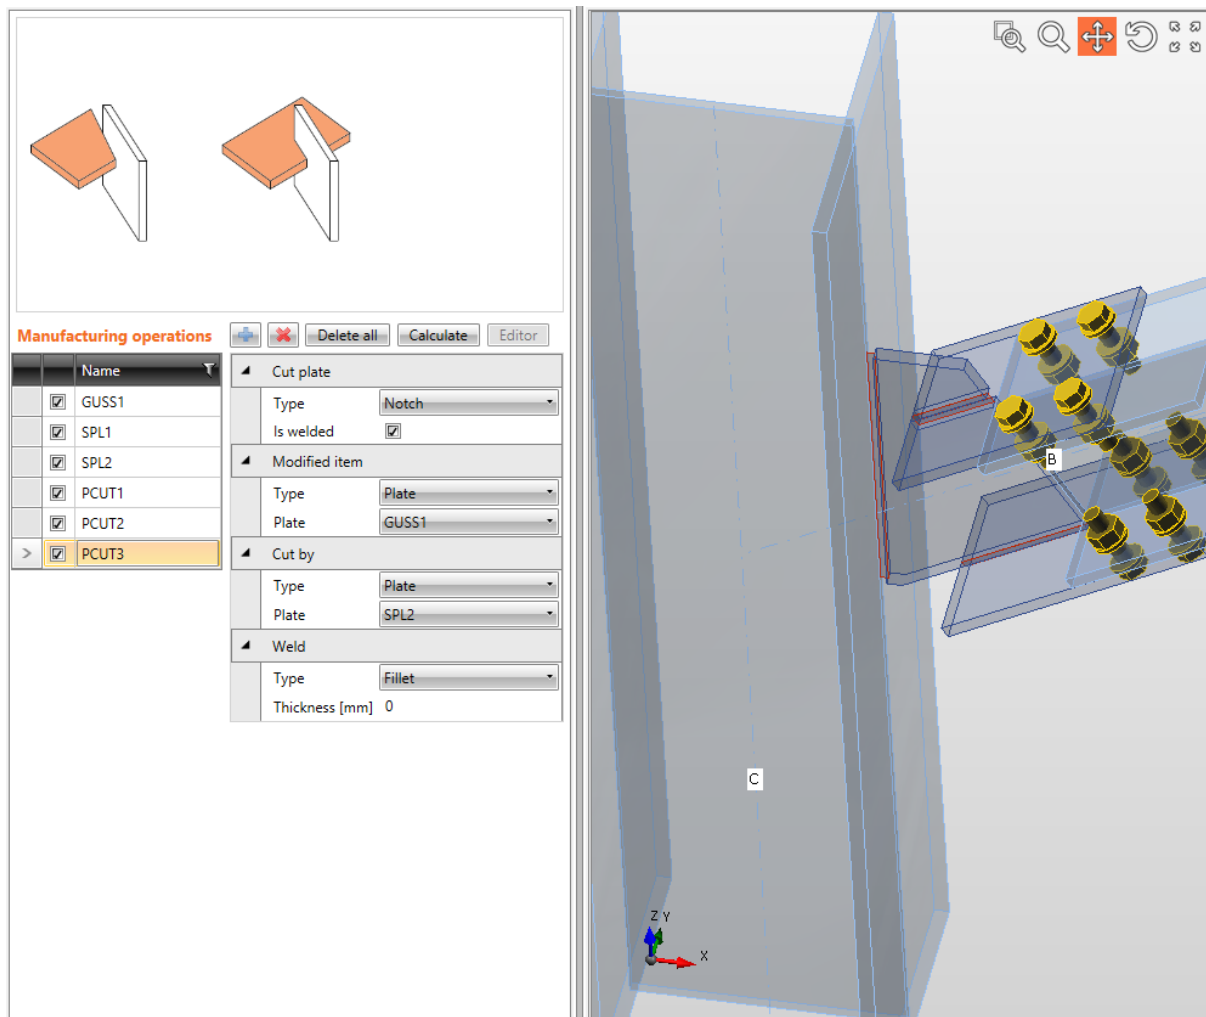


Plate cut.

Next manufacturing operation Plate cut is applied on gusset plate GUSS1. The operation creates notch into the top part of gusset plate according to the splice plate SPL2. Splice plate is welded to the notch.

4.4.22 Fastener grid

Manufacturing operation **Fasteners grid** connects several plates using the bolts assembly.

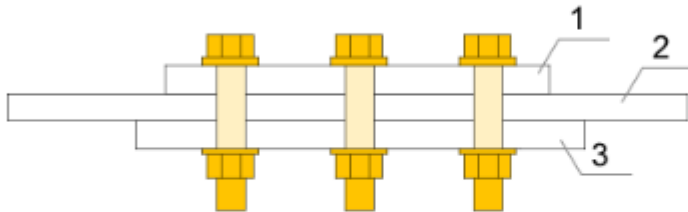

Manufacturing operations + ✗ Delete all Calculate Editor

	Name
<input checked="" type="checkbox"/>	GUSS1
<input checked="" type="checkbox"/>	SPL1
<input checked="" type="checkbox"/>	SPL2
<input checked="" type="checkbox"/>	PCUT1
<input checked="" type="checkbox"/>	PCUT2
<input checked="" type="checkbox"/>	PCUT3
>	GRD1

Fastener grid

Items count: 2

Item 1 type: Plate

Plate 1: GUSS1

Item 2 type: Member

Member 2: C

Member 2 part: Web 1

Bolts

Type: M12 - 10.9

Rows [mm]: 50

Positions [mm]: 50


Grid: Regular

Shear plane in thread: ☒

Properties of manufacturing operation **Fasteners grid**:

- **Items count** – input number of items to be connected using the fasteners grid. The content of property table is modified according to defined number of items.
- **Item n type** – select type of n-th item to be connected using fasteners grid:
 - **Member** – cross-section part of selected member is connected by fasteners grid. Following properties are defined for this type:
 - **Member n** – select member to be connected by fasteners grid.
 - **Member n part** – select part of member cross-section, which is connected by the fasteners grid.
 - **Plate** – plate is connected by fasteners grid. Following properties are defined for this type:
 - **Plate n** – select existing plate, which is connected by fasteners grid.

Properties group **Bolts** – see **4.4.25 Welds properties**

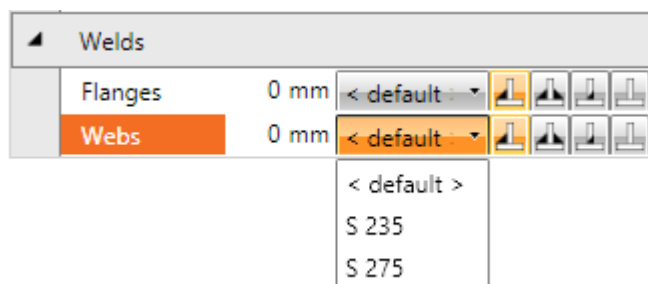

Each modifiable weld (group of welds) in the manufacturing operation is represented by one row in welds table. Following properties can be set for individual weld:

- Input of throat thickness. Value **0** means that the weld thickness is determined automatically according to the thickness of plate.
- Select material of weld. Material **<default>** means that material is determined automatically according to the material of corresponding plate.
- - switch the weld type to fillet weld.
- - switch the weld type to double fillet weld.
- - switch the weld type to butt weld.
- - switch the off – plates are not connected in the appropriate area of weld.

4.4.23 Input of bolts by layers

Following properties are available to define bolts or anchors positions related to plate edge or cross-section centroid:

- **Type** – select bolts assembly. Click to add new bolts assembly.

For plate dimensions defined to profile edges the bolts are defined by:

- **TL – Top layers** – input distances of bolt layers (separated by spaces) from the most outer left edge of cross-section.
- **LL – Left layers** – input distances of bolt layers (separated by spaces) from the most outer top edge of cross-section.
- **BL – Bottom layers** – input distances of bolt layers (separated by spaces) from the most outer bottom edge of cross-section.
- **RL – Right layers** – input distances of bolt layers (separated by spaces) from the most outer right edge of cross-section.

For plate dimensions defined by rectangle the bolts are defined by:


- **H – Horizontal layers** – input distances of horizontal bolt layers (separated by spaces) from the centroid of plate.
- **V – Vertical layers** – input distances of vertical bolt layers (separated by spaces) from the centroid of plate.

Bolts for circular plate are defined by:

- **Radius** – input radius of bolts pitch circle.
- **Number** – input number of bolts on the pitch circle.

- **Shear plane in thread** – if selected, the gross area of bolt (reduced by thread) is taken into account in the bolts check.

Input of bolt assembly. The change of reference line is not allowed in this case, bolts are related to reference line of first connected member or first plate in the manufacturing operation.

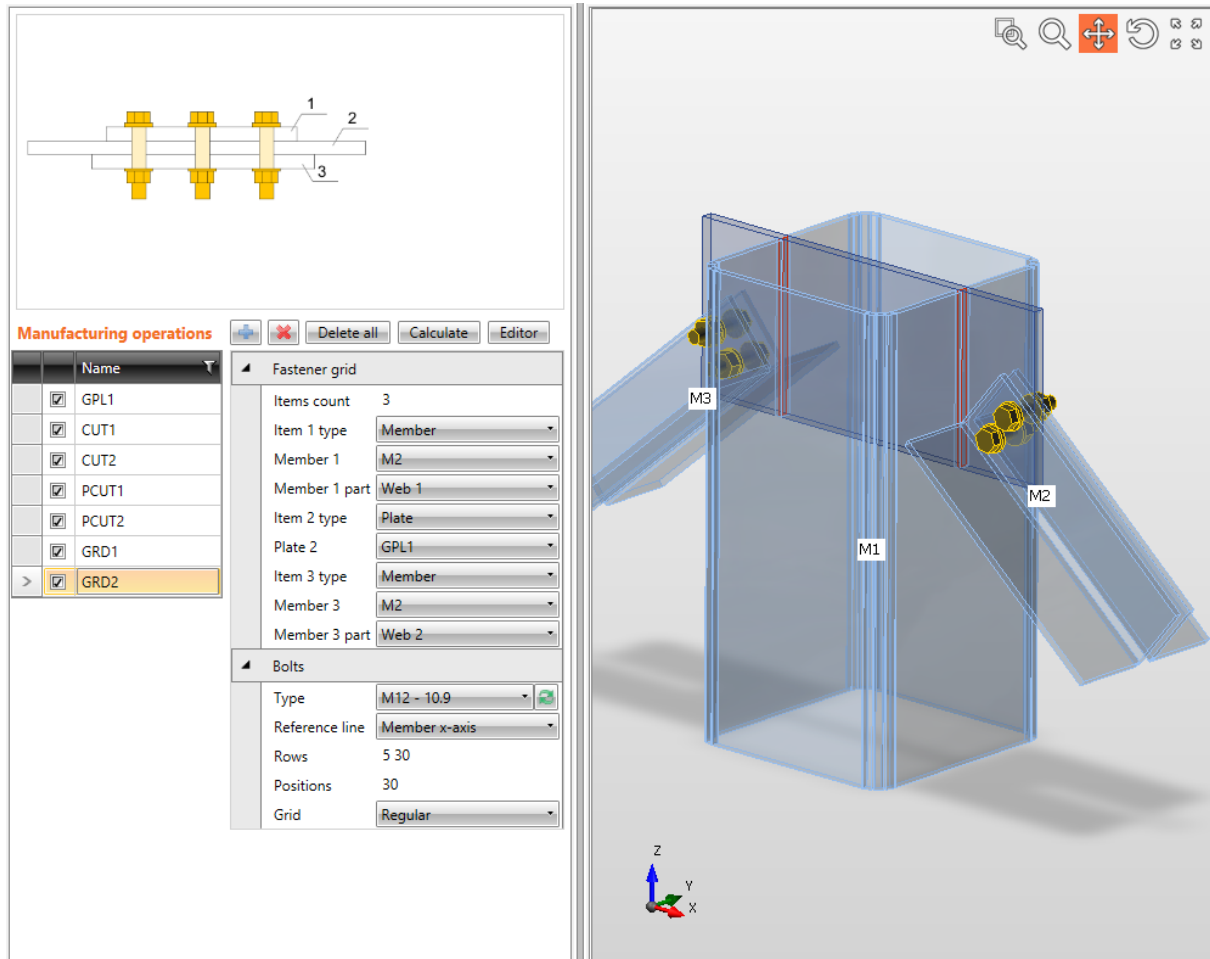


Manufacturing operation General plate is applied on member M1. The operation creates plate at the end of member. Manufacturing operations Plate cut are applied on flanges of member M1 to create notches for the plate. The plate is welded to flanges in notches.

Manufacturing operations Fasteners grid are defined in the joint. The operation connect both flanges of member M2 (and M3) to plate GPL1 by bolts assembly.

4.4.24 Weld

Manufacturing operation **Weld** creates welded connection between selected edge of existing plate or part of cross-section and other existing plate or part of cross-section.

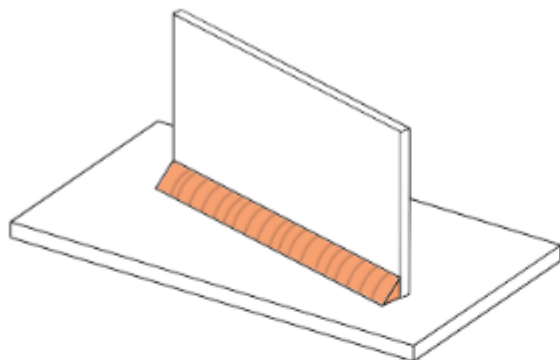

Manufacturing operations + × Delete all Calculate Editor

	Name
<input checked="" type="checkbox"/>	CUT1
<input checked="" type="checkbox"/>	CUT2
<input checked="" type="checkbox"/>	WELD1
<input checked="" type="checkbox"/>	WELD2

General weld

Edge type: Plate of member

Member: B

Plate: Bottom flange 1

Edge index: 1

Surface type: Plate of member

Member: C

Plate: Top flange 1

Welds


Weld: 0 mm < default >

Properties of manufacturing operation **Weld**:

- **Edge type** – select type of connection part to connect its selected edge to other plate:
 - **Plate of member** – edge of cross-section part of member is welded. Following properties are defined for this type:
 - **Member** – select member to weld its part.
 - **Plate** – select part of member to weld its edge.
 - **Plate** – edge of existing plate is welded. Following properties are defined for this type:
 - **Plate** – select existing plate to weld its edge.
- **Edge index** – input number of welded edge of selected plate or cross-section part.
- **Surface type** - select type of connection part to which is the selected edge welded:
 - **Plate of member** – selected edge of connected item is welded to selected part of cross-section of other member. Following properties are defined for this type:
 - **Member** – select member, to part of which the selected edge is welded.

- **Plate** – select part of cross-section of member, to which the selected edge is welded.
- **Plate** – selected edge of connected member is welded to selected plate.
Following properties are defined for this type:
 - **Plate** – select existing plate, to which the selected edge is welded.

Properties group **Welds** – input of welds properties – see **4.4.25 Welds properties**.

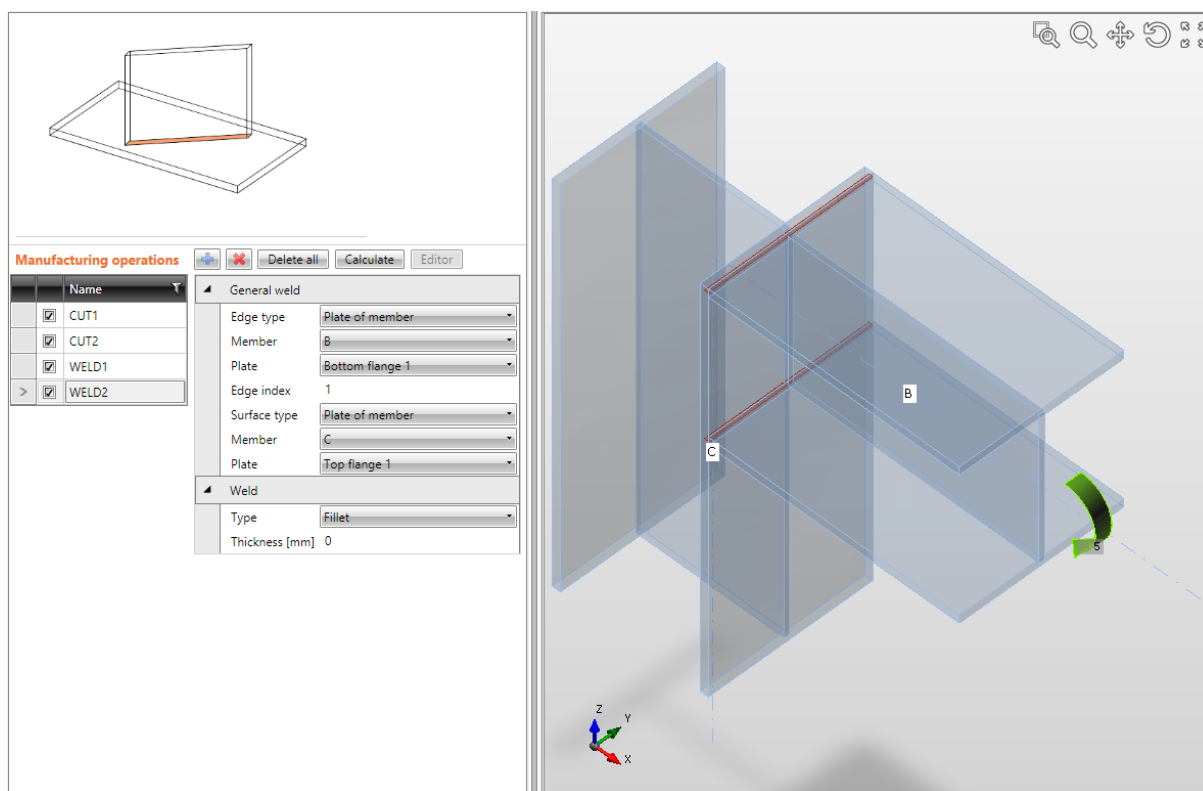


General welds.

First Cut operation is applied on column C and cuts the column according to farther edge of beam B. Second Cut operation is applied on beam B and is cuts the beam according to closer edge of column C. Automatic welds generation on cuts is switched off.

First operation General weld connects the upper flange edge number1 of beam B cross-section to the column C flange. Second operation General weld connects the bottom flange edge number 1 of beam B cross-section to the plate of top flange of column C. The web of beam B is not connected to the column C.

4.4.25 Welds properties

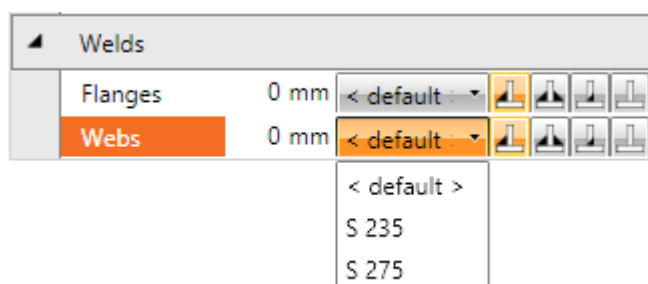

Each modifiable weld (group of welds) in the manufacturing operation is represented by one row in welds table. Following properties can be set for individual weld:

- Input of throat thickness. Value **0** means that the weld thickness is determined automatically according to the thickness of plate.
- Select material of weld. Material **<default>** means that material is determined automatically according to the material of corresponding plate.
- - switch the weld type to fillet weld.
- - switch the weld type to double fillet weld.
- - switch the weld type to butt weld.
- - switch the off – plates are not connected in the appropriate area of weld.

4.4.26 Input of bolts by layers

Following properties are available to define bolts or anchors positions related to plate edge or cross-section centroid:

- **Type** – select bolts assembly. Click to add new bolts assembly.

For plate dimensions defined to profile edges the bolts are defined by:

- **TL – Top layers** – input distances of bolt layers (separated by spaces) from the most outer left edge of cross-section.
- **LL – Left layers** – input distances of bolt layers (separated by spaces) from the most outer top edge of cross-section.
- **BL – Bottom layers** – input distances of bolt layers (separated by spaces) from the most outer bottom edge of cross-section.
- **RL – Right layers** – input distances of bolt layers (separated by spaces) from the most outer right edge of cross-section.

For plate dimensions defined by rectangle the bolts are defined by:


- **H – Horizontal layers** – input distances of horizontal bolt layers (separated by spaces) from the centroid of plate.
- **V – Vertical layers** – input distances of vertical bolt layers (separated by spaces) from the centroid of plate.

Bolts for circular plate are defined by:

- **Radius** – input radius of bolts pitch circle.
- **Number** – input number of bolts on the pitch circle.
- **Shear plane in thread** – if selected, the gross area of bolt (reduced by thread) is taken into account in the bolts check.

4.4.27 Input of bolt assembly


Following properties are available to define the bolts assembly:

- **Type** – select bolts assembly. Click  to add new bolts assembly.
- **Reference line** – select line, to which the bolts positions are referred:
 - **Member x-axis** – bolts positions are referred to the axis of appropriate cross-section part.
 - **+ edge** – bolts positions are referred to the edge with positive coordinate of appropriate cross-section part.
 - **– edge** – bolts positions are referred to the edge with negative coordinate of appropriate cross-section part.
- **Rows** – input bolt rows positions (transversal spacing) to the reference line.
- **Positions** – input bolts positions along x-axis of member (longitudinal spacing).
Positions of bolt centres for both transversal and longitudinal spacing are defined by string in format a1 a2*n...an*n; b1 b2*m...b3*m, where ';' is group separator. For each group (a, b,... etc.) a1 is position of first centre from the origin, a2*n - is pitch * repeats count. For example 80 60*3 80; 500 60*3 80*2 creates two groups of bolt rows, first group coordinates (to the reference line) are 80, 140, 200, 260, 340 and second group coordinates are 500; 560; 620; 680; 760; 840.
- **Grid** – select type of bolts grid:
 - **Regular** – grid of bolts is regular.
 - **1st staggered** – first (and then each odd) bolts row is shifted by half of bolt diameter.
 - **2nd staggered** – second (a then each even) bolts row is shifted by half of bolt diameter.
 - **1st staggered short** – first (and then each odd) bolts row is shifted by half of bolt diameter. Last bolt in staggered row is omitted.
 - **2nd staggered short** – second (a then each even) bolts row is shifted by half of bolt diameter. Last bolt in staggered row is omitted.
- **Shear plane in thread** – if selected, the gross area of bolt (reduced by thread) is taken into account in the bolts check.

4.4.28 User defined templates of manufacturing operations

The existing manufacturing operations applied on particular beams geometry can be stored into the database of user defined templates. The stored template can be used to design other joint of the same beams topology.

Some sample files of exported templates may be installed by IDEA StatiCa installer (files *.exp in the subdirectory \ExportedTemplates of IDEA StatiCa installation directory).

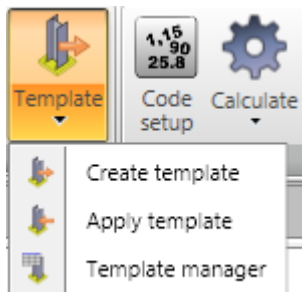

Following commands of ribbon group **Operations** are available to work with user templates of connections:


- **Apply template** - starts joint design by applying the user defined joint template – see **4.4.28.1 Joint design using user defined template**.
- **Create template** – stores the manufacturing operations of current joint into the database of user joint templates. Dialog **Add template** appears. The target folder must be selected in the tree control in the left part of dialog. The current joint is stored as a template into the selected folder.
- **Templates manager** – launches templates manager – see **4.4.28.2 Templates manager**.

4.4.28.1 Joint design using user defined template


Dialog **Select template** appears after start of joint design by user defined joint template.

Only templates, which have the same beams topology as the designed joint, are available in the tree control in the left part of the dialog.

Select the required template in the tree of available templates. Click **Select** to apply the design operations from the template on the current joint.

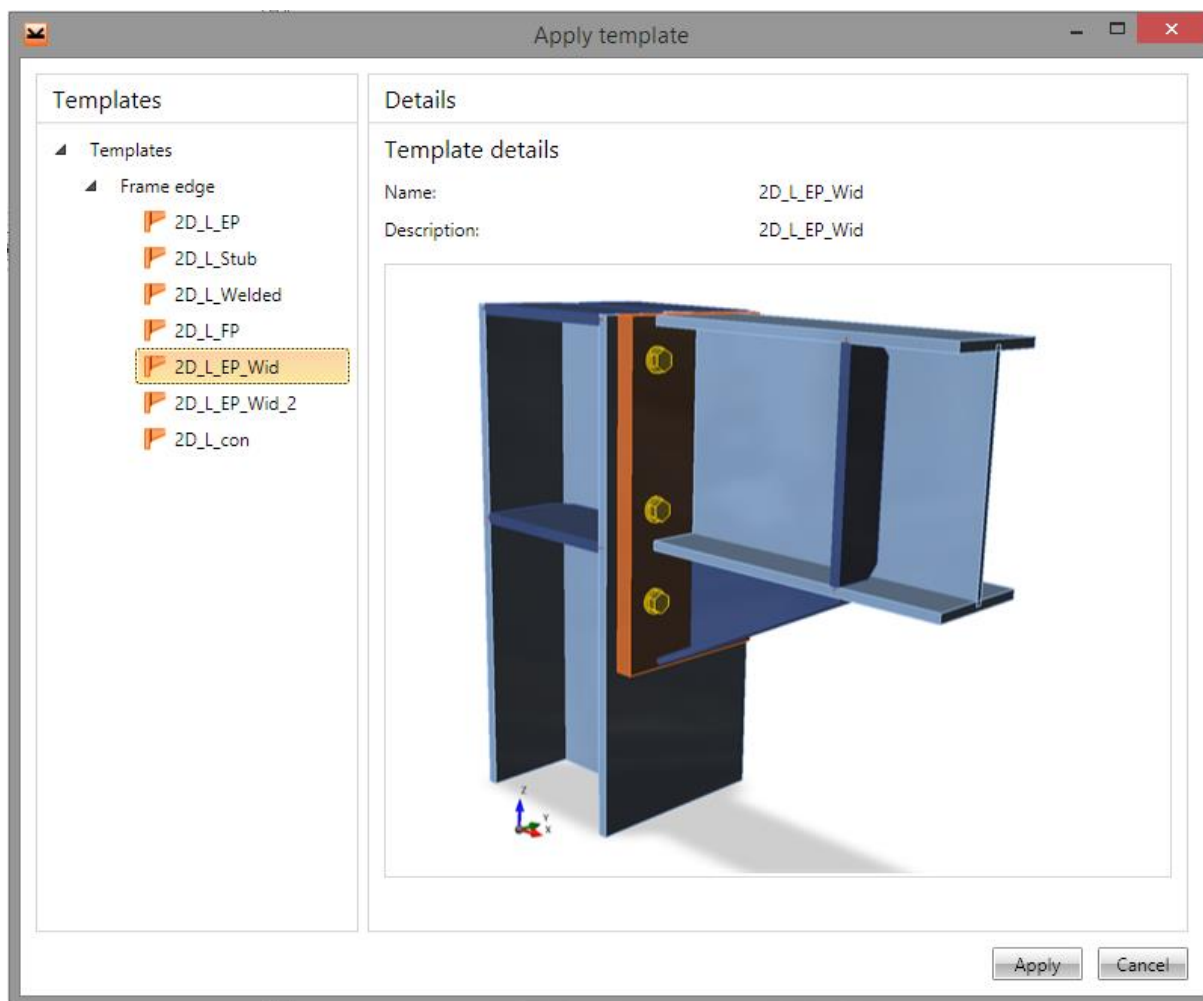

4.4.28.2 Templates manager

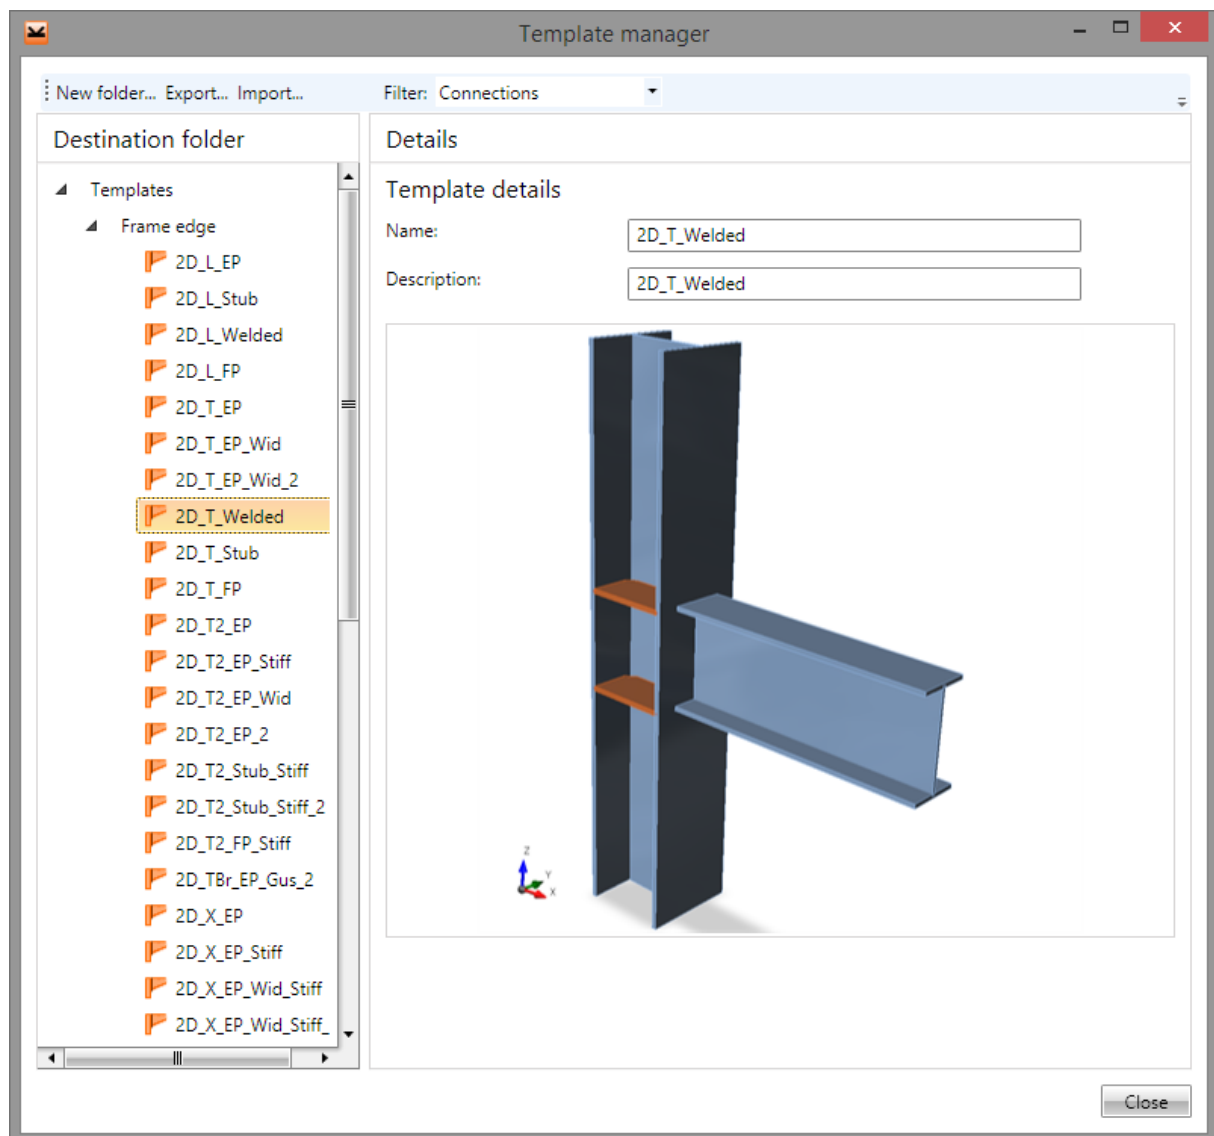

Template manager is used to manage templates in the database. The templates database collects templates for:

- Reinforcement templates;
- Templates of tendon shapes;
- Templates of connection manufacturing operations.

Template types to be displayed can be selected in the combo box **Filter**.

The templates are stored using the structure of folders and items in folders (similar to the structure of folders and files on drive).


The database structure (with respect to the filter settings) is displayed in the left part of the dialog. Details of selected template or selected folder are displayed in the right part of dialog.

Following actions can be performed in the templates manager:

- **Create new folder** – by command **New folder...** in the main menu to create new folder in the root folder or in the current subfolder.
- **Rename folder** – by command **Edit** in the context menu by right mouse click above the required folder.

- **Move folder** – drag and drop selected folder(s) to the required target folder.
- **Remove folder (s)** – by command **Delete** in the context menu by right mouse click above the selected folder (s). The folder is removed including all subfolders and all templates in removed folders and subfolders.
- **Edit template name and description** – template name and description of selected template is displayed in the right part of the dialog. The template name and description can be modified.
- **Move template** – drag and drop selected template(s) by mouse to the required target folder.
- **Delete template(s)** – by command **Delete** in the context menu by right mouse click above the selected template.
- **Export templates** – by command **Export...** in the main menu. Selected templates are stored into the file with extension *.EXP. Exported templates can be e.g. used on other computer.
- **Import templates** – by command **Import...** in the main menu. Templates from the selected file with extension *.EXP are imported into the database of templates.


4.4.29 Ribbon group Operations

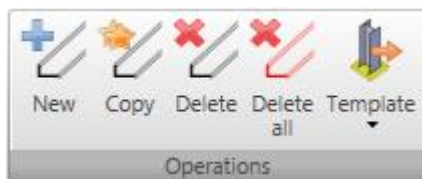

Commands in ribbon group **Operations**:

- **New** – add new manufacturing operation into the current joint.
- **Copy** – add new manufacturing operation into the current joint by copying the current manufacturing operation.
- **Delete** – delete the current manufacturing operation from the current joint.
- **Delete all** – delete all operations from the current joint .
- **Template** – commands to work with connection templates:
 - **Create template** – store the current joint as a template into templates database.
 - **Apply template** – start selection of existing connection template to be applied on current joint. To be able to apply the template, no manufacturing operation must be defined in the joint and the topology of joint must be the same as the topology of template.
 - **Template manager** – launch the templates manager application.

4.4.30 Ribbon group CBFEM

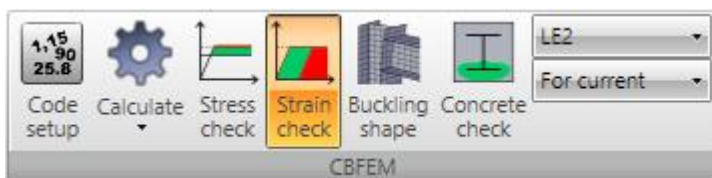

Commands in ribbon group **CBFEM** are used to set the code and calculation options, to run the analysis and to evaluate stress check and strain check results.

Commands in ribbon group **CBFEM**:

- **Code setup** – change basic code and calculation settings
- **Calculate** – run analysis of current joint. Following calculation modes are available:
 - **Strength calculation** – default calculation mode. Start of non-linear analysis of joint to evaluate strain and stress in joint components.
 - **Buckling calculation** – all cases – start of analysis of critical load factors and buckling shapes for each load case defined in cross-section.
- **Stress check** – switch to draw courses of stress check for the current load case. The calculated stress is compared to the yield stress.
- **Strain check** - switch to draw courses of strain check for the current load case.. Calculated plastic strain is compared to the limit allowed plastic strain.
- **Concrete check** – switch to draw effective area of concrete under the base plate for the current load case.
- **Buckling shape** – switch to draw buckling shapes for the selected critical load factor after buckling analysis finishes.
- **List of load cases** – current load case is displayed (in evaluation mode for extreme load case) or can be selected (in evaluation mode for extreme load case), for which the results are evaluated.
- **Evaluation mode** – select the results evaluation mode:
 - **For current** – check results are evaluated (both graphically and textually) for the current selected load case.


- **For extreme** – load cases, which cause the extreme check value, are found for each connection part. Results for such extreme cases are displayed in check results tables. Graphically are results evaluated for load case corresponding to the current row of check results table.

4.5 Plate editor

Plates created in manufacturing operations can be modified using the Plate editor. The modified plate is drawn in the main window.

Following tabs are displayed in the data window:

- **Shape** – tab contains list of manufacturing operations applied on the plate. For the current manufacturing operation the table of operation properties is displayed.
- **Bolts** – tab contains the table of bolt coordinates.
- **Drawing** – the tab contains the simple picture of plate including the dimension lines.

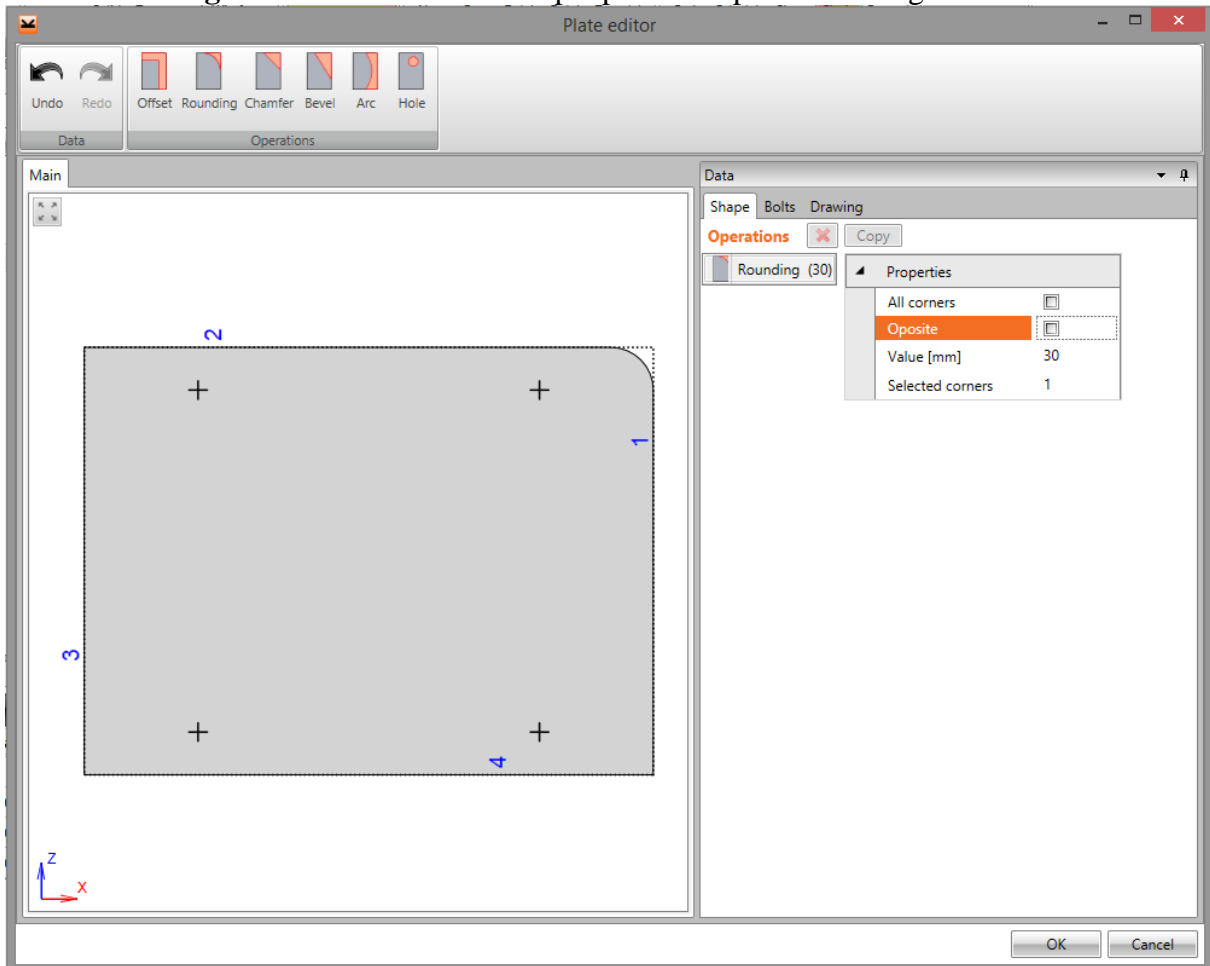

4.5.1 Ribbon group Operations




Use commands in ribbon group Operations to add individual plate modifications:

- **Offset** – add a new offset of edge from the original outline.
- **Rounding** – add a new rounding of plate corner.
- **Chamber** – add a new chamfer of plate corner.
- **Bevel** – add a new bevel of plate corner.
- **Arc** – add a new conversion of straight edge to arc edge.
- **Hole** – add a new hole into the plate.

4.5.1.1 Edge offset

Click **Offset** in ribbon group **Operations** to add a new offset of edge.

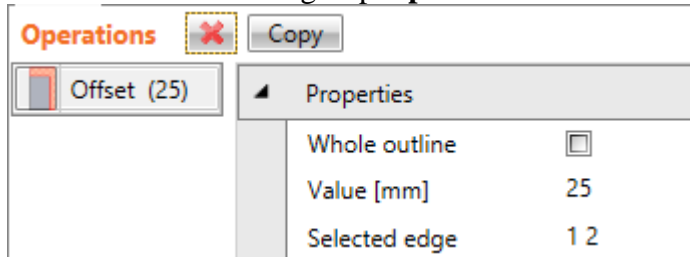


Offset properties:

- **Whole outline** – if the option is selected, the defined value of offset is applied on all edges of the plate otherwise the offset is applied on selected edges only.
- **Value** – input the offset size.
- **Selected edge** – input the number of edge or sequence of edge numbers separated by spaces to apply the defined value of offset on.

4.5.1.2 Corner rounding

Click **Rounding** in ribbon group **Operations** to add a new corner rounding.

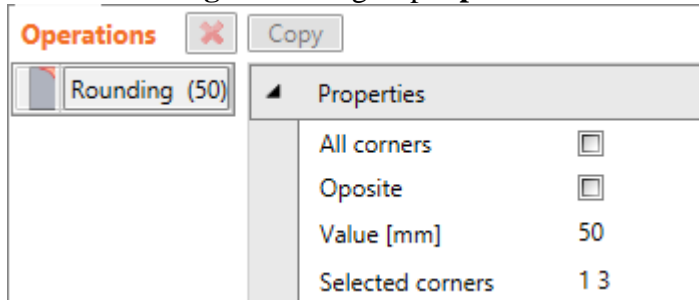


Rounding properties:

- **All corners** – if the option is selected, the defined rounding is applied on all corners of the plate otherwise the rounding is applied on selected corners only.
- **Opposite** – if the option is selected, the rounding arc goes into the plate otherwise it goes out of the plate.
- **Value** – input radius of rounding.
- **Selected corners** – input the number of corner or sequence of corner numbers separated by spaces to apply the defined rounding on.

4.5.1.3 Corner chamfer

Click **Chamfer** in ribbon group **Operations** to add a new (symmetrical) chamfer of corner.

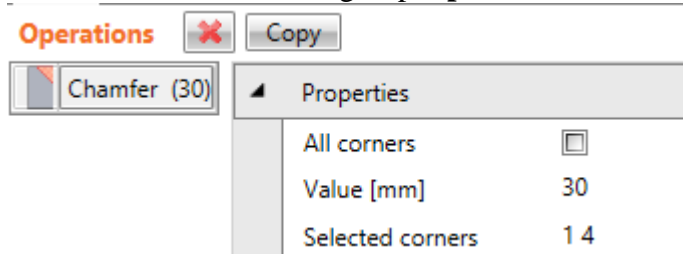


Chamfer properties:

- **All corners** – if the option is selected, the defined chamfer is applied on all corners of the plate otherwise the chamfer is applied on selected corners only.

- **Value** – input the length of chamfer along the edge (from the corner). The length is identical for both edges in the modified corner.
- **Selected corners** – input the number of corner or sequence of corner numbers separated by spaces to apply the defined chamfer on.

4.5.1.4 Bevel

Click **Bevel** in ribbon group **Operations** to add a new (unsymmetrical) bevel of corner.

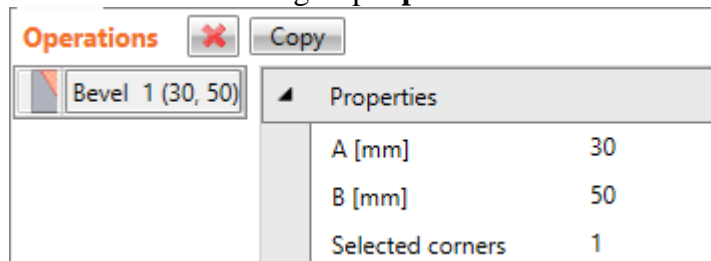


Bevel properties:

- **A** – input the bevel length along one edge.
- **B** – input the bevel length along second edge.
- **Selected corner** – input number of corner to apply the defined bevel on.

4.5.1.5 Arc

Click **Arc** in ribbon group **Operations** to create a new arc from the edge.

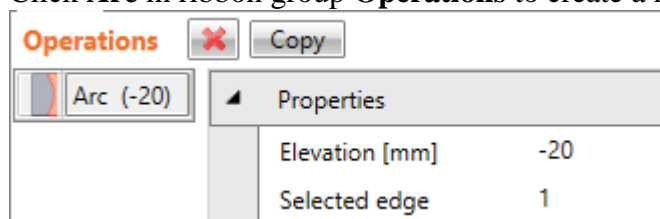


Arc properties:

- **Elevation** – input the height of arc in the middle. Positive elevation value creates arc into the plate, negative elevation value creates arc out of the plate.
- **Selected edge** – input number of edge to apply the arc on.

4.5.1.6 Hole

Click **Hole** in ribbon group **Operations** to add a new hole into the plate.

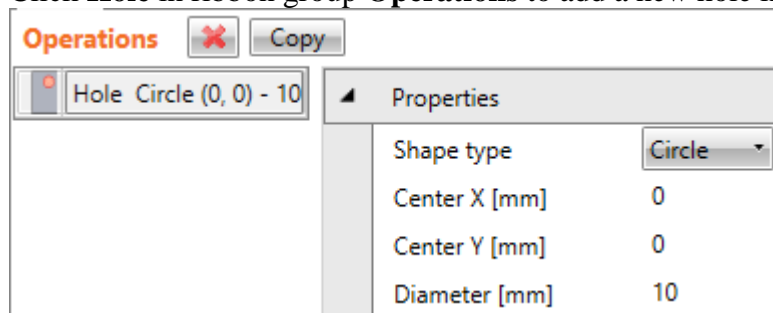

Hole properties:

- **Shape type** – select shape of hole:
 - **Circle** – hole size is defined by **Radius** value.
 - **Rectangle** – hole size is defined by values **Height** and **Width**. Hole rotation is defined by value **Rotation**.
 - **Square** – hole size is defined by value **Width**. Hole rotation is defined by value **Rotation**.

- **Centre X** – x-coordinate of hole centre.
- **Centre Y** - y-coordinate of hole centre.


5 Joint check

Click navigator command **Joint, footing > Check** to perform overall check of joint and to perform detailed check of individual joint parts.

Results courses according to the current settings on the whole connection are drawn in 3D view in the main window..

Table of overall results of individual checks is drawn in the Details window.

Tabs with check result tables of individual joint parts are displayed in the Data window. The detailed results course on appropriate connection part is drawn for the current results table row.

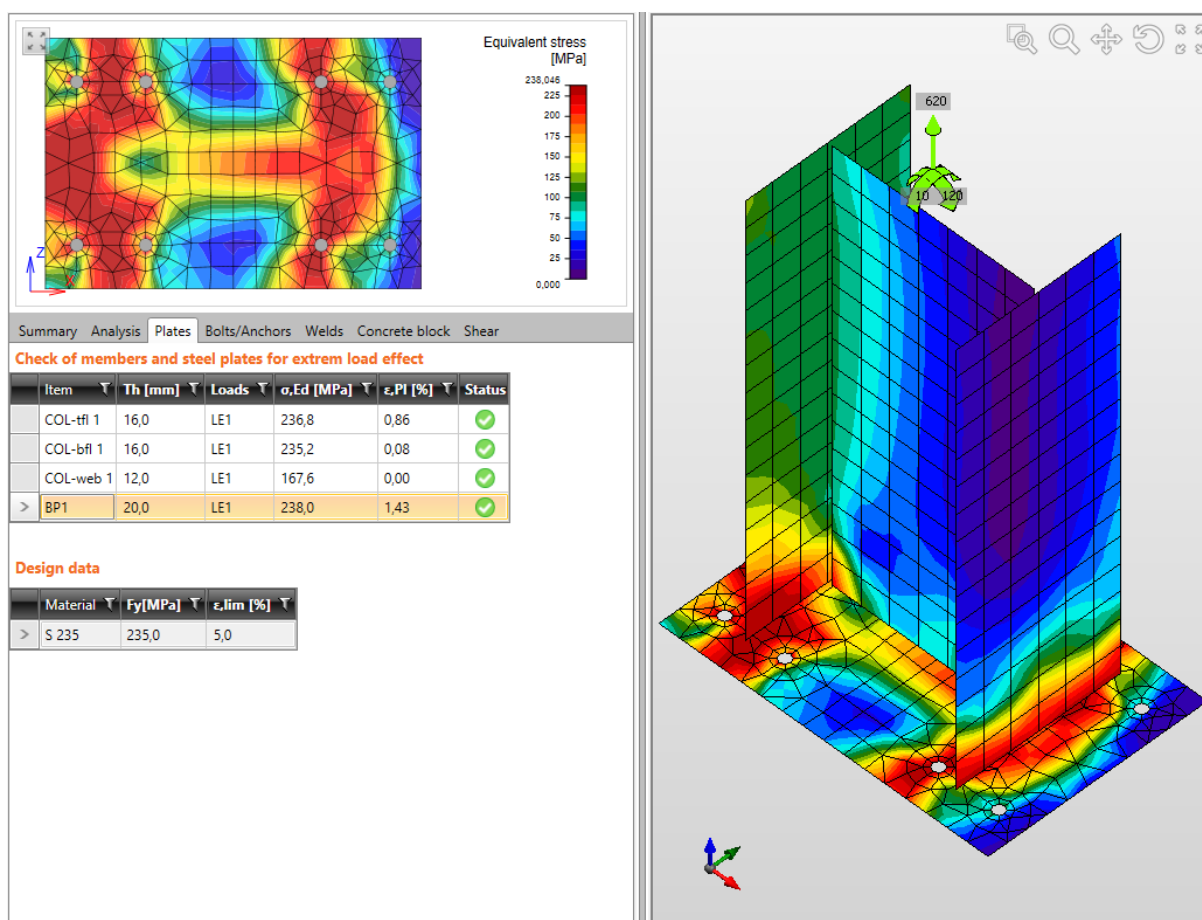

Ribbon groups **CBFEM** and **FEM analysis** are displayed.

Individual joint check can be evaluated on corresponding tabs in the data window. Results of checks for the current load case or extreme values of checks for all cases are printed in tables (according to the evaluation settings in **CBFEM** ribbon group).

For the current row of results table the detailed drawing and the result courses on corresponding joint part is drawn in the data window.

5.1 Analysis status

Status of calculation and percentage of load applied during the calculation for individual load cases is displayed in the table on **Analysis** tab.


Summary	Analysis	Plates	Bolts/Anchors
Status of FE analysis			
	Loads	Applied [%]	Status
>	LE1	100,0	✓
	LE2	100,0	✓
	LE3	100,0	✓

5.2 Plates check

Results of checks of joint plates are displayed on tab **Plates** in the table **Check of members and steel plates**.

Columns in the table **Check of members and steel plates**:

- **Item** – name of join item (plate). Members are split to individual plates.
- **Th** – thickness of plate.
- **Loads** – name of load case, for which the results are evaluated.
- **σ_{Ed}** – maximal value of equivalent stress in plate.
- **ϵ_{Pl}** – maximal value of plastic strain in plate.
- **Status** – overall check status of plate.

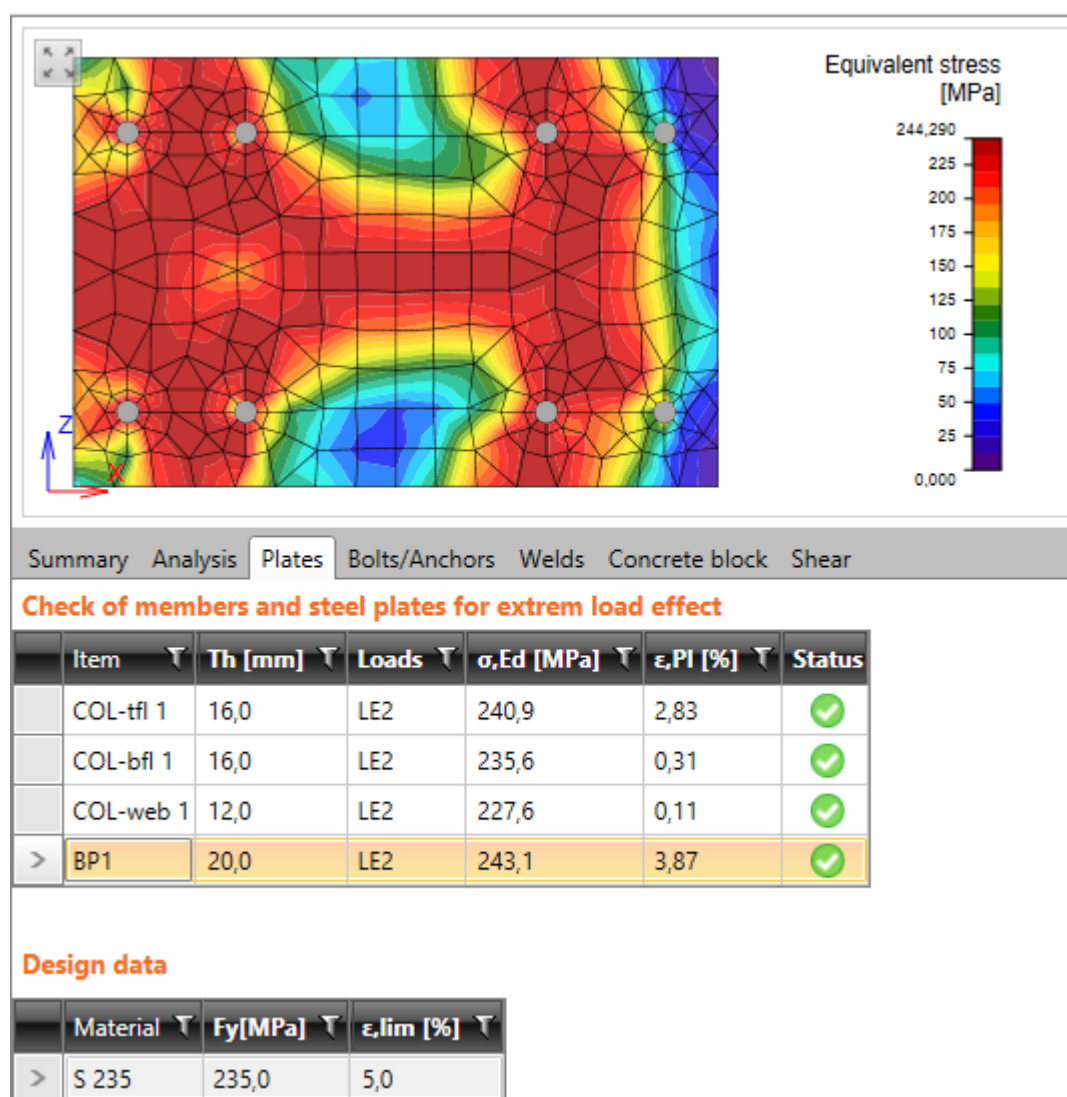

5.3 Bolts check

Results of bolts or anchors are displayed on tab **Bolts/Anchors** in the table **Check of bolts and anchors**.

Position of bolt corresponding to selected table row is highlighted in the picture of appropriate plate in the data window.

Columns in the table **Check of bolts and anchors** (when checking bolts):

- **Item** – name of connection item (bolt).
- **Loads** – name of load case, for which the results are evaluated.
- **Ft** – value of tension force in bolt.
- **V** – value of resultant of shear forces in bolt.
- **Utt** – value of maximal tension utilisation of bolt.
- **Uts** – value of maximal shear utilisation of bolt.
- **Utts** – value of maximal utilisation of bolt in interaction of tension and shear according to table 3.4 EN 1993-1-8.
- **Status** – overall check status of bolt.

Summary Analysis Plates Bolts/Anchors Welds								
Check of bolts and anchors for extreme load effect								
	Item	Loads	Ft [kN]	V [kN]	Utt [%]	Uts [%]	Utts [%]	Status
>	B1	LE1	0,414	0,531	0,4	0,8	1,1	✓
	B2	LE1	0,381	0,531	0,3	0,8	1,1	✓
	B3	LE1	0,770	1,132	0,7	1,8	2,3	✓
	B4	LE1	0,850	1,14	0,8	1,8	2,4	✓
	B5	LE1	23,296	1,121	20,6	1,8	16,5	✓
	B6	LE1	23,297	1,117	20,6	1,8	16,5	✓
	B7	LE1	15,687	0,701	13,9	1,1	11,0	✓
	B8	LE1	15,890	0,705	14,1	1,1	11,2	✓

Design data					
	Item	Ft,Rd [kN]	Bp,Rd [kN]	Fv,Rd [kN]	Fb,Rd [kN]
>	M16 - 10.9 - 1	113,040	130,288	62,800	115,200

Columns in the table **Check of bolts and anchors** (when checking anchors):

- **Item** – name of connection item (anchor).
- **Loads** – name of load case, for which the results are evaluated.
- **Ft** – value of tension force in anchor.
- **V** – value of resultant of shear forces in anchor.
- **Nr_{dc}** – value of concrete cone breakout resistance.
- **Utt** – value of maximal tension utilisation of anchor.
- **Utts** – value of maximal utilisation of interaction of shear and tension acc. to ETAG 001 Annex C.

- **Vrd,cp** – value of concrete pry-out failure resistance acc. to ETAG 001 Annex C (5.2.3.3).
- **Vrd,c** – value of concrete edge failure resistance acc. to ETAG 001 Annex C (5.2.3.4).
- **Vrd,cp,s** – status of check of concrete pry-out failure acc. to ETAG 001 Annex C (5.2.3.3).
- **Vrd,c,s** – status of check of concrete edge failure acc. to ETAG 001 Annex C (5.2.3.4).
- **Status** – overall check status of anchor.

Summary Analysis Plates Bolts/Anchors Welds Concrete block Shear													
Check of bolts and anchors for extreme load effect													
	Item	Loads	Ft [kN]	V [kN]	Nrdc[kN]	Utt [%]	Uts [%]	Utt [%]	Vrd,cp [kN]	Vrd,c [kN]	Vrd,cp,s	Vrd,c,s	Status
>	B1	LE3	26,134	0,0	12,847	203,4	0,0	0,0	0,0	0,0	✓	✓	✗
	B2	LE1	0,000	0,0	0,000	0,0	0,0	0,0	0,0	0,0	✓	✓	✓
	B3	LE3	26,128	0,0	12,847	203,4	0,0	0,0	0,0	0,0	✓	✓	✗
	B4	LE2	21,066	0,0	12,512	168,4	0,0	0,0	0,0	0,0	✓	✓	✗
Design data													
	Item	Ft,Rd [kN]		Bp,Rd [kN]		Vrds [kN]		Fv,Rd [kN]		Fb,Rd [kN]			
>	M16 - 10.9 - 1	96,084		260,576		0,000		0,000		230,400			

5.4 Concrete block check

Results of concrete block check for base plate connection are displayed on tab **Concrete block** in the table **Check of contact stress in concrete**.

Columns in table **Check of contact stress in concrete**:

- **Item** – name of material of concrete block.
- **Loads** – name of load case, for which the results are evaluated.
- **Aeff** – value of effective area of concrete.
- σ – value of average stress in concrete.
- **Fjd** – value of design bearing resistance of concrete block.
- **Ut** – value of maximal utilisation of concrete block.
- **Status** – overall check status of concrete block.

Summary

Analysis

Plates

Bolts/Anchors

Welds

Concrete block

Shear

Check of contact stress in concrete for extrem load effect

	Item	Loads	Aeff [m2]	σ [MPa]	Fjd [MPa]	Ut [%]	Status
>	C25/30	LE1	0,005	1,581	12,910	12,2	

5.5 Shear in contact plane check


Results of shear in contact plane check for base plate connection are displayed on tab **Shear** in the table **Shear in contact plane**.

Columns in table **Shear in contact plane**:

- **Item** – name of base plate.
- **Loads** – name of load case, for which the results are evaluated.
- **Vy** – value of shear force in base plate.
- **Vz** – value of shear force in base plate.
- **Vrdy** – value of design shear resistance.
- **Vrdz** – value of design shear resistance.
- **Ut** – value of utilisation.
- **Status** – overall status of shear in contact plane check.

Summary Analysis Plates Bolts/Anchors Welds Concrete block **Shear**

Shear in contact plane for extrem load effect

	Item	Loads	Vy [kN]	Vz [kN]	Vrdy [kN]	Vrdz [kN]	Ut [%]	Status
>	BP1	LE1	29,996	39,995	139,205	324,690	21,5	

Design data

	Friction	Css
>	0,25	HEA140

5.6 Welds check

Results of welds check are displayed on tab **Welds** in the table **Check of welds**.

Weld corresponding to current table row is highlighted in the picture of appropriate plate in the data window.

Columns in table **Check of welds**:

- **Item** – name of weld.
- **Edge** – generated name of edge, to which the weld is related.
- **Th.** – value of throat thickness of weld.
- **L** – length of weld.
- **Type** – type of weld.
- **Loads** – name of load case, for which the results are evaluated.
- **$\sigma_{w,Ed}$** – value of equivalent stress in weld.
- **σ^\perp** - value of stress perpendicular to weld throat.
- **$\tau_{||}$** - shear stress parallel to the weld axis.
- **τ^\perp** - shear stress perpendicular to the weld axis.
- **Ut** – value of maximal weld utilisation.
- **Status** – overall check status of weld.



Summary Analysis Plates Bolts/Anchors **Welds**

Check of welds for extreme load effect

Item	Edge	Th [mm]	L[mm]	Type	Loads	$\sigma_{w,Ed}$ [MPa]	σ_{\perp} [MPa]	$\tau_{ }$ [MPa]	τ_{\perp} [MPa]	Ut [%]	Status
ČD1	B1-bfl 1	9,2	110,0	Fillet	LE1	1,3	0,1	0,1	0,7	0,4	✓
ČD1	B1-tfl 1	9,2	110,0	Fillet	LE1	1,4	-0,3	0,0	-0,8	0,4	✓
> ČD1	B1-w 1	5,9	210,8	Fillet	LE1	1,4	0,5	-0,4	0,6	0,4	✓
B1-tfl 1	CPL1a	9,2	200,0	Fillet	LE1	5,4	2,8	0,6	2,6	1,5	✓
ČD1	CPL1a	9,2	200,0	Fillet	LE1	4,7	2,2	0,0	2,4	1,3	✓
CPL1b	CPL1c	9,2	70,0	Fillet	LE1	22,0	11,0	0,0	11,0	6,1	✓
CPL1b	D1-2	3,0	260,0	Fillet	LE1	21,2	-10,1	0,0	-10,8	5,9	✓
C-bfl 1	CPL2a	10,0	200,0	Fillet	LE1	5,3	-2,5	0,2	-2,7	1,5	✓
B1-bfl 1	CPL2a	9,2	200,0	Fillet	LE1	6,0	-3,1	-0,5	-2,9	1,7	✓
D2-w 1	CPL2b	3,0	100,0	Fillet	LE1	43,5	0,1	25,1	0,1	12,1	✓
D2-w 3	CPL2b	3,0	100,0	Fillet	LE1	40,9	0,1	23,6	0,1	11,4	✓
CPL2a	CPL2b	10,0	93,8	Fillet	LE1	7,0	0,0	-3,9	-1,0	1,9	✓
CPL2a	CPL2b	10,0	70,0	Fillet	LE1	9,9	0,4	-0,1	5,7	2,7	✓
CPL2a	CPL2b	10,0	93,8	Fillet	LE1	8,8	0,1	5,0	0,9	2,4	✓

Design data

Material	β_w	$\sigma_{w,Rd}$ [MPa]	0.9 $\sigma_{w,Rd}$ [MPa]
> S 235	0,8	360,0	259,2

5.7 Evaluation of joint stiffness

Rotational stiffness of ‘Analysed member’ of joint stressed by bending moments is evaluated in the table **Rotational stiffness of joint component** on the tab **Stiffness**.

Axial stiffness of ‘Analysed member’ of joint stressed by normal force is evaluated in the table **Axial stiffness of joint component**.

Summary

Stiffness

Rotational stiffness of joint component

	Item	Comp.	Loads	M [kNm]	Φ [mrad]	Sjs [MNm/rad]	Sr [MNm/rad]	Sp [MNm/rad]	Class
>	C	My	LE1	10,000	0,783	12,766	48,431	0,969	Semi-rigid
		Mz	LE2	10,000	-494,961	0,020	17,588	0,352	Pinned

Axial stiffness of joint component

	Item	Comp.	Loads	N [kN]	dx [mm]	St [MN/m]
>	C	N	LE3	10,000	0,010	1032,505

Columns in table **Rotational stiffness of joint component**:

- **Item** – name of joint member is displayed.
- **Component** – name of corresponding internal force component is displayed.
- **Loads** – name of corresponding load case is displayed.
- **M** – value of corresponding bending moment is displayed.
- **Φ** – value of corresponding rotation is displayed.
- **Sjs** – value of calculated secant rotational stiffness of joint member is displayed.
- **Sr** – minimal stiffness for classification of the joint member as rigid is displayed.
- **Sp** – maximal stiffness for classification of the joint member as pinned is displayed.


Columns in table **Axial stiffness of joint component**:

- **Item** – name of joint member is displayed.
- **Component** – name of corresponding internal force component is displayed.
- **Loads** – name of corresponding load case is displayed.
- **N** – value of corresponding axial force is displayed.
- **dx** – value of corresponding axial deformation is displayed.
- **St** – value of calculated secant axial stiffness is displayed.

5.8 Evaluation of local buckling analysis

Indexes of calculated buckling shapes and corresponding critical load factors are displayed in the table **Local buckling of joint** on the tab **Buckling**.


The buckling shape is drawn in the main window for the critical load factor row selected in the **Buckling of the connection** table. It is recommended to switch on drawing of finite elements mesh and deformed shape of structure.

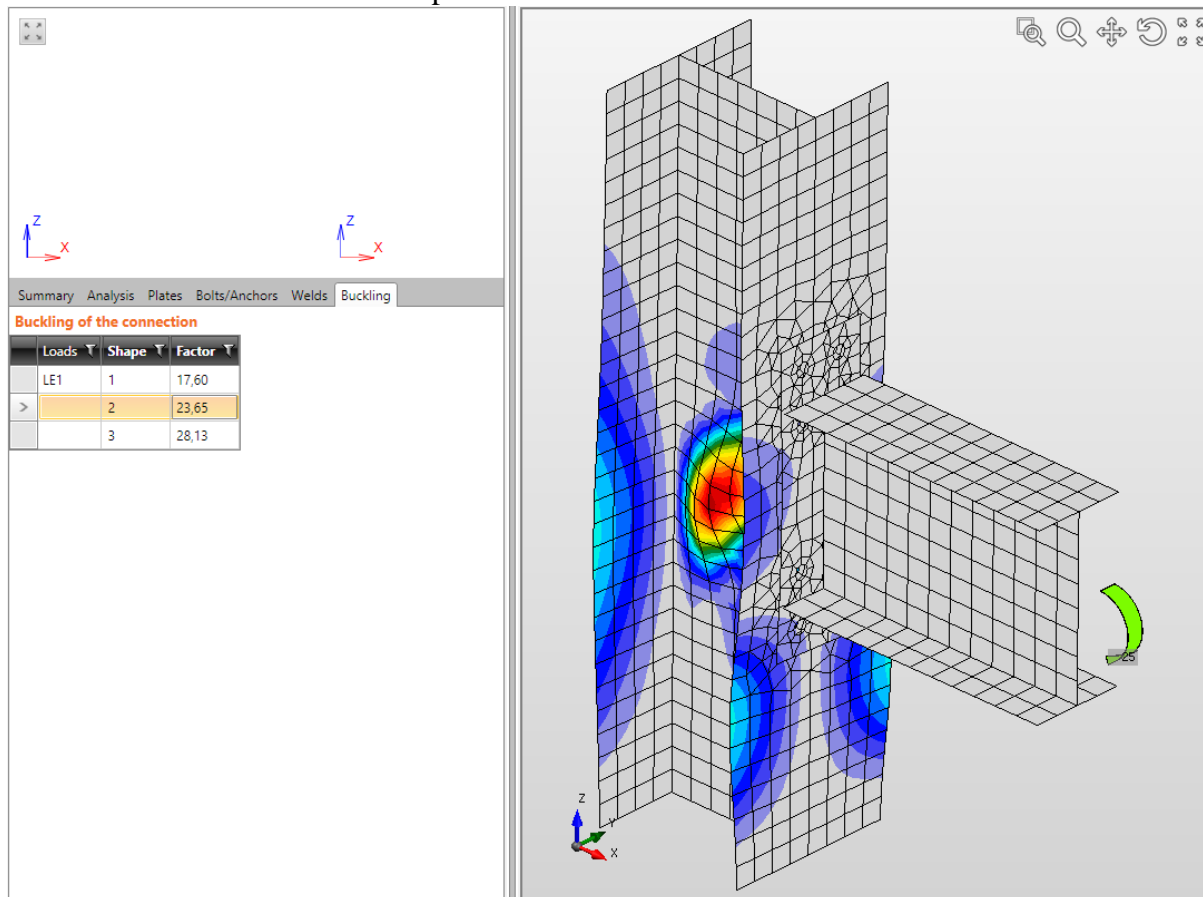

5.9 Ribbon group CBFEM

See 4.4.30 Ribbon group CBFEM.

5.10 Ribbon group FEM analysis

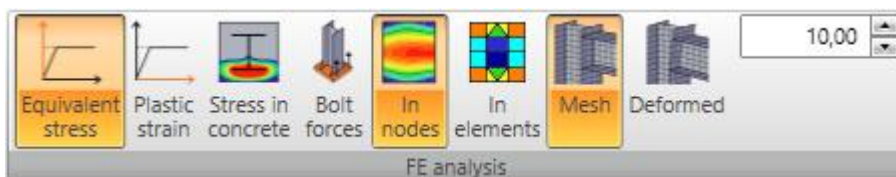

Commands in ribbon group are used to set the results drawing:

- **Equivalent stress** – switch to draw courses of equivalent stress caused by current load extreme.
- **Plastic strain** – switch to draw courses of plastic strain caused by current load extreme.
- **Stress in concrete** – switch to draw courses of stress in concrete caused by current load extreme.
- **Bolt forces** – switch on/off drawing of forces in bolts caused by current load extreme.
- **In nodes** – switch on drawing of evaluated values in nodes of finite elements mesh, averaged on individual plates.
- **In elements** – switch on drawing of evaluated value in centroids of finite elements.
- **Mesh** – switch on/off drawing of generated finite elements mesh.
- **Deformed** – switch on/off drawing of deformed shape of finite elements mesh.
- **Scale** – change of scale for drawing of deformed shape of finite elements mesh.

5.11 Report of current joint check

Click navigator item Joint, footing > Results to generate check report of the current joint.

The content of report can be changed in data window – see **6.5 Detailed report**.

The generated check report is displayed in the main window.

Ribbon group **Report view** is displayed.

5.12 Bill of material of current joint

Click navigator item **Joint, footing > Bill of material**.

The generated bill of material of current joint is displayed in the main window.

Ribbon group **Report view** is displayed.

The content of bill of material can be changed in data window:

- ☒ **Bill of material**
 - ☒ **Add thumbnail** • **Add thumbnail** – switch on/off print of simplified pictures of plates, which were created by manufacturing operations.
 - ☐ **Add drawings** • **Add drawings** – switch on/off print of detailed pictures of plates, which were created by manufacturing operations.

5.13 National code and calculation settings

To change national code and calculation settings click **Code** in ribbon group **CBFEM**.

Code and calculation settings	
Analysis settings	
Stop at limit strain	<input checked="" type="checkbox"/>
Number of analysis iterations	25
Default member length [h]	2
Buckling analysis	<input type="checkbox"/>
Partial safety factors	
γ_{M0}	1
γ_{M1}	1
γ_{M2}	1,25
γ_C	1,5
γ_{Inst}	1,2
Concrete block	
Joint coefficient β_j	0,67
Effective area - coefficient of max stress	0,4
Friction coefficient	0,25
Check	
Limit plastic strain [%]	5,0
Optimal equivalent stress [%]	80,0
Weld stress evaluation	Average stress
Braced system	<input type="checkbox"/>
Detailing	<input type="checkbox"/>
Distance between bolts [d]	2,2
Distance between bolts and edge [d]	1,2
Concrete cone breakout resistance - ETAG	<input checked="" type="checkbox"/>

Expand Collapse OK Cancel

Properties group **Analysis settings**:

- **Stop at limit strain** – if the option is selected, the strain analysis is terminated at the moment when limit plastic strain is reached. The capacity of joint can be determined from the percentage of applied load.
- **Number of analysis iterations** – input maximal number of analysis iterations. Higher number of iterations may improve the precision of contact elements analysis, but it increases the length of analysis.
- **Default member length** – the default length of individual joint members is determined as a multiple of the ratio and the height of member cross-section.

- **Buckling analysis** – if the option is selected, the analysis of local buckling of joint can be performed to determine critical load factors and buckling shapes.

Properties group **Partial safety factors**:

- γ **M0** – partial factor for resistance of cross-section.
- γ **M1** – partial safety factor for resistance of members.
- γ **M2** – partial safety factor for resistance of bolts, rivets, pins, welds, plates in bearing.
- γ **C** – partial safety factor for resistance of concrete.
- γ **Inst** – partial safety factor for installation safety.

Properties group **Concrete block**:

- **Joint coefficient β_j** – input value of coefficient to determine the design bearing strength of concrete F_{jd} .
- **Effective area – coeff of maximal stress** – input value of maximal stress coefficient to determine the effective area of concrete. The effective area is determined from the area, where stress is higher than the multiple of defined coefficient and maximal stress.
- **Friction coefficient** – input value of friction coefficient between the base plate and the concrete block.

Properties group **Check**:

- **Limit plastic strain** – value of allowed limit plastic strain. The joint does not satisfy if the limit plastic strain is exceeded.
- **Optimal equivalent stress** – lower limit of optimal range of equivalent stress (drawn using green color) as the percentage of yield stress.
- **Weld stress evaluation** – select method for evaluation of stress in welds:
 - **Maximal stress** – the weld stress value is determined as the maximal value of stress along the weld.
 - **Average stress** – the weld stress value is determined as average stress along the weld.
 - **Linear interpolation** – the weld stress value is determined using linear interpolation method.
- **Braced system** – if selected, the structural system is considered as braced during calculation of joint stiffness.
- **Detailing** – switch on/off check of detailing provisions.
- **Distance between bolts** – input the multiple of bolt diameter to determine the allowed distance between bolts.
- **Distance between bolts and edge** – input the multiple of bolt diameter to determine the minimal allowed distance between bolt and plate edge.
- **Concrete cone breakout resistance – ETAG** – switch on/off check of concrete cone breakout resistance.

5.14 Advanced FEM analysis settings

To change advanced finite elements analysis settings click **FEM** in ribbon group **Advanced settings**.

Finite element analysis	
Finite elements mesh settings	
Number of elements on edge	8
Minimal size of element [m]	0,01
Maximal size of element [m]	0,05
Generate bolt holes	<input checked="" type="checkbox"/>
Mesh refinement radius [d]	2
Analysis settings	
Anchor length for stiffness calculation [d]	8
Widening of bolt model	0,5
Widening of weld model	0,5
Divergent iterations count	3
Contact model of bolt in shear	<input checked="" type="checkbox"/>
Tubes	
Division of circular tubes	24
Division of rectangular tubes	3
Properties of general material of bolt/rivet	
Apply on all bolts/rivets	<input type="checkbox"/>
Stiffness in tension [MN/m]	1050,0
Limit stress in tension - σ_t [MPa]	400,0
Coefficient of hardening in tension	0,001
Stiffness in shear [MN/m]	1050,0
Limit stress in shear - σ_s [MPa]	400,0
Coefficient of hardening in shear	0,001

Expand Collapse OK Cancel

Properties group **Finite elements mesh settings**:

- **Number of elements on edge** –input of number of finite elements on decisive edge of plate or part of cross-section. The decisive edge is determined automatically. The average size of finite element is determined as a ratio of the edge length and required number of elements on the edge.
- **Minimal size of element** – input the smallest admissible size of finite element.
- **Maximal size of element** – input maximal admissible size of finite element.
- **Generate bolt holes** – if the option is selected, holes in plates in appropriate positions of bolts are generated

- **Mesh refinement radius [d]** – input radius of circular area around the bolt, where the mesh is refined, as the multiple of bolt diameter.

Properties group **Analysis settings**:

- **Anchor length for stiffness calculation [d]** – input of length of spring modelling the anchor in stiffness analysis, as the multiple of anchor diameter.
- **Widening of bolt model** – input of width increase of interpolation constraint, which is modelling the bolt, as the multiple of plate thickness.
- **Widening of weld model** – input of width increase of interpolation constraint, which is modelling the weld, as the multiple of plate thickness.
- **Divergent iterations count** – input the admissible number of divergent iterations.
- **Contact model of bolt in shear** – if the option is selected, bolts in shear are modelled using contact elements taking effect only in compressed area of bolt hole.

Properties group **Tubes**:




- **Division of circular tubes** – input number of straight lines substituting the circle of circular tubes.
- **Division of rectangular tubes** – input number of straight lines substituting the arc in edge of rectangular tubes.

6 Joints in project

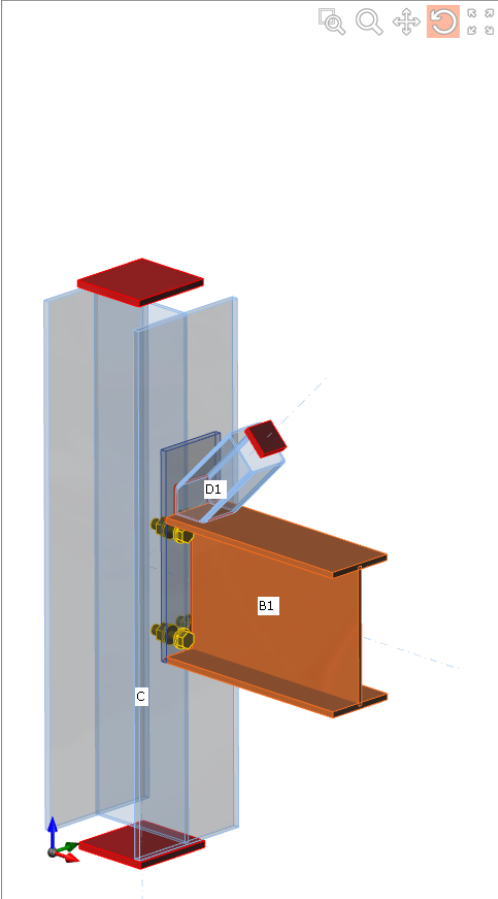
The project can contain more joints. Click navigator command **Report > Items in project** to display list of defined joints.

Table of all defined joints is displayed in the main window. The current joint is drawn in the 3D window.



Ribbon group **New item** is displayed.

Project items   

Name	Description	Report	Analysis type
Cut 1	frame knee cut	Yes	Stress, Strain
> Cut 2	cut of diagonal acc. to end plate and beam	Yes	Stiffness
Stiffener 1	stiffener in inclined frame knee	Yes	Stress, Strain
Stiffener 2	double sided web stiffener	Yes	Stress, Strain
Widener 1	flange wideners of base plate column	Yes	Stress, Strain
Widener 2	web widener of frame knee	Yes	Stress, Strain
Rib 1	rib on bottom flange of beam in frame knee	Yes	Stress, Strain
Opening	circular opening in beam web	Yes	Stress, Strain
Plate to plate 1	bolted plate-to-plate	Yes	Stress, Strain
Plate to plate 2	welded plate-to-plate	Yes	Stress, Strain
End plate 1	bolted end plate to column flange	Yes	Stress, Strain
End plate 2	bolted two opposite end plates to column web	Yes	Stress, Strain
End plate 3	bolted notched end plate on beam web (grid)	Yes	Stress, Strain
Shifted end plate	shifted end plate on beam web	Yes	Stress, Strain
Stub	stub welded on beam flange	Yes	Stress, Strain
Fin plate	fin plate on beam web	Yes	Stress, Strain
Gusset plate 1	diagonals on gusset plate	Yes	Stress, Strain
Gusset plate 2	diagonal in corner of base plate	Yes	Stress, Strain
Gusset plate 3	diagonals in frame knee	Yes	Stress, Strain
Gusset plate 4	diagonal on flange	Yes	Stress, Strain
Base plate	base plate with shear iron	Yes	Stress, Strain
Splice	spliced beams	Yes	Stress, Strain
Connecting plate RHS 1	diagonal with lid to column - new connecting plate	Yes	Stress, Strain
Connecting plate RHS 2	notched diagonal to column - existing plate	Yes	Stress, Strain
Connecting plate RHS 3	two diagonals in frame knee	Yes	Stress, Strain
Connecting plate RHS 4	diagonal to beam flange	Yes	Stress, Strain
Gusset plate 5	diagonal to splice	Yes	Stress, Strain
Cleat	bolted cleat	Yes	Stress, Strain
General plate	General plates	Yes	Stress, Strain



Commands above the table **Project items**:

-  - add new empty joint into the project.
-  - delete current joint from project.
- Copy** – add new joint into the project by copying the current joint.


Columns in table **Project items**:

- Name** – input name of joint.
- Description** – input of detailed joint description. Description is printed in report.
- Report** – switch on/off print of input data and check results in overall report of all joints in project.
- Analysis type** – click table cell to switch joint analysis mode:
 - Stress, strain** – stress and strain analysis and buckling analysis of joint can be performed for this joint analysis type. One of joint members is set as '**Bearing member**' (support is applied on this member in analysis model), all other members are connected to bearing member.

- **Stiffness** – stiffness analysis of one joint member can be performed for this joint analysis type. One of joint members is set as '**Analysed member**'. Rotational and axial stiffness is calculated for '**Analysed member**'. In the analysis model, supports are applied to all other members of joint.

6.1 Ribbon group New item

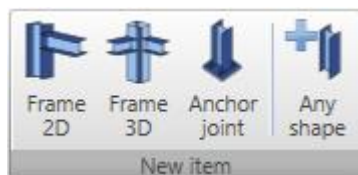

Commands in ribbon group **New item** are used to add new joint to project:




- **Frame 2D** – opens dialog **Select connection topology** with predefined shapes of 2D connections. The new joint is added into the project after clicking the picture of required joint topology.
- **Frame 3D** – opens dialog **Select connection topology** with predefined shapes of 3D connections. The new joint is added into the project after clicking the picture of required joint topology.
- **Anchor joint** – opens dialog **Select connection topology** with predefined shapes of anchor joints. The new joint is added into the project after clicking the picture of required joint topology.
- **Any shape** – adds a new empty joint into the project – the joint does not contain any member.

6.2 Adding a new joint

New joint can be added by several ways:

- Anytime clicking  beside the list of joints in navigator. It launches **New connection wizard** – see **3.1 Starting new project**.
- Clicking  above the table Project items in navigator **Report > Project items**. New empty joint is added into the project, it is set as current joint and the navigator **Joint, anchor > Geometry** is set as active.
- Using commands in ribbon group **New item** in navigator **Report > Project items** – see **6.1 Ribbon group New item**.

6.3 Calculation report

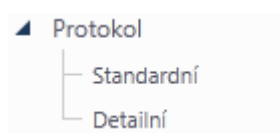

Input data, calculation results and check results can be printed into the output report. Report can contain texts, tables and pictures. Structure of protocol is fixed, it is only possible to set, which tables and which pictures should be generated.

Ribbon group **Report view** is available to work with report.

The report is printed only for joints, which have switched on the option to generate report.


6.4 One line report

Click navigator command **Report > One line** to generate one line report.

The content of one line report can be set in the data window.

Ribbon group **Report view** is available.

The one line report contains table of overall check results of each joint.

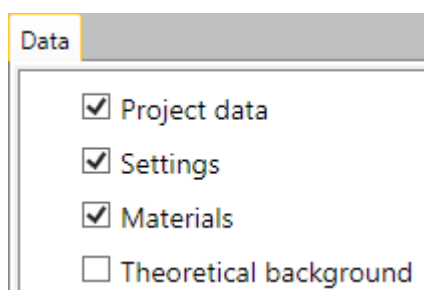

Options to set the content of one line report:

- **Project data** – switch on/off print of project data table.
- **Settings** – switch on/off print of table of code and calculation settings.
- **Materials** – switch on/off print of table of materials used in joint.
- **Theoretical background** – switch on/off print of chapter with basic theoretical background information about joint analysis and check.


6.4.1 One page report

Click navigator command **Report > One page A4** to generate one page report.

The content of one page report can be set in the data window.

Ribbon group **Report view** is available.

Table of geometry, picture of joint, table of load effects and table of overall check report is printed for each joint.

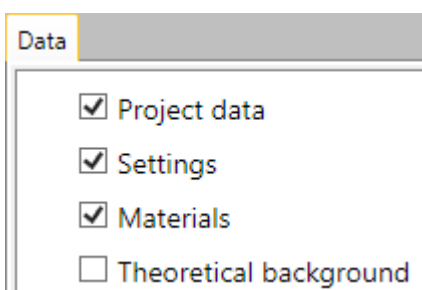

Options to set the content of one page report:

- **Project data** – switch on/off print of project data table.
- **Settings** – switch on/off print of table of code and calculation settings.
- **Materials** – switch on/off print of table of materials used in joint.
- **Theoretical background** – switch on/off print of chapter with basic theoretical background information about joint analysis and check.

6.5 Detailed report

Click navigator command **Report > Detailed** to generate detailed report.

The content of one page report can be set in the data window.

Ribbon group **Report view** is available.

The 'Data' window contains the following options:


- ☒ Project data
- ☒ Settings
- ☒ Materials
- ☒ Item
- ☒ Geometry
 - ☒ Table
 - ☒ Axonometric view
 - ☐ View XY
 - ☐ View XZ
 - ☐ View YZ
 - ☐ Color depth: White and black
- ☒ Cross-sections
 - ☒ List
 - ☐ List with pictures
- ☐ Bolts
- ☒ Load effects
- ☒ Results/Checks
 - ☒ Steel plates
 - ☒ Drawings - Strain check
 - ☒ Drawings - Eq. stress
 - ☒ Bolts/Anchors
 - ☒ Welds
 - ☒ Concrete block
 - ☒ Contact plane
 - ☐ Stiffness
 - ☐ Buckling
 - ☐ Explanations tables
 - ☒ Separate
 - ☐ Summary
- ☐ Bill of material
 - ☒ Add thumbnail
 - ☐ Add drawings
- ☐ Theoretical background

Options to set the content of one page report:

- **Project data** – switch on/off print of project data table.
- **Settings** – switch on/off print of table of code and calculation settings.
- **Item** – switch on/off print of table of basic data of joint.
- **Geometry** – switch on/off print of tables and pictures of geometrical data of joint.
 - **Table** – switch on/off print of table of geometrical data.
 - **Axonometric view** – switch on/off print of joint picture in axonometric view.
 - **View XY** – switch on/off print of joint picture in projection to global XY plane.
 - **View XZ** – switch on/off print of joint picture in projection to global XZ plane.
 - **View YZ** – switch on/off print of joint picture in projection to global YZ plane.
 - **Colour depth white and black** – switch on/off print of monochromatic pictures.
- **Cross-sections** – switch on/off print of tables and pictures of cross-sections.
 - **List** – switch on/off print of table of cross-sections used in joint.
 - **List with pictures** – switch on/off print of table and pictures of cross-sections used in joint.
- **Materials** – switch on/off print of table of materials used in joint.
- **Bolts** – switch on/off print of table of bolts used in joint.
- **Load effects** – switch on/off print of table of load effects defined in joint.
- **Results/Checks** – switch on/off print of tables of calculation and check results.
 - **Steel plates** – switch on/off print of tables of check results of steel plates in joint.
 - **Drawings – strain check** – switch on/off print of pictures of strain check courses on individual plates of joint.
 - **Drawings – eq. stress** – switch on/off of pictures of equivalent stress courses on individual plates of joint.

- **Bolts/Anchors** – switch on/off print of tables of check results of bolts and anchors in joint.
- **Welds** – switch on/off print of tables of check results of welds in joint.
- **Concrete block** – switch on/off print of tables of check results of concrete block.
- **Contact plane** – switch on/off print of tables of check results of shear stress in contact plane.
- **Explanation tables** switch on/off print of tables of check explanations.
- **Bill of material** – switch on/off print of tables and pictures of bill of material.
 - **Add thumbnail** – switch on/off print of simplified pictures of plates, which were created by manufacturing operations.
 - **Add drawings** – switch on/off print of detailed pictures of plates, which were created by manufacturing operations.
- **Theoretical background** – switch on/off print of chapter with basic theoretical background information about joint analysis and check.

6.6 Ribbon group Report view

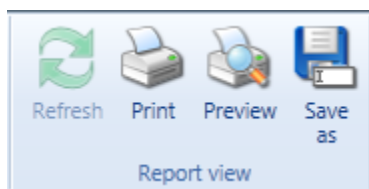


To print and export the report use commands in ribbon group **Report view**.

- **Refresh** – regenerate the report according to the current setting of report content
- **Print** – print of the report to the selected print device
- **Preview** – display print preview of the report
- **Save as** – save the report to the file of HTML, MHT (web archive including pictures) or TXT format.

7 Materials, cross-sections and bolts in project

7.1 Cross-sections

Click navigator command **Materials > Cross-sections** to display and edit cross-sections in project.

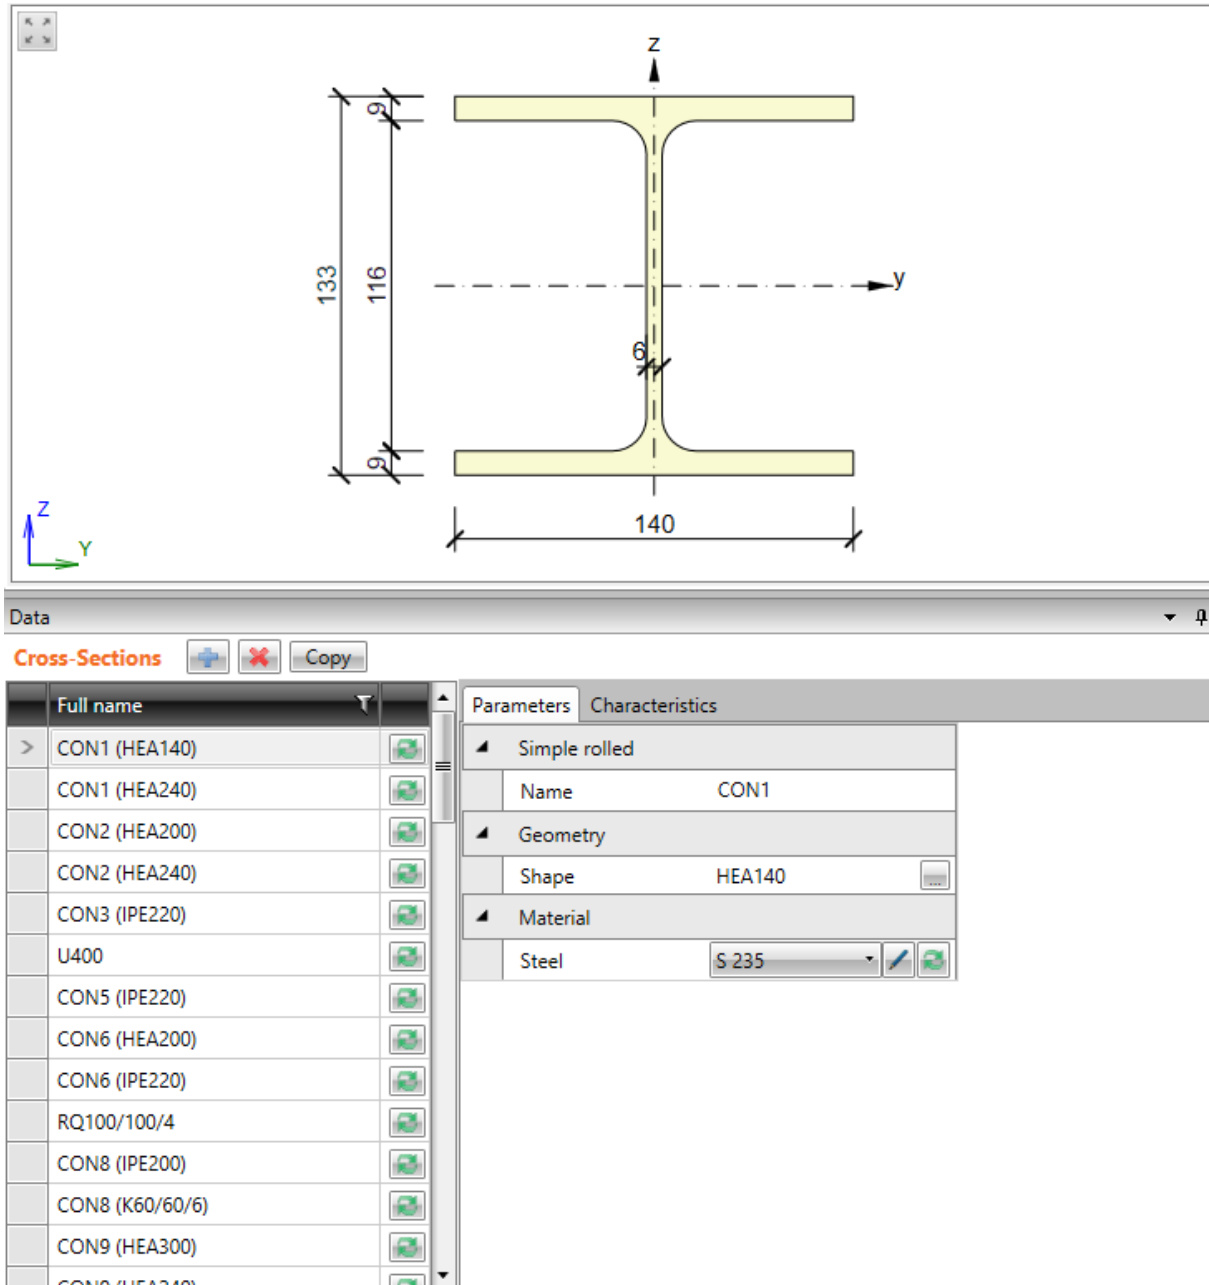

Click **Copy** above the table of cross-sections to copy an existing cross-section.


Click  above the table to add a new cross-section.

Dialog **Cross-Section Navigator** appears with 4 groups of available cross-sections:



- **Rolled** – steel rolled cross-sections I, L, U, T, plate, circular, square and rectangular hollow section;
- **Welded, Composed** – more complex shapes composed from steel rolled sections, general steel cross-section.

- **Cold-formed** – thin-walled cold-formed cross-sections.

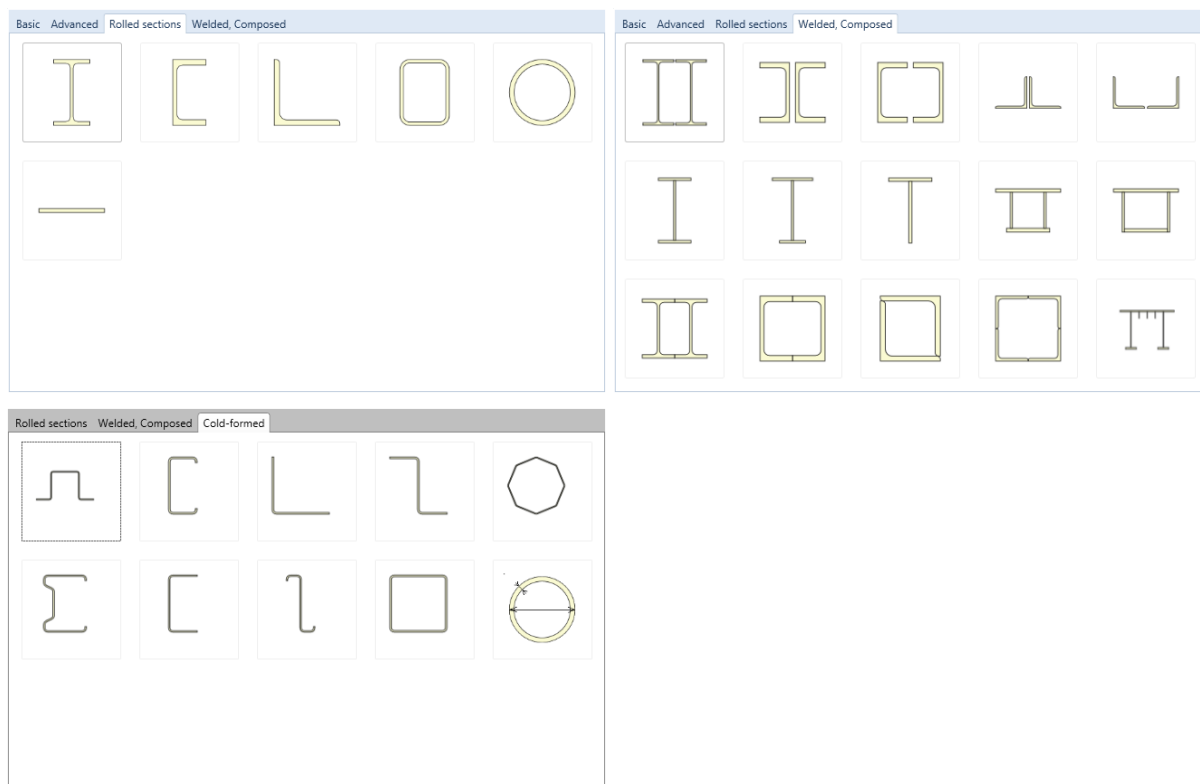Click the picture of required cross-section shape to add a new cross-section. The new cross-section is set as current cross-section and its properties are displayed in the table in the data window



There is a list of already defined cross-sections in the left part of data window. Following buttons are available for each cross-section:

-  - input a new cross-section. Current cross-section is replaced by a new one.
-  - delete the cross-section. Cross-section, which is used anywhere in the structure, cannot be deleted.
- Properties of current cross-section can be edited on the tab **Parameters** in the right part of data table. Table of cross-sectional characteristics is displayed on the tab **Characteristics**.

7.2 Materials

Click navigator command **Materials > Steel, concrete** to display and edit properties of materials project.

Name	Type		
S 235	Steel		
C25/30	Concrete		

Physical properties	
m [kg/m ³]	2500
E [MPa]	31475,806
ν	0,2
G [MPa]	13114,919
α [1/K]	1,2E-05
λ [W/(mK)]	0,8
c [J/(kgK)]	0,75

EN 1992-1-1	
fck [MPa]	25
fcm [MPa]	33
fctm [MPa]	2,5649639
fctk,0,05 [MPa]	1,7954747
fctk,0,95 [MPa]	3,3344531
Ecm [MPa]	31475,806
ϵ_{c2} [1e-4]	20
ϵ_{cu2} [1e-4]	35
Exponent - n	2
ϵ_{c3} [1e-4]	17,5
ϵ_{cu3} [1e-4]	35
Aggregate size [mm]	16
Aggregate type	Basalt

All materials, which are assigned to cross-sections in the project, are listed in the **Materials** table.





- click the edit button to convert the material to the editable material. The name of material changes and the particular material characteristics can be edited. The change affects all cross-sections, which have assigned the edited material.




- click the button to display the dialog with the list of all materials available in the system material library. When a material from the library is selected, it replaces the edited material. The change affects all cross-sections, which have assigned the edited material.

Clean – the button is available, if there is a material in the project, which is not assigned to any cross-section. Click the button to delete not used materials from the project.



7.3 Bolt assemblies

Click navigator command **Materials > Bolts** to display and edit properties of bolts and anchors assemblies in project.

Bolt assemblies		  Copy Clean	
	Name		
>	M16 - 10.9		
	M12 - 10.9		

Properties	
Name	M16 - 10.9
Bolt	
Selected bolt	M16 - DIN 7990 
Type	Normal
Bolt grade	10.9
Length	Standard
Nut	
Selected nut	M16 - DIN 6915 
Nut grade	10.9
Washer	
Selected washer	M16 - DIN 6916 
At the head	<input checked="" type="checkbox"/>
At the nut	<input checked="" type="checkbox"/>

Commands above the table **Bolt assemblies**:

-  - add a new bolt assembly to the project.
-  - delete current bolt assembly.
- **Copy** – add a new bolt assembly by copying of current bolt assembly.
- **Clean** – remove unused bolt assemblies from project. Button is not available, if all assemblies are in use.